

**RAY S PAGER
RPS 2000 Relay
Control Unit**



RAY S PAGER RPS 2000 Relay Control Unit Instruction Manual

[Home](#) » [RAY S PAGER](#) » RAY S PAGER RPS 2000 Relay Control Unit Instruction Manual 

Contents

- 1 RAY S PAGER RPS 2000 Relay Control Unit
- 2 Product Usage Instructions
- 3 RPS 2000 RELAY CONTROL
- 4 RPS 2000 RELAY CONTROL SHOWN WITH AMPLIFIED CHARGER
- 5 Documents / Resources
 - 5.1 References

RAY S PAGER

RAY S PAGER RPS 2000 Relay Control Unit



Specifications

- Compatible with Unication G-Series Amp Chargers and Motorola Monitor Amp Chargers with 5 pin DIN ports
- **Outputs:** AC 110 Volt/10 amp, 12 volt/2 amp, Dry Contact Switch Port

- **Controls:** 2 separately timed outputs, variable MUTE time control

Product Usage Instructions

Installation

1. Connect the 110V AC power input to a power source.
2. Connect the DIN port from the amp charger to the corresponding port on the RPS 2000 Relay Control.
3. Set up the outputs according to your requirements.

Operation

1. Press the Test/Reset button to activate the system.
2. Adjust the variable output timed controls as needed for different devices.
3. Utilize the dry contact switch port for additional control options.

Maintenance

Regularly check connections and ensure proper functioning of the device. Clean the unit as necessary to prevent dust accumulation.

The RPS 2000 Relay Control works with all Unication G-Series Amp Chargers as well as all Motorola Minitor Amp Chargers with 5 pin DIN ports. Activate Station Alerting Systems, Sirens, Lights and etc. Universal hookup with multiple options. Activate with 2 separately timed outputs,

- 1- AC 110 Volt/10 amp output and
- 1- 12 volt/2 amp output /Dry Contact Switch Port.

RAY'S PAGER SALES


- 389 Millway Road, Ephrata PA 17522
- **Ph:** [717-859-2021](tel:717-859-2021)
- **Email:**
 - Ray@rayspagersales.com
 - www.rayspagersales.com

RPS 2000 RELAY CONTROL



1. RPS 2000 Control Case
2. Status LED
3. Test/Reset Button
4. Variable OUTPUT Timed Control No.1
5. Variable OUTPUT Timed Control No. 2
6. Variable MUTE Time Control (Both)

REAR PANEL

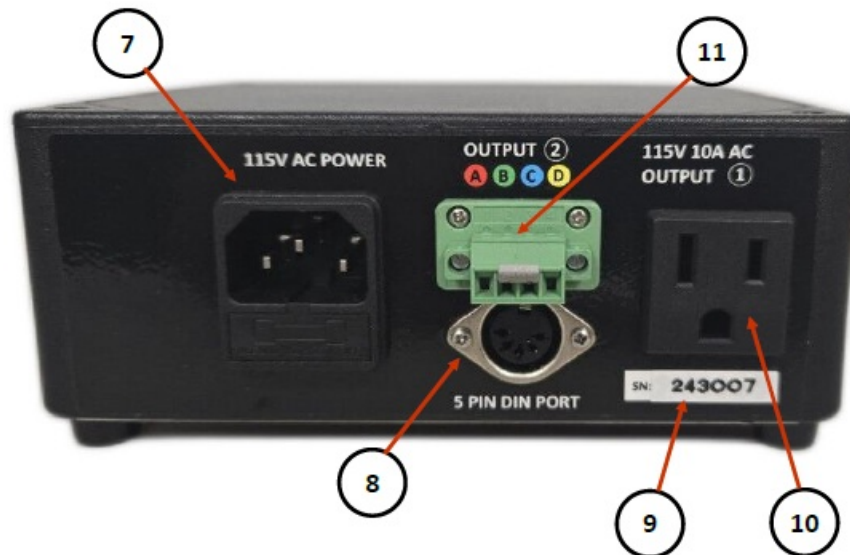

7. 110V AC POWER INPUT
8. DIN PORT FROM AMP CHARGER
9. SERIAL NUMBER
10. 115V AC TIMED OUTPUT 1
11. 12 VOLT/2 AMP OUTPUT 2

OUTPUT INSTRUCTION DECAL



RPS 2000 RELAY CONTROL SHOWN WITH AMPLIFIED CHARGER



The RPS 2000 Relay Control works with all Unication G-Series Amp Chargers as well as all Motorola Minitor Amp Chargers with 5 pin DIN ports. Activates Station Alerting Systems, Sirens, Lights and etc.

This is a plug and play unit and includes all cords. (Pager and Amplified Charger not included – sold separately)

- 1- 110 volt/10 amp Adjustable Timed Receptacle. (OUTPUT 1)
- 1– 12 volt/2 amp Adjustable output
- (Can be set as a Dry Contact) (OUTPUT 2)
- 1-Adjustable Timed Mute control 5 sec. to 15 minutesFAQ

Q: How do I know if the unit is receiving power?

A: Check if the status LED is illuminated, indicating that the unit is powered on.

Q: Can I use this with any type of pager or charger?

A: The RPS 2000 Relay Control is specifically designed to work with Unication G-Series and Motorola Minitor Amp Chargers with 5-pin DIN ports.

Q: What should I do if the outputs are not activating my devices?


A: Ensure that the connections are secure and that the timed controls are set correctly. Refer to the user manual for troubleshooting tips.

Documents / Resources



RAY S PAGER RPS 2000 Relay Control Unit [pdf] Instruction Manual RPS 2000 Relay Control Unit, RPS 2000, Relay Control Unit, Control Unit, Unit

References

-  [Trusted Unication Pagers For Sale | Shop Fire & EMS Voice Pagers](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.