



SEALEY AP200.V3 Adjustable Height Mobile Workstation Instruction Manual

[Home](#) » [SEALEY](#) » SEALEY AP200.V3 Adjustable Height Mobile Workstation Instruction Manual 

SEALEY AP200.V3 Adjustable Height Mobile Workstation



Contents

- 1 THANK YOU
- 2 SAFETY
- 3 INTRODUCTION
- 4 SPECIFICATION
- 5 ASSEMBLY
- 6 OPERATION
- 7 STORAGE
- 8 CUSTOMER SUPPORT
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

THANK YOU

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions and maintained properly, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.

- Refer to Instruction Manual



SAFETY

- ☐ **WARNING!** Thoroughly read and understand the provided product manual before attempting to use this product.
- ☐ **WARNING!** Use workstation on level and solid ground, preferably concrete.
- ☐ **WARNING!** DO NOT stand on this product, or attempt to ride on it. You may fall, which could lead to personal injury.
- ☐ **WARNING!** DO NOT alter this product in any way. Any added material or components may imbalance the tray, which could lead to property damage and personal injury.
- ☐ **WARNING!** Be mindful of sharp edges/welds while assembling, and operating workstation. Always wear safety gloves and appropriate safety equipment.
- ☐ **WARNING!** DO NOT exceed weight capacity (see product specifications). This could lead to product failure and personal injury while working with tools and equipment.
 - ✓ Locate workstation in a suitable working area.
 - ✓ Keep the work area clean, uncluttered and ensure there is adequate lighting.
 - ✓ Keep the workstation clean and tidy in accordance with good workshop practice.
 - ✓ Keep children and unauthorised persons away from working area.
 - ✓ Ensure that fixings have been securely tightened before use.
 - ✗ DO NOT use the workstation for any purpose other than that for which it is designed.
 - ✗ DO NOT attempt to transport heavy loads on the workstation.

INTRODUCTION


Table is fully adjustable in height. Features four compartments, one large for main workpiece and three equal sized smaller sections for accessories. EVA lining on the table helps prevent damage to the unit and workpiece. Suitable for use in workshops and warehouses. Supplied with four castor wheels.

SPECIFICATION

Model no:	AP200.V3
Minimum Height:	875mm
Maximum Height:	1235mm
Table Size (W x D):	745 x 512mm
Capacity:	50kg

ASSEMBLY

1. Remove all contents from the outer box and reference the parts list to ensure that all parts are present.
2. Fasten Castor wheels (I & J) to each Wheel Frame (H & F). Ensure that the Castor wheels (I & J) is fully inserted into each square slot on the Wheel Frame (H & F).
3. Insert Large Plastic inserts (G) into the end caps of the Extended Wheel Frame (H) and Wheel Frame (F).
4. Align the base plate of the Lower Table Mounting Column (K) to the holes on the wheel Frame (F). Fasten securely using the Hex Head Set Screw M8 x 16 Zinc (L).
5. Slide the Upper Table Mounting Column (D) into the Lower Table Mounting Column (K). Fasten together using the Hex Head Set Screw M8 x 16 Zinc (L).
6. Lay the Table (A) upside down, onto a clean protected surface. Attach the mounting bracket of the Upper Table Mounting Column (D) to the bottom of the Table (A) using the Hex Head Set Screw M8 x 16 Zinc (L).
7. Slide the completed Upper Assembly into the top of the Lower Table Mounting Column (K), and secure at the desired height using the Height Adjustment Knob (E).
8. Place Rubber Mats (B & M) into Table (A).
 - ✓ Refer to fig.1 over leaf and attached parts diagram.

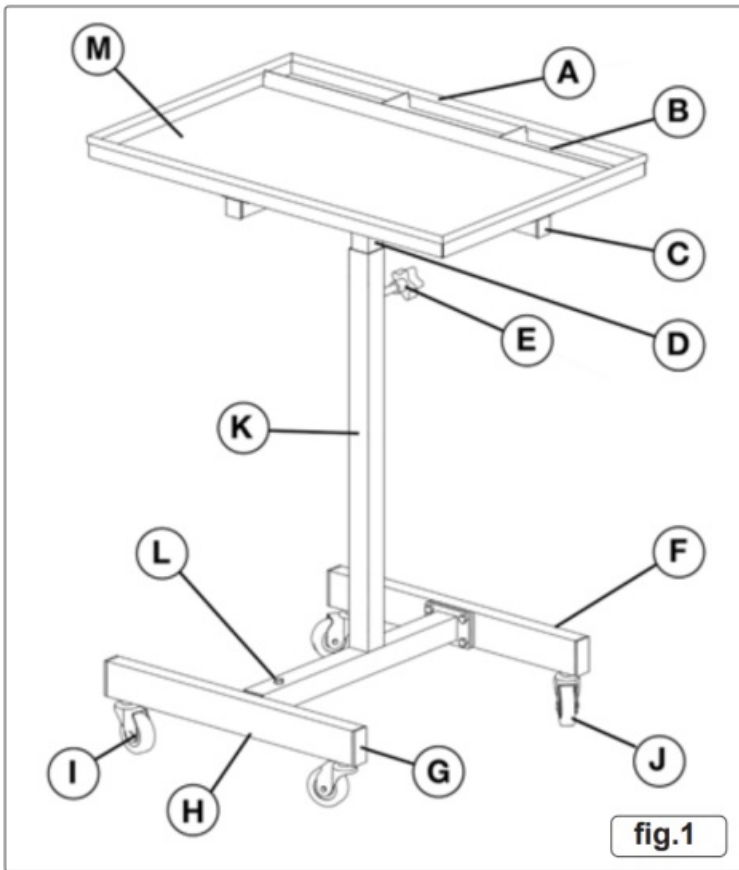

Suggested Tools For Assembly


1. Metric Socket Set and Ratchet
2. Combination Wrench Set
3. Adjustable Wrench

OPERATION

WARNING! DO NOT extend the table beyond the extension warning line located on the table pole. See fig.2.

1. To adjust the height of the workstation firstly support the table top to prevent it from dropping, then turn the height adjustable knob (E) anticlockwise to loosen. Turn height adjustable knob clockwise to tighten once table top is adjusted to the correct height.
2. When positioning the table next to or over painted or 'valuable' surfaces ensure they are covered by protective non-scratch covers.

fig.2

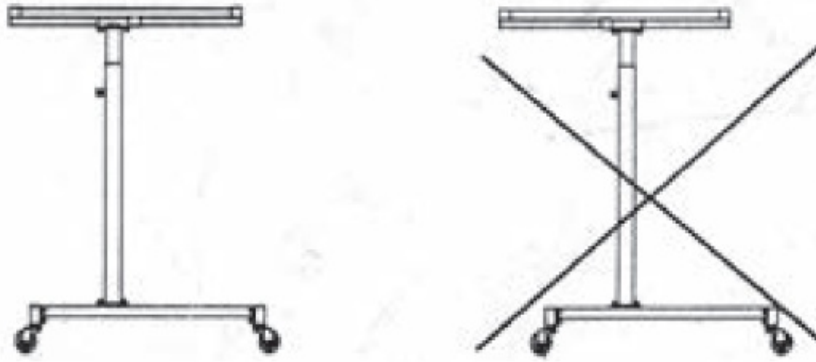

STORAGE

- ✓ Lower the tray to the lowest height setting for storage.
- ✓ Always store this product on a clean, level surface. DO NOT store near flammable materials.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR
PURCHASE HERE

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

IMPORTANT: No Liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which is required for any claim.

CUSTOMER SUPPORT

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



sales@sealey.co.uk



www.sealey.co.uk





[SEALEY AP200.V3 Adjustable Height Mobile Workstation](#) [pdf] Instruction Manual
AP200.V3, AP200.V3 Adjustable Height Mobile Workstation, AP200.V3, Adjustable Height Mobile Workstation, Height Mobile Workstation, Mobile Workstation, Workstation

References

- **[User Manual](#)**

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.