



# Shenzhen Aiju Intelligent Technology AJ01 Bluetooth Smart Glasses Instruction Manual

[Home](#) » [Shenzhen Aiju Intelligent Technology](#) » Shenzhen Aiju Intelligent Technology AJ01 Bluetooth Smart Glasses Instruction Manual 

## Shenzhen Aiju Intelligent Technology AJ01 Bluetooth Smart Glasses Instruction Manual



Please review this manual thorough before operating your device

### Contents

- [1 STATEMENT](#)
- [2 PRODUCT NUMBER](#)
- [3 INSTRUCTIONS](#)
- [4 Product Parameter](#)
- [5 Product Contents](#)
  - [5.1 Tips](#)
- [6 Important Safety Information](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)


## STATEMENT

First of all, thank you for using our products! Please read this manual before use and use this product correctly. In order to provide better service, the content of this user manual may be changed, and changes that occur due to product performance and functions will not be notified separately.

## PRODUCT NUMBER

AJ01 open directional audio smart glasses, this product is a Bluetooth glasses with stereo function, simple operation, easy to carry

## INSTRUCTIONS

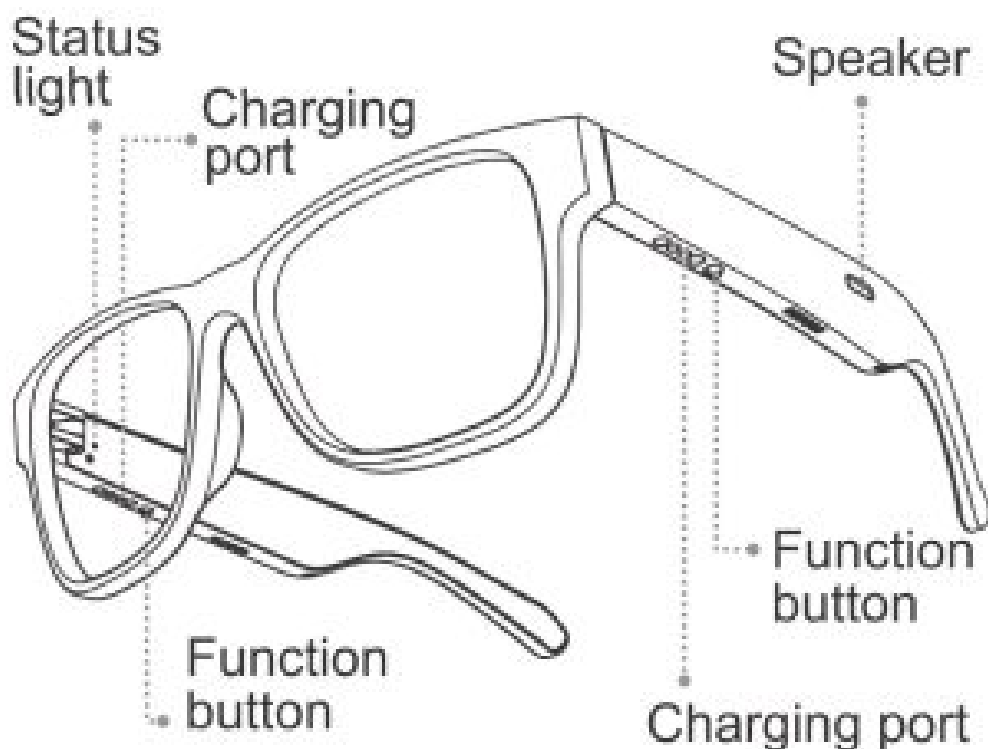

### • Charging


Charge the eyeglasses magnetically with a power cord. The eyeglasses are power off in the course of charging.



### • On / Off

Left and right glasses buttons are turned on separately, long press about 2 seconds on the left button or right button; Press the left button or right button for about 5 seconds to automatically synchronize turn off;

Power on 5 minutes without connection or exceed the connection range for 5 minutes unconnected, automatic synchronous turn off


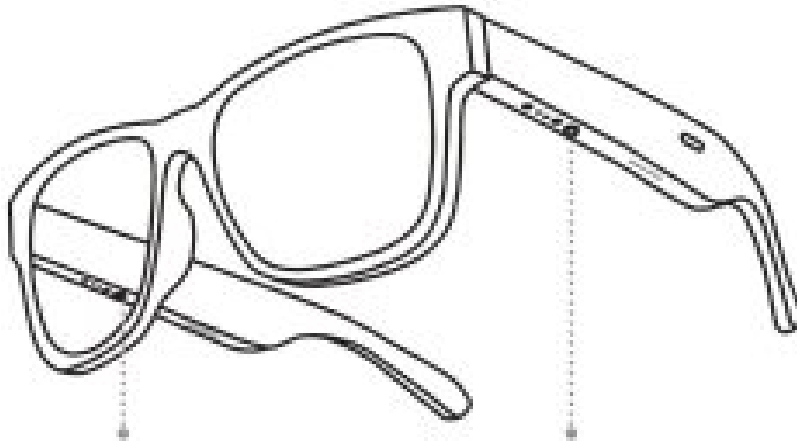


Long press the left or right button to turn on/off

- **Connection/Pairing**


Both earphones pair automatically after power on.

Open the Bluetooth list on the phone settings to search AJ01 to pair.

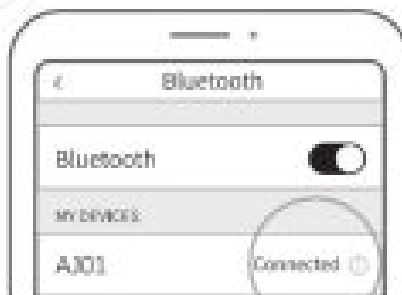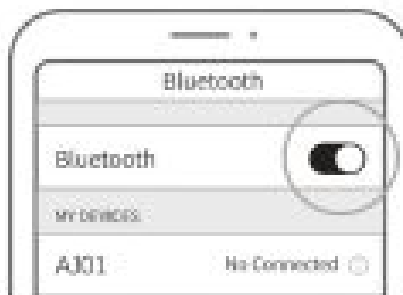

- **Play music**

Click to play; Click to pause; Double click to play the next song. Triple click to play the previous song. There is no voice adjustment button on the glasses, you need to adjust the volume size on the phone.

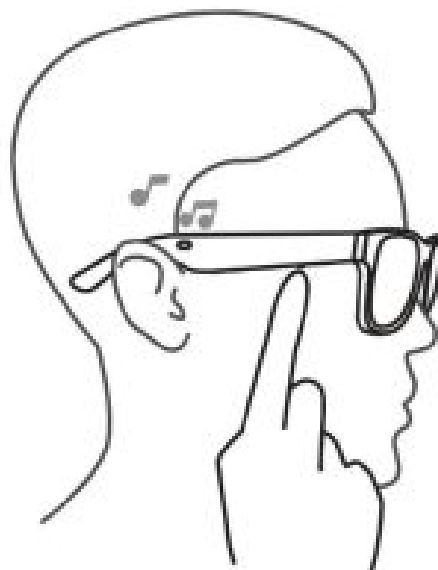

- **Phone Call**

Click to answer a call; Click to hang up Long press for 2s to reject a call



- **Voice Assistant**

Long press for 2s and release the button after hearing a prompt tone of “Di” to turn on voice assistant. Click to exit voice assistant.




- **Low Latency Mode**

In unlimited status, quartic click to enter low latency mode.



- **Restore Factory Settings/ Clear Pairing Records**

In the power-off status, long press for 8s to clear pairing records

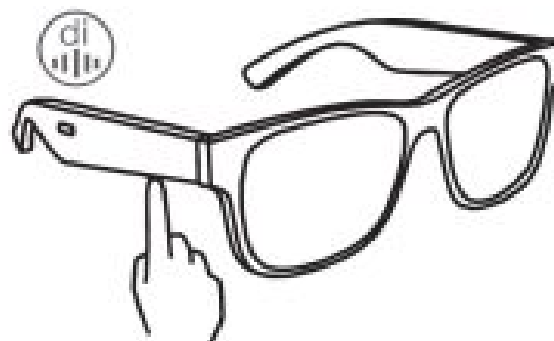

- **Low Battery Voice Prompt**

When the power of eyeglasses is less than 3.4V, the low battery voice prompt starts once every one minute.



## Product Parameter

Eyeglasses Frame Color		Matted Black	Bluetooth Protocol	BLE5.0
Eyeglasses Frame Material		TR90	Battery Capacity	One-sided 90mAh
Eyeglasses Lens		TAC	Charging Voltage/Current	5V/160mA
Product Weight		44.8g	Charging Time	90min
Waterproof Level		IPX4	Continuous Play in 100% Volume	About 5h
Working Temperature		0-45(°C)		

- BLE5.0 is compatible with the mainstream smartphones and other Bluetooth devices.
- The physical buttons on both sides are consistent in the way of operation.
- Dual loudspeakers on both sides play directionally.
- Play for 5h / 8h continuously in 100%/ 60% volume Cleaning is not permitted

## Product Contents

- Glasses x1




- Charging Cable x1



- Cleaning Cloth x1



- Manual x1

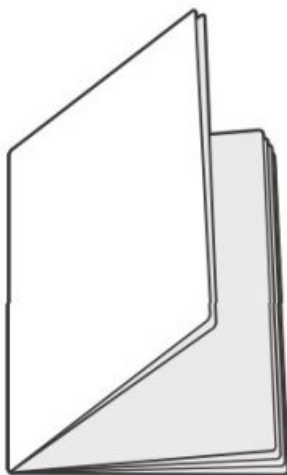

### Tips

1. Please read the manual carefully before use and then keep the manual
2. Please charge the product fully before use for the first

3. If the product is not charged for more than two weeks, please charge it before
4. Do not cleanse the dirty lens. Moisten the lens and then wipe it dry with eyeglasses cloth.
5. Try to cleanse the eyeglasses gently with an absorbent suede
6. Cleanse the lens in one direction. Do not cleanse it back and forth nor in circles.
7. The product will lay off if the battery temperature is over  $-10^{\circ}\text{C}$ – $60^{\circ}\text{C}$ .

## **Precautions**

1. Do not dismantle, maintain or refit the product for any reason lest causing fire or damaging the product by electron breakdown.
2. Do not put the product in the excessively low ( $<0^{\circ}\text{C}$ ) or high ( $>45^{\circ}\text{C}$ ) temperature environment
3. Do not moisten nor immerse the product in liquid
4. Do not expose eyeglasses in the sun for a long time lest causing distortion, burn-in or fracture.
5. Do not put the magnetic end of power cord close to metal objects lest causing short circuit by magnetizing metal objects.
6. Do not use any dissolvent, chemicals or cleansers with alcohol, ammonium hydroxide or abrasive.
7. Do not make any liquid into any apertures.

## **Important Safety Information**

1. Please read all the safety information before use in order to use the product correctly and safely.
2. In case of using the power, charger or battery that are not approved by the manufacturer, it may cause fire, explosion and other dangers.
3. Please use the accessories, which is compatible with the type of device and approved by the manufacturer.
4. Please use the product within the temperature range of  $0^{\circ}\text{C}$ – $35^{\circ}\text{C}$ , and store the product and its accessories within the temperature range of  $-20^{\circ}\text{C}$ – $45^{\circ}\text{C}$ . If the environmental temperature is excessively high or low, it may cause equipment failure.
5. After being charged fully, please disconnect the charger and product and unplug the charger. Do not charge the product over 12h continuously.
6. Do not dismantle, strike, extrude or put the product in. In case of a severe expansion, do not use it any more.
7. Do not put the product in the high temperature environment, lest causing an explosion.
8. Please keep the product dry.
9. If the product or any other components can not work normally, do not repair them by yourself.
10. While connecting other devices, please refer to the connection method in the manual, free from connecting the unmatched devices optionally.
11. Do not use the product in a high volume, lest hearing impairment

## **Warning**

Please abide by the relevant rules and regulations and do not use the product in the following environments:

1. Do not use the product in gas station, oil terminal, chemical warehouse and other environments storing the flammable and explosive oil and gas or
2. Do not use the product in the operating room, emergency department, intensive treatment department and so

forth. (In order to avoid disturbing the medical equipment, please use the product away from artificial



Documents / Resources

	<p><a href="#">Shenzhen Aiju Intelligent Technology AJ01 Bluetooth Smart Glasses</a> [pdf] Instruction Manual</p> <p>AJ01, 2AZY7-AJ01, 2AZY7AJ01, AJ01 Bluetooth Smart Glasses, Bluetooth Smart Glasses, Smart Glasses, Glasses</p>
--	---