



# Shenzhen Cacgo Intelligent Technology K28H Smart Bracelet User Manual

[Home](#) » [Shenzhen Cacgo Intelligent Technology](#) » Shenzhen Cacgo Intelligent Technology K28H Smart Bracelet User Manual 



## SHENZHEN

Cacgo Intelligent Technology K28H Smart Bracelet  
User Manual



Please make a full charge before using it.

APP: Daft

### Contents

- [1 Download APP](#)
- [2 BT Calling Version connecting](#)
- [3 Non-BT Calling connecting](#)
- [4 Smart bracelet Functions](#)
- [5 Pop-up menu](#)
- [6 Functions on Dafit App](#)
- [7 Warm notes](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

**Download APP**

1. Long press the home key to turn it on.
2. Scan below QR code to install the Dafit APP, Or download "Dafit" from App Store, Google Player then install it.



<http://plus.crrepa.com/app-download/mband>


Compatible System: Android 4.4 and above, iOS 8.0 and above

### **BT Calling Version connecting**


**Step1:** Turn on mobile phone Bluetooth

**Step2:** Open the "Dafit" APP, Tap "Add a device" to connect.

**Step3:** Turn on the phone menu on the watch.

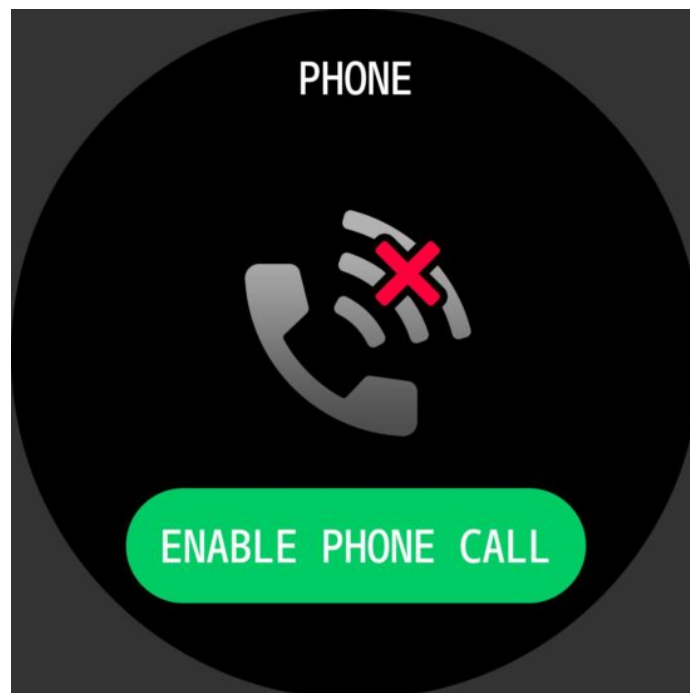

**Step4:** Check the watch menu "about" MAC address last four numbers like "6326", then go mobile phone "setting-Bluetooth" to search the same Bluetooth name with last 4 numbers "6326" to finish BT connection as below operation.

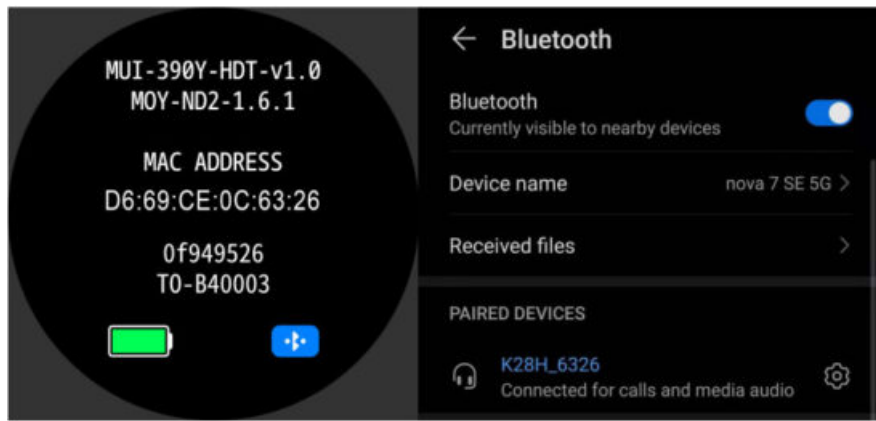

## Non-BT Calling connecting

1. Enter the APP to bind the searched device.

**Step1** Turn on mobile phone Bluetooth

**Step2** Open the “Daft” APP Tap “Add a device” to connect.


## Smart bracelet Functions

### Time Interface


1. Power on Long press the home key for 3 seconds.
2. Power off On the time interface press the “Home” side button for 3 seconds, then click the “√” icon to turn off
3. Switch watch face Long press the screen based on the main watch face, 4 interface options, and the 4th dial can manually replace user-defined pictures or photos on the APP

### Functions menu

1. Activity records Step records)
2. **Sleep monitor**  
Sleep monitor period: 20:00PM to 10:00AM Pls make sure wore the bracelet device
3. **Exercise**

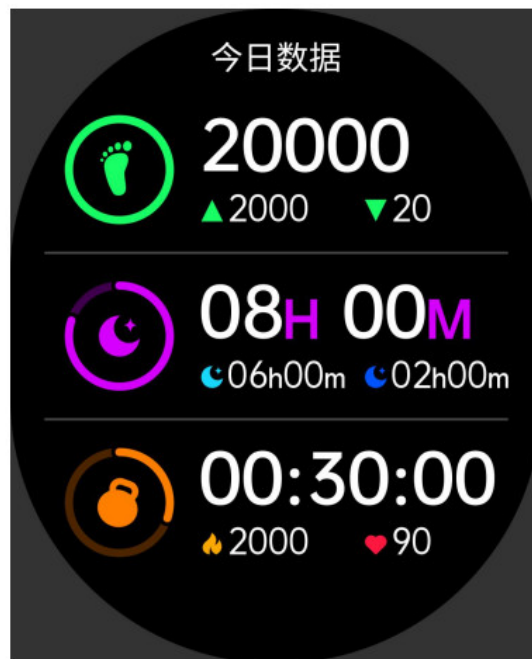

- 4. Heart Rate monitor
- 5. Blood Pressure Detection
- 6. Blood Oxygen Detection

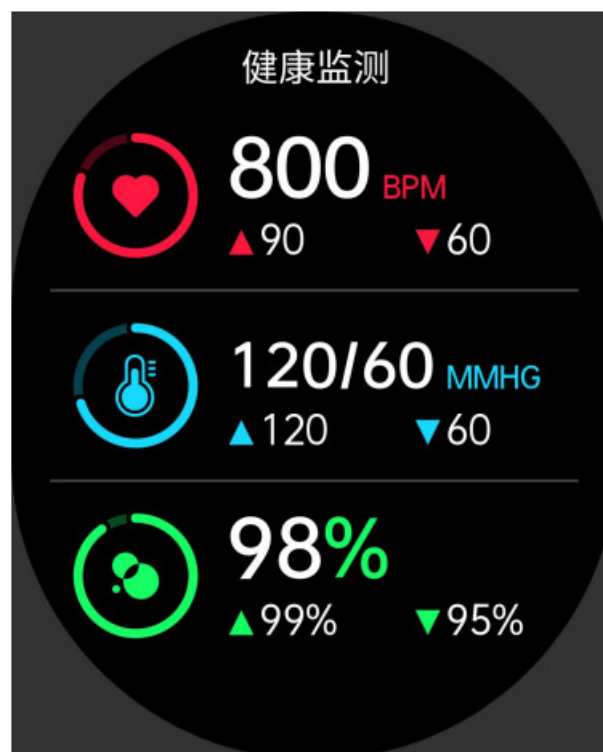

- 7. Weather Slide up screen can check this week's weather information)




## 8. Shutter

**Android:** Turn on the Daft app, from the smart bracelet enter “shutter”, shake the bracelet or click to take a photo.

**IOS:** Enter the smart bracelet “shutter”, make sure to turn on the mobile’s camera, shake the bracelet, or click the icon.




9. **Player** (Enter BT music, click the middle icon to pause or continue, tap the left icon to play the last song, tap the right icon to play the next song)

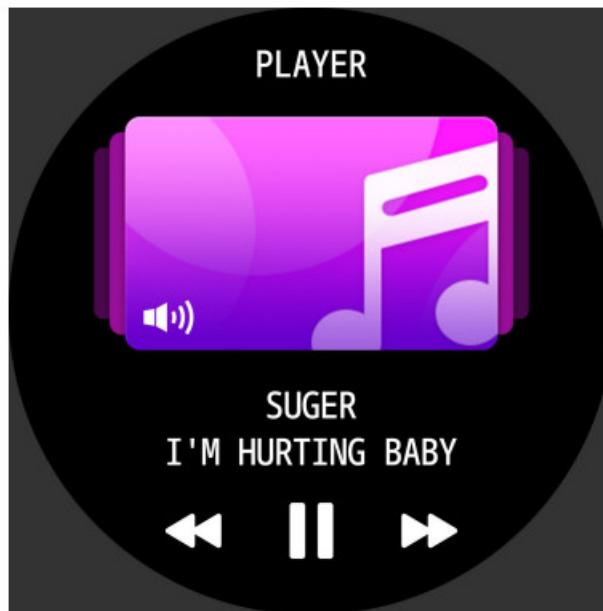


10. **Notifications push** Turn on the Dafit app” Notifications” social apps like Facebook, Twitter, Skype, etc,  
**Pay attention to Android mobile phone setup:** Dafit app/Notification/Accessibility to turn on“Daft”

11. **Breathe**

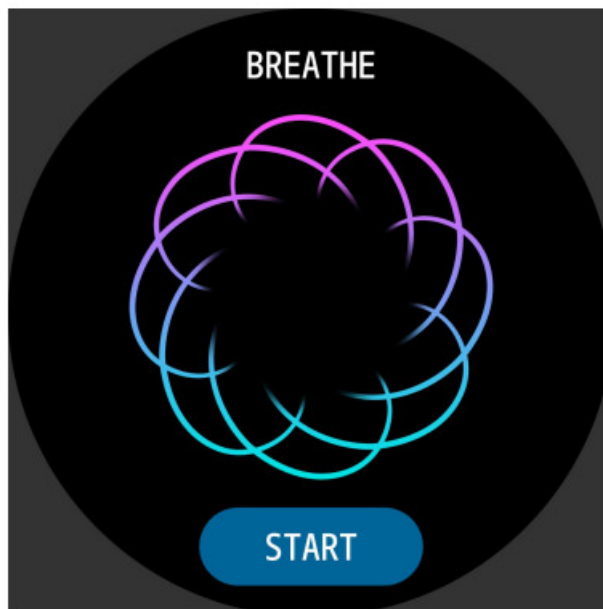

## Pop-up menu

Slide down the screen from the main watch dial

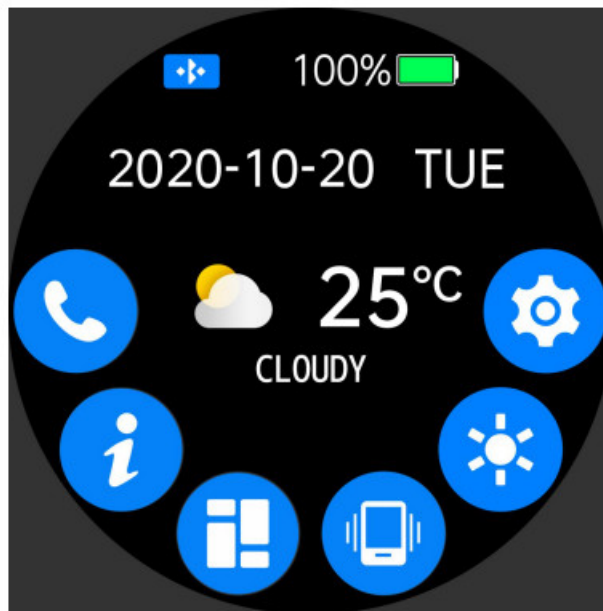

3.1. Phone	3.4. Vibration or mute mode
3.2. About	3.5. Brightness adjustment
3.3. Menu view	3.6 Setting

## Functions on Dafit App

### 1. Data sync

All measured data from the smart bracelet will be synced on the mobile phone Dafit app eg: step,sleep monitor, heart rate, blood pressure, blood oxygen, and other data as below Pic.


### 2. smart bracelet connection interface

### 3. Watch Faces users can manually replace user-defined pictures or photos)



### 4. Notifications Turn on social apps message push like WeChat, Facebook, WhatsApp, Twitter, etc)

### 5. Alarms 3 options

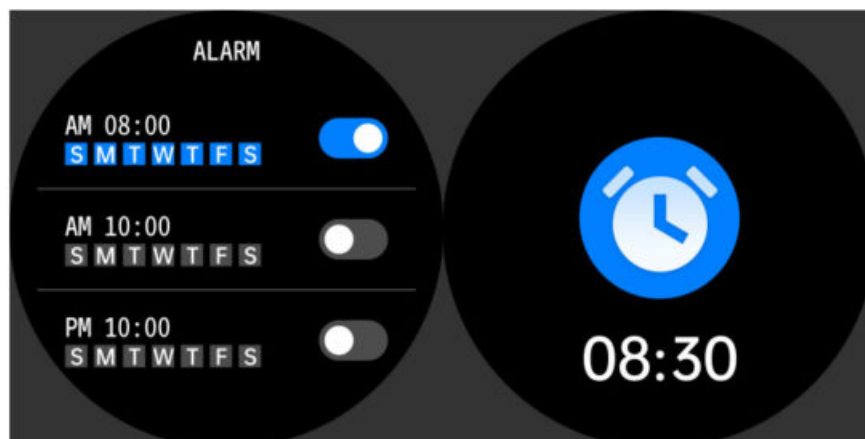

## 6. **Shutter**

7. Others( Find my smart bracelet, Time formats, Setting a time of no disturbing, Sedentary reminder,Full-day heart-rate monitor, Quick View screen, Weather,Drink Water reminder, Physiological cycle reminder)

**A.** Power on “Find my bracelet” mode,the bracelet will vibrate when the Bluetooth is connected successfully between the mobile phone and smart bracelet.

**B.** Time format 2 options of 12&24hours system

**C.** Time format 2 options of 12&24hours system

**D.** Setting mode of no disturbing

**E.** Sedentary reminder(Valid period 10:00AM-22:00PM)

**F.** Full day heart-rate monitor( Turn on it can detect your whole day heart rate

**G.** Quick view screen: wake up screen turn on it and choose valid time period)

**H.** Drink Water Reminder

**I.** Weather Turn on the weather, choose the city you want or automatic location the band will show the located city's weather )

**J.** Physiological cycle reminder **Notes:** Please kindly note above functions are working based on activated and saved the related setup

## **Warm notes**

### 1. Connect Bluetooth

1. Please power on your phone Bluetooth and turn on the smart bracelet Bluetooth before connecting;

2. Please ensure your smart bracelet didn't connect with another phone before connecting

3. Please keep close to your smart bracelet when you are connecting.

### 2. Please turn on mobile phone notifications and allow permissions to run in the background if your

Mobile has installed “ Mobile manager ” or other similar Apps, otherwise, you will not receive the messages.

### 3. **Battery Recharge:** Power adaptor: 5V0.5~1A

## **Disclaimer**

Warning: This product is not a medical device.

The smart band and its applications should not be used in diagnosis, treatment, or as a preventive treatment for diseases and sickness.

Please consult medical professionals before changing exercise habits or sleep habits to avoid serious injuries.

The manufacturer reserves the right to modify and improve any functions described in this user guide and continuous update the new content without further notice. This user guide is for reference only, the smart band for selling is subject to the final product.

## **Warning**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.


This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:



- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for [help.ct](#).

The device has been evaluated to meet general RF exposure requirements.

**Documents / Resources**

<div><div>Smart Bracelet User Manual</div><div></div><div><div>Plasma series full charge indicator icon: APP: Date:</div></div></div>	<div><div><a href="#">Shenzhen Cacgo Intelligent Technology K28H Smart Bracelet</a> [pdf] User Manual K28H, 2A448-K28H, 2A448K28H, K28H Smart Bracelet, K28H, Smart Bracelet</div></div>
--	--