



Shenzhen Powerqi Technology LC05 Sterilizer with Wireless Charging User Manual

[Home](#) » [Shenzhen Powerqi Technology](#) » Shenzhen Powerqi Technology LC05 Sterilizer with Wireless Charging User Manual 

Contents

- [1 Shenzhen Powerqi Technology LC05 Sterilizer with Wireless Charging](#)
- [2 Connect to Adapter](#)
- [3 Method of Application](#)
- [4 Charging Diagram](#)
- [5 SPECIFICATIONS](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)


POWERQI

Shenzhen Powerqi Technology LC05 Sterilizer with Wireless Charging



This product realizes short-distance wireless power transmission by magnetic induction, and it is a fast wireless charging transmitter. This product has exquisite appearance and wide working voltage (DC 5V-12V), which can adapt to most USB TYPE-C output QC standard adapters or PD standard adapters (when using QC USB TYPE-C, PD adapter, this product defaults At 9V). This product also has the function of UV disinfection for phones.


Connect to Adapter

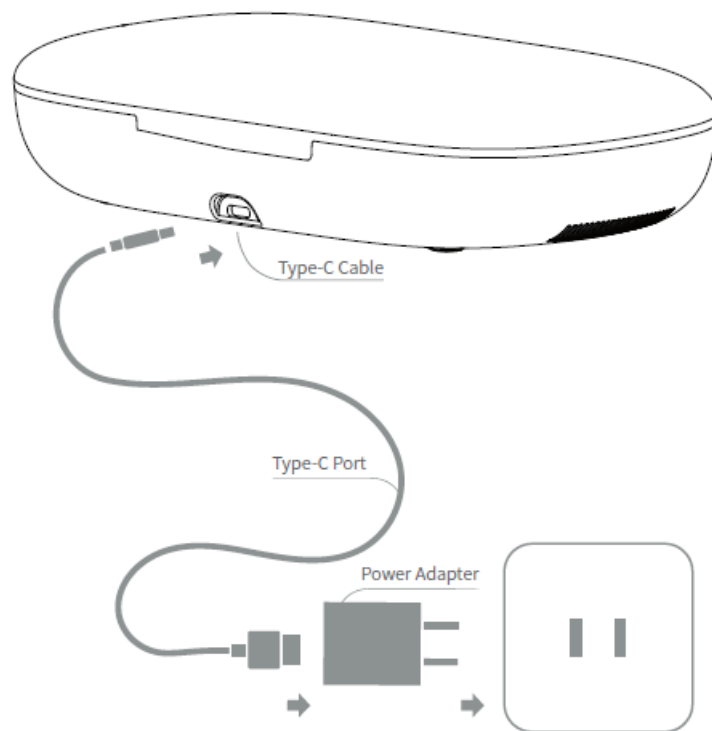

1. Connect the power adapter to socket.
2. Type-C cable one interface connected to the power adapter , the other interface to UV Sterilizer Box Wireless Charger.


Note: This product is also compatible with Type-C to Type-C cables. Only QC2.0 or QC3.0 standard power adapter support this product's quick charge function. Type-C to Type-C and power adapter need to buy separately.

Method of Application

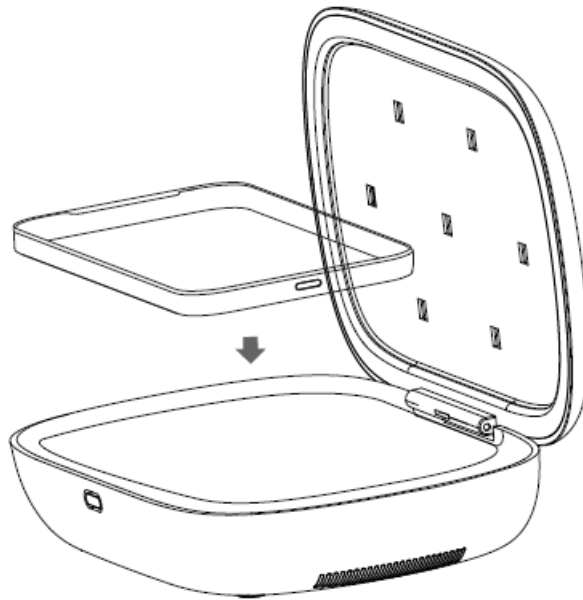

- Connect the transmitter through the USB TYPE-C cable (QC USB TYPE-C, PD adapter). If the product works with a PD adapter and QC standard adapter, the product can achieve a 7.5W fast wireless charging mode for iPhone 12.
- Put the mobile phone in the box, touch the touch switch after closing the cover, and the product will be disinfected by UV. The product indicator lights up red.

Charging Diagram

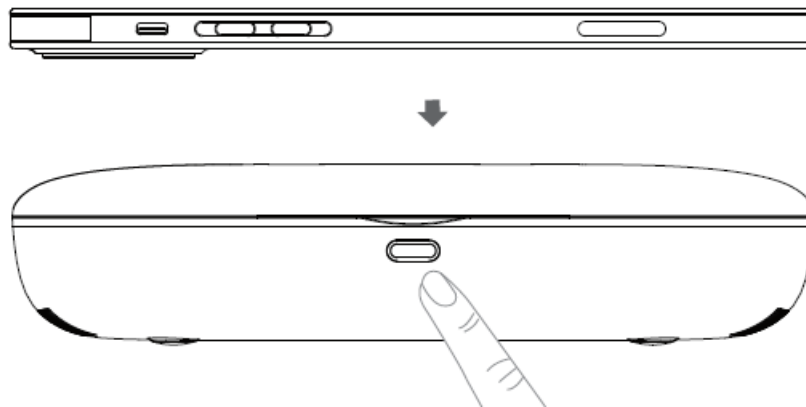

1. **Power on:** Blue and green lights flash alternately for 2S, and the green lights stay on for standby.
2. **Standby:** the indicator light is always green.
3. **Charging:** the indicator light will stay blue.
4. **Charging Full:** the indicator light turn green.
5. **FOD and abnormal:** blue light flashes
6. **UV disinfection:** The red light stays on until the disinfection is completed in 30 minutes. After that, the lighting mode is restored to the current working state.

Notes

1. Do not squeeze or collisions.
2. Do not disassemble or throw into fire or water, to avoid causing a short circuit leakage.

3. Do not use wireless charging UV sterilization box in severely hot, humid or corrosive environments, to avoid circuit damage and occurs leakage phenomenon.
4. Do not place too close with magnetic stripe or chip card (ID card, bank cards, etc.)to avoid magnetic failure.
5. lease keep the distance at least 20cm between implantable medical devices(pacemakers, implantable cochlear, etc.)and the wireless charging UV sterilization box, to avoid potential interference with the medical device.
6. Please take care of the children to ensure that they don't play with the wireless charging UV sterilization box to avoid unnecessary accidents.

SPECIFICATIONS

Input	5V/3A, 9v/2.22A,12V/1.67A
Output:	5W/7.5W/10W/15W
Charging Distance	≤10mm
Dimensions	225 x 50 x 127mm
Frenquency	115~205KHz
Conversion	≥70%
Weight	390g

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.


However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. — Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC’s RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

FCC ID 2AFP2LC05

Documents / Resources

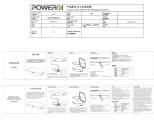	Shenzhen Powerqi Technology LC05 Sterilizer with Wireless Charging [pdf] User Manual LC05, 2AFP2LC05, LC05 Sterilizer with Wireless Charging, Sterilizer with Wireless Charging, Wireless Charging, Charging
---	--