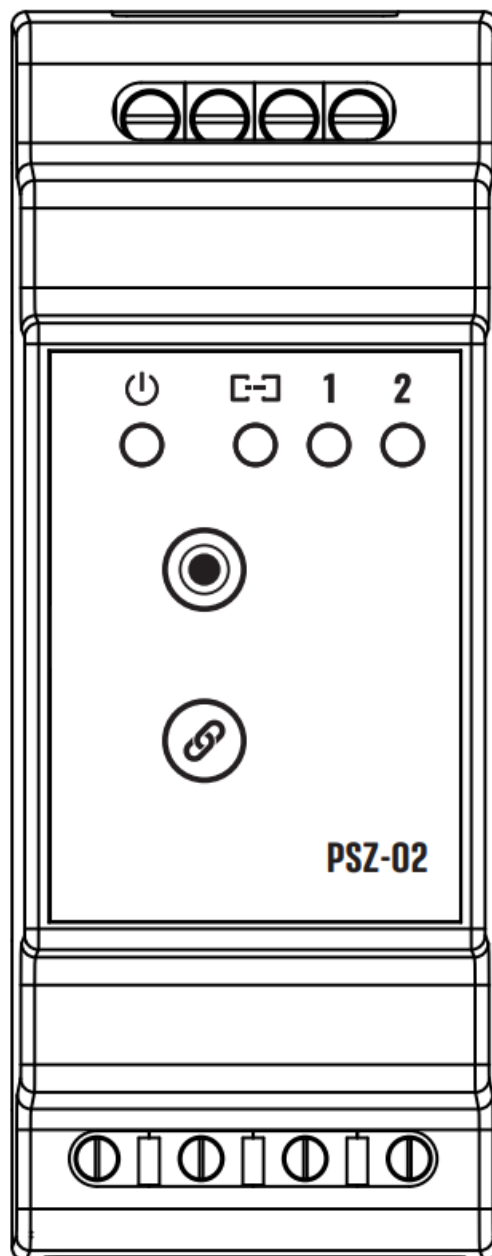


Sinum PSZ-02 Roller Shutter Control System Instruction Manual

[Home](#) » [Sinum](#) » Sinum PSZ-02 Roller Shutter Control System Instruction Manual 

Sinum PSZ-02 Roller Shutter Control System



Contents

- [1 Product Description](#)
- [2 CONTROL OF THE TILTING SHUTTER](#)
- [3 Description](#)
- [4 How to register the device in the sinum system](#)
- [5 Technical data](#)
- [6 EU Declaration of conformity](#)
- [7 Customer Support](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

Product Description

1. Connecting the roller shutter to the module outputs in reverse will result in incorrect operation of the device and incorrect calibration.
2. Before using the module for the first time, the roller shutter limit switches should be set correctly.
3. After every ten movements of the roller shutter, automatic calibration takes place – the roller shutter moves to the extreme position and then returns to the set position.
4. The roller shutter is controlled by constantly applying power supply to a given direction of roller shutter operation.

NOTE:

- Steps to follow after registering and adding the module to the Sinum Central device, in the module settings

[Settings > Devices > SBUS Devices >  (on the device tile)]:

- choose the type of blinds you have: blackout or tilting
 - when choosing a tilting roller blind, you should also select the tilt angle: 90o lub 180o
 - perform calibration
- Pressing the button **1** initiates the calibration process.
 - The tolerance between the height set in the Sinum application and the actual roller blind height level can be max. 5%.

CONTROL OF THE TILTING SHUTTER

While holding the roller shutter up/down button:

- less than 1.5 seconds – change the angle of the roller shutter elements
- over 1.5 seconds – change of the roller shutter opening level

Description



– Power supply




– Communication

1-2 – Current status of the voltage-free output (ON/OFF)

How to register the device in the sinum system

Enter the address of the Sinum central device in the browser and log in to the device. In the main panel, click the

Settings > Devices > Wireless devices > . Then briefly press the registration button 2 on the device. After a properly completed registration process, an appropriate message will appear on the screen. Additionally, the user can name the device and assign it to a specific room.

Technical data

Power supply	230V \pm 10% /50Hz
Max. power consumption	1,5W
Rated load of the voltage-free contact 1-2	230V AC / 0,5A (AC1)*
Operation temperature	5°C ÷ 50°C
Acceptable ambient relative humidity	<80% REL.H
Operation frequency	868 MHz
Max. transmission power	25 mW

Notes

TECH Controllers is not responsible for any damages resulting from improper use of the system.

The range depends on the conditions in which the device is used and the structure and materials used in the object construction. The manufacturer reserves the right to improve devices, update software and related documentation. The graphics are provided for illustration purposes only and may differ slightly from the actual look. The diagrams serve as examples. All changes are updated on an ongoing basis on the manufacturer's

website.

Before using the device for the first time, read the following regulations carefully. Not obeying these instructions may lead to personal injuries or controller damage. The device should be installed by a qualified person. It is not intended to be operated by children. It is a live electrical device. Make sure the device is disconnected from the mains before performing any activities involving the power supply (plugging cables, installing the device etc.). The device is not water resistant.





The product may not be disposed of to household waste containers. The user is obliged to transfer their used equipment to a collection point where all electric and electronic components will be recycled.

EU Declaration of conformity

Tech Sterowniki II Sp. z o.o., ul. Biała Droga 34, Wieprz (34-122) Hereby, we declare under our sole responsibility that the PSZ-02 module is compliant with Directive 2014/53/EU.

Wieprz, 01.12.2023


Paweł Jura

Janusz Master
Prezesa firmy

The full text of the EU declaration of conformity and the user manual are available after scanning the QR code or at www.tech-controllers.com/manuals

Customer Support



www.techsterowniki.pl/manuals Wyprodukowano w Polsce



www.tech-controllers.com/manuals Made in Poland

 **TECH STEROWNIKI II Sp. z o.o.**
ul. Biała Droga 31 34-122 Wieprz

Service

tel: +48 33 875 93 80 www.tech-controllers.com \ support.sinum@techsterowniki.pl

TECH |  **Sinum**



[Sinum PSZ-02 Roller Shutter Control System](#) [pdf] Instruction Manual

PSZ-02, PSZ-02, PSZ-02 Roller Shutter Control System, Roller Shutter Control System, Shutter Control System, Control System, System

References

- [controllers.com](#)
- [Intelligens fűtés-hűtés, fűtési-hűtési megoldások - TECH vezérlők gyártója | TECH vezérlők](#)
- [Intelligent heating, smart heating solutions - manufacturer of controllers | TECH Controllers](#)
- [Manuals - TECH Controllers](#)
- [TECH Controllers - Teplo ve Vašem domě](#)
- [TECH Controllers - Teplo vo Vašom dome](#)
- [Instrukcje - TECH Sterowniki](#)
- [Soluția de acasă de economisire a energiei - producător de controlere I Tech-Controllers](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.