



## **solis 10 Minutes Voltage Set Instructions**

[Home](#) » [solis](#) » **solis 10 Minutes Voltage Set Instructions** 

### **Contents**

- [1 solis 10 Minutes Voltage Set](#)
- [2 10 MINUTES VOLTAGE SET](#)
- [3 Documents / Resources](#)
  - [3.1 References](#)
- [4 Related Posts](#)




**solis 10 Minutes Voltage Set**




## 10 MINUTES VOLTAGE SET



- **STEP 1:** Press Enter on the inverter screen.
- **STEP 2:** Use Up/Down keys to go to advanced settings and press Enter.

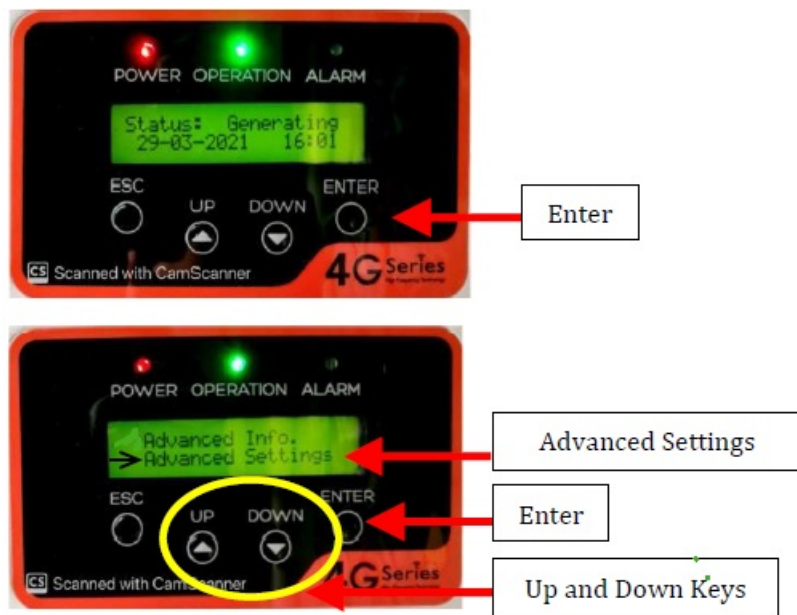

- **STEP 3:** Press Down key twice and Up key once, to type the password as 0010. Then press Enter.
- **STEP 4:** Use the up/down keys to scroll to Grid ON/ Grid OFF. Then press Enter.

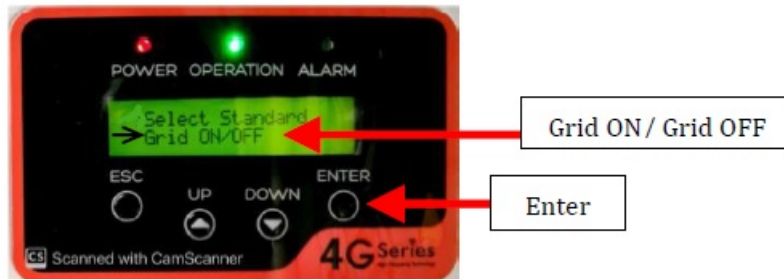

- **STEP 5:** Select the Grid OFF option and press Enter. You will see the operation light turn OFF.
- **STEP 6:** Press Up/Down key until you find “STD Mode Settings”. Press Enter.

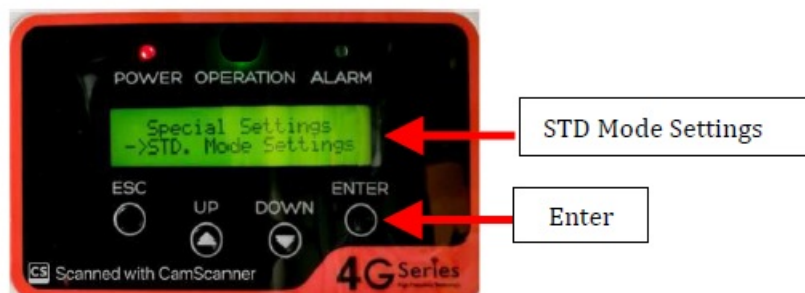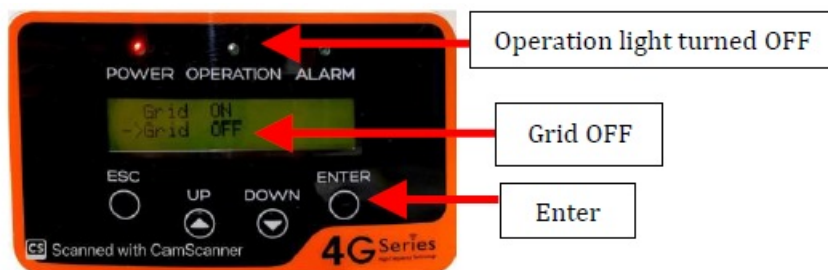

- **STEP 7:** Press Up/Down key until you see “10 mins Voltage Set”. Press Enter.




- **STEP 8:** You can change the voltage value by pressing the Up key (By default, the 10 mins voltage set is 255V or 257V). You can set a maximum of 258 Volts. Press Enter to Save.
- **STEP 9:** Now turn the Grid ON in Advanced Settings. (Go to Advanced Settings again by pressing ESC thrice < Set password 0010 < Go to Grid ON/Grid OFF < Select Grid ON < Press Enter).

“ALL DONE” HAVE A GOOD DAY!

- **Website:** [www.solisinverters.com.au](http://www.solisinverters.com.au)
- **Ph:** 03 8555 9516

- E: [service@ginlongaust.com.au](mailto:service@ginlongaust.com.au)

## Documents / Resources
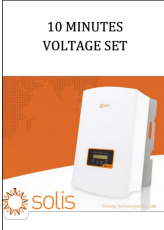
|                                                                                                                                                                                                                                                                                                                                                                                                    |                                                                                                                |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
|  The image shows a white, rectangular electronic device, the Solis 10 Minutes Voltage Set, standing upright. It has a small digital display on the front. The background is orange with a faint grid pattern. The Solis logo is visible in the bottom left corner of the image. <p>10 MINUTES<br/>VOLTAGE SET</p> | <p><a href="#">solis 10 Minutes Voltage Set</a> [pdf] Instructions<br/>10 Minutes Voltage Set, Voltage Set</p> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|

## References

-  [solisinverters.com.au](http://solisinverters.com.au)

Manuals+.