



SpeechWare TableMike Best Microphone Instructions

[Home](#) » [SpeechWare](#) » SpeechWare TableMike Best Microphone Instructions 

Contents

- [1 SpeechWare TableMike Best Microphone](#)
- [2 Product Specifications](#)
- [3 FAQ](#)
- [4 Using Instructions](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



SpeechWare TableMike Best Microphone



Product Specifications

- **Product Name:** TableMike & Dragon Desktop Microphone
- **Models:** 1-in-1, 3-in-1, 6-in-1
- **LED Indicator Colors:** RED, GREEN, BLUE
- **Compatibility:** Works with Dragon speech recognition software
- **Manufacturer:** SpeechWare

FAQ

Frequently Asked Questions

- **Q: How do I know which model of TableMike I have?**
 - **A:** The model of your TableMike can be identified by the number of functions it offers (1-in-1, 3-in-1, 6-in-1) and the color of the LED indicator.
- **Q: Can I use TableMike with other speech recognition software?**
 - **A:** TableMike is specifically designed for use with Dragon speech recognition software. Compatibility with other software may vary.
- **Q: What should I do if my TableMike is not recognized by my PC?**
 - **A:** Ensure that the TableMike is properly plugged into a working USB port on your PC. You can also try using a different USB port or restarting your computer.

Using Instructions

STEPS FOR QUICK CONFIGURATION OF TABLEMIKES & DRAGON

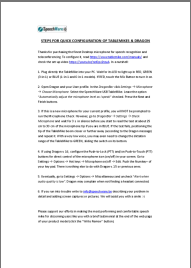
Thanks for purchasing the finest Desktop microphone for speech recognition and teleconferencing. To configure it,

read <https://www.tablemike.com/manuals/> and check the set-up video <https://youtu.be/nzl0pc2tzuA>. In a nutshell:

1. Plug directly the TableMike into your PC. Wait for its LED to light up in RED, GREEN (3-in-1) or BLUE (1-in-1 and 6-in-1 models). If RED, touch the Mic Button to turn it on.
2. Open Dragon and your User profile. In the DragonBar click Settings → Microphone → Choose Microphone. Select the SpeechWare USB TableMike. Leave the option “Automatically adjust the microphone level as I speak” checked. Press the Next and Finish buttons.
3. If this is a new microphone for your current profile, you will NOT be prompted to run the Microphone Check. However, go to DragonBar → Settings → Check Microphone and wait for 3 s. in silence before you start to read the text at about 25 cm to 30 cm of the microphone tip if you are in BLUE. If the test fails, positioning the tip of the TableMike boom closer or further away (according to the Dragon message) and repeat it. With a very low voice, you may even need to change the dictation range of the TableMike to GREEN, sliding the switch on its bottom.
4. If using Dragon v. 16, configure the Push-to-Lock (PTT) and/on Push-to-Touch (PTT) buttons for direct control of the microphone icon (on/off) in your screen. Go to Settings → Options → Hot keys → Microphone on/off → Edit. Push the Numkey+ of your key pad. There is nothing else to do with Dragon v. 15 or previous ones.
5. Eventually, go to Settings → Options → Miscellaneous and uncheck “Alert when audio quality is low”. Dragon may complain when not finding a headset connected.
6. If you run into trouble write to info@speechware.be describing your problem in detail and adding screen captures or pictures. We will assist you with a smile

Please support our efforts in making the most performing and comfortable speech mike for discerning users like you with a brief testimonial at the end of the web page of your product model (click the “Write Review” button).

Documents / Resources

	SpeechWare TableMike Best Microphone [pdf] Instructions 1-in-1, 3-in-1, 6-in-1, TableMike Best Microphone, TableMike, Best Microphone, Microphone
---	--

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The “Bluetooth®” word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The “Wi-Fi®” word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.