



technical concepts OneShot Foam Touch-Free Soap System Instruction Manual

[Home](#) » [technical concepts](#) » technical concepts OneShot Foam Touch-Free Soap System Instruction Manual



technical concepts

OneShot® Foam Touch-Free Soap System

Contents [[hide](#)]

- [1 Installation & Operation Instructions](#)
- [2 Prior to Installation](#)
- [3 Installation of Dispenser](#)
- [4 Installation of Soap Refill](#)
- [5 Operation](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Installation & Operation Instructions

INSTALLATION


The System Components

- A. Spout Assembly
- B. Mounting Nut Wrench
- C. Low Battery Indicator (yellow)

-


Prior to Installation





- Ensure the hole is 15 /16" to 1 1 /4" in diameter.
- Ensure Soap System does not interfere with the sink & plumbing under the counter.

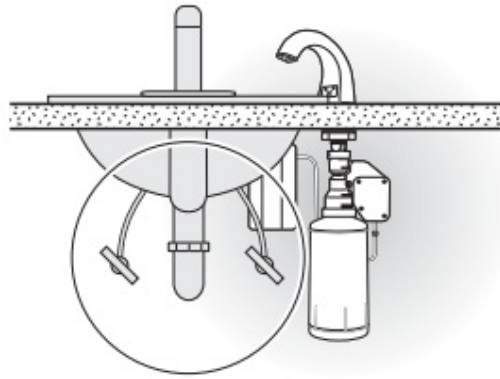

Installation of Dispenser

- If using the spacer, line up the guide pins on the spacer with the pinholes on the bottom of the spout.

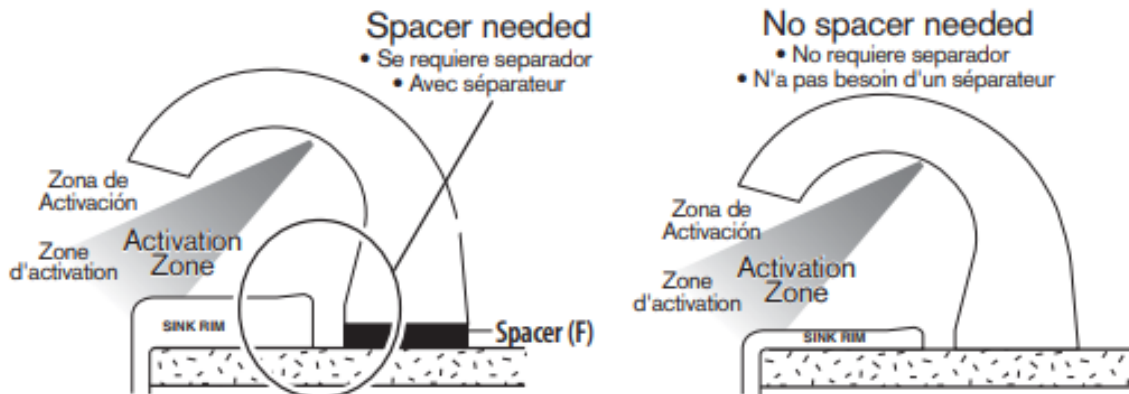


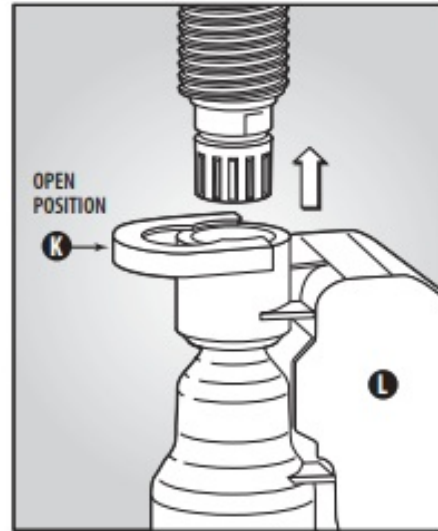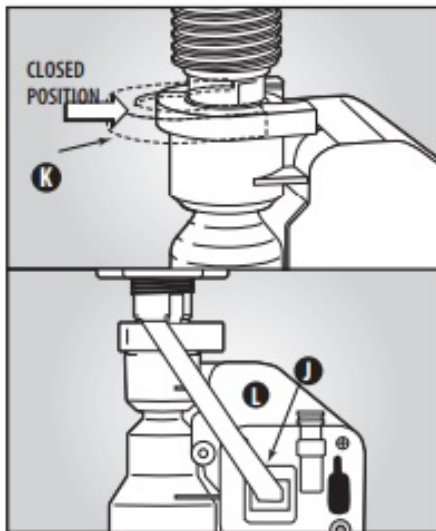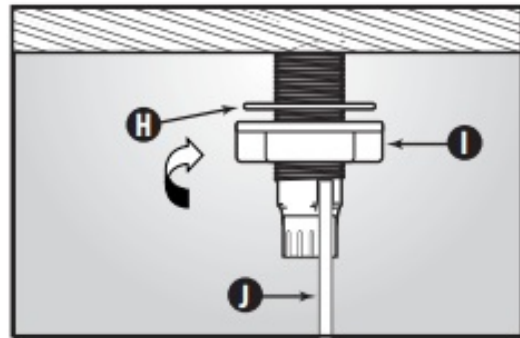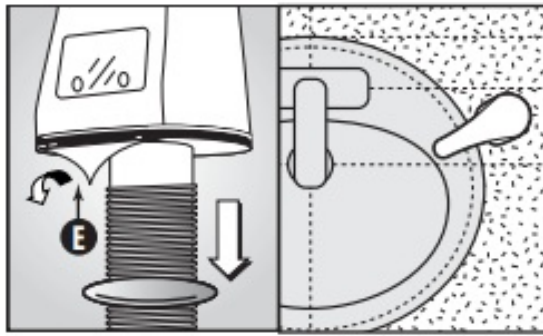

Installation of Soap Refill


ATTENTION

- When handling the soap refill cartridge, do not handle by tube. For proper operation, ensure that tubing is not loose or bent.
- If using the 1600ml refill, snap open the black rubber seal. Move the switch from “UP” (1K) to the “DOWN” (2K) position.
Reseal black rubber seal.

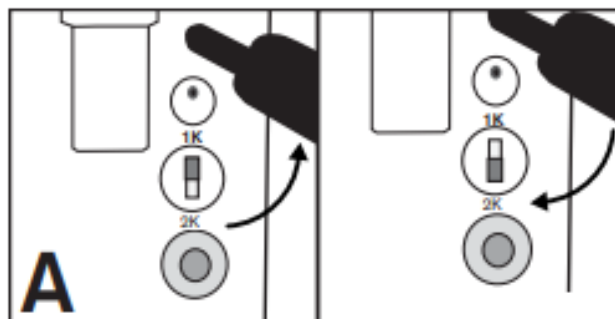

IMPORTANT

- Press the refill reset button (M). This will automatically prime the soap refill bottle and initiate a counting mechanism.

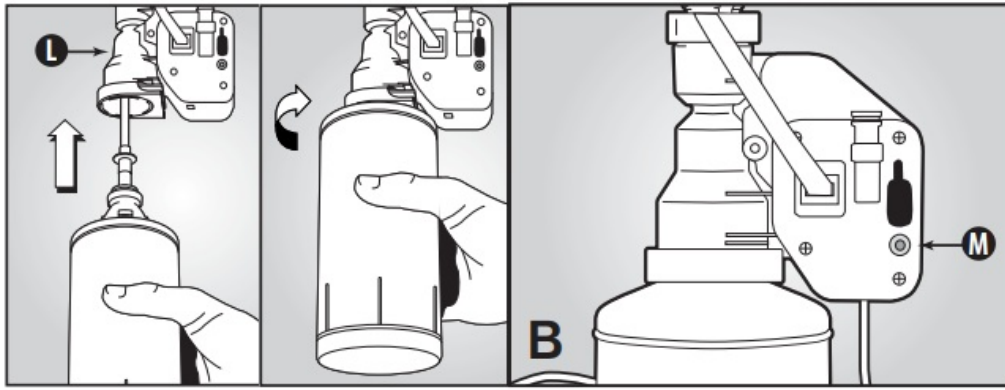

Operation

- Flashing red light indicates low to refill.
- Flashing yellow light indicates low battery.
- Battery Pack uses 4 “D”-Cell Alkaline Batteries (not included)



Innovative Hygiene Solutions

World Headquarters:

Serving North and South America
 Technical Concepts LLC
 1301 Allanson Road
 Mundelein, Illinois 60060 U.S.A.

Toll-Free: 1-800-551-5155

Fax: 1-800-551-5046

www.technicalconcepts.com

European Headquarters:

Serving Europe, Africa and Middle East
 Technical Concepts International Ltd.
 Peterborough, PE2 6WA, England
 Phone: +44 (0)870 568 6824


Asian Headquarters:

Serving Asia and Pacific



E001266 Rev 01

Documents / Resources

	<p>technical concepts OneShot Foam Touch-Free Soap System [pdf] Instruction Manual OneShot Foam Touch-Free Soap System</p>
--	--

References

- [Technical Concepts](#)