



TOMLOV DM5 Wireless Digital Microscope Instruction Manual

[Home](#) » [TOMLOV](#) » TOMLOV DM5 Wireless Digital Microscope Instruction Manual 

Contents

- [1 TOMLOV DM5 Wireless Digital Microscope](#)
- [2 Packing List](#)
- [3 Installation](#)
- [4 Parts Description](#)
- [5 Buttons Description](#)
- [6 Quick Start](#)
- [7 Detailed Operation](#)
- [8 Connect The Microscope To PC](#)
 - [8.1 Mac OS System](#)
 - [8.2 Adjust The Fill Lights](#)
 - [8.3 Wired Remote](#)
- [9 Specification](#)
- [10 FAQ](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

TOMLOV

TOMLOV DM5 Wireless Digital Microscope



Please read this user manual carefully and keep it for future reference. Should you encounter any problem, please contact us by the following e-mail. Most technical questions can be answered through our knowledge base.

Customer service: support@tomlov.com

Read Me First

1. TOMLOV TM-DM5 Digital Microscope utilizes 18650 rechargeable lithium battery. It takes 2-3 hours to charge and works for 3-4 hours. Battery on the back of the monitor is replaceable.
2. The product contains tiny parts and is inedible, please avoid accidental ingestion by children. Also, this product is not intended for cell and medical use.
3. The images and videos will be saved on the micro SD card by default. With the microscope connected to a PC, the files will be saved on the computer hard drive.
4. The wired remote buttons are unavailable under PC-Microscope mode, you can save pictures and videos by your PC.
5. TOMLOV offers one year manufacture warranty and life-long technical support for TM-DM5 digital microscope. Please feel free to get in touch with us if you need any help about the unit. It is recommended to attach microscope photos or videos showing the problems in the e-mail/message for quick solutions. TOMLOV customer service usually responds in 12 hours on working days.

E-mail: support@tomlov.com

Facebook: @Tomlov

WhatsApp: +86 18123716479

Packing List



Microscope



Base



Holder



Wired remote



USB cable



SD card

Please note: Accessories may be updated without prior notice, please refer to the actual receipt of the items.

Installation

1. Screw the holder on the base.
2. Put the microscope unit on the holder.




3. Fix the microscope.
4. Attach the wired remote into the 3.5 mmjack.



Parts Description



Buttons Description

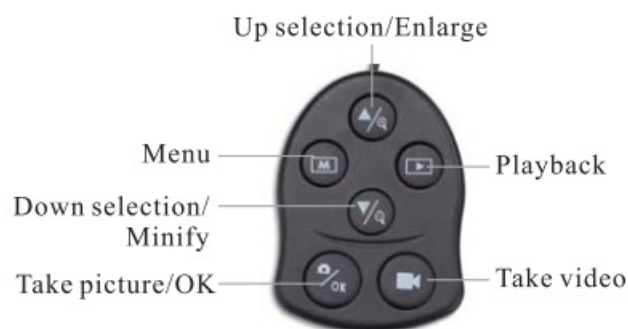

Quick Start

1. Insert the SD card.
2. Press the power button for 2 seconds to turn on the microscope.
3. Rotate the knob to adjust the height of the holder.
4. Rotate the knob to focus.
5. Rotate the controller to adjust the fill lights.
6. Press OK button to take pictures. Press **the** menu button for 2 seconds to switch the modes between picture, video and playback.

Detailed Operation

Charge The Microscope Correctly



(Insert the cable into the usb interface)

The microscope can be powered either by the built-in 18650 lithium battery or corded power. Charge the microscope by hooking it up to adapter with the included USB cable.

- Blue indicator light: Working
- Purple indicator light: Charging
- Red indicator light: Out of power

Snap Images



The Microscope is by default under “Taking Picture” mode after powering on Rotate the focus knob to get clear image. Press the OK button to capture pictures. The pictures will be saved in the inserted micro-SD card.

Record videos



Press the MENU button for 2 seconds to switch the video mode. Press OK button to start recording, press OK button again to quit. Videos will be saved in the inserted micro-SD card.


Review Pictures And Videos



Under the default photo mode, press the MENU button for 2 seconds to switch the modes from photo mode to playback mode. You can review the saved pictures and videos. Press the left or right arrow button to review more files.

Connect The Microscope To Your Mobile Phone


1. Download the app iWei Camera from App Store or Google play.

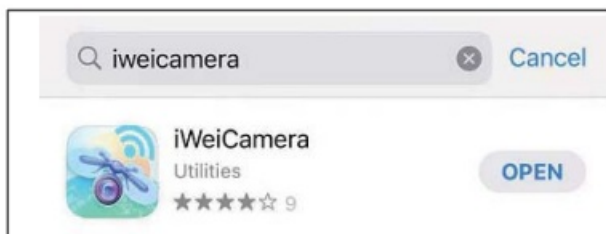

2. Turn on the microscope by pressing the power button for 2 seconds.
3. Press the power button and the WiFi activated.



4. Use your phone to connect to the WiFi. The WiFi name is "wifi_camera_MS2_****". Please note that the network is unavailable when your phone is connecting to the microscope.

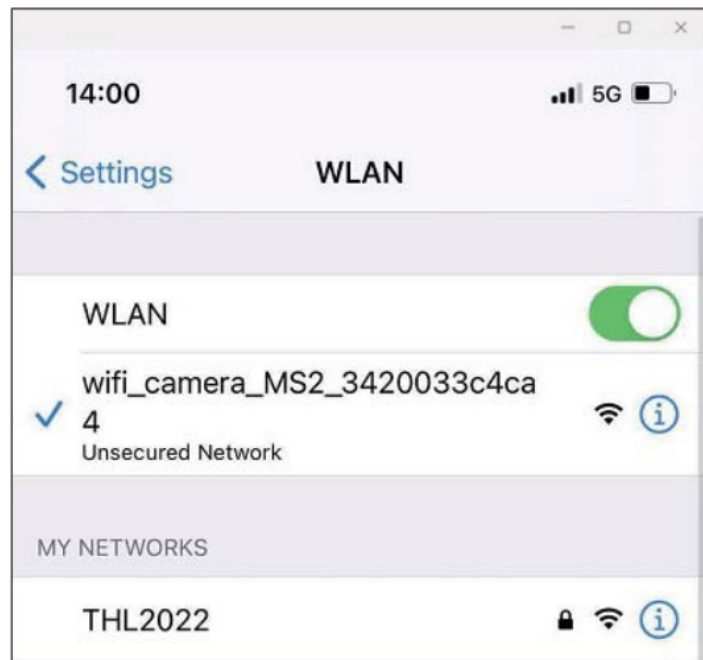

5. Run the App iWeiCamera where you can obtain real time view from the microscope. The App allows you to snap pictures and record videos. Files will be saved in your phone.

Connect The Microscope To PC

Windows System

Please make sure your PC has "Windows Camera" installed. If not, get the App from Microsoft Store.

1. Turn on the microscope and connect the microscope to your PC with the USB cable.
2. The microscope shows three menu options: "Memory, PC camera and Video mode". Select "PC camera" and press the OK button.



3. Run the App Windows Camera on your PC. Now you can take photo and record video from the microscope and save files on your PC.



Mac OS System

Please make sure your Mac installed “Photo Booth”. If not, get the App from App Store.

1. Turn on the microscope and connect the microscope to your PC with the USB cable. You may need a usb hub as the usb cable is micro 2.0.
2. Turn on the microscope and connect the microscope to your PC with the USB cable.
3. Run “Photo Booth”(Finder -Application – Photo Booth) and choose device “USB PHY 2.0” on the menu bar.
4. Now you can take photo and record video from the microscope and save files on your PC.

Adjust The Fill Lights

Rotate the dial on the right of the microscope panel to adjust the fill lights.



Wired Remote

Connect the wired remote to the 3.5mm jack interface. Now you can control the microscope menu by the remote.

Specification

| | Parameter |
|--------------------------------------|--|
| Model | EDM5 |
| The biggest pixel | 1080FHD/12MP |
| Lens Optical Size | 1/4" |
| Photo Resolution | 3M(2048*1536) 2M(1920*1080) 1M(1280*720) |
| Video Resolution | 1920*1080 |
| Video Format | MOV |
| Focusing Mode | Manual Operation |
| Picture Format | JPG |
| Magnification | 50/1000X |
| Light Source | LED |
| Focusing Range | 10~75mm |
| PC Resolution Image Transfer Rate | 640*480/26fps 1280*720/26fps |
| White Balance | Automatic |
| Exposure | Automatic |
| PC Operating System | Windows XP, Windows 7, Windows 8.1, Windows 10. Mac OS 10.5 or higher |
| Support Language | 12 languages |
| Lens Structure | 2G+IR |
| Aperture | F4.5 |
| Operating Temp | -4°F-140°F |
| Compatible App | Android 5.0 or higher. iOS 8.0 or higher |
| WiFi Standard | IEEE 802.11b/g/n |
| Battery Lasting Time | 3-4 hours |

FAQ

Why can't I get clear pictures?

Make sure that the LED lights work properly. Adjust the light to illuminate the object, adjust the object distance by using the knob on the holder, and then rotate the focus controller. If you still cannot obtain a clear image, gently wipe the lens with a clean, dry cotton cloth or paper towel to ensure that the lens is clean.

How to reset the microscope?

Press the reset hole on the right side of the microscope panel.

Does other micro USB charger work with the microscope?

Yes, other micro USB cable works with the scope, too.

What should I do if the microscope shows "low battery"?

Charge the microscope with the USB cable. If still "low battery", take out the battery and connect the microscope to power with USB cable and turn it on. The battery might be damaged if the microscope works normally without battery. Contact Tomlov support about the issue.

This user's manual has been subjected to thorough reviews and verification to ensure accuracy of its content and contains information that's pertinent to the model and series it describes at the time of publication. However, the content of this manual and/or product specifications are subject to change without prior notice and with no direct or indirect liability on TOMLOV Electronics' part concerning such change.

Copyright and registered trademark

TOMLOV, Tomlov have registered trademarks.

Mail Box: support@tomlov.com

IJ @Tomlov

WhatsApp: +86 18123716479

Monday – Friday

9:00AM CST- 6:00PM CST

www.tomlov.com


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction

| | |
|--|--|
|  <p>TOMLOV DIGITAL MICROSCOPE DM5</p> <p>Instruction Manual</p> <p>Please read this manual carefully and keep it for future reference. Should you encounter any problems, please refer to the Troubleshooting section. We will be happy to provide you the necessary help for handling the device. Contact us via email: support@tomlov.com</p> | <p>TOMLOV DM5 Wireless Digital Microscope [pdf] Instruction Manual EDM5, 2A5FM-EDM5, 2A5FMEDM5, DM5 Wireless Digital Microscope, Wireless Digital Microscope</p> |
|--|--|