


TREATLIFE Wireless Scene Switch Controller with Zigbee Hub User Manual

Home » TREATLIFE » TREATLIFE Wireless Scene Switch Controller with Zigbee Hub User Manual



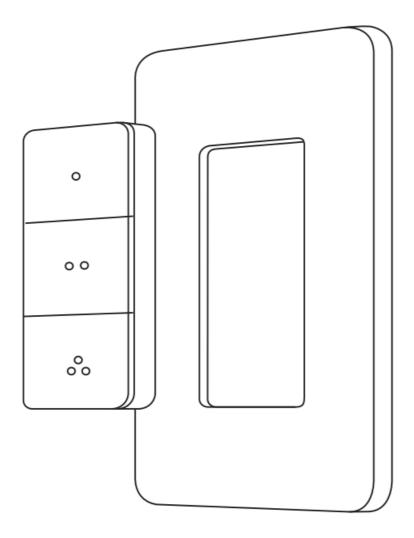

Scene Remote User Manual

Contents

- 1 Introduction
- 2 What's in the box
- 3 Getting started
- 4 Quick setup
- 5 Set up actions
- 6 Example scenes
- 7 Wall-mounting
- 8 Changing the battery
- 9 Troubleshooting
- 10 Documents /

Resources

10.1 References


Introduction

Treatlife Scene Remote connects to the Treatlife

App and allows you to control a group of lights across your home or trigger specific preset scenes, just press the button to light the way, even if you forget your phone.

It can be mounted almost anywhere, or it can be used as a handheld remote.

What's in the box

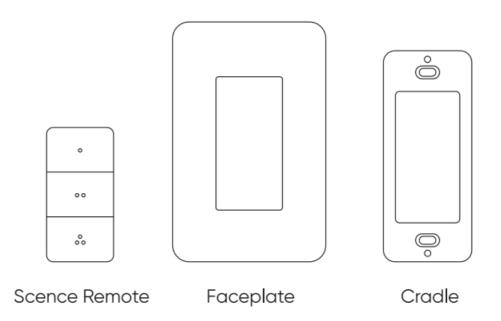

Accessories included: adhesive tape, CR2032 battery, screw, setup guide.

Getting started

To get started moke sure that you have:

- 1. AniOS or Android device
- 2. Good wifi signal
- 3. The Treatlife App, available on the App Store or Google Play
- 4. ATreatlife Smart Hub (Sold Separately)

Quick setup

11 Scan the QR code below or search Treatlife in the App Store or Google Play to download the App, and register an account according to the instruction on the Treatlife App.




https://smartapp.tuya.com/oittm

1.2 Connect the Smart Hub to the Treatife App according to the quick guide for the hub.




1.3 Click *Add device" button on the top right, click the "Switch" on the left and select the "Scene Remote" and follow the setup guide to get it paired,

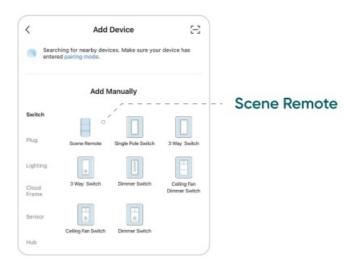

Set up actions

You con set up to 9 actions on the Treatife Smart Scene Remote, 3 for each button (single press, double press and long press).

Open the Scene Remote page, click "Add", select one action you prefer, then assign ascene or device

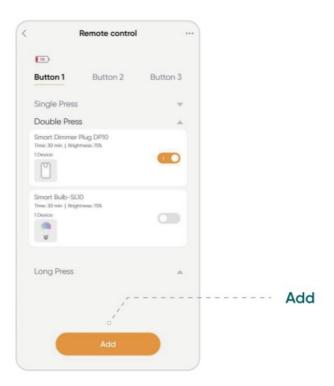

Example scenes



Bedtime:

Place the Scena Remote on your badside table. Before sleeping, press to tum off allyour home fihts,



Entertainment:

Proce the Scene Remote on your coffee table. When ready to party, press to dim the ights




Guest room on/off:

Give guests contol of smort lights, from muilti locations:


Create Multi-way Control to Your Lights

Add the handheld remote to Treatlfe single pole or 3-way. switch to control the lights from multilocations.

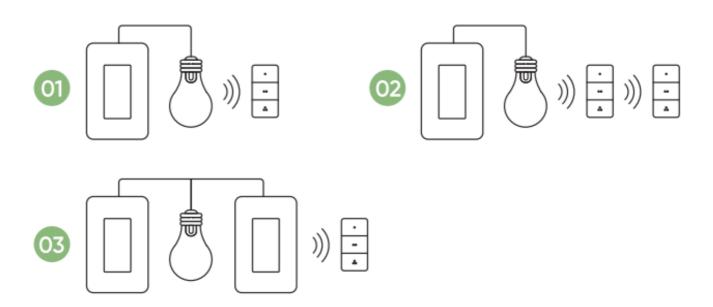


Wall-mounting



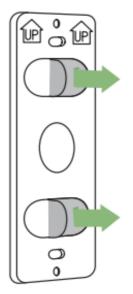




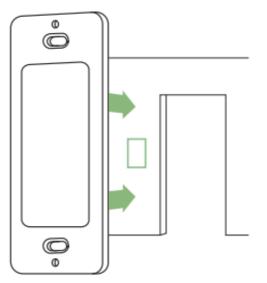

Thoroughly clean wallsurface. Remoue the paper fr om the adhesive strps on the back of the cradle

Attach the cradle to the wal

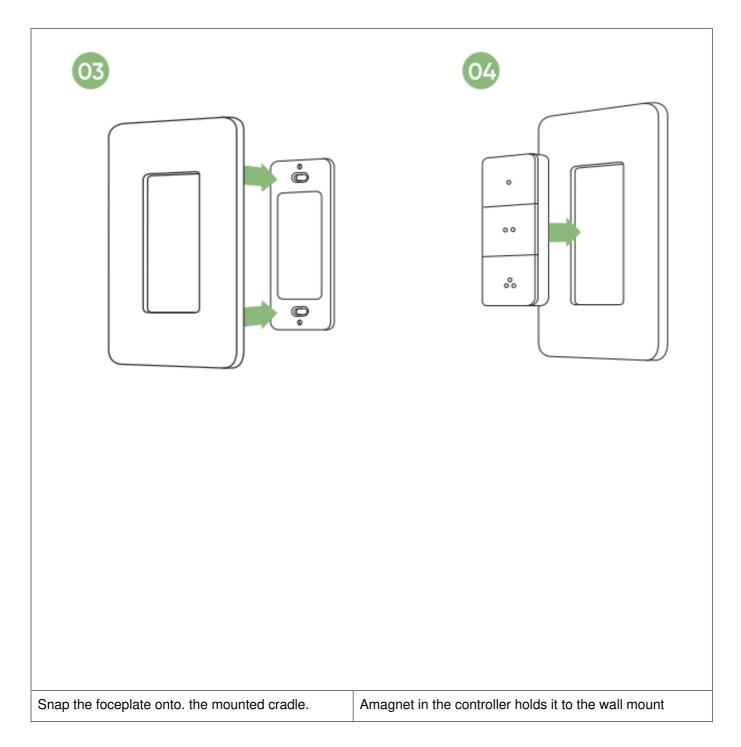


Changing the battery

To change the battery you need to follow these steps:

Twisting the battery cover o the eft 1o opent Remove the oid battery and replace it with o new CR2032 attery with the *+*side up.

Place back the cover and twist to the right unt it cicks.

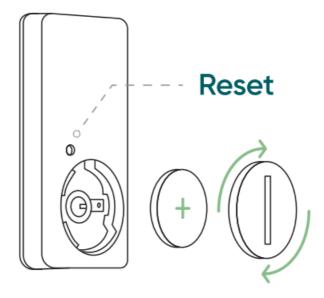

Note: consider that the adhesive is super strong before you stick it to any surface. Removing the adhesive might cause damage to the surface attached.

Troubleshooting

Restart

Have setup or controlissues? Remove and re-insert the battery to restart,

Restore factory settings

If the restart doesrit help, restore factory seftings.

- 1. Press and hold Restore button for seconds
- 2. Wait until the indicator biinks, then relecse:
- 3. Re-add your Scene Remote to the Treatife App. and re-assign scenes to buttons

FCC Caution

This device complies with part 15 of the FCC Rules.

Operation is subject to the following twa condifions

1) This device may not cause harmful interference, and (2 this device must accept any interference received, including interforence that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the fimits for a Closs B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio. frequency energy and, if not nstalled and used in accordance with the instructions, may cause harmful interference to radio communications. However, there s o guarantes that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to ty to correct the nterference oy one or more of the following measures:

- -Rearient or relocate the receiving antenna,
- Increase the separation batween the equipment and raceiver.
- Connect the equipment into an outlet on a circult different from that 10 which the recaiver s connected.
- Consult the dealer or an experienced radio/ TV technicion for helpThis equipment complies with FCC radiation exposure limits set forth for an uncontralled environment. This equipment should be installed and operated with minimum distance 20¢m between

the radiator & your body.

This device comiles with Innovation, Science, and Economic Development Canada icence-exempt RSS standardIsl. Operation s subject to the following two conditions

- (1) his device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device:

"The device s compliance with RF exposure guidelines, users an obtain Canadian information on RF exposure and complianceThe minimum distance from body to use the device is 20 cm.

Documents / Resources



TREATLIFE Wireless Scene Switch Controller with Zigbee Hub [pdf] User Manual Wireless Scene Switch Controller with Zigbee Hub, Wireless, Scene Switch Controller with Zigbee Hub, Controller with Zigbee Hub

References

• User Manual

Manuals+, Privacy Policy