



UXLXLK 6000 Particulate Filter Instruction Manual

[Home](#) » [UXLXLK](#) » UXLXLK 6000 Particulate Filter Instruction Manual 

UXLXLK 6000 Particulate Filter Instruction Manual

Please read and understand all information in this manual before using this product.

Contents

- [1 Product Description](#)
- [2 Product Features](#)
- [3 Assembly Instructions](#)
- [4 Care and Maintenance](#)
- [5 Contact Information](#)
- [6 Usage](#)
- [7 Safety Precautions](#)
- [8 Compatibility](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)

Product Description

This 2097 particulate filter is made of high electrostatic filtration material, consisting of non-woven fabric, meltblown fabric, activated carbon cotton and hot air cotton, with 16 layers of filtration, which can effectively filter organic vapor, oil and non-oil based particulate contaminants with 99.97% filtration efficiency.

Product Features

1. High-efficiency filtration: 2097 particulate filter adopts advanced high-efficiency filtration technology, which can effectively filter tiny particles and harmful substances in the air.

2. Comfortable to wear: The filter is made of soft and comfortable material, which ensures comfort when wearing for a long time. Do not alter, abuse or misuse this respirator.
3. Sealing: The product is designed with a high-efficiency gasket to ensure that the user's breathing area is isolated from the outside environment, effectively preventing the intrusion of harmful substances.
4. Versatility: The 2097 particulate filter is suitable for use in a wide range of environments, including industrial operations, petrochemicals, healthcare, mining, construction sites and outdoor activities.

Assembly Instructions



Step 1.

Step 2.

Step 3.

1. Align the cartridge or filter notch with facepiece mark.
2. Turn cartridge or filter 1/4 turn clockwise to stop. To remove cartridge, turn 1/4 turn counter clockwise.
3. Repeat with second cartridge or filter.

Care and Maintenance

1. Regularly check the condition of the filter wool and mask to ensure proper functioning.
2. Replace the filter wool regularly according to the instructions provided by the manufacturer.

Contact Information

If you have any questions about this product or need technical support, please contact us at
This instruction manual is intended to provide the user with guidance on the use and maintenance of the cotton particulate filter. It is important that all relevant regulations and standards are observed and that the product is used in accordance with its actual condition.


Usage

1. Wearing a mask: Ensure that you are wearing a mask or respirator that is suitable for 2097 particulate filter . Follow the instructions on the mask or respirator.
2. Replacing the particulate filter: Replace the particulate filter regularly, depending on the frequency of use and environmental conditions. If you notice breathing difficulties or reduced filtration, replace the filter pads immediately.
3. Storage: Before and after use, store the filter pads in a dry, ventilated place away from direct sunlight and high temperatures.

Safety Precautions

1. Use 2097 particulate filter wool only for specified applications and in accordance with relevant regulations and standards.
2. This product is not intended for use in oxygen-thinning environments or where a proper seal cannot be established.
3. If the product is damaged or contaminated, replace the filter wool immediately.
4. If you experience any symptoms of discomfort (such as difficulty breathing or dizziness), discontinue use and seek medical attention.

Compatibility

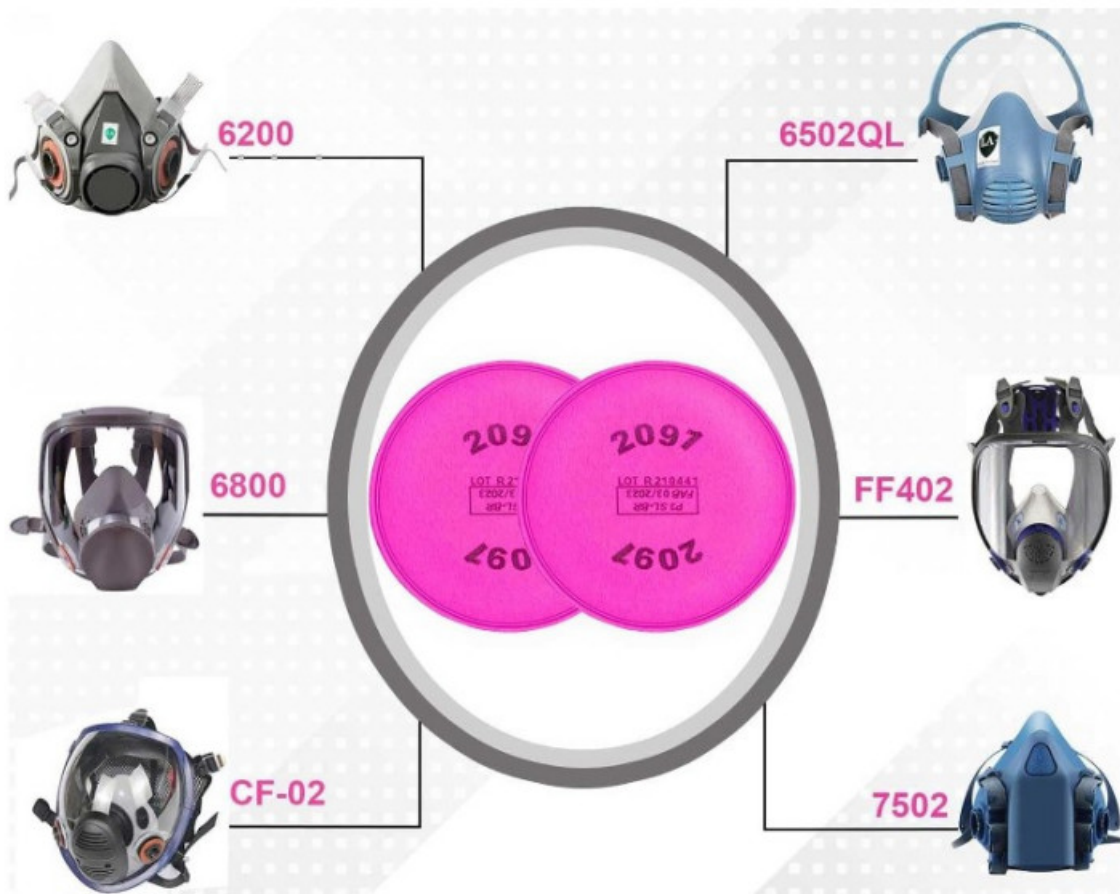

UXLXLK

Documents / Resources



[UXLXLK 6000 Particulate Filter](#) [pdf] Instruction Manual
6000, 6200, 6800, 7000, FF-4, 6000 Particulate Filter, Particulate Filter, Filter

References

- [User Manual](#)

Manuals+.