

Verbatim PMT-14 Portable Touch Monitor User Guide

Home » Verbatim » Verbatim PMT-14 Portable Touch Monitor User Guide 🖫





QUICK START GUIDE
Portable Touch Monitor
14"/15.6"/17.3" Full HD 1080p
PMT-14/15/17


Contents

- 1 How it works
- 2 How to connect
- 3 Key operation
- 4 Specifications
- **5 Safety**
- **6 Verbatim Limited Warranty**

Terms

- **7 CE Declaration**
- **8 RoHS Compliance**
- 9 WEE Notice
- **10 Technical Support**
- 11 Documents / Resources
 - 11.1 References
- **12 Related Posts**


How it works

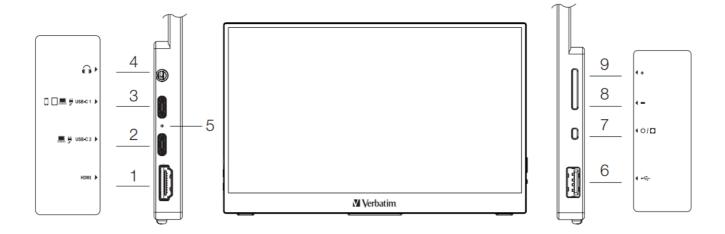


- 1. HDMI port
- 2. USB-C2 port (computers / power supply)
- 3. USB-C1 port (computers / phones/tablets / power supply)
- 4. Headphone socket (jack)
- 5. LED indicator light
- 6. USB-A 2.0 port
- 7. Power / Menu button
- 8. Button
- 9. + Button

How to connect


1. Laptop or PC with USB-C

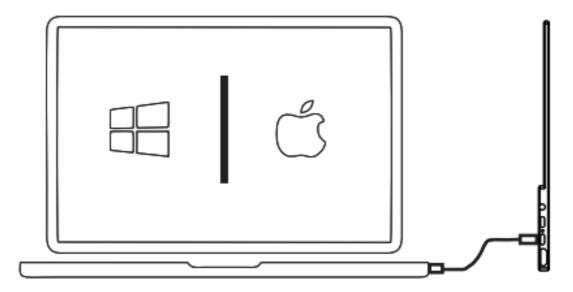

1. Connect the USB-C cable to the USB-C2 port on the monitor and the USB-C port of your computer. Optional: If power is not sufficient using USB-C2 port on the display, switch to USB-C1 which is designed for low power devices or attach the included power supply.

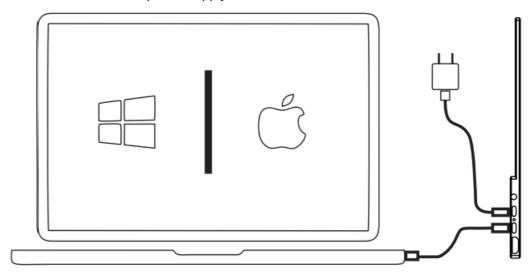


2. Mobile devices with USB-C (mobile phone / tablet) (Not all devices are supported)

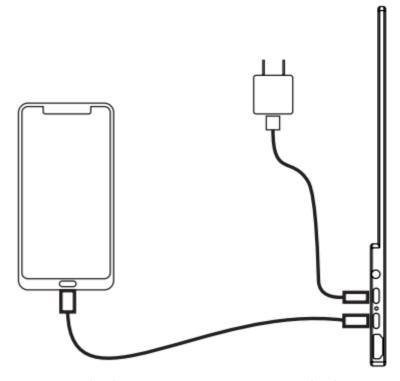


1. Connect the USB-C cable to the USB-C1 port on the monitor and the USB-C port of your mobile device.

Optional: If power is not sufficient, attach the included power supply.

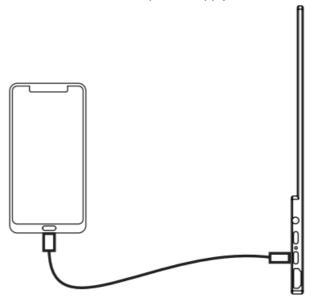

3. Devices with HDMI no touch function (additional power supply required (included))

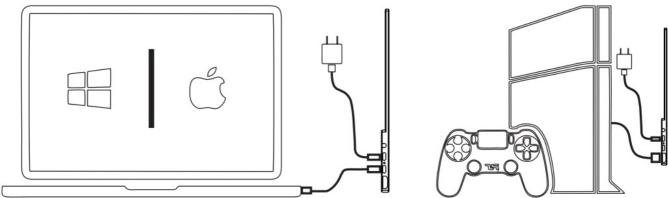


- 1. Connect the HDMI cable to the HDMI port on the monitor and the HDMI port of your device.
- 2. Connect the power supply to the monitor.

Remarks: For iPhones with lightning connector you need an additional adapter (not included).


4. Devices with HDMI with touch function

(additional power supply (included) and additional USB-A to USB-C cable required (not included)

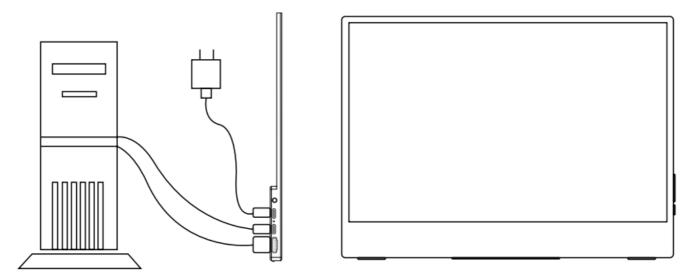

- 1. Connect the HDMI cable to the HDMI port on the monitor and the HDMI port of your device.
- 2. Connect USB-A to USB-C cable to your computer and monitor.
- 3. Connect the power supply to the monitor.

Key operation

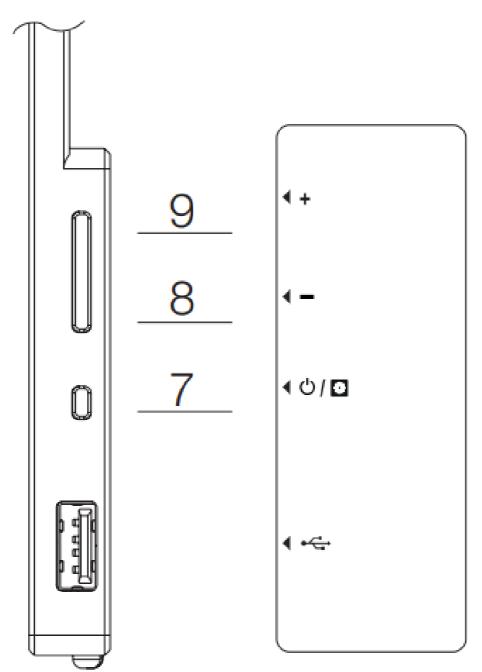

Power ON/OFF

Hold power/menu button (7) to turn monitor on or off (monitor will automatically turn on when connected).

Volume


Press + / - (9 or 8) to adjust the volume.

Brightness

Hold + / - (9 or 8) to adjust the brightness.

• On-Screen Menu:

Press power/menu button (7) to switch to the on-screen menu.

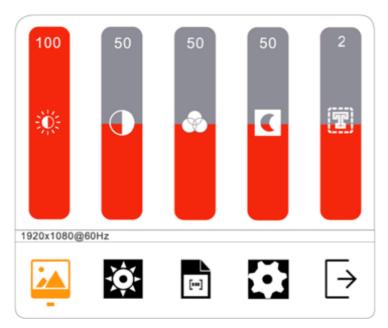

Switch between options


Press + or - (9 or 8) to switch between options, the selection will be highlighted. To select an option press the power/menu button (7).

· Return to previous


Hold – (8) to return to previous menu.

On-Screen Menu

1. Picture

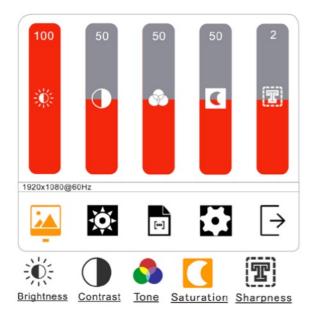


2. Colour

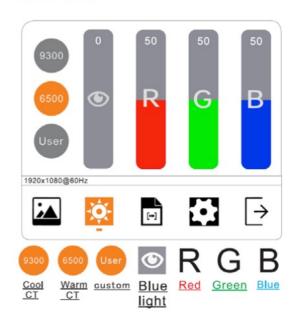

3. Mode 4. Other Settings 5. Exit Menu



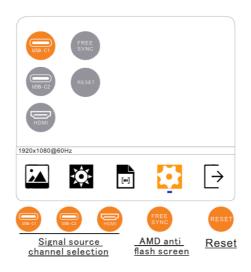



<u>Quit</u>

Specifications

Product number	49591	49592	49593
Size:	14 inch	15.6 inch	Size: 17.3 inch
Contrast (Typical):	1000:1 (typical)		
Resolution (H x V):	1920 x 1080		
Aspect ratio:	16:09		
View angles LR,UD (CR>10):	H 178°/ V 178°(Min)		
Touchscreen:	Capacitive touch panel		
Multi touch:	10 points		
Display colours:	16.7M colours		
Input 1:	USB-C x 2 (full-featured USB-C)		
Input 2:	Standard HDMI (1.4) x 1		
Output:	USB-A 2.0 x 1		
Dimensions (WxHxD):	328.92mm(W) x 357.10mm (W) x 1 396mm (VV) x 209.05mm(H) x 224.20mm (H) x 247.40mm (H) x 12mm(D) 12mm (D) 12mm (D)		
Net weight:	860g 980g 1540g		
Supports:	HDR, FreeSync		
Frame material:	Aluminium		

Safety

1. The user should consider the placement position of the monitor, otherwise the panel may reflect surrounding

light and cause interference.

- 2. Use the original power adapter to avoid electrical damage.
- 3. Keep the monitor dry and do not use near water or in damp environments.
- 4. Clean only with a dry cloth. Do not use solvents or petroleum-based fluids.
- 5. Only use attachments/accessories specified by the manufacturer.
- 6. Unplug the monitor during lightning storms or when unused for long periods of time.
- 7. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as when liquid has been spilled or it has been exposed to rain or moisture, it does not operate normally or has been dropped.
- 8. Do not remove the covers, doing so could be dangerous and may invalidate the product's warranty. Only qualified personnel should service this monitor.

Warning:

If the monitor is not used, adjusted or controlled according to the instructions, it may cause electric shock, short circuit or mechanical hazard.

Verbatim Limited Warranty Terms

Verbatim GmbH warrants this product to be free from defects in material and workmanship for a period of 2 years from date of purchase. This warranty excludes batteries.

If this product is found to be defective within the warranty period, it will be replaced at no cost to you. You may return it with your original cash register receipt to the place of purchase or contact Verbatim.

Product replacement is your sole remedy under this warranty, and this warranty does not apply to normal wear or to damage resulting from abnormal use, misuse, abuse, neglect or accident, or to any incompatibility or poor performance due to the specific computer software or hardware used.

VERBATIM WILL NOT BE LIABLE FOR DATA LOSS OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES, HOWEVER CAUSED, FOR BREACH OF WARRANTIES OR OTHERWISE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or country to country.

Note

Verbatim GmbH may at any time revise the content of this user guide without further notice.

Rights

Copyright © 2022 Verbatim GmbH. No part of this document may be reproduced in any form or by any means, for any purpose, without the express written permission of Verbatim GmbH.

All rights reserved.

All other brands and product names referenced herein are property of their respective owners.

CE Declaration

Complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EC) and Low Voltage Directive (2014/35/EU).

This declaration applies to all specimens manufactured identical to the model submitted for testing/evaluation.

EN 55032:2015 + A1:2020 + A11:2020

EN 55035:2017 + A11:2020

EN IEC 62368-1:2020 + A11:2020

RoHS Compliance

This product is in compliance with Directives 2011/65/EU and 2015/683 of the European Parliament and of the Council of 18th December 2006, on the restriction of the use of hazardous substances in electrical and electronic equipment (RoHS) and its amendments.

Substances of Very High Concern (SVHC) including 224 substances contained in Candidate List of June 10th

2022 are not present in this product range above permitted levels.

WEE Notice

The Directive on Waste Electrical and Electronic Equipment (WEEE), which entered into force as European law on 13th February 2003, resulted in a major change in the treatment of electrical equipment at end-of-life.

The WEEE logo (shown at the left) on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste.

For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local municipal household waste disposal service or shop from where you purchased the equipment.

Triman (Only for France)

The Product and packaging materials are recyclable, dispose of it separately for better waste treatment. The Triman logo is valid in France only.

Technical Support

If you have any questions about this product, please contact the Verbatim support team www.verbatim.com/support.



Verbatim GmbH, Düsseldorfer Straße 13, 65760 Eschborn, Germany Verbatim QSG 49590-49593 Portable Touch Monitor 14"/15.6"/17.3" Full HD 1080p PMT-14/15/17 EN Rev. 23-01

Documents / Resources



References

Support Center | Verbatim: Digital Media Storage Solutions, USB Flash Drives, External Hard Drives,
 SD Memory Cards

Manuals+, home privacy