



WEOFLY CURVE Smart Watch User Manual

[Home](#) » [WEOFLY](#) » WEOFLY CURVE Smart Watch User Manual 


WEOFLY CURVE Smart Watch User Manual



Contents

- 1 Basic introduction to the product\
- 2 Basic Product Operation
- 3 APP download, installation and use
- 4 Other functions of the watch :
- 5 Disclaimer:
- 6 Attention:
- 7 Read More About This Manual & Download PDF:
- 8 Documents / Resources
 - 8.1 References

Basic introduction to the product\

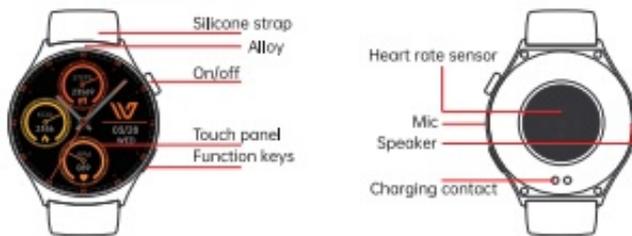


Basic Product Operation



- 1.Press the key for 3 seconds to turn on or off.
- 2.On the main interface,Press the screen to switch the dial


APP download, installation and use

Before pairing a watch with a smartphone, please ensure that your smartphone and watch are prepared as follows: 1. When using the watch for the first time, it is recommended to charge it for at least 2. hours to ensure that the watch is fully charged 2. Please ensure that your smartphone is adjacent to your watch 3. Please ensure that the Bluetooth function of your smartphone is turned on Scan the following QR code to download and install the "Weofly Fit" App. Device Requirement: 105 9.0 and above, Android 4.4 and above, supports Bluetooth 5.0.

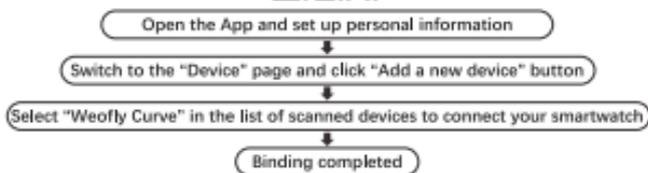

Note: The watch name and MAC address can be queried in the watch settings. If you did not click to allow the watch to receive incoming call reminders and message notifications when pairing the app, if you want to receive notifications in the future, you will need to unbind your device and pair your watch again. After pairing is completed, please open the "Devices" page of the APP, click on "APP", and select the APP you want to receive messages from.

Basic product functions

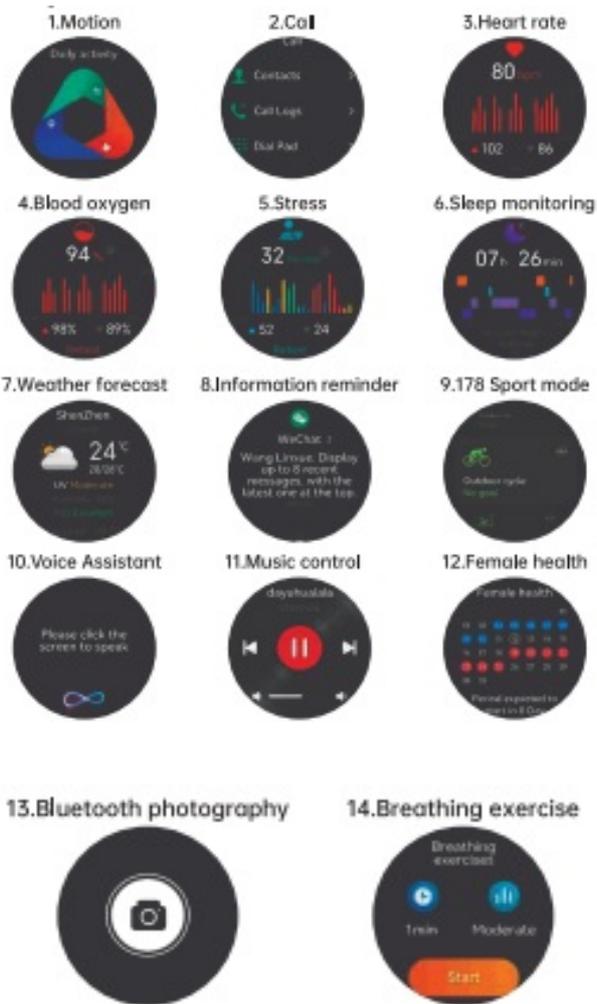

Other functions of the watch :

Do Not Disturb Mode/Stopwatch/Countdown/Flashlight/Calculator/Alarm clock reminder/long sitting reminder/Find phone /goal achievement reminder etc. 14 Breathing exercise

Disclaimer:

This product is not an electrocardiogram or professional medical device, and any of the above functions cannot be used as any medical data reference.

Attention:

1. Keep the product clean and dry
2. Please wear the product correctly
3. Do not place equipment and its accessories in areas with high or low temperatures, as this may cause equipment malfunction, fire, or explosion.
4. Avoid strong impacts or vibrations on the product to prevent damage to the equipment and its accessories, leading to equipment failure.
5. Do not disassemble or modify equipment and accessories without authorization. In case of equipment failure, please contact after-sales service.
6. The waterproof performance of this product is not permanently effective and may weaken over time. Supports


short-term use such as hand washing and rain, but does not support scenarios such as hot showers, diving, diving, and surfing. Watches do not have waterproof

properties against corrosive liquids such as seawater, acidic and alkaline solutions, and chemical reagents.

7. If the device is not used for a long time, please make sure to recharge it every three months.

Read More About This Manual & Download PDF:

Documents / Resources

| | |
|---|--|
|  | <p>WEOFLY CURVE Smart Watch [pdf] User Manual CURVE Smart Watch, CURVE, Smart Watch, Watch</p> |
|---|--|

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.