

WTIM Weekly Programmable Electronic Timer User Guide

Home » WTIM » WTIM Weekly Programmable Electronic Timer User Guide 🖫

Contents

- 1 WTIM Weekly Programmable Electronic
- **Timer**
- 2 Description
- 3 Specifications
- **4 Operating Instruction**
- **5 Dimension**
- **6 Connections**
- 7 Documents / Resources
 - 7.1 References



WTIM Weekly Programmable Electronic Timer



Description

- Standard 17.5mm wide, 35mm din rail mount.
- Original functions: 10 (on/off) holiday settings in one year, Ext port(100m).
- Combine 16 On/Off Settings, 32 Pulse Output, and Countdown together.
- Suitable for electrical & industrial appliances.
- Superior quality, powerful function, and high precision. With a lithium battery inside, so it works if powered off.

Specifications

• Rated voltage: AC 220V, AC 110V 50/60HZ

• Voltage ranging: rated voltage (±10%)

• Hysteresis: ≤±2 sec/day(20°C)

• On/Off operation: 16 On/Off

32 times pulse output

10 times holiday settings

• Pulse: 1 sec-99sec

• Count down: 1sec-99min59sec

• Display: LCD

• Power consumption: approx 3VA

• Weight: 90g

• Service life: 105 (rated loading)

• Mechanical life: 10 7

Switching contact: 1 changeover switch
Load capacity: resistive load: coso=1

• 16A/250VAC

• Lagging load: coso=0.4

4A/250 V


• Lamp load: 1000w

• Battery life expectancy: 3 years (CR2032)


• Ambient temperature: − 10~+50°C (unfrozen)

• Ambient humidity: 35~85%


Operating Instruction

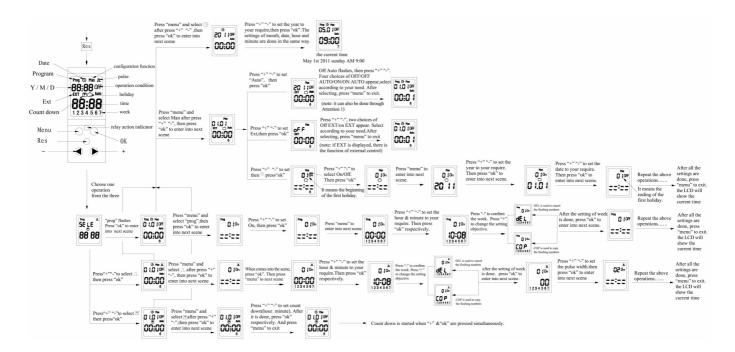

Dimension

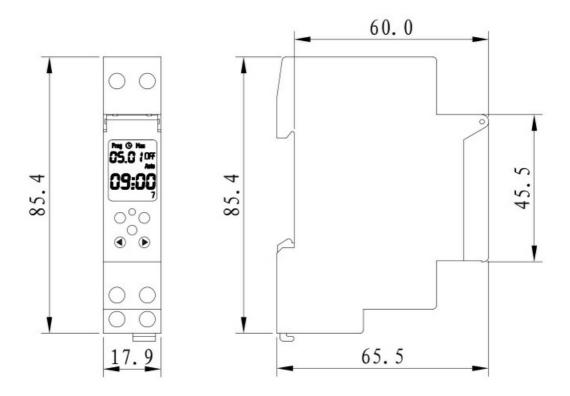


Connections

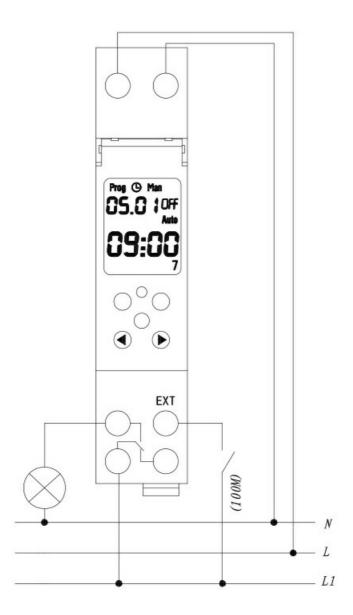

Attention

- Press "+" & "-" → on → Press "+" &"-" → Auto → Press "+" &"-" → off
 In the condition of on/off, Ext won't play if no procedure is running. Only when procedures are running in the condition of Auto on or Auto off, that is, with Ext on set in the condition of Auto on or Auto off, can Ext play.
- 2. When count-down is running and Ext on is set, then Count-down can also be externally controlled.

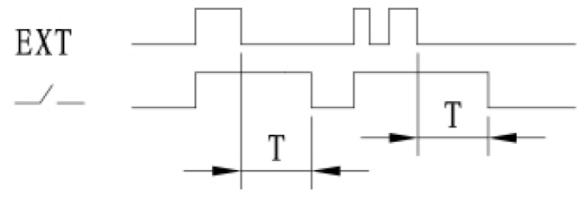

- 3. When setting Ext off, Ext input won't work and the timer runs according to previous procedure or pulse. When setting Ext on, Ext input works(Auto on/off). If the Ext switch is off, all the procedures or pulse won't work; if the Ext switch is on, vice versa.
- 4. Press "Menu" & "-" for 3 sec, the procedure will turn off. And no setting will be saved. Press "Res", and all the procedures will be cleared.

Documents / Resources



WTIM Weekly Programmable Electronic Timer [pdf] User Guide

Weekly Programmable Electronic Timer, Programmable Electronic Timer, Electronic Timer, Timer, er

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.