



## AT4 Activity Tracker



# Zewa AT4 Activity Tracker User Guide

[Home](#) » [Zewa](#) » Zewa AT4 Activity Tracker User Guide 

### Contents

- [1 Zewa AT4 Activity Tracker](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FAQs](#)
- [5 USING STEPS](#)
- [6 Warranty Registration](#)
- [7 CONTACT INFORMATION](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)



## Zewa AT4 Activity Tracker



## Specifications

- Model: Activity Tracker AT4
- Brand: Zewa
- Manufacturer: Zewa Inc.
- Address: 12960 Commerce Lakes Dr. # 29, Fort Myers, FL 33913
- Customer Service: Toll-Free – [888-993-3592](tel:888-993-3592)
- Website: [www.zewa.com](http://www.zewa.com)

## Product Usage Instructions

### Step 1: Charging the Activity Tracker

1. Connect the USB charging cable to a USB port.
2. Position the magnetic charging cable to the charging points at the back of your Activity Tracker.
3. When charging begins, a battery icon will appear on the display screen. The display will automatically switch off after a few seconds.
4. To check the charging progress, press the button on the side. A solid battery icon indicates a full charge.

### Step 2: Downloading and Installing the Zewa-Fit Pro App

1. Download and install the Zewa-Fit Pro App from [www.zewa.com/zewa-fit](http://www.zewa.com/zewa-fit)
2. Alternatively, scan the QR code provided with your phone.
3. During installation, accept all installation questions prompted by the app.

### Step 3: User Account Setup

- Log in using existing credentials or create a new user account by selecting Other Login Options.

### Step 4: Pairing Activity Tracker to the App


- Follow the app's instructions to pair your Activity Tracker to the Zewa-Fit Pro App.

## FAQs


- **Q: Is the Activity Tracker waterproof?**
  - A: The Activity Tracker AT4 is water-resistant but not waterproof. Avoid submerging it in water for extended periods.

## USING STEPS


- **STEP 1**
  - **Charge Activity Tracker before pairing it to the App**
    - Connect the USB charging cable to a USB port.

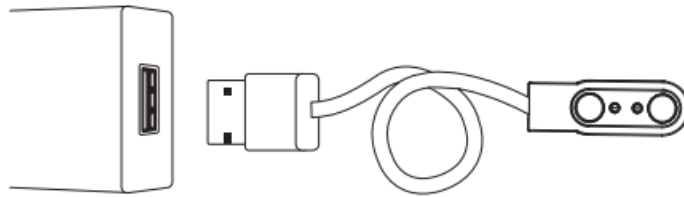


- Position the magnetic charging cable to the charging points at the back of your Activity Tracker.

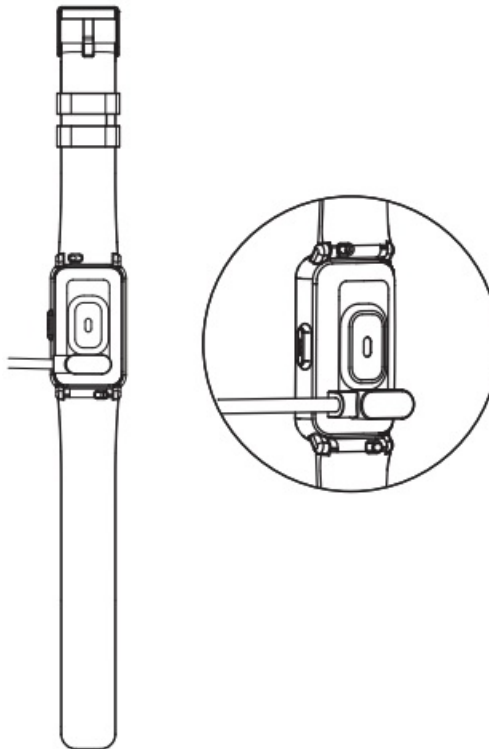

- When charging begins, you will see a battery icon on the display screen. The display will automatically switch off after a few second.

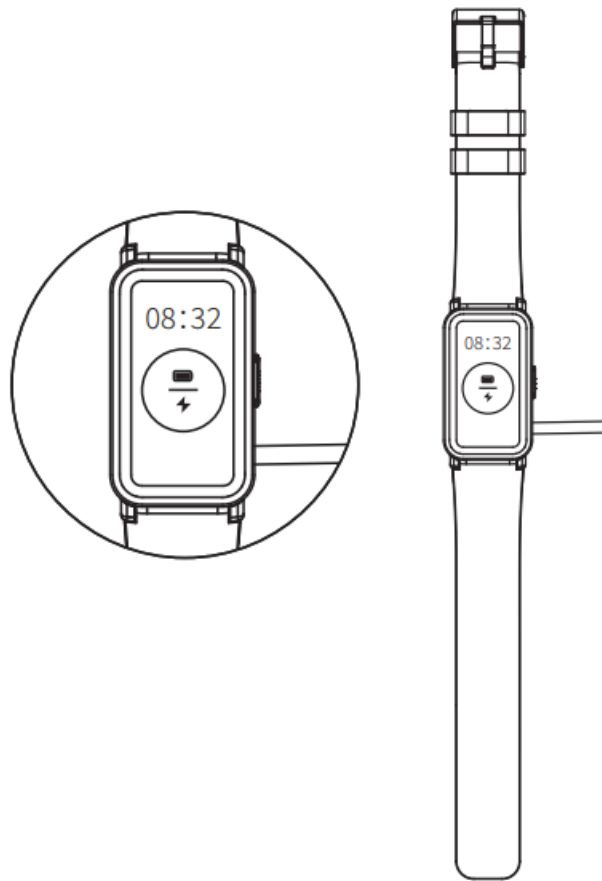

- To check the charging progress, press the button on the side. A solid battery icon indicates a full charge.

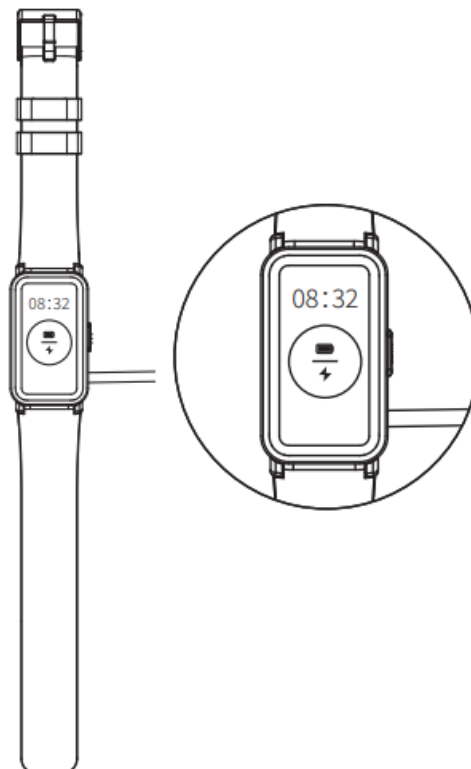

## • STEP 2

- Download and install the Zewa-Fit Pro
- App: [www.zewa.com/zewa-fit](http://www.zewa.com/zewa-fit)
- Or scan this QR code with your phone:



- **IMPORTANT:** During the installation (or when first opening the app), the app will ask several installation questions, and accept (say “yes”) to all of them.


- **STEP 3**

- **Create a new user account in the App.**

- After opening the App for the first time, log in using existing login credentials or create a new user account by selecting “Other Login Options.”
    - When selecting “Other Login Options” select “Create Account.”
    - Enter a valid E-Mail address and press “Get Code.”
    - The system will E-Mail you a verification code. Enter that code into the app and press “Login.”
    - Continue with entering your information

- **STEP 4**

- **Pair Activity Activity Tracker to the App.**

- In the app, tap on “Device” at the bottom of your screen.
    - Tap on “Add device.”
    - Select “Zewa AT4.”
    - Confirm pairing by pressing (  ) on the Activity Tracker display.

## **PRODUCT IS FOR NON-MEDICAL USE ONLY**

This device or software is intended for use only for general well-being purposes or to encourage or maintain a healthy lifestyle and is not intended to be used for any medical purpose (such as the detection, diagnosis, monitoring, management or treatment of any medical condition or disease). Any health-related information provided by this device or software should not be treated as medical advice. Please consult a physician for any medical advice required.

## **Warranty Registration**


Visit us online to register your product and receive special offers and news from Zewa.  
For a detailed description of your warranty, please refer to the instruction manual.

- [www.zewa.com](http://www.zewa.com)

## **CONTACT INFORMATION**

- Zewa Inc.
- 12960 Commerce Lakes Dr. # 29
- Fort Myers, FL 33913
- Toll Free: [888-993-3592](tel:888-993-3592)
- [www.zewa.com](http://www.zewa.com)

## Documents / Resources

	<a href="#">Zewa AT4 Activity Tracker</a> [pdf] User Guide AT4 Activity Tracker, AT4, Activity Tracker, Tracker
---	--

## References

-  [Zewa Medical Technology](#)
-  [Zewa-Fit - Zewa Medical Technology](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.