



## iBoard IB-192C 4K Interactive Display Instruction Manual

[Home](#) » [iBoard](#) » iBoard IB-192C 4K Interactive Display Instruction Manual 

### iBoard IB-192C 4K Interactive Display



## Contents

- [1 Important Information](#)
- [2 PART LIST](#)
- [3 Assembly Instruction](#)
- [4 Customer Support](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)


## Important Information

READ INSTRUCTIONS CAREFULLY BEFORE START ING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

- ROCKER PANEL MOUNT
- DRILLING IS REQUIRED/ CUTTING IS REQUIRED


Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	X
8mm	16-18	√
10mm	31-32	√
12mm	56-58	X
14mm	92-94	X

## PART LIST

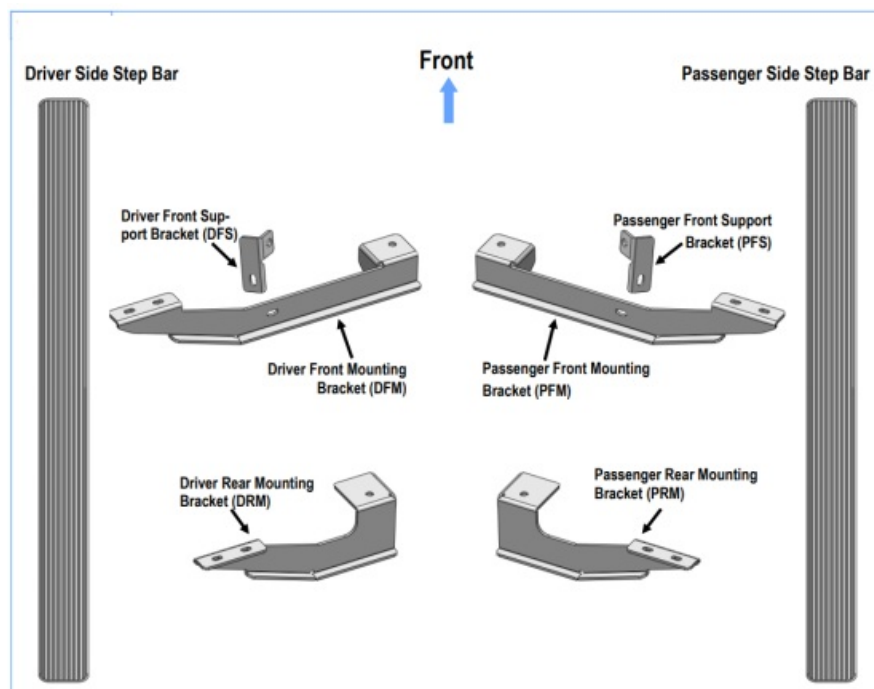


## Hardware Package A (For Bracket Installation)

Item	QTY	Description	Item	QTY	Description
1#	2	M10X35 Bolt Plates	6#	6	M10 Hex Nuts
2#	2	M10X35 Bolt Plates	7#	2	M8X1.25-35mm Hex Bolts
3#	2	M10X1.5-35mm Hex Bolts	8#	4	M8 Large Flat Washers
4#	8	M10 Large Flat Washers	9#	2	M8 Lock Washers
5#	6	M10 Lock Washers	10#	2	M8 Hex Nuts

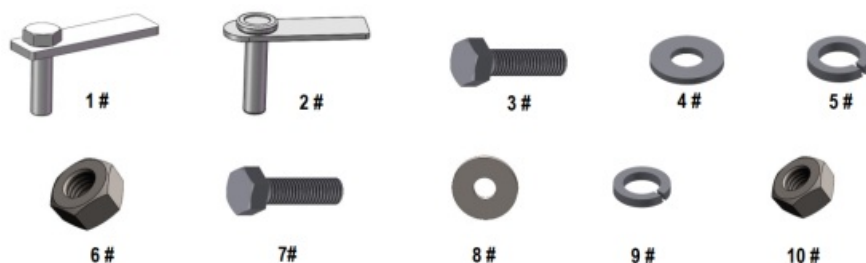

### Hardware Package B (For Stainless Steel Step Bar Installation)

Item	QTY	Description	Item	QTY	Description
1#	8	M8X1.25-35mm Carriage Bolts	3#	# 8	M8 Nylon Lock Nuts
2#	8	M8 Large Flat Washers	4#	4	Sliders (Packed with Step Bars)

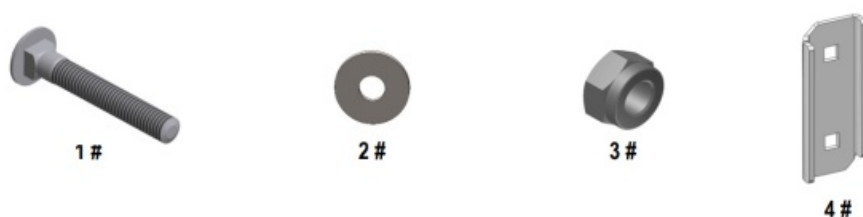


## Assembly Instruction

### STEP 1

Start installation from the driver side front of the vehicle. Locate (1) factory hole.

In the bottom of the left front floor panel, insert (1) M10X35 Bolt Plate into the oval hole in the bottom of the inner frame channel, (Fig 1).


- (Fig 1) Driver Side Front Mounting Location

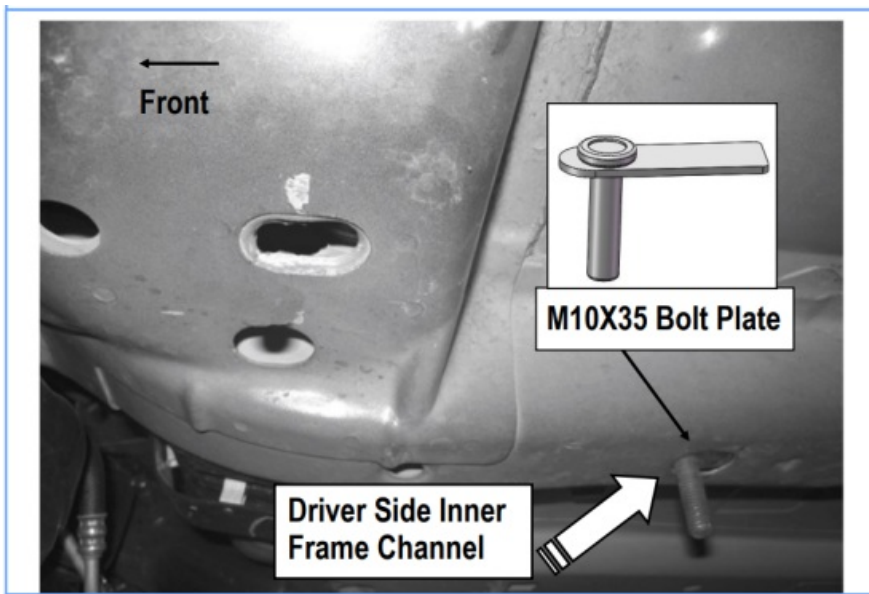

## STEP 2

Select the Driver Front Mounting Bracket (DFM), attach it to the installed M10X35 Bolt Plate with (1) M10 Large Flat Washer, (1) M10 Lock Washer and (1) M10 Hex Nut, (Fig 2). Do not fully tighten hardware at this time.

### • (Fig 2) Driver Front Mounting Bracket Installation

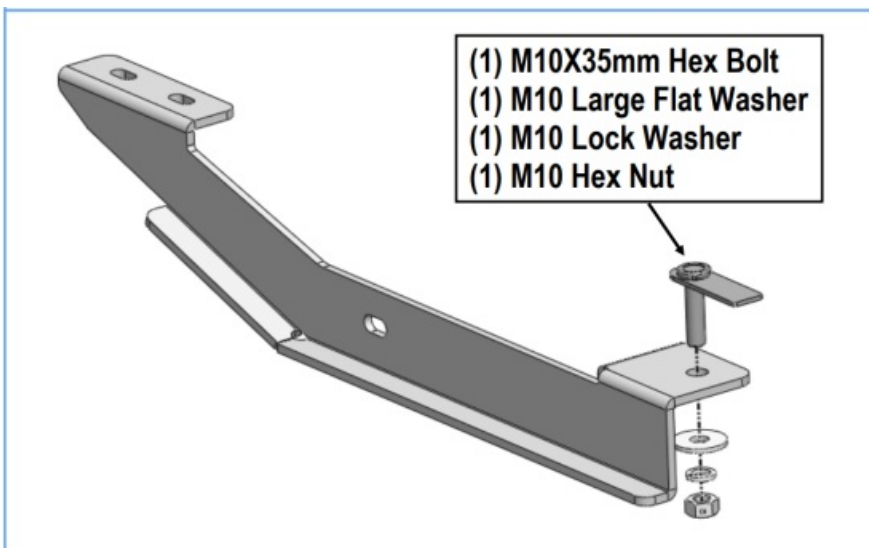


## STEP 3

Next, select the Driver Front Support Bracket (DFS), (Fig 3).

Attach the Support Bracket to the front side of the Driver Front Bar Bracket with (1) M10X1.5-35mm Hex Bolt, (2) M10 Large Flat Washers, (1) M10 Lock Washer and (1) M10 Hex Nut, (Fig 3). Do not fully tighten hardware at this time.


### • (Fig 3) Driver Front Support Bracket Assembly

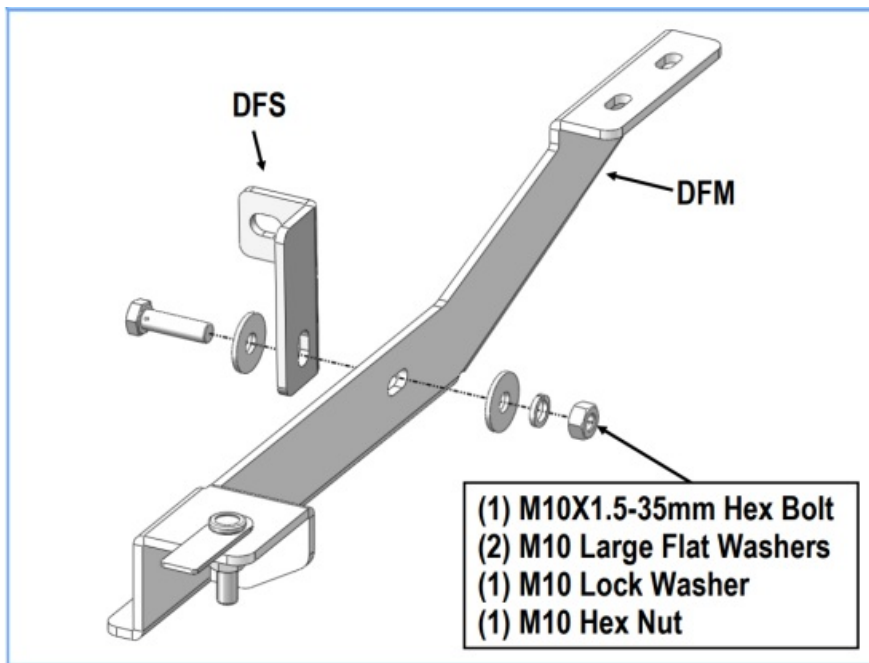


#### STEP 4

Move to driver side rear mounting location. Locate the large oval slot in the floor panel. Insert (1) M10x35 Bolt Plate into the slot, (Fig 4). NOTE: Rotate the Bolt Plate so that the plate is across, not inline with the oval hole. Attach the Driver Rear Mounting Bracket (DRM) to the M10x35 Bolt Plate with (1) M10 Large Flat Washer, (1) M10 Lock Washer and (1) M10 Hex Nut, (Fig 5). NOTE: A deep socket is required to tighten the Hex Nut up into the Bracket. Do not fully tighten hardware at this time.

- (Fig 4) Insert (1) M10x35 Bolt Plate Into The Slot

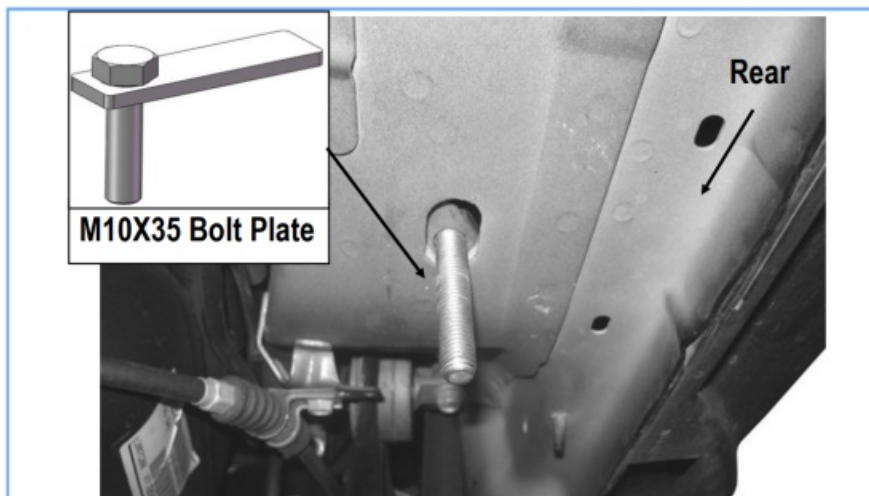

- (Fig 5) Driver Rear Mounting Bracket Installation

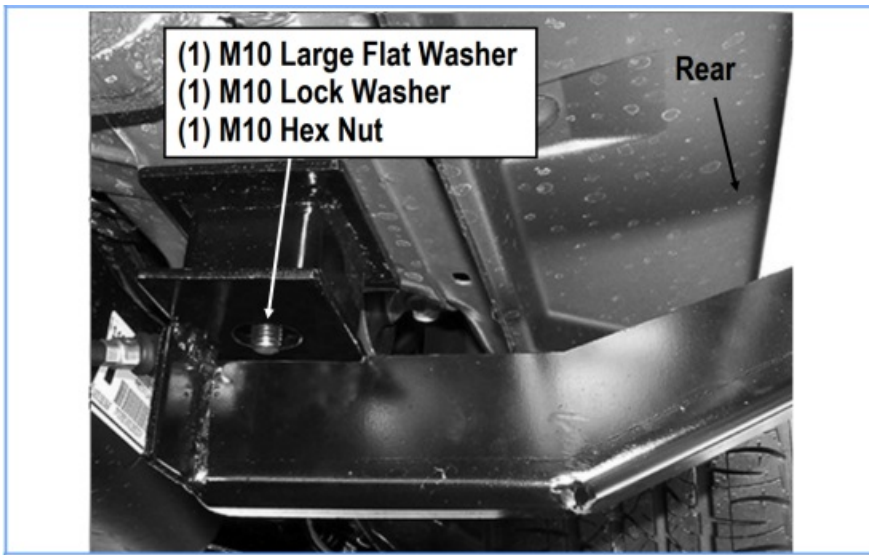

## STEP 5

Once all (2) Driver side mounting brackets are installed, then proceed to the Step Bar installation. (Figs 6 & 7)


1. Select (1) Slider and (2) M8X1.25-35mm Carriage Bolts;
2. Install (2) M8X1.25-35mm Carriage Bolts in (1) Slider.
3. Slide the Slider (with carriage bolts) to the Step Bar.
4. Repeat to install the other (1) slider to the step bar.
5. Attach the Step Bar (with the Sliders) onto the installed mounting brackets. Position the Sliders to the installed brackets. Secure the Step Bar to the installed Brackets by using (4) M8 Large Flat Washers and (4) M8 Nylon Lock Nuts and (2) Sliders, (Fig 7). Do not fully tighten hardware at this time.

**Note:** The Sliders are packed with the Step Bars.

## STEP 6

With the Step Bar Bracket hardware loose, pull the Brackets outward away from the vehicle for proper clearance.


### • (Fig 6) Slider Installation

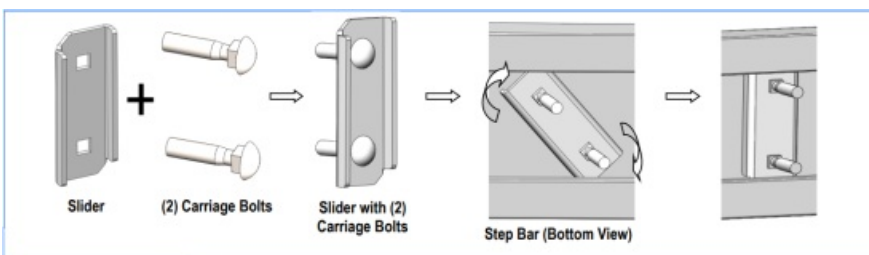

## STEP 7

Line up the Driver Front Support Bracket (DFS) with the back of the pinch weld, (Fig 8). Push the Support Bracket up as high as possible to where the pinch weld meets the floor panel. Do not fully tighten hardware. Check the Step Bar for level. Once properly aligned and adjusted, tighten all hardware. **IMPORTANT:** If the Support Bracket is too low and close to the edge of the pinch weld, loosen the Support Bracket and front Bracket hardware. Push the Bracket and Support Bracket up a little into position against the floor panel and away from the edge of the pinch weld, (Fig 8). Level and adjust the Step Bar properly and tighten all hardware.

### • (Fig 7) Step Bar Installation

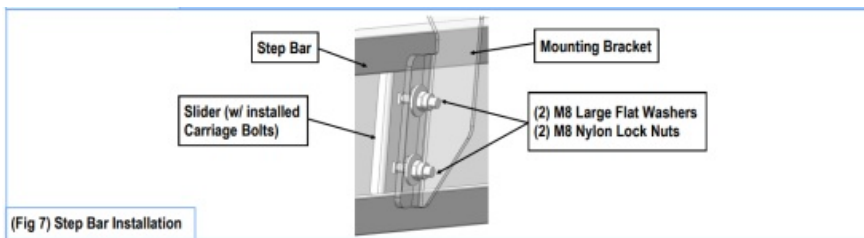


## STEP 8

Use the hole in the Support Bracket as a guide to mark the drilling location on the back of the pinch weld, (Fig 8). Once you have marked the location, temporarily remove the step bar, the front Mounting Bracket and Support Bracket. Remove the plastic clips securing the plastic rocker cover to the rocker panel.

Use a 5/16" drill bit and carefully drill the marked location.

**NOTE:** The plastic rocker panel cover may need to be trimmed to clear the hex bolt for the Support Bracket.

**IMPORTANT:** Any cutting or drilling tool may break or shatter. Government regulations require safety glasses & equipment at all times when cutting or drilling.

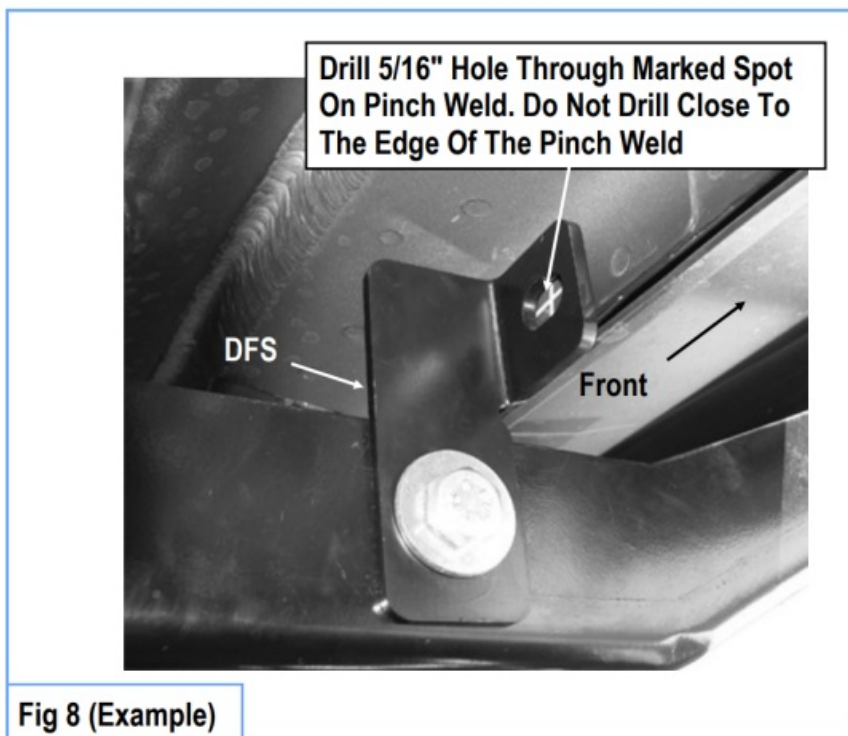


## STEP 9

Re-install the driver side front Mounting Bracket and Support Bracket. Attach the Support Bracket to the pinch weld with (1) M8X1.25-35mm Hex Bolt, (2) M8 Large Flat Washers, (1) M8 Lock Washer and (1) M8 Hex Nut, (Fig 9). **NOTE:** Insert the M8 Hex Bolt with (1) M8 Large Flat Washer through the pinch weld first, then through the Bracket.

Cut the rocker panel cover as required and reinstall the cover with the factory plastic clips. Reinstall the Step Bar.

- (Fig 9) Driver Front Support Bracket Installation (Example)



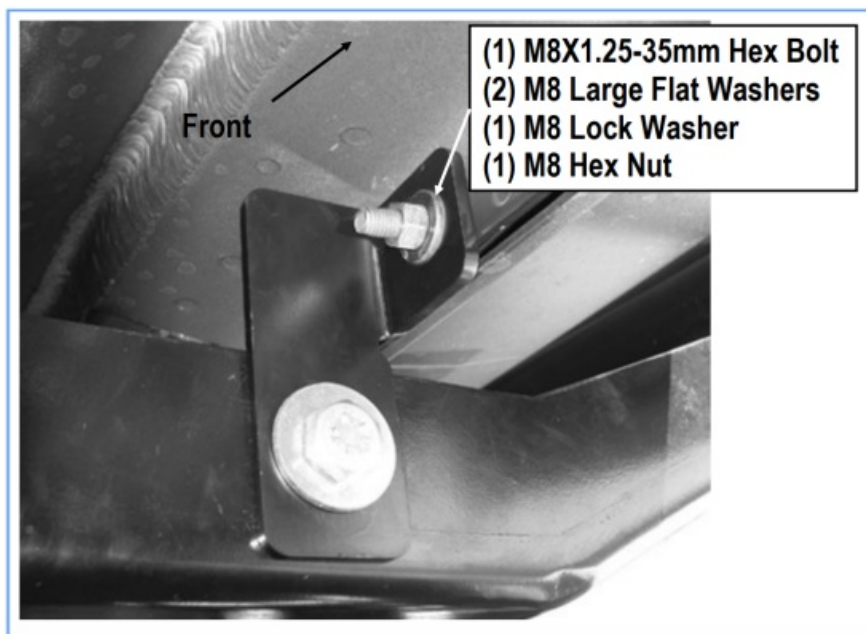

#### STEP 10

Level and adjust the Step Bar and fully tighten all hardware.

#### STEP 11

Repeat Steps 1-11 for other side Step Bar installation. The installation is completed.

#### Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.  
In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.

#### Customer Support

Scan For Installation Video



Customer Support: [info@iboardauto.com](mailto:info@iboardauto.com)



#### Documents / Resources

	<p><a href="#">iBoard IB-192C 4K Interactive Display</a> [pdf] Instruction Manual IB-192C 4K Interactive Display, IB-192C, 4K Interactive Display, Interactive Display, Display</p>
--	---



## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.