

User Manual of Product 1:

VEVOR Commercial Ice Maker Machine, 120-130LBS/24H with 33LBS Bin, Stainless Steel Automatic Operation Commercial Ice Maker for Home Bar Restaurant, Include Water Filter, Scoop, Connection Hose



INSTALLATION INSTRUCTIONS FOR PART 95-7324

APPLICATIONS KIA Optima 2006.5-2010

95-7324


KIT FEATURES

- Double DIN radio provision
- Stacked ISO units provision




KIT COMPONENTS

A) Double DIN Trim Plate • B) Double DIN Brackets

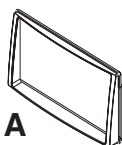

A

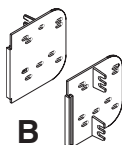

B

WIRING AND ANTENNA CONNECTIONS (Sold Separately) Harness:



- 70-1004 - Hyundai 2006-up/KIA harness 2004-up
- 70-7303 - Hyundai / KIA Harness 2009

Antenna Adapter:

- 40-KI11 - 2009-10 Kia Optima

TOOLS REQUIRED:

Phillips Screwdriver • Small Flat Blade Screwdriver/ Panel Removal Tool



1-800-221-0932



www.metraonline.com

© COPYRIGHT 2004-10 METRA ELECTRONICS CORPORATION



TABLE OF CONTENTS

Dash Disassembly

- Kia Optima 2006.5 - 2010	1
----------------------------------	---

Kit Assembly *

- Double DIN Radio Provision.	2
- Stacked ISO Units Provision.	3

<u>Final Assembly</u>	4
------------------------------------	---

***Note:**


Refer also to the instructions included with the aftermarket radio.

KIA OPTIMA 2006.5-2010


- 1** Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2** Unclip and remove the panel surrounding the radio including the a/c vents and climate controls. (Figure A)
- 3** Remove (4) Phillips screws securing radio. Unplug and remove radio. (Figure B)

Continue to kit assembly.

A

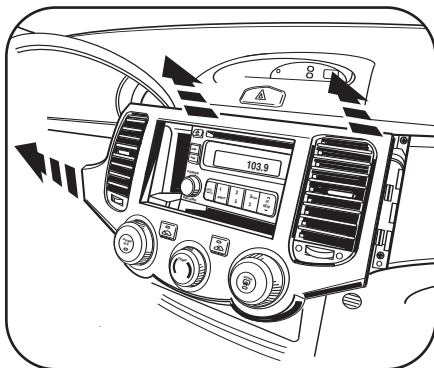

B

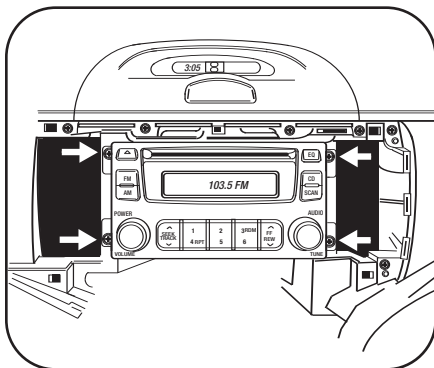


DOUBLE DIN RADIO PROVISION

****Note: Refer also to the instructions included with the aftermarket radio.***


- 1** Snap the Double DIN brackets to the inside edge of the Double DIN trim plate. (Figure A)
- 2** Slide the Double DIN radio into the bracket/trim plate assembly and secure the radio to the assembly using the screws supplied with the radio. (Figure B)

Continue to final assembly.

A

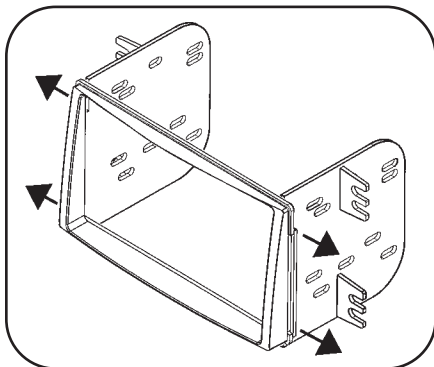

B


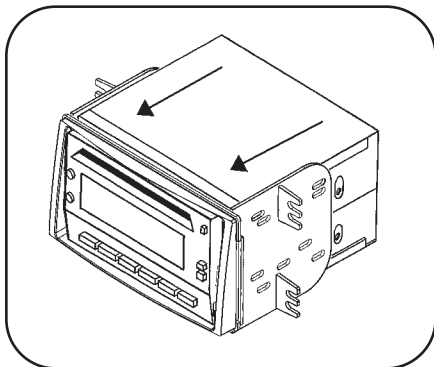


STACKED ISO UNITS PROVISION


****Note: Refer also to the instructions included with the aftermarket radio.***

- 1** Snap the Double DIN brackets to the inside edge of the Double DIN trim plate. (Figure A)
- 2** Slide the stacked ISO units into the bracket/radio housing assembly and secure the units to the kit using the screws supplied with the units. (Figure B)

Continue to final assembly.

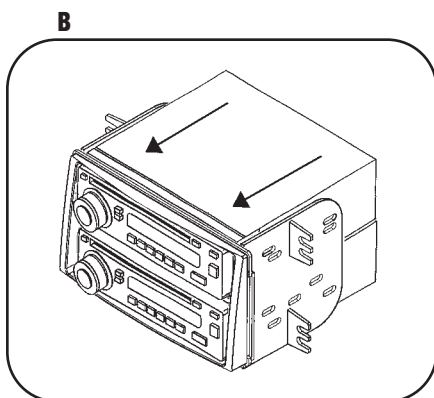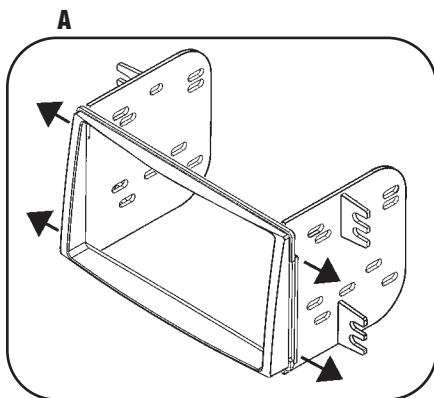

FINAL ASSEMBLY

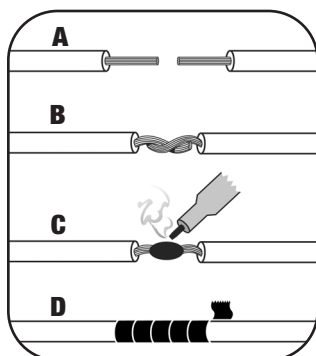

(A) Strip wire ends back 1/2"

B) Twist ends together

C) Solder

D) Tape

- 1 Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter and making connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit.)
- 2 Re-connect the negative battery terminal and test the unit for proper operation.
- 3 Reassemble radio and dash assemblies in reverse order of disassembly.

FINAL WIRING CONNECTIONS

Make wiring connections using the EIA color code chart shown below and the instructions included with the head unit. Metra recommends making connections as shown below; Strip, Splice, Solder, Tape. Isolate and individually tape off ends of any unused wires to prevent electrical short circuit.

METRA / EIA WIRING CODE

12V Ignition / Acc.	Red	Right Front (+)	Gray
12V Batt / Memory.	Yellow	Right Front (-).	Gray/ Black
Ground	Black*	Left Front (+)	White
Power Antenna	Blue	Left Front (-).	White / Black
Amp Turn-On	Blue / White	Right Rear (+)	Violet
Amp Ground.	Black / White	Right Rear (-).	Violet / Black
Illumination	Orange	Left Rear (+)	Green
Dimmer	Orange / White	Left Rear (-).	Green / Black

***NOTE:** When a Black wire is not present, ground radio to vehicle chassis.

All colors may not be present on all leads due to manufacturer's specifications.



95-7324

NOTES

[illegible]

95-7324 INSTRUCTIONS



1-800-221-0932



www.metraonline.com

REV. 04/27/10 © COPYRIGHT 2004-10 METRA ELECTRONICS CORPORATION

INST95-7324