

869 STYLE D INITIATION MODULE

Installation Guide

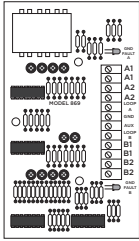


Figure 1: 869 Module

DESCRIPTION

The 869 Style D Initiating Module provides two supervised, power limited Style D, 4-wire initiating zones for connecting waterflow switches and non-powered fire and burglary devices to XR150/XR550 Series panels.

The module supervises both zones for opens, shorts, or ground fault conditions and requires 8.0 VDC to 25.0 VDC auxiliary power, a common ground, and one or two alarm zone inputs from the panel. Program the two alarm zone inputs according to the types of devices being used on the 869 module.

Compatibility

- XR150/XR550 Series panels

What is Included?

- One 869 Initiating Module
- Hardware Pack



1 MOUNT THE MODULE

The module can be mounted in a DMP enclosure using the standard 3-hole mounting pattern. Refer to Figure 2 as needed during installation.

1. Hold the plastic standoffs against the inside of the enclosure side wall.
2. Insert the included Phillips head screws from the outside of the enclosure into the standoffs. Tighten the screws.
3. Carefully snap the module onto the standoffs.

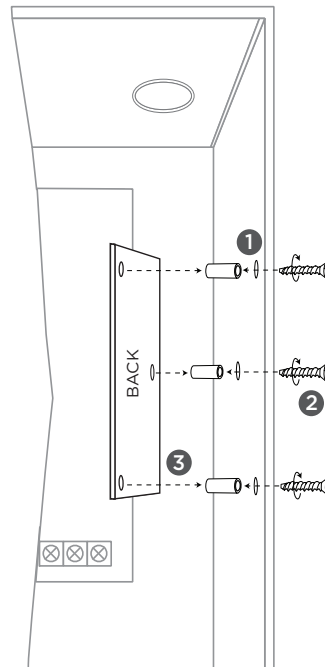


Figure 2: Standoff and Module Installation

2 WIRE THE MODULE

⚡ Caution: Disconnect all power from the panel before wiring the module. Failure to do so may result in equipment damage or personal injury.

For power connections, use 22 AWG or larger wire. Refer to Figure 3 when wiring the module.

1. Connect module Terminals A1 and A2 to zone A devices.
2. Connect module Terminal LOOP A to a panel zone 1-8.
3. Connect module Terminal GND to panel ground or battery negative.
4. Connect module Terminal AUX to auxiliary power (8.0 VDC-25.0 VDC).
5. Connect module Terminal LOOP B to a panel zone 1-8.
6. Connect module Terminals A1 and A2 to zone B devices.

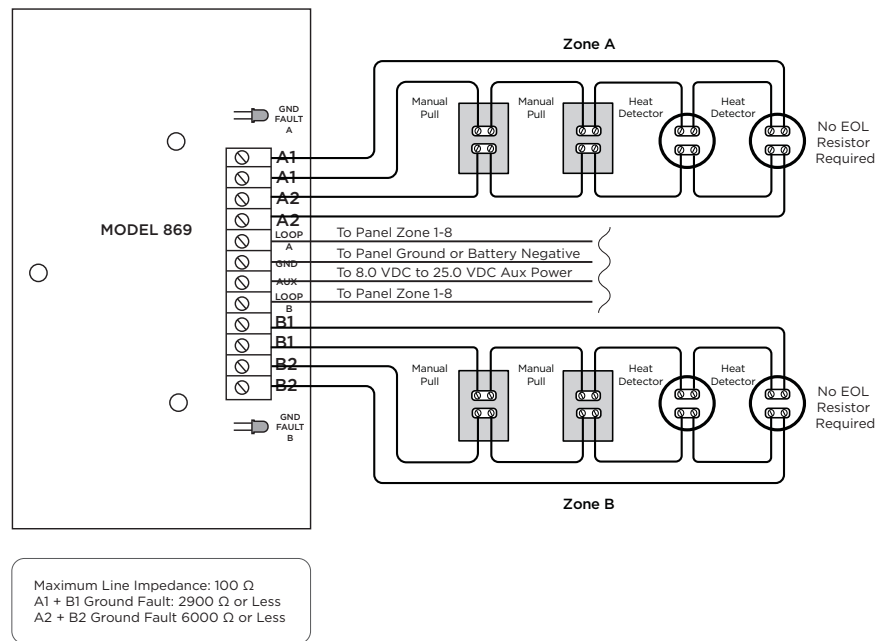


Figure 3: Wiring Diagram

ADDITIONAL INFORMATION

Wiring Specifications

DMP recommends using 18 or 22 AWG for all LX-Bus and Keypad Bus connections. The maximum wire distance between any module and the DMP Keypad Bus or LX-Bus circuit is 1,000 feet. To increase the wiring distance, install an auxiliary power supply, such as a DMP Model 505-12. Maximum voltage drop between a panel or auxiliary power supply and any device is 2.0 VDC. If the voltage at any device is less than the required level, add an auxiliary power supply at the end of the circuit.

To maintain auxiliary power integrity when using 22-gauge wire on Keypad Bus circuits, do not exceed 500 feet. When using 18-gauge wire, do not exceed 1,000 feet. Maximum distance for any bus circuit is 2,500 feet regardless of wire gauge. Each 2,500 foot bus circuit supports a maximum of 40 LX-Bus devices.

For additional information refer to the LX-Bus/Keypad Bus Wiring Application Note (LT-2031) and the 710 Bus Splitter/Repeater Module Installation Guide (LT-0310).

Operation

The Class A, Style D circuit consists of a 2-wire zone out to the protective devices and a 2-wire return from the last device to the module. In the event of an open condition on the circuit, devices on either side of the fault could still initiate an alarm. During an alarm (shorted) condition on either Style D zone, the module shorts the panel alarm zone to ground. During a trouble (open) or ground fault condition on either zone, the module opens the panel alarm zone. In addition, ground fault conditions on either Zone A or Zone B light the corresponding red LED.


869 STYLE D INITIATION MODULE

Specifications

Operating Voltage	8.0 VDC to 25.0 VDC
Operating Current	25 mA Standby, 75 mA Maximum (both zones shorted to ground)
Zone Types	Two Style D, 4-wire initiating circuits
Zone Voltage	5 VDC, 1.5 mA max

Ordering Information

869	Style D Initiation Module
-----	---------------------------



Compatibility

XR150/XR550 Series Panels

Certifications

California State Fire Marshal (CSFM)
New York City (FDNY COA #6167)
Underwriters Laboratory (UL) Listed
ANSI/UL 864 Fire Protective Signaling Systems



Designed, engineered, and
manufactured in Springfield, MO
using U.S. and global components.

LT-0186 1.02 20271

© 2020

INTRUSION • FIRE • ACCESS • NETWORKS

2500 North Partnership Boulevard
Springfield, Missouri 65803-8877
800.641.4282 | DMP.com