



# ADVANTECH ICR-3201 Cellular Routers User Guide

[Home](#) » [Advantech](#) » ADVANTECH ICR-3201 Cellular Routers User Guide 

## ADVANTECH ICR-3201 Cellular Routers User Guide




### Contents

- [1 Safety Instructions](#)
- [2 Product Disposal Instructions](#)
- [3 Open Source Software License](#)
- [4 First Use](#)
- [5 Configuration](#)
- [6 Support](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)

## Safety Instructions

**Please take care to following instructions:**

- Use the router in compliance with national and international law and in compliance with any special or additional restrictions regulating the use of the router in various applications and environments.
- To avoid possible injury and/or damage to the device, observe the relevant provisions and standards. Use only the original accessories as recommended. Unauthorized device or accessory modification or using accessories that have not been approved can result in router damage and/or violation of the regulations.
- Unauthorized device or accessory modification or using the accessories that have not been approved can result in warranty termination.
- Do not open the router.

-  **Caution!** Small children can swallow the SIM card.
- When connecting the device to a power supply, do not exceed the defined voltage.
- Do not expose the router to extreme ambient conditions. Protect the router against dust, moisture, and high temperature.
- It is recommended that you do not use the router at petrol filling stations. We recommend observing local restrictions concerning radio-based devices while working with explosive material, such as at petrol filling stations or in chemical plants.
- While using the router close to personal medical devices, such as cardiac pacemakers or hearing aids, proceed with heightened caution.
- Operating the router too close to TV sets, radio receivers, personal computers, or telephones can cause interference.
- It is recommended that you create a copy or backup of the essential settings stored in the memory of the router.

## Product Disposal Instructions



The WEEE (Waste Electrical and Electronic Equipment: 2012/19/EU) directive was introduced to ensure that electrical/electronic products are recycled using the best available recovery techniques to minimize the impact on the environment. This product contains high-quality materials and components which can be recycled. At the end of its life, this product **MUST NOT** be mixed with other commercial waste for disposal. The device contains a battery. Remove the battery from the device before disposal. The battery in the device needs to be disposed of apart accordingly. Check the terms and conditions of your supplier for disposal information.

## Open Source Software License

The software in this device uses various pieces of open-source software governed by the following licenses:

- GPL versions 2 and 3
- LGPL version 2
- BSD-style licences
- MIT-style licences

The list of components together with complete license texts can be found on the device itself. See the Licenses link at the bottom of the router's main Web page (General Status) or point your browser to this address (replace the DEVICE\_IP string with the real router's IP address):

This is a written offer valid for three years since the device purchase, offering any third party for a charge no more than the cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code on a flash drive medium. If you are interested in obtaining the source, please get in touch with us at: [techSupport@advantech-bb.com](mailto:techSupport@advantech-bb.com)

## Modifications and debugging of LGPL-linked executables:

The device manufacturer hereby grants the right to use debugging techniques (e.g., decompilation) and making customer modifications of any executable linked with an LGPL library for its purposes. Note these rights are limited to the customer's usage. No further distribution of such modified executables and no transmission of the information obtained during these actions may be done.

## First Use


Before applying power to the router, connect all the components you need for your applications. A cross-shaped screwdriver is necessary to insert a SIM card.

! Do not run the router without an antenna connected to the main antenna connector. The energy from the transmission is effectively reflected by the open end and can damage the equipment.

! ICR-3201 routers are not equipped with a cellular module, which means that SIM card slots and cellular antenna connectors are not available on the router.

### 1. Antenna


Use SMA connectors to connect the antennas to the router; see the figure below. First, connect the main antenna to the ANT connector. Next, connect the second diversity antenna to the DIV connector to improve the quality and reliability of a wireless link.

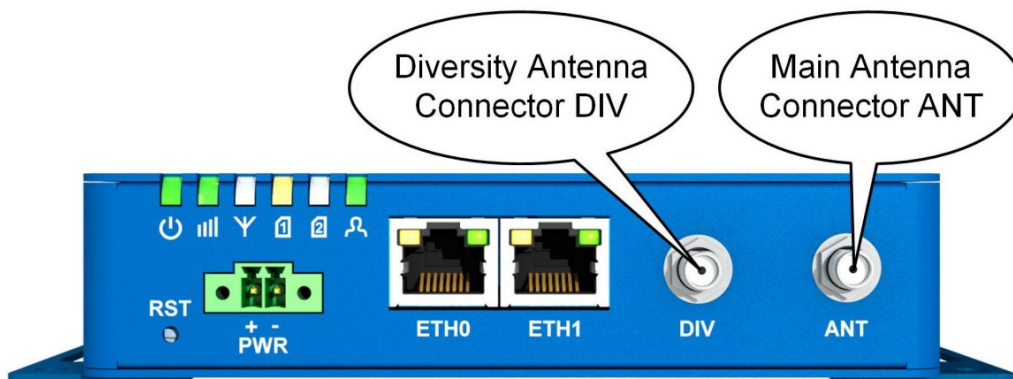

### 2. SIM Card


The SIM card reader for two Mini SIM cards (2FF with size of 25.0 x 15.0 x 0.76 mm) is located on the left side panel of the router. If you intend to use this device to communicate over a cellular network, please place an activated data-provisioned SIM card into the SIM card reader. Unscrew the SIM cards cover and push your SIM card into the SIM1 or SIM2 slot until it clicks into place.

! Disconnect the router from the power supply before handling the SIM card.

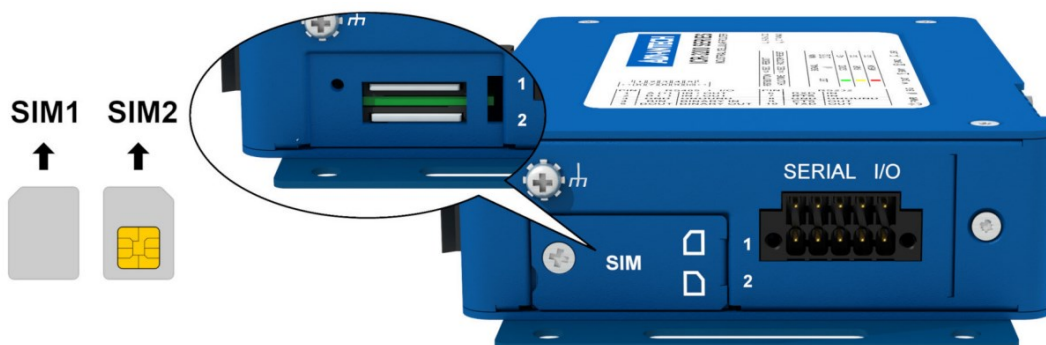

### 3. Power

The router requires an external DC power supply. The DC voltage required is between +9 and +36 V DC. The router has built-in protection against reverse polarity without signaling. Connect the power supply cable to the PWR connector on the router's front panel; see the figure below.

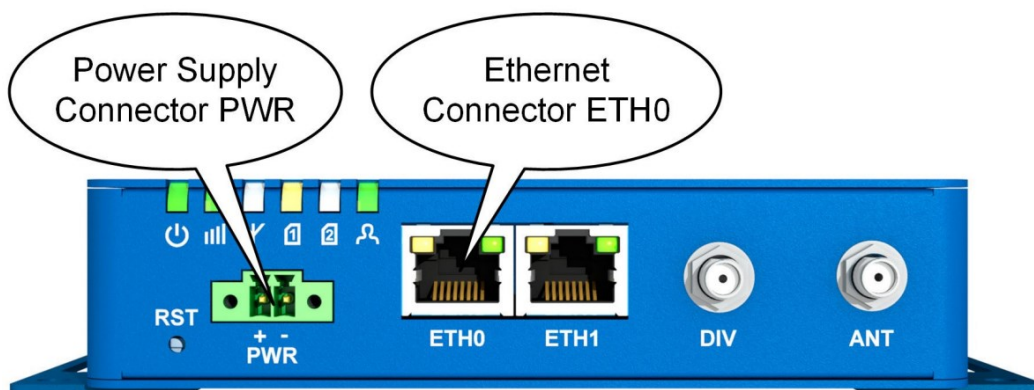

#### 4. Ethernet

For an initial configuration made in a web browser, connect a PC by an Ethernet cable to the default LAN interface, use the ETH0 port; see the figure above. By default, this interface has the following configuration:

Connector	Purpose	Default Setting
ETH0	LAN port (default)	DHCP Server
	Connect your PC to this port to get the router web interface	IP Address: 192.168.1.1 NetMask: 255.255.255.0

### Configuration

#### Configuring the Device Using the Web Browser

You can use a web browser running on your PC to access the router web interface. Here you can perform router monitoring, configuration, and administration. First, connect the PC to the default LAN interface described in the Ethernet chapter. To get the router interface, enter the <https://192.168.1.1> address in a web browser. Please note that usage of the HTTPS protocol for secure communication over the network is required. There is just the root user1 account created on the router by default. See the product label on the router for its default password2. Log in to the web interface by the root user and his password. See the configuration manual of the router for a detailed description and examples of the router configuration.

**!** The activated client periodically uploads router identifiers and configuration to the WebAccess/DMP server.

#### Restoring and Backing up the Router Configuration

The default factory settings will replace the current configuration if you reset the router. Therefore, we recommend you back up the router configuration before resetting the device. Refer to the configuration manual for more information.

You can restore the default router configuration once the router boots up and the PWR LED starts blinking. To do so, press the RST button on the router's front panel for more than 4 seconds. After you press this button, all settings reset to the default values, and the router will reboot.

### Support

All product-related manuals, documents, and software can be found and downloaded on the website at [icr.advantech.cz/download](http://icr.advantech.cz/download) address.



We, Advantech Czech s.r.o., declare that the radio equipment type ICR-3201 (WiFi version), ICR-3211, and ICR-3231 comply with Directive Radio Equipment Regulations 2017 (S.I. 2017 No. 1206). Furthermore, ICR-3201 (non-WiFi version) complies with the Electromagnetic Compatibility Regulations 2016 (S.I. 2016 No. 1091 and S.I. 2016 No. 1101).



We, Advantech Czech s.r.o., declare that the radio equipment type ICR-3201 (WiFi version), ICR-3211, and ICR-3231 comply with Directive 2014/53/EU. Furthermore, ICR-3201 (non-WiFi version) complies with the essential requirements and other relevant provisions of Directives 2014/30/EU and 2014/35/EU.



The full text of the EU Declaration of Conformity is available at the following internet address:

[icr.advantech.cz/eudoc](http://icr.advantech.cz/eudoc)

QSG-0006-EN, October 5, 2022

Released in the Czech Republic

## Documents / Resources

 <p>Start Guide ICR-3201, ICR-3211, ICR-3231 ICR-3232, ICR-3241</p> 	<p><a href="#">ADVANTECH ICR-3201 Cellular Routers</a> [pdf] User Guide ICR-3201, ICR-3211, ICR-3231, ICR-3232, ICR-3241, ICR-3201 Cellular Routers, ICR-3201, Cellular Routers, Routers</p>
---	--

## References

- [Web Page Under Construction](#)
- [Routers & Firmware - Cellular Routers Engineering Portal](#)
- [Routers & Firmware - Cellular Routers Engineering Portal](#)
- [Routers & Firmware - Cellular Routers Engineering Portal](#)
- [Routers & Firmware - Cellular Routers Engineering Portal](#)

[Manuals+](#)