


amaran 300c RGB Monolight User Manual

Home » amaran 300c RGB Monolight User Manual

amaran 300c RGB Monolight
User Manual



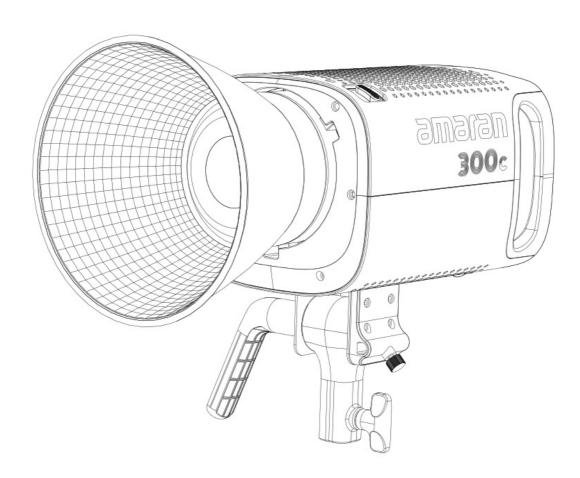

amaran 300c

Product Manual

Introduction

Thank you for purchasing the "amaran" series of RGBWW COB lights – amaran 300c.

Amaran 300c is a 300W full color LED light. It has a new and colorful appearance design and supports full-color output of light sources. Advanced software interaction design, minimalist control method, compatible with Sidus Link® APP control. Amaran 300c will provide you with lightweight and cost- effective lighting solutions; the newly upgraded exterior color will give you a wonderful visual experience.

Important Safety Instructions

When using this unit, basic safety precautions should always be followed, including the following:

WARNING

- 1. Please remove the protective cover before use.
- 2. Please remove the protection cover before using the reflector.
- 1. Read and understand all instructions before using.
- 2. Close supervision is necessary when any fixture is used by or near children. Do not leave the fixture unat tended while in use.
- 3. Care must be taken as burns can occur from touching hot surfaces.
- 4. Do not operate the fixture if a cord is damaged, or if the fixture has been dropped or damaged, until it has been examined by qualified service personnel.
- 5. Position any power cables such that they will not be tripped over, pulled, or put into contact with hot surfaces.
- 6. If an extension cord is necessary, a cord with an amperage rating at least equal to that of the fixture should be used. Cords rated for less amperage than the fixture may overheat.
- 7. Always unplug the lighting fixture from the electrical outlet before cleaning and servicing, or when not in use. Never yank the cord to remove the plug from the outlet.
- 8. Let the lighting fixture cool completely before storing. Unplug the power cable from lighting fixture before storing and store the cable at assigned space of the carrying case.
- 9. To reduce the risk of electric shock, do not immerse this fixture in water or any other liquids.
- 10. To reduce the risk of fire or electric shock, do not disassemble this fixture. Contact cs@aputure.com or take the lighting fixture to qualified service personnel when service or repair is required. Incorrect reassembly may cause electric shock when the lighting fixture is in use.
- 11. The use of any accessory attachment not recommended by the manufacturer may increase the risk of fire, electric shock, or injury to any persons operating the fixture.
- 12. Please power this fixture by connecting it to a grounded outlet.
- 13. Please remove the protective cover before use.
- 14. Please remove the protection cover before using the reflector.
- 15. Please do not block the ventilation or do not look at the LED light source directly when it is powered on. Please do not touch the LED light source in any condition.
- 16. Please do not place the LED lighting fixture near any flammable object.
- 17. Only use a dry microfiber cloth to clean the product.
- 18. Please do not use the light fixture in wet condition on account of electric shock may be caused.
- 19. Please have the product checked by an authorized service personnel agent if the product has a problem.

 Any malfunctions caused by unauthorized disassembly are not covered by the warranty. The user may pay for maintenance.
- 20. We recommend only using the original Aputure® cable accessories. Please note that any malfunctions caused by using unauthorized accessories are not covered by the warranty. The user may pay for maintenance.
- 21. This product is certified by CE, ROHS, UKCA, FCC, IC, RCM, PSE, KC, inspection report, NCC, BIS.

 Please operate the product in full compliance with relevant country's standards. Any malfunctions causedby

incorrect use are not covered by warranty. The user may pay for maintenance.

22. The instructions and information in this manual are based on thorough, controlled company testing procedures. Further notice will not be given if the design or specifications change.

SAVE THESE INSTRUCTIONS

FCC Compliance Statement

WARNING

Changes or modications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and canradiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a different circuit than the receiver is connected to.
- Consult the dealer or an experienced radio/TV technician for help.


RF Warning Statement:

This device has been evaluated to meet general RF exposure requirements.


Components List


Please make sure all accessories listed below are completed before using. If not, please contact with your sellers immediately.

amaran 300c Standard Kit

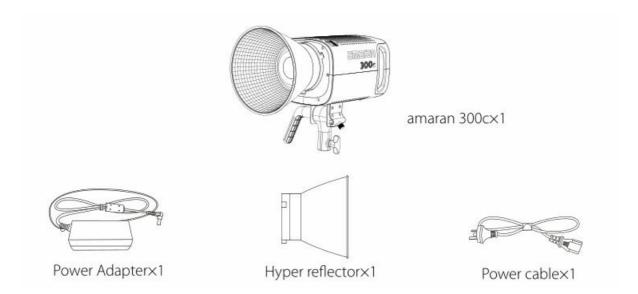

Product Details

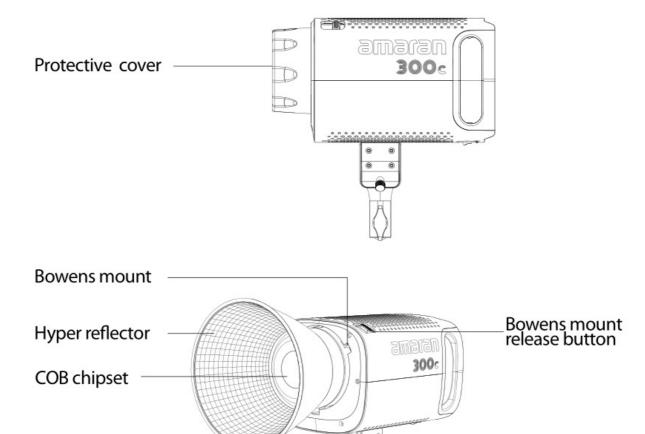

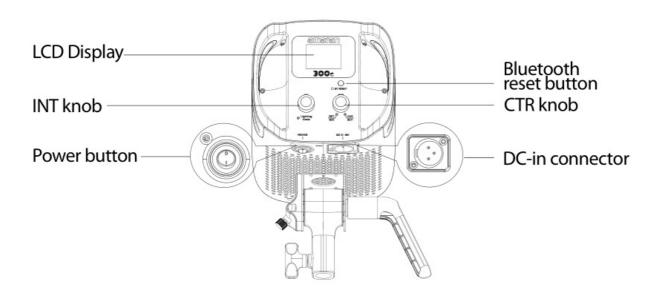

Soft light umbrella hole


Locking knob Tie Down


Installations

1. Detaching /attaching the Protection Cover

Locking handle

Push the handle of the lever in the direction of the arrow shown in the picture, and rotate the cover to pull it out. Reverse rotation will put the protective cover into.

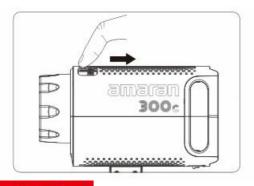

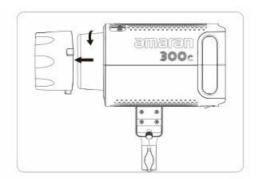



WARNING

Always remove the protection cover prior to turning on the light. Always re-install the cover when packing it away.

2. Attaching/detaching the Reflector

Push the lever handle according to the arrow direction shown in the picture, and rotate the reflector into it. Rotating in the opposite direction pulls out the reflector.

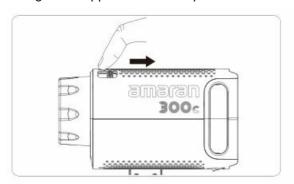


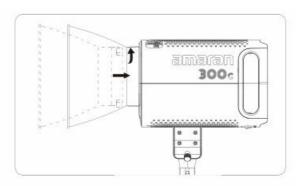

3. Setting up the light

Adjust the lamp body to the appropriate height, rotate tie-down to fix the lamp body on the tripod, then adjust the lamp body to the required angel, and tighten the lock handle.




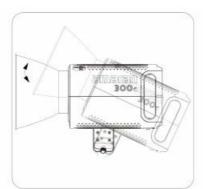




4. Soft light umbrella installation


Insert the soft light handle into the hole, then lock the locking knob.

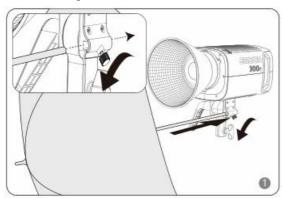

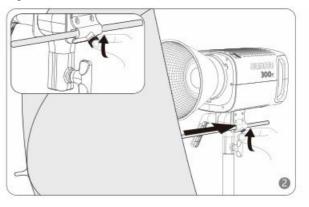

5. Power supply

Powered by AC.

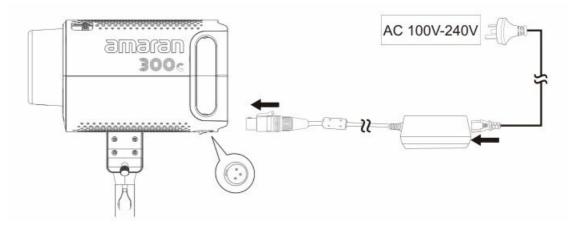

- *Please press the button on the DC interface to remove the power cord from the lamp. Do not pull it out forcibly.
- *Please press the spring-loaded lock button on the power cord to remove the power cord. Do not pull it out forcibly.


Contents

- 1 Operations
- 2 Documents /
- Resources
 - 2.1 References

Operations

1. Power ON/OFF

Press the power button to turn the light on and off.

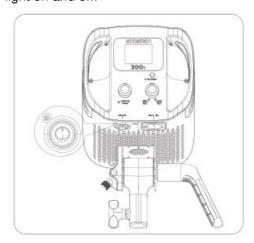

2. Manual Control

2.1 Menu







HSI Mode

2.2 Light Mode

2.2.1 CCT

Rotate the INT knob to adjust intensity level. Press the CTR knob to select CCT or G/M and rotate the CTR knob to adjust the corresponding value.

INT (Intensity): 0.0 – 100.0 %

CCT (Correlated Color Temp.): 2500 K – 7500 K **G/M** (Green / Magenta adjustment): -1.0 ~ +1.0



2.2.2 HSI

Press the INT knob to enter HSI mode. Then press the CTR knob to select HUE or SAT and rotate the CTR knob to adjust the corresponding value.

INT (Intensity): 0.0 – 100.0 %

HUE (Hue): 1 – 360.0°

SAT (Saturation): 0.0 – 100.0 %



2.2.3 FX

Connect Sidus Link® APP, the user can find the Bluetooth serial number corresponding to the lamp in the APP and connect. When controlling the light effect through the APP, "FX" will be displayed on the upper left corner of the screen. In wireless mode, 9 lighting effects can be controlled through APP: Paparazzi / Lightning / TV / Fire / Faulty Bulb / Pulsing / Cop Car / Party Lights / Fireworks. Amaran 300c supports Sidus Pro® FX.



2.3 BT Settings

- 1.Long press the Bluetooth reset button to reset Bluetooth.
- 2.During the reset process, the LCD displays "BT Reset" and the Bluetooth icon is flashing, and the percentage shows the current reset progress.





3. The LCD will display "Success" after the Bluetooth reset is successful.



4. The LCD will display "Failed" after the Bluetooth reset is unsuccessful.



5. After resetting the light's Bluetooth connection, your mobile phone or tablet will be able to connect to and control the light.

2.4 Over temperature protection

When the internal temperature of the lamp reaches the threshold value that needs to be cooled, the lamp control interface will display the over-temperature symbol, and the lamp will be turned off and the fan will be turned off after 5 seconds. The over-temperature protection interface is always displayed, and no operation can

be performed at this time. Only when the power is turned on again can it return to normal.



2.5 Update

Firmware updates can be updated online via the Sidus Link® app for OTA updates.



Success



Failed

3. Using the Sidus Link® APP

You can download the Sidus Link® app from the iOS App Store or Google Play Store for enhancing the functionality of the light. Please visit Sidus.link/app/help for moredetails regarding how to use the app to control your Aputure® lights.



Get Sidus Link ®R App



Sidus.link/app/help

Specifications

DC Power Input (Max)	360 W	Power Output (light)	300W	
ССТ	2500 K - 7500 K±300K	CRI	≥95	
TLCI	≥95	CQS	3200K: ≥95 5600K: ≥92	
SSI (D32)	83	SSI (D56)	71	
TM-30 Rf (avg.)	92	TM-30 Rg (avg.)	101	
Luminous flux	19389 lm (5600K)	Beam angle	Naked: 90°, Hyper reflector: 65°	
Operating Voltage	DC 48V	Operating Current	7.5 A	
Power supply specification	DC: 48V / 7.5 A AC: 100 V - 240 V / 2.5 A / 50 - 60 Hz	Operating Temperature	–10°C - +40°C	
Storage temperature	-20°C - +80°C	Control Methods	Manual, Sidus Link® App	
Firmware upgrade method	Sidus Link® App	Remote control distance	≤ 100 m	
Display	LCD	Cooling method	active	
Dimensions	250*155*142 mm / 10×6×5.6 in (Bracket not included) 250*194*251 mm / 10×8×10 in (Bracket included)	Weight	2633g/5.8lbs	

Photometrics

ССТ	Distance	Bare Bulb	LS 600 Hyper reflector /lux	Fresnel 2X Flood/lux	Fresnel 2X Spot/lux
2500 K	1 m	7000	19790	18960	32800
	3 m	852	1757	2387	4050
	5 m	340	635	921	1405
3200 K	1 m	7520	21390	20440	35300
	3 m	915	1896	2580	4370
	5 m	360	682	989	1515
4300 K	1 m	8260	23510	22300	38600
	3 m	1004	2080	2817	4790
	5 m	395	749	1070	1660
5600 K	1 m	9370	26580	25120	43600
	3 m	1140	2351	3180	5410
	5 m	448	848	1196	1875
7500 K	1 m	9180	26200	24750	43000
	3 m	1119	2321	3140	5330
	5 m	439	836	1175	1846

 $^{^{\}star}$ This is an averaged result. The luminance of your individual unit may vary slightly from this data.

Documents / Resources



amaran 300c RGB Monolight [pdf] User Manual 300c RGB Monolight, 300c, RGB Monolight, Monolight

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.