

# **AND GC Series Counting Scales User Manual**

Home » AND » AND GC Series Counting Scales User Manual



#### **Contents**

- 1 AND GC Series Counting Scales
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 Multiple displays for different purposes
- 5 Memory capacity extension using a MicroSD card
- 6 Automatic Item Search (AIS)♦ to instantly find a desired unit weight
- 7 WinCT-Counting (freeware) for easy management of item data
- 8 RS-232C interface that supports digital connection with an A&D balance/scale
- 9 Other useful features
- 10 Accessories
- 11 Dimensions (mm/inches)
- **12 Discover Precision**
- 13 Documents / Resources
  - 13.1 References
- **14 Related Posts**



**AND GC Series Counting Scales** 



#### **Product Information**

The GC Series Counting Scales from A&D are designed to provide efficient and accurate counting solutions. With multiple displays and intuitive features, these scales are ideal for various counting applications.

- Three separate reverse-backlit LCD displays for count, weight, and unit weight data
- One OLED information display for parameter contents and operation guidance
- Organic light-emitting diode (OLED) technology for clear and vibrant display
- · Option to switch between count and weight displays
- Detachable display unit for ergonomic use and flexible device layout
- Standard cable length of approximately 1m between the display and weighing units
- Optional extension cable (GC-08, approx. 2m) available
- Diverse methods of unit weight setting: Sample Mode, Key Mode, and Search Mode
- Unit weight entry navigator with text and LED lamps for easy setup
- Large internal memory to store data for up to 1,000 items
- Unit weight backup in internal memory for quick retrieval after reset or power-off
- Memory capacity extension using MicroSD card for practically infinite item data storage

## **Product Usage Instructions**

To use the GC Series Counting Scales effectively, follow the instructions below

#### **Display Unit Setup**

- 1. Connect the display unit to the weighing unit using the standard cable provided.
- 2. If needed, use the optional extension cable for a longer distance between the units.
- 3. Ensure the display unit is securely attached in an ergonomic position based on your device layout.

#### **Unit Weight Setting**

The unit weight represents the weight of one piece of the item to be counted. Follow the appropriate method for

unit weight setting

#### Sample Mode

- 1. Select Sample Mode on the scale.
- 2. Weigh a preset or arbitrary number of sample pieces using the scale.
- 3. The scale will calculate the average piece weight based on the total weight of the samples.

#### **Key Mode**

1. Enter a known unit weight value using the numeric keys on the scale or from an external device like a PC.

#### Search Mode

- 1. Access Search Mode on the scale.
- 2. Retrieve the desired unit weight from the internal or external memory data.

## **Data Storage and Retrieval**

The GC Series Counting Scales offer extensive data storage capabilities. Follow these steps to manage data:

### **Internal Memory**

- 1. The internal memory can store data for up to 1,000 items.
- 2. Each item can have a 20-character item code, tare weight, total count/number of additions, and comparator limits.
- 3. An ID number and unit weight are also stored for each item.
- 4. The unit weight currently in use is backed up with the ID number 000000 for easy retrieval after reset or poweroff.

#### **MicroSD Card Memory**

- 1. Insert a MicroSD card into the scale (ensure compatibility with the device).
- 2. Create and save item data in CSV format on the MicroSD card using a PC.
- 3. Retrieve unit weight and other information directly from the MicroSD card or transfer the list file to the internal memory of the scale.
- 4. If the number of items in the list file exceeds 1,000, only the first 1,000 items will be copied to the internal memory.

For more detailed information and instructions, refer to the user manual provided by A&D.

#### Because All You Want to Do Is "Count"

If people appear to be counting faster, it may not be that they are better trained. Featuring A&D's uniquely innovative solutions, the GC series of counting scales let you spend much less time and effort on setup and preparation so that you can start counting right away. The GC series is also designed to be able to connect with various other devices to expand their capabilities as needed, while being extremely functional as well as being

affordable enough to be purchased for stand-alone operations.

## Multiple displays for different purposes

For maximum efficiency and ease of operation, the scale has three separate reverse-backlit LCD displays for count, weight, and unit weight data, and one OLED\*1 information display.

• 1 Organic light-emitting diode



• The count and weight displays can be switched if you prefer that weight data be displayed in the larger character size.

#### Information display also acting as a simplified guide for internal settings

• In addition to icons and animations which help you intuitively grasp what operation is currently being performed, it indicates parameter contents as a simplified guide during internal settings so you need not refer to the instruction manual every time.



• Example of the response speed setting assisted by the OLED information display

## Separable display unit

The display unit can be detached from the weighing unit for ergonomic use depending on the device layout. The length of the standard cable that connects the display and weighing units is approx. 1 m. An optional extension cable (GC-08, approx. 2 m) is also available to replace the standard cable.



· Display unit detached from the weighing unit

## Diverse methods of unit weight setting

You can select one of three ways to set a unit weight (= weight of one piece of the item to be counted) as the situation demands.

- Sample Mode: Have the scale calculate the average piece weight from the total weight of a preset or arbitrary number of sample pieces.
- **Key Mode:** Enter a known unit weight value using the numeric keys on the scale or from an external device such as a PC.
- Search Mode: Call up the unit weight to use from the internal or external (MicroSD card) memory data.

#### Unit weight entry navigator

No need to worry even if you are an inexperienced user. The scale navigates you through unit weight setting with text and small red LED lamps as it is turned on.



**Example** of selecting Sample Mode to set a unit weight

## Large internal memory to store data for up to 1,000 items

To recall and immediately use at any time, the GC series can store 20-character (max.) item code, tare weight, total count / number of additions and comparator limits, on top of 6-digit ID number and unit weight for as many as 1,000 items.

#### Unit weight backup

The unit weight currently in use is backed up in the internal memory with the ID number 000000 so that it can be retrieved at once even if the scale is accidentally reset or turned off.

## Memory capacity extension using a MicroSD card

- The GC series also allows for the insertion and reading of a MicroSD card,\*2 to which data for a practically
  infinite number of items can be created and saved in CSV format using a PC.
  - You can either call up the unit weight and other information of a desired item directly from the MicroSD card, or transfer the list file to the internal memory of the scale.\*3
  - 2 Operation is not guaranteed for all MicroSD cards.
  - 3 The first 1,000 items will be copied if the number of items in the list file exceeds 1,000.



Slot for a MicroSD card

## Automatic Item Search (AIS)♦ to instantly find a desired unit weight

- Individual item data can be easily called up from the vast list in the internal or external (MicroSD card) memory by entering an ID number or item code (the scale performs a case-sensitive prefix search when searching for an item code).
  - Patent pending
- Furthermore, when the Automatic Item Search (AIS) function is used, the scale will automatically find and set an item (unit weight) based on the weight detected by the scale.\*4 You simply have to place a piece of the item you are counting on the scale, and confirm whether the set item is the one you are looking for (or change to next match\*5 if it is not) so that counting can begin straight away.



- Just place a piece of the item you wish to count on the pan.
- The scale automatically sets a unit weight based on the weight on the pan.

Not only can this function save the hassle of having to enter an ID number / item code, but it can also be extremely helpful in case you have difficulty remembering the ID number / item code for the pieces at hand.

- 4 Effective only when the unit weight is outside the near-zero range (±4 scale divisions in kg).
- 5 For the internal memory, ten closest unit weights within approx. ±5% of the weight on the scale are suggested in approximate order. For the external (MicroSD card) memory, all unit weights within approx. ±5% of the weight on the scale are suggested in order of listing in the file.

Any counting scale can let you perform counting. The GC series also tells you what you are counting.

## WinCT-Counting (freeware) for easy management of item data

Consisting of four useful modes, the WinCT-Counting software lets you perform various tasks on a PC to enable more effective and efficient use of the GC series.

#### UFC Mode

Useful for editing and sending UFC setting commands to a counting scale for customization of printout content and layout.

#### Function Mode

Useful for checking and configuring internal settings of a counting scale (enabled regardless of whether the scale is password-locked).

#### **WinCT-Counting**


#### Command Mode

Useful for sending commands to and receiving/saving data from a counting scale.

#### Memory Mode

Useful for reading/opening, creating, editing and saving a list of items and their data in either the internal or external (MicroSD card or PC) memory.

```
Files (F) Files 2222000 (F) White the Color (F) Bull conclusion (F
```

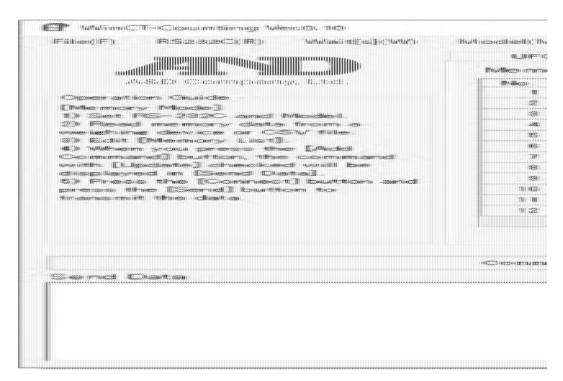


- · Configuration of internal settings in Function Mode
- · Management of item data in Memory Mode

#### Selectable power sources including mobile battery via USB cable

The GC series is equipped as standard with a USB connector and cable.

- It can be connected to either the provided AC adapter, USB port of another device, or off-the-shelf mobile battery.
- Power supply from a mobile battery is especially convenient if the scale is to be carried and used at different locations.

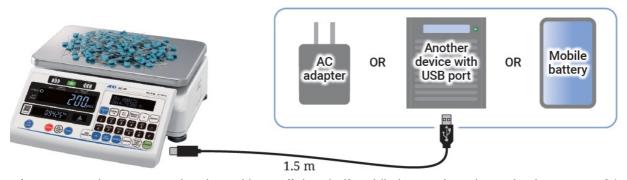

- For reference, continuous operation time with an off-the-shelf mobile battery is estimated to be approx. 24 hours for 5,000 mAh and approx. 50 hours for 10,000 mAh with comparator lights off and no other external device connected to the scale.
  - 6 Type-C on the scale side and Type-A on the other side. Data communication is not supported.
  - 7 Operation is not guaranteed with other AC adapters, USB ports of all devices, or all mobile batteries.

## RS-232C interface that supports digital connection with an A&D balance/scale

The GC series is also equipped as standard with an RS-232C (D-Sub 9-pin) interface so that bi-directional serial communication (i.e. sending data and receiving commands) with an external device such as a printer or PLC can be made. Moreover, an A&D balance/scale can also be connected via the RS-232C interface,\*8 which allows a high-precision balance to be used to set a minute unit weight, or a large-capacity/platform scale to be used to count the target item of a large quantity.



Example of connecting an A&D analytical balance (GX-324AE) to the GC series

• 8 A crossover RS-232C cable is required (AX-KO1371-200 is available from A&D). The RS-232C (D-Sub 9-pin) interface of the AD-8561 series described below cannot be used for this purpose.

#### Expanded scope of application using the AD-8561 series of Multi-Interfaces (sold separately)

With one of the following Multi-Interface options (connected to the RS-232C interface of the scale), multiple different devices can be used with the GC series. All of these options have one RS-232C (D-Sub 9-pin) interface and one USB (Type-A) interface, in addition to one interface specific to each model, as shown in the table below.



Model		Equipped with	Intended for	
AD-8561	Common	RS-232C (D-sub 9-pin) × 1	Printer/PC (bi-directional)	
		USB (Type-A) × 1	Barcode scanner/keyboard input	
	-MI02	USB (Type-micro B) × 1	PC (bi-directional)	
	-MI04	Terminal (4-pin) block × 1	Comparator relay output	
	-MI05	Terminal (7-pin) block × 1	External scale (load cell) input	



How the AD-8561-MI02 can be used to connect a barcode scanner, printer, and PC to the GC series



Model	Capacity	Size	
SB-15K10	15 kg	250 × 250 mm	
SB-60K11	60 kg	330 × 424 mm	
SB-100K12	100 kg	- 390 × 530 mm	
SB-200K12	220 kg		
FW-300KB4	300 kg	- 700× 600 mm	
FW-600KB4	600 kg		
FW-600KB3	ooo kg	1000 × 1000 mm	
FW-1200KB3	1200 kg		

#### External scales available from A&D

- How the AD-8561-MI05 can be used for analog connection with an external scale (load cell)
- If you prefer not to leave the connected Multi-Interface and cable loose, optional brackets (GC-14) can fasten them securely to the scale.



The AD-8561-MI02 and cable fastened to the scale by the GC-14

Discover increase in value through connectivity and augmentation with various other devices.

## Other useful features

• Comparator function with highly-visible LED traffic lights and buzzer for intuitive, error-free check counting/weighing



## LED traffic lights

- Automatic Counting Accuracy Improvement (ACAI), which automatically optimizes the accuracy of the unit weight while counting
- Accumulation (M+) function to determine the total count and the number of additions (i.e. counts performed)

from separate counting results

- Stabilization of approx. 1 second (typical)\*9 for high-speed counting/weighing
- Universal Flexi Coms (UFC), by which you can customize printout content and layout for barcode label printing as well as dump printing
- Password lock function to prevent operators from making unauthorized changes to the scale settings
- Key lock function that helps avoid unnecessary/incorrect operations of the scale as well as accidental changes to or deletion of stored data
- External input terminal that allows up to two commands to be entered using an external switch or other device\*10
  - 9 By default settings, the stabilization time is approx. 1.6 seconds.
  - 10 A 3.5 mm stereo plug (NYS231B from REAN or equivalent) is required.

## Specifications

Capacity		3 kg	6 kg	15 kg	30 kg		
Readability		0.0005 kg	0.001 kg	0.002 kg	0.005 kg		
Units of measure		kg (kilogram), g (gram), lb (pound), oz (ounce), ozt (troy ounce), and pcs (pieces)					
Number of samples		5, 10, 25, 50, 100, or an arbitrary number of pieces					
Minimum unit weight*		0.1 g / 0.005 g	0.2 g / 0.01 g	0.4 g / 0.02 g	1 g / 0.05 g		
Repeatability (std. de viation)		0.0005 kg	0.001 kg	0.002 kg	0.005 kg		
Linearity		±0.0005 kg	±0.001 kg	±0.002 kg	±0.005 kg		
Stabilization time		Approx. 1 sec.*ii					
Sensitivity drift		±20 ppm / °C (5 to 35 °C / 41 to 95 °F)					
Operating environme nt		0 °C to 40 °C / 32 °F to 104 °F, 85% R.H. or less (no condensation)					
Display	Count	7-segment reverse-backlit LCD (character height: 22 mm)					
	Weight	7-segment reverse-backlit LCD (character height: 12.5 mm)					
	Unit weig	5 × 7 dot reverse-backlit LCD (character height: 6.7 mm)					
	Informati on	128 × 64 dot OLED					
Display refresh rate		Approx. 10 times / second (for the count and weight displays)					
Standard interface		RS-232C (D-Sub 9-pin), MicroSD card*iii slot, External input terminal					
Power supply		AC adapter (provided as standard), USB port of another device, or off-the-shelf mobil e battery*iv via USB cable (Type-A to Type-C, 1.5 m)					
Weighing pan size		300 × 210 mm / 11.81 × 8.27 in					
Dimensions (W × D × H)		315 × 355 × 121 mm / 12.4 × 13.98 × 4.76 in					
Weight (approx.)		4.9 kg / 10.8 lb					
Materials		Display unit: ABS + polyester film, Base unit: Die cast aluminum + ABS, Weighing pa n: SUS430					

## **Options**

• GC-08: Extension cable (2 m)

• GC-14: Brackets for AD-8561 and cable


## **Accessories**

• AD-8561-MI02: Multi-Interface incl. USB (Type-micro B)

• AD-8561-MI04: Multi-Interface incl. Terminal (4-pin) block

- AD-8561-MI05: Multi-Interface incl. Terminal (7-pin) block
- AD-8561-11: Terminal block cover\*v
- AX-KO1371-200: Crossover RS-232C cable (2 m)
- AX-KO7215-150: USB cable for power supply (1.5 m)\*vi
  - v Provided as standard for the AD-8561-MI05 and can also be used for the AD-8561-MI04
  - vi Provided as standard for the GC series

## **Dimensions (mm/inches)**

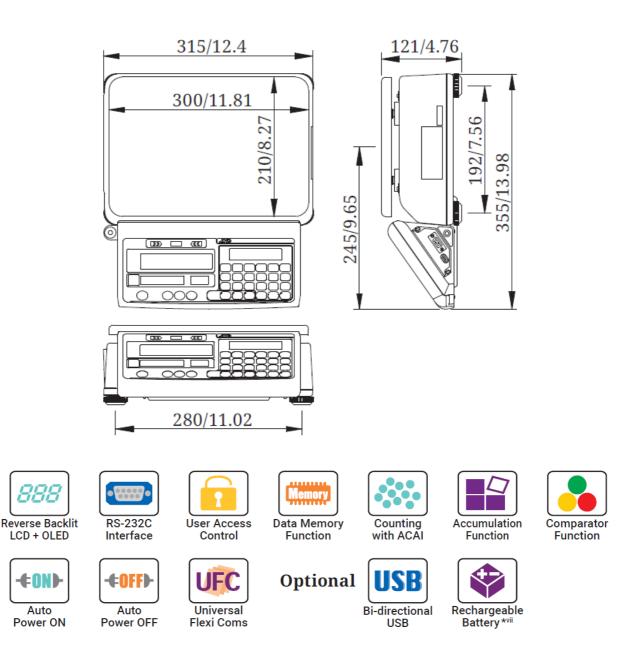

## **Discover Precision**

Auto

• A&D Company, Ltd. (JAPAN)

• URL: aandd.jp

• A&D Engineering, Inc. (USA)

• URL: andonline.com

• A&D Australasia Pty Ltd. (Australia)

• URL: andaustralasia.com.au

### A&D Instruments Ltd. (United Kingdom)

• URL: andprecision.com

<German Sales Office>

• URL: andprecision.com

• A&D Korea Ltd. (South Korea)

• URL: andk.co.kr

• A&D Rus Co., Ltd. (Russia)

• URL: and-rus.ru

• A&D Instruments India (P) Ltd. (India)

• URL: aanddindia.in

A&D Scientech Taiwan Ltd. (Taiwan)

• URL: aandd.com.tw

• A&D Instruments Thailand Ltd. (Thailand)

• URL: thai.andprecision.com

#### **Documents / Resources**



AND GC Series Counting Scales [pdf] User Manual GC Series Counting Scales, GC Series, Counting Scales, Scales

#### References

- 🛇 A&D
- 🛇 A&D
- A A&D Company, Limited
- A A&D Instruments India Discover Precision
- 🛇 A&D
- SA&D
- A AND Australasia
- AND Australasia
- ABD Technology that connects the analog and digital world
- A&D Instruments UK 

   A&D Instruments UK 

   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instruments UK 
   A&D Instrument
- \*\* Home A&D Instruments Thailand Limited
- A A&D Company, Limited
- A A&D Instruments India Discover Precision
- A&D Technology that connects the analog and digital world
- AD Instruments UK
- AD Home A&D Instruments Thailand Limited

## • A A&D Company, Limited

Manuals+,