

## KCO L1145-G

# KCO Lighting Green Glass Pendant Light (Model L1145-G) Instruction Manual

Model: L1145-G

## 1. PRODUCT OVERVIEW

The KCO Lighting Green Glass Pendant Light is a modern lighting fixture designed for indoor use. It features a green glass lampshade and brushed gold metal components, offering an elegant and contemporary aesthetic. The fixture includes an adjustable cord for versatile hanging positions and is compatible with various ceiling types.

This pendant light is designed to accommodate an E26 base bulb (included) and operates on 110-240V. While the fixture itself is not dimmable, it can be used with a dimmable E26 bulb and a compatible dimmable switch for adjustable light intensity.

## 2. SAFETY INFORMATION

**WARNING:** To reduce the risk of fire, electric shock, or personal injury, always follow these safety precautions:

- Always turn off the power at the main circuit breaker or fuse box before beginning installation or performing any maintenance.
- Consult a qualified electrician if you are unsure about the installation process.
- Ensure all electrical connections are made in accordance with local codes, ordinances, and the National Electric Code (NEC).
- Do not install this fixture in wet or damp locations. It is designed for indoor use only.
- Use only E26 base bulbs with a maximum wattage of 40W (or as specified on the fixture label).
- Do not exceed the recommended wattage to prevent overheating and potential fire hazards.
- Handle glass components with care to avoid breakage.
- Keep flammable materials away from the light fixture when in operation.

## 3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation. If any parts are missing or damaged, contact KCO Lighting customer service.

- Green Glass Lampshade
- Brushed Gold Metal Lamp Body / Socket Assembly
- Adjustable Cord
- Gold Metal Canopy with Sloped Ceiling Adapter
- Mounting Hardware (screws, wire nuts, etc.)
- E26 Bulb

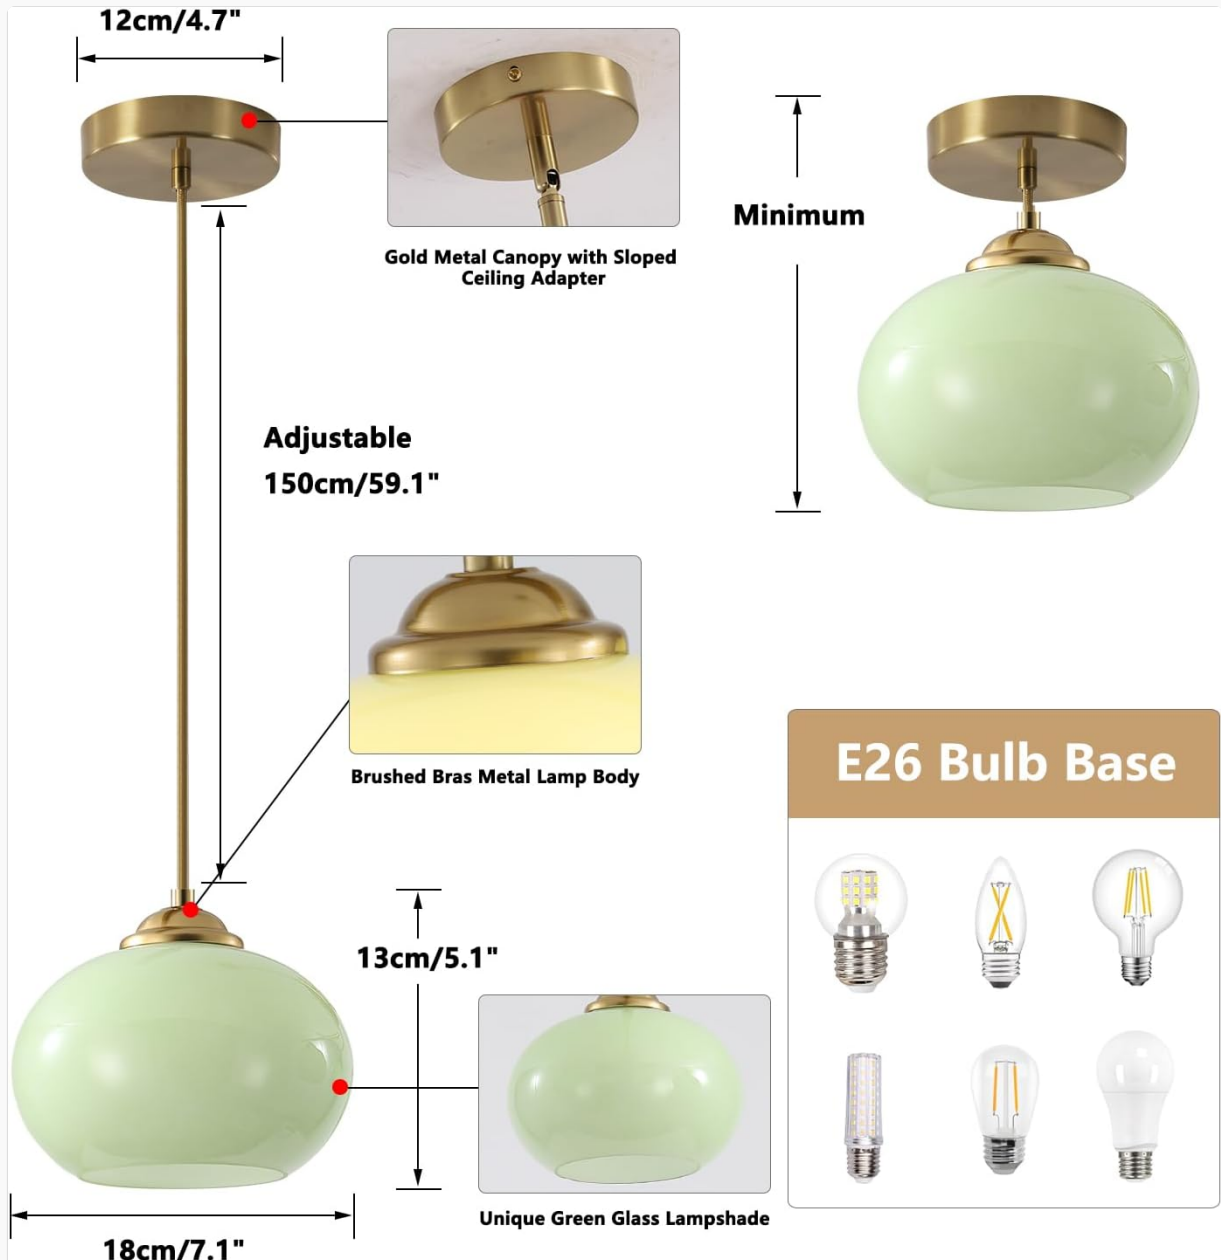


Figure 1: Exploded view of the pendant light components and dimensions.

#### 4. SPECIFICATIONS

Feature	Specification
Brand	KCO

Model Number	L1145-G
Color	Green (Shade)
Material	Glass, Metal
Light Fixture Form	Pendant
Indoor/Outdoor Usage	Indoor
Power Source	Corded Electric
Voltage	110-240 Volts
Light Source	LED (Bulb Included)
Number of Light Sources	1
Wattage	Max 40 watts
Bulb Base	E26
Adjustable Cord Length	Up to 59.1 inches (150cm)
Shade Dimensions (L x W x H)	7.1"L x 7.1"W x 5.1"H (18cm x 18cm x 13cm)
Canopy Diameter	4.7" (12cm)
Mounting Type	Ceiling Mount (Semi Flush Mount)
Water Resistance Level	Not Water Resistant

## 5. SETUP AND INSTALLATION

**Before you begin:** Ensure the power is turned off at the circuit breaker. It is recommended to have two people for installation.

### Step 1: Prepare the Mounting Location

Locate the existing electrical box in your ceiling. Ensure it is securely mounted and capable of supporting the weight of the fixture. If replacing an old fixture, carefully remove it and disconnect the wiring.

### Step 2: Install the Mounting Bracket

Attach the mounting bracket (usually pre-attached to the canopy) to the electrical box using the provided screws. Ensure it is flush and stable.

### Step 3: Adjust Cord Length

Determine the desired hanging height for your pendant light. The cord is adjustable up to 59.1 inches (150cm). To adjust, push the cord up into the canopy or pull it down from the canopy until the desired length is achieved. Secure the cord in place within the canopy's strain relief mechanism.

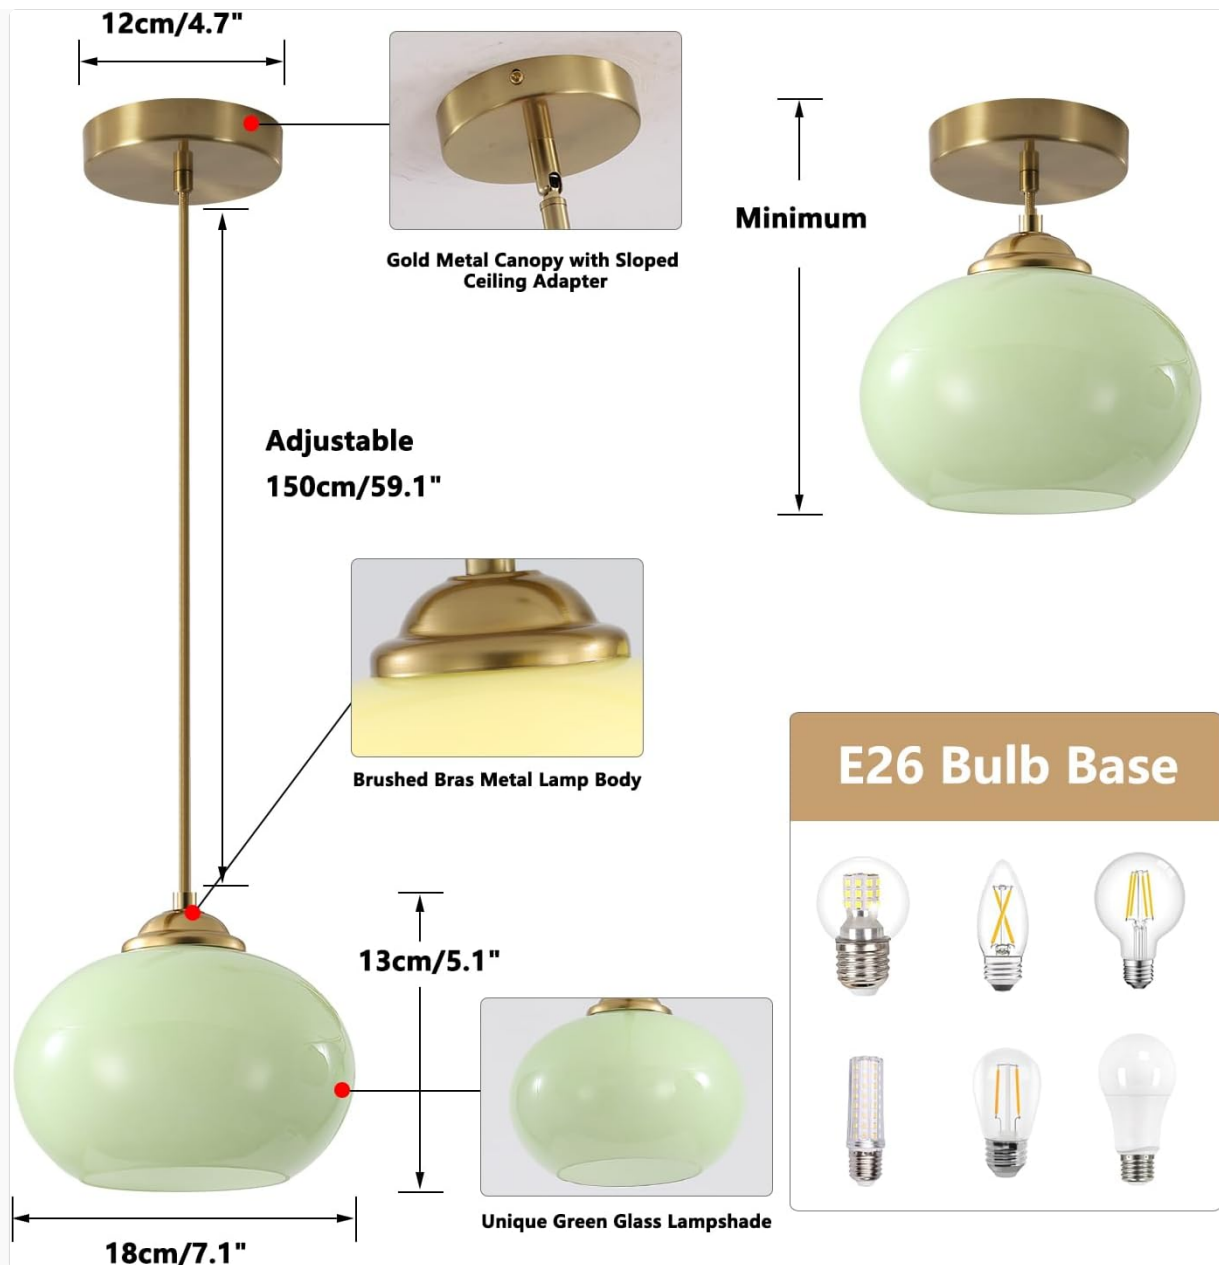


Figure 2: Adjustable cord and overall dimensions.

#### Step 4: Wire the Fixture

Connect the fixture's wires to the corresponding wires from the electrical box using the provided wire nuts:

- Connect the **black** wire (hot) from the fixture to the **black** wire (hot) from the electrical box.
- Connect the **white** wire (neutral) from the fixture to the **white** wire (neutral) from the electrical box.
- Connect the **ground** wire (bare copper or green) from the fixture to the **ground** wire from the electrical box.

Ensure all connections are secure and no bare wire is exposed. Carefully tuck the wires into the electrical box.

#### Step 5: Mount the Canopy

Align the canopy with the mounting bracket and secure it to the ceiling using the canopy screws or nuts. Ensure the canopy is flush against the ceiling.

#### Step 6: Install the Bulb and Glass Shade

Screw the provided E26 bulb into the lamp socket. Carefully attach the green glass lampshade to the lamp body, ensuring it is securely fastened according to the fixture's design (typically by screwing it onto the

socket assembly or using retaining rings).



**PENDANT LIGHT**



**CEILING LIGHT**

Figure 3: Example of the pendant light installed as a ceiling light.



Figure 4: Example of multiple pendant lights installed above a kitchen island.

## 6. OPERATING INSTRUCTIONS

Once installation is complete and verified, restore power at the circuit breaker. The light can be operated using a standard wall switch. If you are using a dimmable E26 bulb and a compatible dimmable wall switch, you can adjust the light intensity as desired.



Figure 5: The pendant light demonstrating various light temperatures (bulb dependent).

**Note:** The fixture itself is not dimmable. Dimmable functionality depends on the bulb and switch used.

## 7. MAINTENANCE

### Cleaning

To clean the fixture, ensure the power is turned off and the light has cooled down. Wipe the metal parts with a soft, dry cloth. For the glass shade, use a soft cloth dampened with a mild glass cleaner. Avoid abrasive cleaners or solvents that could damage the finish.

### Bulb Replacement

Before replacing the bulb, turn off the power at the circuit breaker and allow the bulb to cool. Carefully unscrew the old E26 bulb and replace it with a new E26 base bulb, ensuring it does not exceed the maximum wattage of 40W. Hand-tighten the bulb gently.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Light does not turn on	<ul style="list-style-type: none"> <li>Power is off at the circuit breaker.</li> <li>Loose wire connections.</li> <li>Faulty bulb.</li> <li>Faulty wall switch.</li> </ul>	<ul style="list-style-type: none"> <li>Check the circuit breaker and ensure it is ON.</li> <li>Turn off power, check all wire connections.</li> <li>Replace the bulb with a new one.</li> <li>Test the switch or consult an electrician.</li> </ul>
Light flickers	<ul style="list-style-type: none"> <li>Loose bulb.</li> <li>Incorrect bulb type for dimmer (if applicable).</li> <li>Loose wire connections.</li> </ul>	<ul style="list-style-type: none"> <li>Tighten the bulb.</li> <li>Ensure dimmable bulbs are used with dimmable switches.</li> <li>Turn off power, check all wire connections.</li> </ul>
Glass shade is cracked or damaged	<ul style="list-style-type: none"> <li>Shipping damage or accidental impact.</li> </ul>	<ul style="list-style-type: none"> <li>Contact KCO Lighting customer service for a replacement.</li> </ul>

## 9. WARRANTY AND SUPPORT

KCO Lighting offers a **3-year warranty** on this product. This warranty covers manufacturing defects and ensures free replacement for broken, damaged, or cracked glass lampshades, or missing parts.

For any issues, questions, or to request replacement parts, please contact KCO Lighting customer service. You can typically reach them via the order number on the platform where you purchased the product. They aim to provide a solution within 24 hours.

**Contact Information:** Refer to your purchase platform or the KCO Lighting official website for specific contact details.

## 10. PRODUCT VIDEO

Watch this official product video for a visual guide on the KCO Lighting Green Glass Pendant Light.

Your browser does not support the video tag.

Video: KCO Lighting Small Vintage Green Glass Pendant Light. This video showcases the product details, including the brushed brass metal lamp body and green glass lampshade, and provides examples of its application in kitchen and dining areas.