

CS TECHNOLOGIES 6 Channels Standalone Wireless RF Receiver Instructions

<u>Home</u> » <u>CS TECHNOLOGIES</u> » CS TECHNOLOGIES 6 Channels Standalone Wireless RF Receiver Instructions



Contents

- 1 CS TECHNOLOGIES 6 Channels Standalone Wireless RF Receiver
- 2 Installation
- 3 Specification
- 4 Warranty
- 5 Documents / Resources
 - **5.1 References**
- **6 Related Posts**

CS TECHNOLOGY

CS TECHNOLOGIES 6 Channels Standalone Wireless RF Receiver




Product Overview



The CS Technologies 6-channel receiver is a multi-purpose 6 channel RF receiver. Six single pole triple throw (SPTT) outputs are available for connection to control external devices. The receiver is designed for use with keyfobs of 6 channels or less. Each channel is individually programmable through onboard dip switches to one of 3 operational modes of relay outputs (momentary, latching and timed for 5 seconds). Our receivers use KEELOQ® Code Hopping technology for secure RF transmission.

Installation

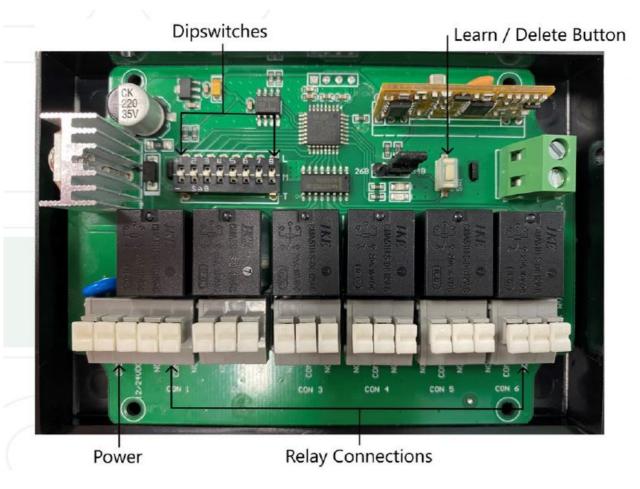

For best performance the receiver should not be installed on or next to a metallic surface. If the receiving distance is poor or you get interference from other devices you may improve this by relocating the receiver to another location.

Note: To use channels 5 and 6 with the CS Technologies keyfob you need to press 1 and 2 for channel 5, 3 and 4 for 6. If you have a two button keyfob pressing 1 and 2 will still trigger 5.

Keyfob Learning

This receiver employs code learning technology and makes the learning process a simple task. Each receiver can learn up to 240 keyfobs.

- 1. We recommend when setting up the receiver for the first time to clear the memory of the EEPROM. This is done by pressing and holding the Learn / Delete button for 5 seconds. The LED on the board will flash twice and then go out to indicate the EEPROM memory is now empty.
- 2. To learn a new keyfob into the memory press the Learn / Delete button once. The LED will light to indicate it is in learning state.
- 3. A keyfob is learned by the receiver by pressing any button on the fob once. The LED will flash to indicate successful learning. Each channel on the receiver will learn a different button on your keyfob with a maximum

- of 6 Channels available depending on your keyfob.
- 4. Additional keyfobs can be continuously learned to the receiver by pressing the button of the keyfob while in the learning mode. To exit learning mode, press the Learn / Delete button once. Alternatively, the receiver will automatically exit learning mode if no further programming action is taken after 5 seconds.

Deletion of Keyfobs

Press and hold the Learn / Delete button for 5 seconds. The LED will flash twice and go out to indicate successful removal of previous learned keyfobs from the EEPROM memory. It is not possible to delete individual keyfobs.

Relay Setting

There is a 6-way single pole triple throw (SPTT) DIP switch (each channel with relay output) on the receiver. Each of the relays can be set individually to any of the 3 different operational modes by setting the position of the DIP switch as follows.

- 1. Position (+) Latching Mode: Each transmission from the keyfob will change the On or Off status of the relay.
- 2. Position (0) Momentary Mode: The relay output is continuously on while a RF transmission is received (the pressing on the button of keyfob).
- 3. Position () Fixed Time (5 seconds) Mode: The relay output will be on for 5 seconds.

Specification

Operating Voltage	10 to 26 VDC
Current Consumption @ 10 V DC	Standby 55 mA, All relays 230 mA
Current Consumption @ 12 V DC	Standby 70 mA, All relays 290 mA
Current Consumption @ 26 V DC	Standby 170 mA, All relays 460 mA
Dimensions	110L x 75W x 31H (mm)
Case Materials	ABS Plastic
Output Channels	6 channels; each can be selected individually with output in any one of 3 modes latching, momentary or timed (5 seconds)
Reverse Polarity Prote ction	Yes (Diode)
RF Operating Frequen cy	433.92 MHz
RF Signal type	KEELOQ® Code Hopping, On Off Keying (OOK)
Coding Combination	Over 4 billion Learning
Capacity (RF devices)	240 keyfobs or transmitters
RF working distance	100 meter open air, 30 meter typical urban environment.

Warranty

CS Technologies warrants that the product to be free from defects in materials and workmanship for a period of 1 year from date of purchase. In the event of failure, the manufacturer will repair or replace the product at its sole discretion. It will not be responsible for any loss or damages in association with use of its products. This warranty does not apply in the event of accidental damage, improper use, abuse, misuse, non-approved purpose, or act of God.

Documents / Resources



<u>CS TECHNOLOGIES 6 Channels Standalone Wireless RF Receiver</u> [pdf] Instructions 6 Channels Standalone Wireless RF Receiver, Standalone Wireless RF Receiver

References

O CS Technologies Australia | Access Control Solutions

Manuals+,