


ELECROW 5MP Raspberry Pi Camera Module User Manual

[Home](#) » [ELECROW](#) » ELECROW 5MP Raspberry Pi Camera Module User Manual 

ELECROW 5MP Raspberry Pi Camera Module User Manual

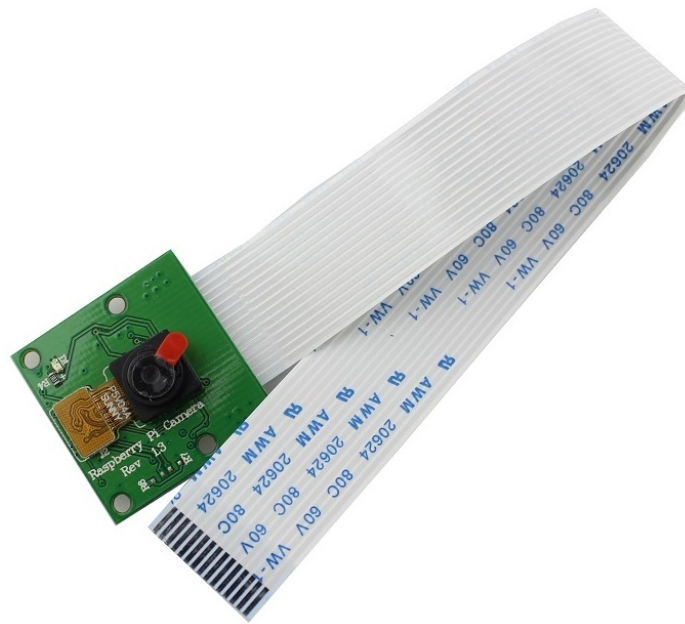

Contents

- [1 Basic operations](#)
- [2 Camera module setup](#)
- [3 Reference](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Basic operations

1. Please download Raspbian OS from <http://www.raspberrypi.org/>
2. Format your TF card with the SDFormatter.exe.

Notices: The capability of TF card in used here should be more than 4GB. In this operation, a TF card reader is also required, which has to be purchased separately.

3. Start the Win32DiskImager.exe, and select the system image file copied into your PC, then, click the button **Write** to program the system image file.

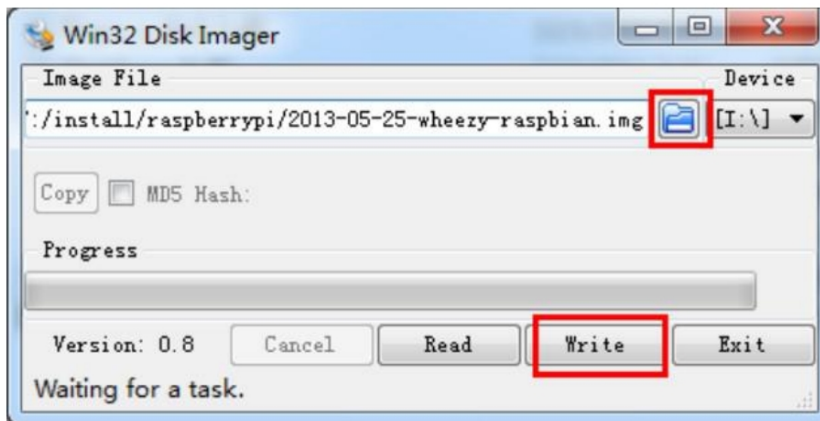


Figure 1: Programming the system image file with Win32DiskImager.exe

Camera module setup

CONNECTING THE CAMERA

The flex cable inserts into the connector situated between the Ethernet and HDMI ports, with the silver connectors facing the HDMI port. The flex cable connector should be opened by pulling the tabs on the top of the connector upwards then towards the Ethernet port. The flex cable should be inserted firmly into the connector, with care taken not to bend the flex at too acute an angle. The top part of the connector should then be pushed towards the HDMI connector and down, while the flex cable is held in place.

ENABLING THE CAMERA

1. Update and upgrade Raspbian from the Terminal:

apt-get update

apt-get upgrade

2. Open the raspi-config tool from the Terminal:

sudo raspi-config

3. Select Enable camera and hit Enter, then go to Finish and you'll be prompted to reboot.



Figure 2: Enable camera

USING THE CAMERA

Power up and take photos or shoot videos from the Terminal:

1. Taking photos:

`raspistill -o image.jpg`

2. Shooting videos:

`raspivid -o video.h264 -t 10000`

-t 10000 means the video last 10s, changeable.

Reference

Libraries for using the camera are available in:

Shell (Linux command line)

Python

More information:


<http://www.raspberrypi.org/camera>

<https://www.raspberrypi.com/documentation/accessories/camera.html>

Documents / Resources

	<p>ELECROW 5MP Raspberry Pi Camera Module [pdf] User Manual 5MP Raspberry Pi Camera Module, Raspberry Pi Camera Module, Pi Camera Module, Camera Module</p>
--	---

References

-  [Teach, learn, and make with the Raspberry Pi Foundation](#)
-  raspberrypi.org/camera