



GE APPLIANCES GGS500SV 30 Inch Slide In Front Control Gas Range with Crisp Mode Instruction Manual

[Home](#) » [GE Appliances](#) » GE APPLIANCES GGS500SV 30 Inch Slide In Front Control Gas Range with Crisp Mode Instruction Manual 

Contents

- [1 GE APPLIANCES GGS500SV 30 Inch Slide In Front Control Gas Range with Crisp Mode I](#)
- [2 Features and Benefits](#)
- [3 Fit Guarantee](#)
- [4 Dimensions and Installation Information \(in inches\)](#)
- [5 FAQ](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



GE APPLIANCES GGS500SV 30 Inch Slide In Front Control Gas Range with Crisp Mode I



Product Specifications

- Model: GGS500SV
- Electrical Rating: 120V, 60Hz, 13A
- Breaker Size: 15A

®GGS500SV

GE 500 Series 30" Slide-in Gas Range

Features and Benefits

- Slide-In Range – Easily upgrade your kitchen with this new slide-in range that is guaranteed to fit into your existing space.
- Crisp Mode – Crisp Mode uses the bake and broil elements to deliver air fry-like results. Perfect for your favorite air-fried foods, this mode uses a preheat to get to temperature, then delivers fantastic crispy results.
- Express Preheat – Get food on the table quicker thanks to a fast preheat oven. In just 7 minutes*, you have a perfectly preheated oven.*Preheats oven in just 7 minutes, bake mode to preheat beep, 350 degrees, one standard rack.
- 5-Burner Gas – Five powerful gas burners make for an efficient cooking experience on this expansive and flexible cooktop.
- 15,000 BTU Power Boil™ Burner – Boil water faster with a 15,000 BTU Power Boil™ element that delivers high heat for quick boiling.
- Extra-Large Integrated Griddle – With an integrated griddle that is 20% larger than leading competition, you can cook up to six grilled cheeses at once.
- Edge-to-Edge Cooktop – A large cooking surface gives you extra room for pots and pans of all sizes and lets

cookware move easily from burner to burner.

- Center Oval Burner – Custom cookware and griddles easily fit on this powerful fifth central oval burner that offers a flexible cooking solution.
- Precise Simmer Burner – Prepare your delicate dishes over the low, even heat of this precise simmer burner.
- Steam Clean – Save time and effort by steam cleaning the oven after use without the need for special water, kits or extra steps thanks to this simple steam clean oven function.
- Heavy-Duty, Dishwasher-Safe Grates – Enjoy a safe and easy-to-clean solution thanks to these heavy-duty, dishwasher-safe grates.
- Oven Storage Drawer – This model features a removable oven storage drawer that offers the perfect place to store cookware and other kitchen accessories.
- Large Capacity Oven – Cook an entire meal at once with room to spare in this oven with 5.3 cubic foot capacity.
- In-Oven Broil – This oven with full coverage broil element means hassle-free meal preparation with simple, in-oven broiling.
- Model GGS500SVSS – Stainless Steel


Fit Guarantee

Replace your old 30" free-standing range with a new 30" slide-in model. GE slide-in ranges are guaranteed for an exact fit or GE Appliances will pay up to \$300 toward modifications.

Visit geappliances.com for more info.

Dimensions and Installation Information (in inches)

- Provide adequate clearances between the range and adjacent combustible surfaces. These dimensions must be met for safe use of your range.
- Allow 30" (76.2 cm) minimum clearance between burners and bottom of unprotected wood or metal cabinet, or allow a 24" (61 cm) minimum when bottom of wood or metal cabinet is protected by no less than 1/4" (6.4 mm) thick flame-retardant millboard covered with no less than No. 28 MSG sheet metal (.015" [.38mm] thick), .015" (.38 mm) thick stainless steel, .025" (0.64 mm) aluminum or .020" (0.5 mm) copper.
- Installation of a listed microwave oven or cooking appliance over the cooktop shall conform to the installation instructions packed with that appliance.
- For island installation, maintain 2-1/2" minimum from cutout to back edge of countertop and 3" minimum from cutout to side edges of countertop.
- **Note:** Door handle protrudes 3" from door face. Cabinets and drawers on adjacent 45° and 90° walls should be placed to avoid interference with the handle.

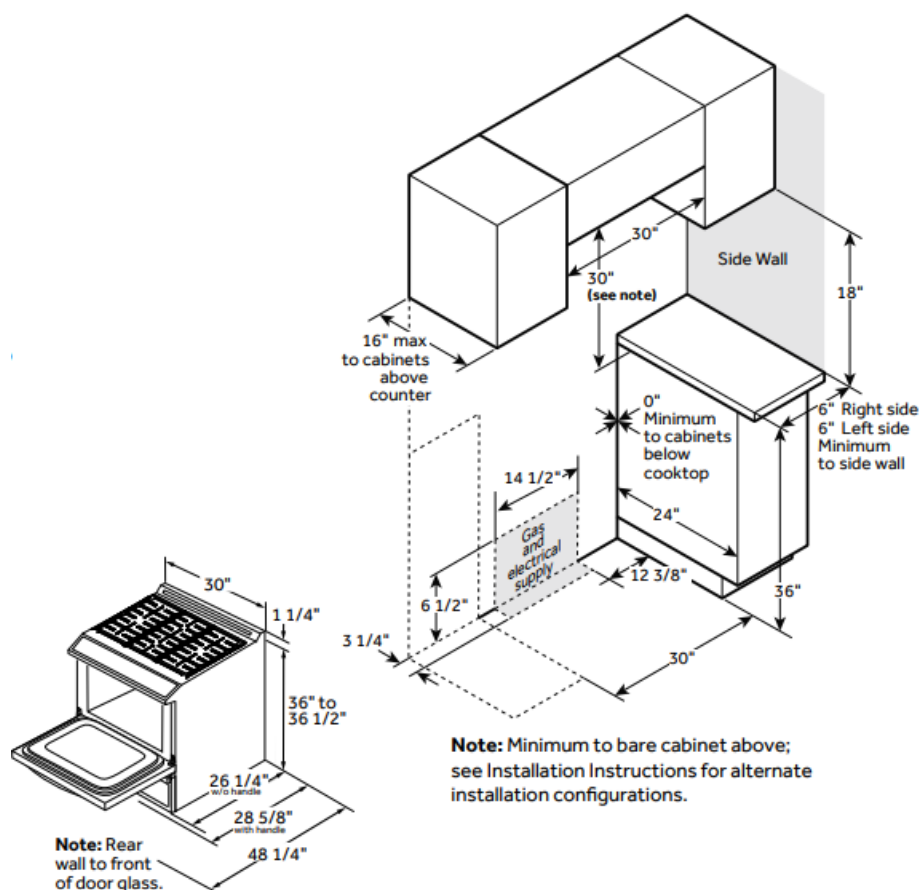

Note: Cabinets installed adjacent to slide-in ranges must have an adhesion spec of at least 194° F (90° C) temperature rating.

Before installing, consult installation instructions packed with product for current dimensional data. For all installations, install the required rear trim to back of range with 4 screws provided.

- Electrical Rating: 120V, 60Hz, 13A
- Breaker Size: 15A

For answers to your Monogram, Café™, GE Profile™ or GE Appliances product questions, visit our website at geappliances.com or call GE Answer Center® Service, 800.626.2000.

All GE Appliances ranges are equipped with an Anti-Tip device. The installation of this device is an important, required step in the installation of the range.

FAQ


• Q: What should I do if my range does not fit properly?

A: If you encounter fitting issues, refer to GE Appliances' Fit Guarantee. You may be eligible for up to \$300 toward modifications for an exact fit with a new GE slide-in model. Visit geappliances.com for more information.

• Q: Is there a safety feature included with GE Appliances ranges?

A: Yes, all GE Appliances ranges are equipped with an Anti-Tip device. It is essential to install this device as part of the range installation process to ensure safety.

Documents / Resources

	<p>GE APPLIANCES GGS500SV 30 Inch Slide In Front Control Gas Range with Crisp Mode [pdf] Instruction Manual</p> <p>GGS500SV, GGS500SV 30 Inch Slide In Front Control Gas Range with Crisp Mode, 30 Inch Slide In Front Control Gas Range with Crisp Mode, Slide In Front Control Gas Range with Crisp Mode, Front Control Gas Range with Crisp Mode, Gas Range with Crisp Mode</p>
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.