

iLOQ S50 P55S.1 Programming Key User Guide

Home » iLOQ » iLOQ S50 P55S.1 Programming Key User Guide 🖺



Contents

- 1 iLOQ S50 P55S.1 Programming Key
- 2 Product Usage Instructions
- 3 Safety Information
- **4 Products**
- **5 Care and Maintenance**
- 6 Before use
- 7 Operating instructions of the P55S.1 Programming Key
- **8 Accessories**
- 9 Disposal of Decommissioned Products
- 10 Compliance
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts



iLOQ S50 P55S.1 Programming Key



iLOQ S50 P55S.1 Programming Key User Guide

| Product | Description |
|---|--|
| iLOQ A00.18 Desktop Programming Adapte r | Adapter for connecting a PC and an A00.17 Programming Cable to the P55S.1 Programming Key. |
| iLOQ P55S.1 Programming Key | Programming key used with the iLOQ Manager software for transferring programming tasks. |
| iLOQ A00.17 Programming Cable | Cable used for programming key operated locks when connected to the adapter PROG port. |
| iLOQ A00.20 Handheld Programming Adapt er | Handheld adapter for programming iLOQ products. |

Product Usage Instructions

Before use:

To ensure correct operation, charge the P55S.1 Programming Key before first use.

Operating instructions of the P55S.1 Programming Key:

The P55S.1 Programming Key is used with the iLOQ Manager software. All programming tasks are prepared in the Manager and then transferred to the P55S.1 Programming Key via USB.

Connecting the P55S.1 Programming Key to the A00.18 Desktop Programming Adapter:

1. Connect the P55S.1 Programming Key to the custom USB cable inside the adapter. Note: This cable is a custom-made cable and cannot be replaced with a standard USB Micro-B cable, if broken.

Programming with the A00.18 Desktop Programming Adapter connected to a PC:

- 1. Connect a computer to the adapter PC port with a standard USB Micro-B cable.
- 2. If you need to program key operated locks, connect the A00.17 Programming cable to the adapter PROG port.
- 3. Execute the programming tasks from the iLOQ Manager to transfer them to the P55S.1 Programming Key.
- 4. When programming K5S Key operated locks, use the A00.17 Programming cable. When programming other iLOQ products, use the programming area of the A00.18 Programming Adapter.

Safety Information


Safety signs

| Sign | Description |
|------|---|
| 0 | General notice sign. Indicates particularly important information about the installation and deployment. |
| | Read these instructions carefully before using products. This information is to ensure your safety and the long lifetime of the products. |

Warnings

| Sign | Description |
|----------|---|
| <u>^</u> | Warning! K55S / P55S.1 contains a non-replaceable rechargeable battery. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery can result in an explosion. |
| <u>^</u> | Warning! Leaving a battery in an extremely high temperature environment can result in an explosion or the leakage of flammable liquid or gas. |
| <u>^</u> | Warning! A battery subjected to extremely low air pressure may result in an explosio n or the leakage of flammable liquid or gas. |

Products

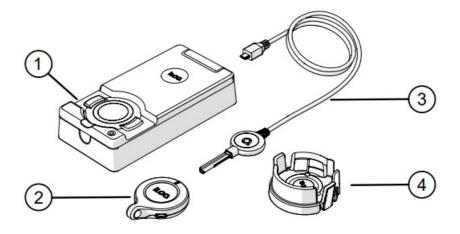

- 1. iLOQ A00.18 Desktop Programming Adapter
- 2. iLOQ P55S.1 Programming Key
- 3. iLOQ A00.17 Programming Cable
- 4. iLOQ A00.20 Handheld Programming Adapter

Care and Maintenance

- The product is designed to be maintenance-free. It does not require any regular maintenance.
- Do not use the P55S.1 Programming Key for other purposes except those mentioned in these instructions.
- Using the P55S.1 Programming Key for other purposes may damage it.
- The P55S.1 Programming Key is to be kept secure so that only an authorized person can use it.
- In case of losing the P55S.1 Programming Key, contact the administrator of the locking system.
- Maximum temperature range for use: -20 +60C
- Maximum temperature range for charging: 0 +45C
- Ingress protection rating: IP67. Keep the P55S.1 Programming Key clean and dry. If the P55S.1 Programming Key is wet or dirty, use a soft cloth for drying and cleaning.
- For more detailed technical information, see the P55S.1 Programming Key datasheet.
- The P55S.1 Programming Key is an electronic product including a Lithium-Ion rechargeable battery. Appropriate recycling as WEEE waste must be followed.
- For customer claims, technical support etc., please contact your administrator. Your administrator will contact the appropriate iLOQ partner for support.
- Recharge the P55S.1 Programming Key if operation is abnormal. During charging, the P55S.1
 Programming Key resets. If abnormal operation continues, contact locking system administrator.

Before use

To ensure correct operation, charge the P55S.1 Programming Key before first use.

Operating instructions of the P55S.1 Programming Key


The P55S.1 Programming Key is used with the iLOQ Manager software. All programming tasks are prepared in the Manager and then transferred to the P55S.1 Programming Key via USB.

Connecting the P55S.1 Programming Key to the A00.18 Desktop Programming Adapter

The A00.18 Desktop Programming Adapter allows a PC and an A00.17 Programming Cable to be connected to the P55S.1 Programming Key at the same time. This way you can transfer programming tasks to the memory of the P55S.1 Programming Key and also use the A00.17 Programming Cable without having to swap cables.


1. Connect the P55S.1 Programming Key to the custom USB cable inside the adapter.

Note: This cable is a custom-made cable and cannot be replaced with a standard USB Micro-B cable, if broken.

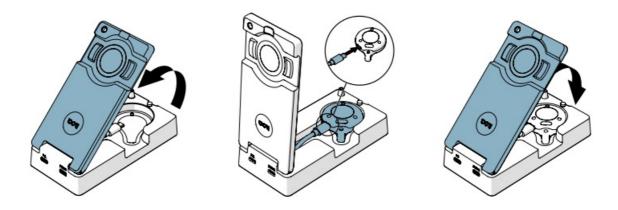


Programming with the A00.18 Desktop Programming Adapter connected to a PC


1. Connect a computer to the adapter PC port with a standard USB Micro-B cable.

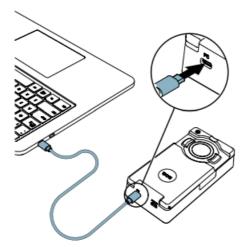

2. If you need to program key operated locks, connect the A00.17 Programming cable to the adapter PROG port.

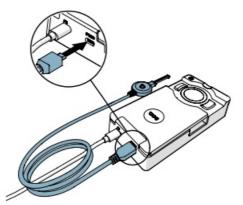


- 3. Execute the programming tasks from the iLOQ Manager to transfer them to the P55S.1 Programming Key.
- 4. When programming K5S Key operated locks, use the A00.17 Programming cable. When programming other iLOQ products, use the programming area of the A00.18 Programming Adapter.

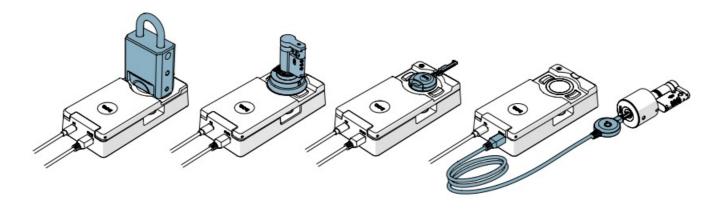


Programming without an A00.18 Desktop Programming Adapter

1. Connect the P55S.1 Programming Key directly to the USB port of a PC with a standard USB Micro-B cable.

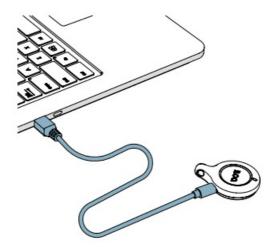


- 2. Execute the programming tasks from the iLOQ Manager to transfer them to the P55S.1 Programming Key.
- 3. Place the P55S.1 Programming Key on the product you intend to program while the PC is connected. For best performance, touch the reader antenna or K5S key bow with the bottom of the P55S.1 Programming Key as shown in the following illustration.

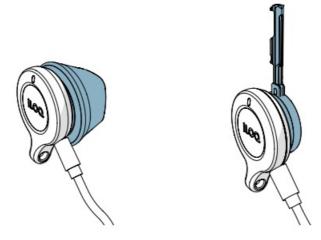


Programming offline (without a PC connection)

After transferring the tasks to the P55S.1 Programming Key, disconnect the P55S.1 Programming Key from the computer and program the intended locks and keys on-site. To program key operated locks, you need the A00.17 Adapter Cable.





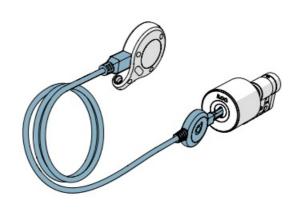

LED functions of the P55S.1 Programming Key








| Light indicators | Description |
|-----------------------------------|---|
| Amber light while programming | Programming Key communicating |
| Green light after amber | Programming completed |
| Red light after amber | Programming failed |
| Red blinks, 0,1 sec once a minute | Battery empty. Charge the battery. |
| Amber blinks, 1 sec once a minute | Battery low. Charge the battery. |


Charging the P55S.1 Programming KeyTo charge the P55S.1 Programming Key, use the USB Micro-B connector.

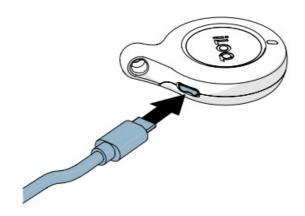

| Unit | Value |
|-----------------------------|-----------------------|
| Offic | Value |
| Voltage | • 5 V |
| • Current | • 100 mA |
| Charging time | • 3 hours |
| • Capacity | • 150 mAh |
| | |
| Light indicator | Meaning |
| Solid red light | Battery charging |
| Solid green light | Battery fully charged |

Accessories

 The A00.20 Handheld Programming Adapter can be used to help hold a P55S.1 Programming Key on round readers during programming.

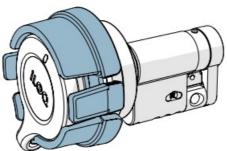

• The AK50.1-AK50.9 Color Markers can be used to personalize P55S.1 Programming Keys.

To replace the Color Marker, remove the old one with a suitable tool and replace it with a new one.



Disposal of Decommissioned Products

Never discard an electrical appliance in household waste. Follow the local laws and regulations for safe and environmentally friendly product disposal.

Before discarding products, bear in mind that most iLOQ products are reusable. All programmable products can be reset to factory settings, after which they can be reused in another system or an entirely new system.

Recycling instructions of decommissioned products are depicted below.

| Decommisioned product | Sorting |
|--|---------|
| Decommissioned iLOQ fittings, mounting accessories and thumb turn knobs can be recycled as scrap metal. | |
| Decommissioned iLOQ products containing electronics and circuit boards, such a s iLOQ Lock Cylinders, keys, net bridges, door modules, key and RFID readers, a nd relay cards, must be recycled at an electrical and electronic equipment collecti on point. | |
| iLOQ products containing batteries and accumulators, such as key fobs, program ming keys and clock circuits, should be recycled at a regional collection point for batteries and small accumulators. | |
| Most iLOQ packaging materials are suitable for cardboard and plastic recycling. | |

Compliance

The products mentioned inside this user guide are in conformity with the requirements of the directives declared on this page.

CE

SIMPLIFIED EU DECLARATION OF CONFORMITY: Hereby, iLOQ Oy declares that the radio equipment type P55S.1 Programming Keys are in compliance with

Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.ilog.com/en/declaration-of-compliance/

Communication standard: NFC 13,56 MHz Load modulation (ASK) ISO/IEC 14443A, no transmitter.

FCC

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s) and complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference.
- 2. This device must accept any interference received, including interference that may cause undesired operation of the device.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications made to this equipment not expressly approved by iLOQ Oy may void the FCC authorization to operate this equipment.

| System | Frequency | Maximum SAR |
|--------|-------------|---------------------|
| • NFC | • 13.56 MHz | • 0.03 W/kg (SAR1g) |

UKCA

Hereby, iLOQ Oy declares that the radio equipment type P55S.1 Programming Keys are in compliance with the UK relevant statutory requirements. The full text of the declaration of conformity is available at the following internet address: www.iloq.com/en/declaration-of-compliance/

iLOQ S50 P55S.1 Programming Key User Guide

iLOQ

Support.iloq.com

Elektroniikkatie 10 90590 Oulu Finland

Documents / Resources

iLOQ

E.OG 550 PSSS.1 Programming Key User Guide



<u>iLOQ S50 P55S.1 Programming Key</u> [pdf] User Guide S50 P55S.1 Programming Key, S50 P55S.1, Programming Key, Key

References

- © Support : iLOQ Support
- © Support : iLOQ Support
- Declaration of Compliance iLOQ

Declaration of Compliance - iLOQ

Manuals+,