

# intel Erasure Decoder Reference Design Instructions


Home » Intel » intel Erasure Decoder Reference Design Instructions

#### **Contents**

- 1 intel Erasure Decoder Reference Design
- 2 About the Erasure Decoder Reference Design
- 3 Features
- **4 Erasure Decoder Functional Description**
- **5 Erasure Decoder IP Core Parameters**
- 6 Avalon-ST Interfaces in DSP IP Cores
- 7 Erasure Decoder IP Core Signals
- 8 Documents / Resources
  - 8.1 References
- 9 Related Posts



# intel Erasure Decoder Reference Design

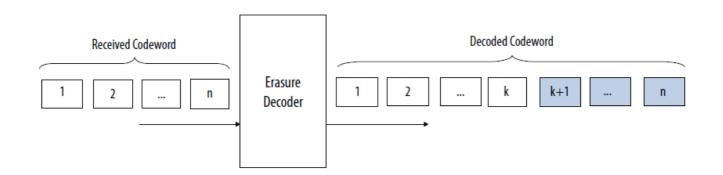

Updated for Intel® Quartus® Prime Design Suite: 17.0

**ID:** 683099

Version: 2017.05.02

**About the Erasure Decoder Reference Design** 


- The Erasure Decoder is a particular type of Reed-Solomon decoder that uses a nonbinary, cyclic, linear block error correction code.
- In a Reed-Solomon decoder with erasure decoding capability, the number of errors (E) and erasures (E') that
  you can correct is: n k = 2E + E'
- Where n is the block length and k is the message length (n-k equals the number of parity symbols).
- The Erasure Decoder only considers erasures, so the correction capability can reach the maximum given by n-k. The decoder receives as input the erasure locations, typically provided by the demodulator within the coding system, which can indicate certain received code symbols as unreliable. The design should not not exceed the erasure correction capability. The design treats symbols that it indicates as erasure as zero value.

## **Features**

- Targets Stratix® 10 devices
- · Corrects erasures
- Parallel operation
- Flow control

# **Erasure Decoder Functional Description**

- The Erasure Decoder does not correct errors, only erasures. It avoids the complexity of finding error locations, which Reed-Solomon decoding requires.
- The design algorithm and architecture is different than a Reed-Solomon decoder. Erasure decoding is a form of encoding. It tries to fill up the input with p=n-k symbols to form a valid codeword, by fulfilling the parity equations. The parity matrix and the generator matrix define the parity equations.
- The design only works with small Reed-Solomon codes, such as RS(14,10), RS(16,12), RS(12,8) or RS(10,6). For a small number of parity symbols (p < k) use this design; for a large number of parity symbols (p > k-p), you should use a generator matrix.
- The erasure pattern (represented by the n-bits wide in\_era input) addresses the ROM where the design stores parity submatrices. The design only has n p = n! k! n k! possible erasure patterns. Therefore, the design uses an address compression module.
- The design encodes the address with the number of addresses that are smaller than the address and have exactly p bits set.
- The Erasure Decoder receives at its input any rate of incoming symbols, up to the total block length n per cycle
  for the maximum throughput. You can configure parallelism and the number of channels, so that the design
  multiplies the incoming symbols by the number of channels in parallel that correspond to different codewords
  arriving at the same time.
- The erasure decoder produces the full decoded codeword, including check symbols, in one cycle (several codewords for several channels).

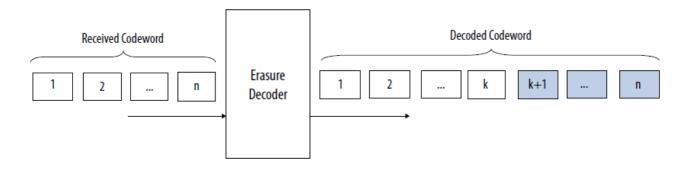

An input buffer allows you to have the number of parallel symbols per channel fewer than the total block length (n). Intel recommends you use the input bandwidth, unless the parallelism depends on your interface requirements.

# **Erasure Decoder IP Core Parameters**

Parameter	Legal Values	Default Value	Description
Number of channels	1 to 16	1	The number of input channels ( C) t o process.
Number of bits per symbol	3 to 12	4	The number of bits per symbol ( <i>M</i> ) .
Number of symbols per c odeword	1 to 2M-1	14	The total number of symbols per c odeword ( <i>N</i> ).
Number of check symbols per codeword	1 to <i>N</i> –1	4	The number of check symbols per codeword ( <i>R</i> ).
Sumber of parallel symbol per channel 1 to N		14	The number of symbols that arrive in parallel at the input for each cod eword ( <i>PAR</i> )
Field Polynomial Any valid polynomial		19	Specifies the primitive polynomial defining the Galois field.

## **Erasure Decoder Interfaces and Signals**

- The Avalon-ST interface supports backpressure, which is a flow control mechanism, where a sink can indicate to a source to stop sending data.
- The ready latency on the Avalon-ST input interface is 0; the number of symbols per beat is fixed to 1.
- The clock and reset interfaces drive or receive the clock and reset signal to synchronize the Avalon-ST interfaces.

## **Avalon-ST Interfaces in DSP IP Cores**

- Avalon-ST interfaces define a standard, flexible, and modular protocol for data transfers from a source interface to a sink interface.
- The input interface is an Avalon-ST sink and the output interface is an Avalon-ST source. The Avalon-ST interface supports packet transfers with packets interleaved across multiple channels.
- Avalon-ST interface signals can describe traditional streaming interfaces supporting asingle stream of data

without knowledge of channels or packet boundaries. Such interfaces typically contain data, ready, and valid signals. Avalon-ST interfaces can also support more complex protocols for burst and packet transfers with packets interleaved across multiple channels. The Avalon-ST interface inherently synchronizes multichannel designs, which allows you to achieve efficient, time-multiplexed implementations without having to implement complex control logic.

Avalon-ST interfaces support backpressure, which is a flow control mechanism where a sink can signal to a
source to stop sending data. The sink typically uses backpressure to stop the flow of data when its FIFO
buffers are full or when it has congestion on its output.

#### **Related Information**

• Avalon Interface Specifications

# **Erasure Decoder IP Core Signals**

# **Clock and Reset Signals**

Name	Avalon-ST Type	Direction	Description
clk_clk	clk	Input	The main system clock. The whole IP core operates on the rising edge of clk_clk.
reset_reset_n	reset_n	Input	An active low signal that resets the entire system when asserted. You can assert this signal asynchronously.  However, you must deassert it synchronous to the clk_clk signal. When the IP core recovers from reset, ensure that the data it receives is a complete packet.

# **Avalon-ST Input and Output Interface Signals**

Name	Avalon-ST Type	Direction	Description
in_ready	ready	Output	Data transfer ready signal to indicate that the sink is re ady to accept data. The sink interface drives the in_re ady signal to control the flow of data across the interface. The sink interface captures the data interface sign als on the current clk rising edge.
in_valid	valid	Input	Data valid signal to indicate the validity of the data signals. When you assert the in_valid signal, the Avalo n-ST data interface signals are valid. When you deass ert the in_valid signal, the Avalon-ST data interface signals are invalid and must be disregarded. You can assert the in_valid signal whenever data is available. How ever, the sink only captures the data from the source when the IP core asserts the in_ready signal.
in_data[]	data	Input	Data input containing the codeword symbols. Valid only when in_valid is asserted. The in_data signal is a vector containing $C \times PAR$ symbols. If $PAR < N$ , the codeword of each channel arrives over several cycles.
in_era	data	Input	Data input that indicates which symbols are erasures. Valid only when in_valid is asserted. It is a vector cont aining $C \times PAR$ bits.
out_ready	ready	Input	Data transfer ready signal to indicate that the downstream module is ready to accept data. The sour ce provides new data (if available) when you assert the out_ready signal and stops providing new data when you deassert the out_ready signal.
out_valid	valid	Output	Data valid signal. The IP core asserts the out_valid signal high, whenever a valid output is on out_data.
out_data	data	Output	Contains decoded output when the IP core asserts the out_valid signal. The corrected symbols are in the sam e order that they are entered. It is a vector containing $C \times N$ symbols.
out_error	error	Output	Indicates non-correctable codeword.

- An asserted in\_valid signal indicates valid data.
- Each codeword can arrive over several cycles, depending on the parallelism parameter. The design tracks the structure of the input, so it requires no packet boundaries on the interface. The design's Number of channels in parallel increases throughput by replicating the functional units for all the concurrent channels. This design does not use Avalon-ST interface multiple channel support.
- When the decoder asserts the out\_valid signal, it provides valid data on out\_data.
- It outputs C codewords per cycle, where C is the number of channels in parallel. The IP core asserts out\_error signal when it receives a non-correctable codeword, i.e.: when the IP core exceeds erasure correction capability

### Erasure Decoder Reference Design

Intel Corporation. All rights reserved. Intel, the Intel logo, and other Intel marks are trademarks of Intel Corporation or its subsidiaries. Intel warrants performance of its FPGA and semiconductor products to current specifications in accordance with Intel's standard warranty, but reserves the right to make changes to any products and services at

any time without notice. Intel assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Intel. Intel customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

Other names and brands may be claimed as the property of others.

#### **Documents / Resources**



## References

- intel 1. About the Erasure Decoder Reference Design
- intel ISO 9001:2015 Registrations

Manuals+,