



KILOVIEW D260 Multi Channel Video Decoder User Guide

[Home](#) » [KILOVIEW](#) » KILOVIEW D260 Multi Channel Video Decoder User Guide 

KILOVIEW D260 Multi Channel Video Decoder



Before using this product, it is recommended that you read the guide carefully. To ensure your personal safety and avoid physical or electrical damage to the device, please strictly follow the instructions of this guide to install and use it under the guidance of professionals. Incorrect electrical connections or physical installation may cause permanent damage to the device and even threaten personal safety.

Contents


- 1 Packing List
- 2 Device Interfaces
- 3 LED Indicators
- 4 Application
- 5 OLED Screen and Touch Button
- 6 Login to the device webpage
- 7 Decoding and output
- 8 Firmware Upgrading
- 9 Restore factory settings
- 10 Others
- 11 Customers Support
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts

Packing List

1. Device ×1



2. Power Supply ×1

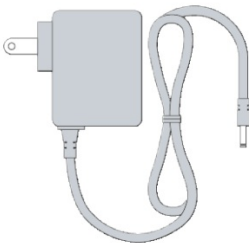

3. Warranty Card ×1




4. Quick Start Guide ×1




Device Interfaces

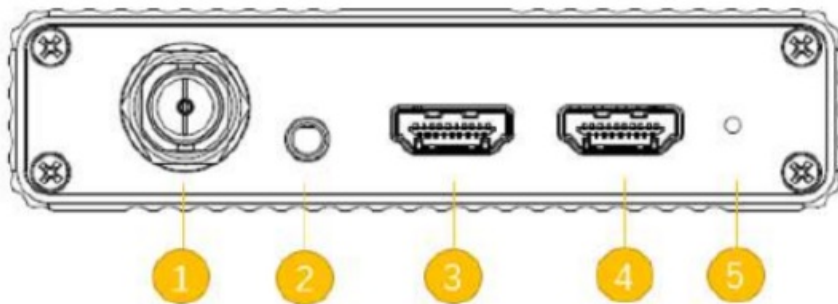

1. SDI output
2. LINE OUT
3. HDMI output 1
4. HDMI output 2
5. Reset
6. 1000M Ethernet Port 1

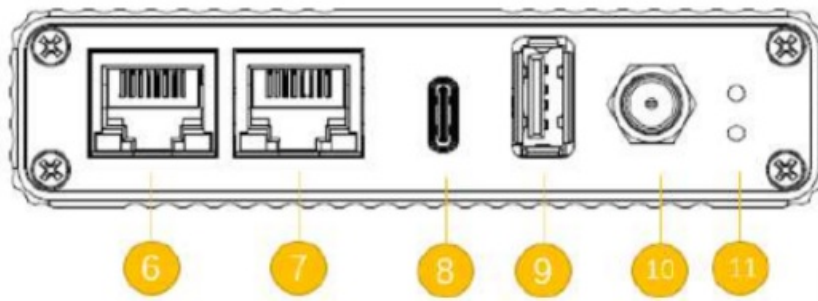


7. 1000M Ethernet Port 2
8. Type-C Expansion Port
9. USB Expansion Port
10. Power Port
11. Working Indicator



LED Indicators

	Name	Color	Status	Description
LED Indicators	 Power	Red	ON	Power connected
			OFF	Power off or failure
	 Run	Green	Flashing	Working
			Always ON/OFF	Device is abnormal or not started

Application

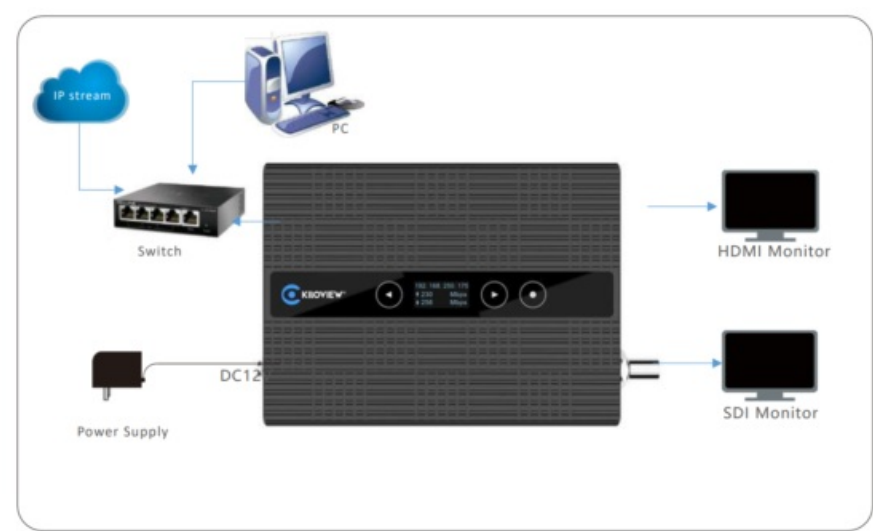




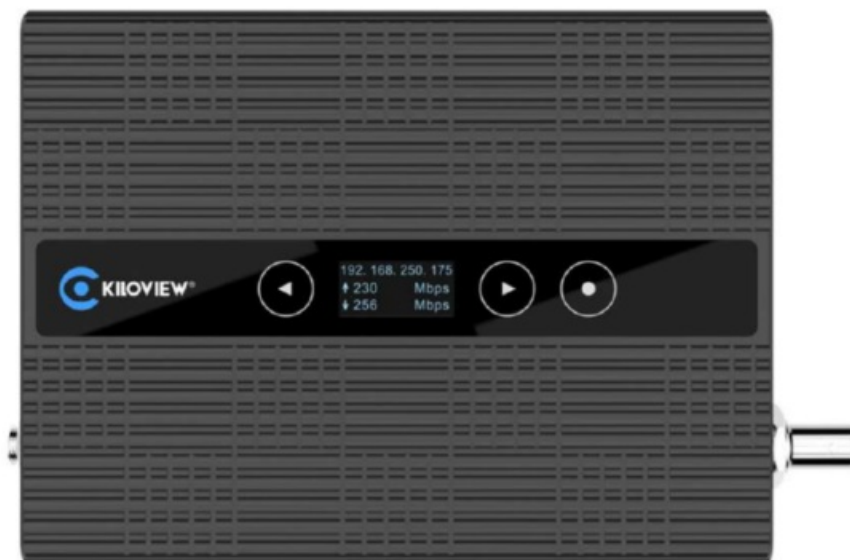
Note

- Please use the equipped power adapter to power the device. Other unqualified power supplies may damage the device.
- D350 single window supports up to 9-channel decoding, HDMI and SDI output same or different contents.
- D260 supports up to 4-channel decoding, HDMI and SDI output same or different contents.

OLED Screen and Touch Button

The D350/D260 comes with an OLED screen and touch button. Users can easily check the output interface, resolution, device IP address, real-time upstream and downstream network rates, or switch the display by touching the button. For more detailed information, please refer to the user manual.


-  Switch to the next page
-  Switch to the previous page
-  OK



Login to the device webpage

With the OLED screen, users can check the IP address in real-time.

After powered on, you can switch the touch button to check the IP address of your connected network. As shown below:

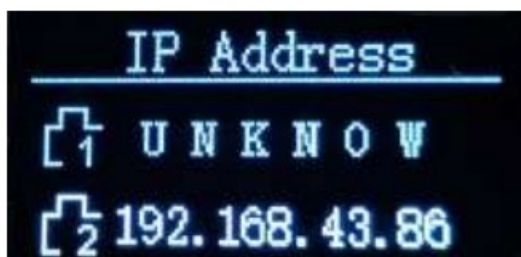

Login to the device webpage via the default IP address 192.168.1.168 .
That is, enter <http://192.168.1.168/> in the browser to access the web page.

Note

- To login with the default address, make sure that the computer is configured under the same network segment (192.168.1.*, * refers to numbers between 1-255 except 168)!
- After changing the device IP address, please restore your computer network to the working network IP address.
- If the D350/D260 is connected to the network by Ethernet port 2, the default IP address is: 192.168.2.168!

The username and the password are admin by default.

Note

- To ensure information security, it is recommended to change your password immediately after logging in for the first time!
- Due to the browser compatibility issues, it is recommended to use Chrome or Edge.

For more information about the D350/D260 configurations, please refer to:
<https://www.kiloview.com/en/support/docs/d350/>



Decoding and output

Add video source

In the lower left of the “Media”, click “Add”, and then select the “Source Type” and configure the parameters in the pop-up dialog box, and click “OK” to add the video source to the list.

A screenshot of the 'Add Source' dialog box in a software application. The dialog has a blue title bar with the text 'Add Source' and a red close button. The main area is dark gray. It contains several fields and buttons: a 'Name' field with a placeholder 'Name'; two buttons, 'Main' (green) and 'Preview' (white); a 'Source Type' section with a row of buttons: RTSP (green), RTMP, RTMPS, RTP, UDP, HTTP, HTTPS, SRT, and NDI. Below this is a sub-section 'RTMP Server' with a blue button. The 'URL' field contains 'rtsp://'. Below that is a 'Transmission Mode' dropdown menu set to 'TCP'. There are fields for 'Username' and 'Password'. A 'Play Cache' dropdown is set to 'Normal latency buffer (~200ms)'. A 'Response Speed' dropdown is set to 'Normal'. At the bottom, there is an 'Audio de-sync compensation' section with a slider set to '0' and a '(ms)' label. At the very bottom are 'OK' (blue) and 'Cancel' (red) buttons.

Note

- The IP address of video source can be tested with a player such as VLC.
- If video source is from network, it is required to configured with a high buffer time for playback buffer until the video decoding output is smooth.

For more information about how to add the video source, please refer to:

<https://www.kiloview.com/en/support/docs/d350/>



Preview

The added sources will be displayed in the “Video Source”, drag the source to the upper “Source Preview” window to preview the source images and to configure the output parameters.




Note

- It is recommended to use the latest version of Chrome and Edge for preview function.
- Preview in browser does not support video sources with B-frame and H.265.
- To preview, please use the service network IP address to login to the device.
- The “Source Preview” window is under “Image” mode by default, and the image refreshes every 3 seconds; if

the CPU performance of your computer is well, you can click and switch to “Video” mode, and there will be smooth video.

Output

There are two output windows on the webpage. You can select SDI or HDMI to decode and output the same or different content in the upper right corner of the window. Drag the video source into the output window, that is, output with the selected SDI or HDMI interface.

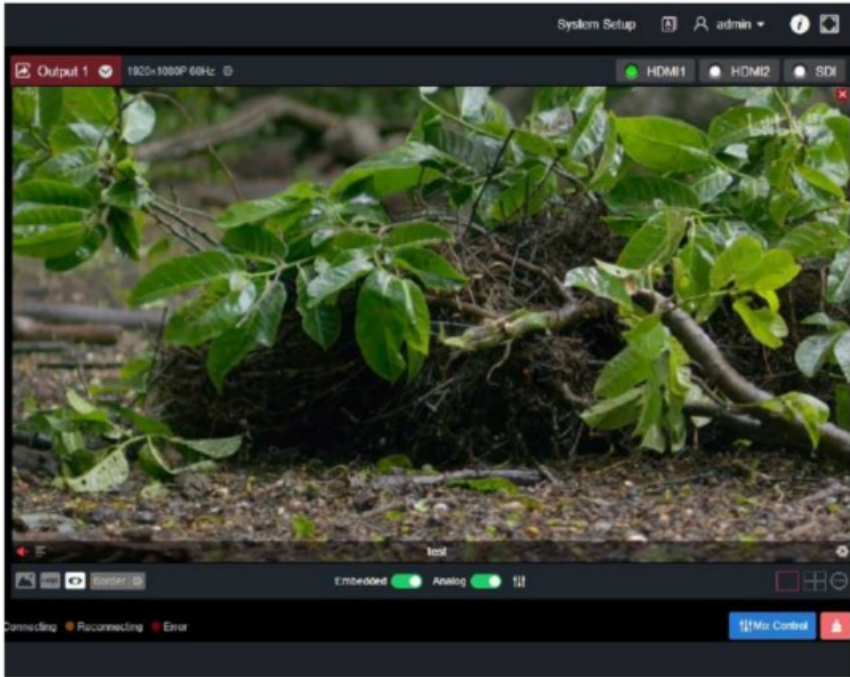

Note

- The output resolution should be the resolution and frame rate that the receiving monitor can support.
- The audio is turned off by default, and it can be turned on by click the red speaker in the lower left corner of the output window.
- Multi-screen output needs to be configured by adding a layout, D350 supports up to 9 grids output.D260 supports up to 4 grids output.

For more info about D350/D260 output layout configurations, please refer to:

<https://www.kiloview.com/en/support/docs/d350/>



Firmware Upgrading

Download upgrade firmware

Kiloview will provide the firmware of updating functions for D350/D260, please refer to:

<https://www.kiloview.com/en/support/download/>

Select “video decoders” > “D350/D260”, find and download the latest firmware




Upgrade firmware

Login to the web page of D350/D260, click “Settings”>”Firmware Upgrade” to check if there is any latest firmware available to download. If yes, select the downloaded firmware and click “Firmware Upgrade”.



After a successful upload, it needs to reboot the device. After clicking “ok”, the device will restart, please be patient.

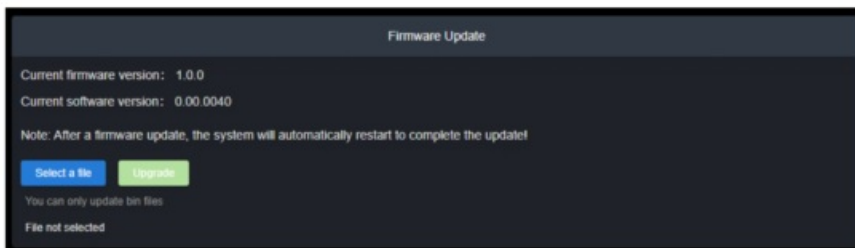

- Please not power off during the upgrade process, otherwise the device couldn't work.
- Generally, this process can take 3-5 minutes to upgrade the device. If it's still not completed after 5 minutes, please try refreshing webpage. If you still can't access it, please try to contact technical support.

Restore factory settings

If the device cannot work normally after modified the parameters or forgot IP configuration, please restore factory settings.

Two Easy Methods:

1. If you can login to webpage, click "Settings>System settings>Restore factory settings" on the webpage.
2. If you cannot login to webpage, press the RESET button for 5 seconds in the bottom of device.



Note: After restoring factory setting, below parameters will be turned to default value:

- Login password will be restored to "admin".
- Your device will be restored to obtain a DHCP-assigned IP address by default and the failover address 192.168.1.168 will be bound to the device.
- All decoding parameters of video and audio will be restored to default value.

Others

To prolong the device life please unplug the power and keep it properly if you do not use it for a long time.

Customers Support

For more questions, please contact us via
<https://www.kiloview.com/en/support>



Please Scan With browser.




KILOVIEW Electronics CO., LTD.

Tel 86-18573192787 Email support@kiloview.com Web www.kiloview.com/en
Address: B4-106/109, Jiahua Intelligence Valley Industrial Park, 877 Huijin Road, Yuhua District,
Changsha City, Hunan Province, China.



Documents / Resources

	<p>KILOVIEW D260 Multi Channel Video Decoder [pdf] User Guide D260, D260 Multi Channel Video Decoder, Multi Channel Video Decoder, Video Decoder, Decoder</p>
---	---

References

- [C Kiloview | Breaking Boundaries – Your AV over IP trailblazer - Kiloview](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.