

Lenovo ThinkAgile HX5521 Certified Node Server User Guide

Home » Lenovo » Lenovo ThinkAgile HX5521 Certified Node Server User Guide 🖫

Lenovo ThinkAgile HX5521 Certified Node Server



Contents

- 1 Product Guide
- 2 Key features
 - 2.1 Components and connectors
- 3 System specifications
- 4 Factory-integrated models
- **5 Memory**
- 6 Internal storage
 - 6.1 Drives for internal storage
- 7 Network connectivity
- 8 Rack installation
- 9 Software
- 10 Operating environment
- 11 Regulatory compliance
- 12 Warranty and support
- 13 Deployment services
- 14 Notices
- 15 Trademarks
- 16 Documents / Resources
 - 16.1 References
- 17 Related Posts

Product Guide

Lenovo ThinkAgile HX Certified Nodes are designed for deploying industry leading hyperconvergence software from Nutanix on Lenovo enterprise platforms that feature the first generation of the Intel Xeon Processor Scalable Family (Xeon SP Gen 1).

The ThinkAgile HX Certified Nodes deliver fully validated and integrated Lenovo hardware and firmware, certified and preloaded with Nutanix software. Nutanix brings the benefits of web-scale technologies to enterprise applications through enterprise storage, data protection, infrastructure resilience, management and analytics, and security.

The ThinkAgile HX5521 is a 2U rack-mount certified node that supports two processors, up to 3 TB of 2666 MHz TruDDR4 memory, 12x or 14x SAS/SATA SFF hot-swap drive bays with an extensive choice of SATA SSDs and HDDs, and flexible network connectivity options with 1/10 GbE RJ-45, 10 GbE SFP+, and 10/25 GbE SFP28 ports.

Several common uses for the ThinkAgile HX Certified Nodes that are optimized for storage-heavy workloads include file servers, on-cluster backups, and big data.

The ThinkAgile HX5521 Certified Node is shown in the following figure.



Figure 1. ThinkAgile HX5521 Certified Node

Did you know?

The ThinkAgile HX Certified Nodes are built on industry-leading Lenovo ThinkSystem servers that feature enterprise-class reliability, management, and security.

The ThinkAgile HX Certified Nodes deliver fully validated and integrated hardware and firmware that is certified with Nutanix software.

Key features

The ThinkAgile HX Certified Nodes are designed for the industry's most feature-rich hyperconverged infrastructure from Nutanix. Nutanix brings the benefits of web-scale technologies to enterprise applications through enterprise storage, data protection, infrastructure resilience, management and analytics, and security.

The ThinkAgile HX Certified Nodes offer the following key features:

- Built on proven and reliable Lenovo ThinkSystem servers featuring Intel Xeon Processor Scalable Family that provide compute power for a variety of workloads and applications.
- Deliver fully validated and integrated hardware and firmware that is certified with Nutanix software.
- Preloaded with Nutanix software and ready for out-of-box deployment (software licenses are not included).
- Provide flexibility in using the existing Nutanix term-based software licenses and active support contracts or purchasing new software licenses and support contracts from Nutanix.

• Offer optional Lenovo Professional Services to get customers up and running quickly.

The Nutanix software running on the HX Certified Nodes deliver the following key features:

- A natively integrated solution for data protection and continuous availability at VM granularity that
 gives administrators an affordable range of options to meet the recovery point objectives (RPO) and
 recovery time objectives (RTO) for different applications.
- A fault resistant platform, with no single point of failure and no bottlenecks with shared-nothing architecture, where all data, metadata and services are distributed to all nodes within the cluster, that is built to detect, isolate and recover from failures anywhere in the system.
- An intuitive user-centric management experience to simplify every aspect of the IT infrastructure lifecycle and provide a single pane of glass to monitor and control Nutanix clusters, with simplified workflows and rich automation for common administrative tasks.
- Powerful security features, such as two-factor authentication and data-at rest encryption, with a security
 development lifecycle that is integrated into product development to help customers meet the most stringent
 security requirements.

Components and connectors

The following figure shows the front view of the HX5521 Certified Node.

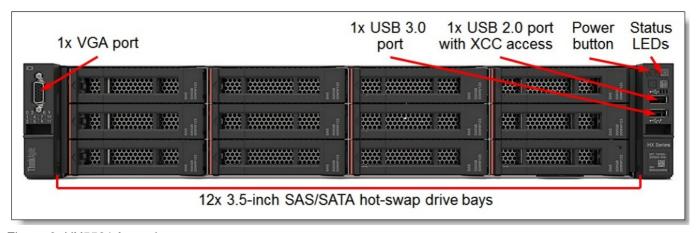


Figure 2. HX5521 front view

The front of the HX5521 Certified Node includes the following components:

- 12x LFF SAS/SATA hot-swap drive bays
- · One VGA port
- One USB 2.0 port with XClarity Controller access
- One USB 3.0 port
- A Power button
- · Status LEDs

The following figure shows the rear view of the HX5521 Certified Node with 12 drive bays.

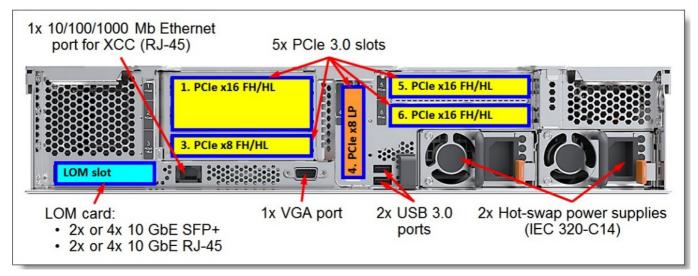


Figure 3. HX5521 12-drive bay node rear view

The following figure shows the rear view of the HX5521 Certified Node with 14 drive bays.

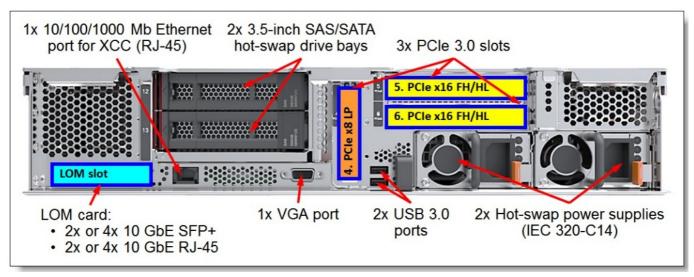


Figure 4. HX5521 14-drive bay node rear view

The rear of the HX5521 Certified Node includes the following components:

- Five (models with 12 drive bays) or three (models with 14 drive bays) PCIe expansion slots
- Two LFF SAS/SATA hot-swap rear drive bays (models with 14 drive bays)
- One LOM card slot
- One 1 GbE port for XClarity Controller
- One VGA port
- Two USB 3.0 ports
- Two hot-swap power supplies

System specifications

The following table lists the system specifications of the ThinkAgile HX5521 Certified Node.

Table 1. HX5521 system specifications

Attribute	Specification
Form factor	2U Rack-mount.
Processor	Two Intel Xeon Silver, Gold, or Platinum Gen 1 processors.
Chipset	Intel C624.
Memory	24 DIMM slots for TruDDR4 2666 MHz memory. Support for 16 GB or 32 GB RDIMMs, 64 GB L RDIMMs, or 128 GB 3DS RDIMMs.
Memory capa city	Up to 3 TB.
Memory prot ection	Error correction code (ECC), Single Device Data Correction (SDDC; for x4-based memory DIM Ms), Adaptive Double Device Data Correction (ADDDC; for x4-based memory DIMMs, requires Intel Xeon Gold or Platinum processors), patrol scrubbing, and demand scrubbing.
Drive bays	12x or 14x 3.5-inch SAS/SATA hot-swap.

Internal stora ge	Hybrid: 2 cache SSDs and from 4 to 12 capacity HDDs in increments of 2 drives. 4 cache SSDs and from 8 to 10 capacity HDDs in increments of 2 drives. All Flash: From 4 to 14 SSDs in increments of 2 drives.
Drive capaciti es	SSDs: 12 Gbps SAS SSDs up to 3.84 GB. 6 Gbps SATA SSDs up to 3.84 TB. HDDs: 6 Gbps NL SATA HDDs up to 10 TB. Note: All SSDs in the certified node must be of the same model and capacity. All HDDs in the certified node must be of the same type and capacity.
Storage capa city	Hybrid: Up to 80 TB (10x 8 TB or 8x 10 TB HDDs). All Flash: Up to 53.76 TB (14x 3.84 TB SSDs).
Storage controller	1x 430-16i HBA (12 Gbps SAS/6 Gbps SATA).
Network inter faces	2x or 4x base 1/10 GbE RJ-45 or 10 GbE SFP+ network ports. 2x, 4x, 6x, or 8x optional 1/10 GbE RJ-45, 10 GbE SFP+, or 25 GbE SFP28 expansion ports. 1x RJ-45 10/100/1000 Mb Ethernet port for systems management.
Boot drive	2x M.2 non-hot-swap SSDs up to 480 GB (RAID-1).

HX5521 (12 drive bays): 6x PCIe 3.0 slots Slot 1: PCIe 3.0 x16; full-height, half-length (for a network adapter). Slot 3: PCIe 3.0 x8; full-height, half-length (for a 10 GbE network adapter). Slot 4: PCIe 3.0 x8; I ow profile (for a network adapter). Slot 5: PCIe 3.0 x16; full-height, half-length (for a network adapter). Slot 6: PCIe 3.0 x16; full-height, half-length (for a 25 GbE network adapter). Slot 7: PCIe 3.0 x8 (for an internal storage controller).
HX5521 (14 drive bays): 4x PCIe 3.0 slots
Slot 4: PCle 3.0 x8; low profile (for a network adapter). Slot 5: PCle 3.0 x16; full-height, half-length (for a network adapter). Slot 6: PCle 3.0 x16; full-height, half-length (for a network adapter). Slot 7: PCle 3.0 x8 (for an internal storage controller).
Front: 1x USB 2.0 port with XClarity Controller access, 1x USB 3.0 port, 1x VGA port. Rear: 2x USB 3.0 ports, 1x VGA port.
Six hot-swap system fans with N+1 redundancy.
Two redundant hot-swap 750 W or 1100 W (100 – 240 V) High Efficiency Platinum, or 750 W (2 00 – 240 V) Titanium power supplies.
Matrox G200 with 16 MB memory integrated into the XClarity Controller. Maximum resolution is 1920×1200 at 60 Hz with 32 bits per pixel.
SSDs and HDDs, power supplies, and fans.

Systems man agement	XClarity Controller (XCC) Enterprise (Pilot 4 chip), proactive platform alerts, light path diagnostics, XClarity Provisioning Manager, XClarity Administrator and XClarity Pro. XClarity En ergy Manager (optional).
Security features	Power-on password, administrator's password, secure firmware updates, Trusted Platform Mod ule (TPM) 1.2 or 2.0 (configurable UEFI setting). Optional security bezel.
Software	Nutanix Acropolis Pro and Ultimate editions (licenses purchased separately from Nutanix).
Hypervisors	Nutanix Acropolis Hypervisor (Bundled with AOS). VMware ESXi 6.0 Update 3. VMware ESXi 6.5 Update 1. VMware ESXi 6.5 Update 2. VMware ESXi 6.7 Update 1. VMware ESXi 6.7 Update 3. Microsoft Windows Server 2016 Datacenter (Hyper-V).
Warranty and support	One- (PRC only), three-, four-, or five-year customer-replaceable unit and onsite limited warrant y with selectable service levels: 9×5 coverage with next business day (NBD) parts delivered (ba se warranty), 9×5 coverage with NBD onsite response (Foundation Service), 24×7 coverage with 4- hour onsite response or 24-hour committed repair (select areas) (Essential Service), or 24×7 coverage with 2-hour onsite response or 6-hour committed repair (select areas) (Advanced Service). Also available are 1-year and 2-year post-warranty extensions, YourDrive YourData, a nd Enterprise Software Support.
Dimensions	Height: 87 mm (3.4 in.), width: 445 mm (17.5 in.), depth: 720 mm (28.3 in.)

Weight	Maximum configuration: 32 kg (70.5 lb)
--------	--

Factory-integrated models

Product availability: The ThinkAgile HX5521 Certified Nodes that use the first generation of the Intel Xeon Processor Scalable Family are withdrawn and no longer available for ordering. For currently available ThinkAgile HX5521 Certified Nodes that use the second generation of the Intel Xeon Processor Scalable Family, refer to the Lenovo ThinkAgile HX5521 Certified Node (Xeon SP Gen 2) product guide: http://lenovopress.com/lp1132

Factory-integrated models of the ThinkAgile HX Certified Nodes are configured by using the Lenovo Data Center Solution Configurator (DCSC):

http://dcsc.lenovo.com

During the configuration process, you are selecting one of the base Configure to-Order (CTO) models first, and then you are adding components (processors, memory, drives, and network adapters) to the selected model according to the output from the Nutanix Sizer tool:

http://services.nutanix.com/

The following table lists the base CTO models of the ThinkAgile HX5521 Certified Nodes.

Table 2. Base CTO models

Description	Machine Type/Model			
Models with 3-year warranty (Worldwide)				
Lenovo ThinkAgile HX5521 Certified Node 3YR	7Y90CTO4WW			
Models with 1-year warranty (PRC only)				
Lenovo ThinkAgile HX5521 Certified Node 1YR	7Z05CTO4WW			

The following table lists the base chassis for the HX5521 Certified Node.

Table 3. Base chassis

Description	Feature code
ThinkAgile HX552x Base	В0Т8

The HX5521 Certified Nodes ship with the following items:

· Electronic Publications Flyer

- 2U Tool-less Slide Rail Kit with or without 2U CMA (depending on the rack installation option selected)
- With or without two rack power cables or line cords (depending on the power cable option selection)

Memory

The ThinkAgile HX5521 Certified Nodes support Lenovo TruDDR4 memory. TruDDR4 memory uses the highest-quality components sourced from Tier 1 DRAM suppliers and only memory that meets strict requirements is selected. It is compatibility tested and tuned to maximize performance and reliability.

The HX5521 supports up to 24 DIMMs. Each processor has six memory channels, and there are two DIMMs per channel.

The following rules apply when selecting the memory configuration:

- The certified node supports RDIMMs, LRDIMMs, or 3DS RDIMMs.
- All DIMMs in the certified node must be of the same type (RDIMMs, LRDIMMs, or 3DS RDIMMs).
- All DIMMs in the certified node operate at the same speed up to 2666 MHz, which is determined by the
 maximum memory speed supported by the specific processor. Note: Maximum memory speed can be
 achieved when Max performance mode is enabled in UEFI.
- The following maximum memory capacities are supported by the certified node:

RDIMMs: 768 GB.LRDIMMs: 1.5 TB.

3DS RDIMMs: 3 TB (requires processors that support 1.5 TB of memory per socket).

The following memory protection technologies are supported:

- ECC
- SDDC (for x4-based memory DIMMs)
- ADDDC (for x4-based memory DIMMs; Gold and Platinum processors only)
- · Patrol scrubbing
- · Demand scrubbing

Single Device Data Correction (SDDC) works only in the independent channel mode (the default operational mode) and supports only x4-based memory DIMMs.

Adaptive Double Device Data Correction (ADDDC) works with x4-based memory DIMMs and requires two DIMM ranks per channel, Intel Xeon Gold or Platinum processors, and the Closed Page memory access mode.

The following table lists the memory options that are available for selection.

Table 4. Memory selection options

	Part nu mber	Feat ure c ode	Quantity									
Description			12 8 G B	19 2 G B	25 6 G B	38 4 G B	51 2 G B	57 6 G B	76 8 G B	1 T B	1. 5 T B	3 T B
ThinkSystem 2666 MHz RDIMMs												
16GB TruDDR4 2666 MHz (2Rx8 1.2V) RDI MM	7X77A01 303	AUN C	8	12	_	_	_	12	_	_	_	_
32GB TruDDR4 2666 MHz (2Rx4 1.2V) RDI MM	7X77A01 304	AUN D	_	_	8	12	16	12	24	_	_	_
ThinkSystem 2666 MHz LRDIMMs												
64GB TruDDR4 2666 MHz (4Rx4 1.2V) LRDI MM	7X77A01 305	AUN E	_	_	_	_	8	_	12	16	24	_
ThinkSystem 2666 MHz 3DS RDIMMs												
128GB TruDDR4 2666 MHz (8Rx4 1.2V) 3D S RDIMM	7X77A01 307	AUN F	_	_	_	_	_	_	-	_	12	24

^{*} System performance might be impacted due to unbalanced memory configuration.

Internal storage

The ThinkAgile HX5521 Certified Node provides 12x or 14x SAS/SATA LFF hot-swap drive bays for configurable storage capacity, and it contains two internal M.2 SATA non-hot swap SSDs configured in a RAID-1 drive group for software preload.

The following table lists the internal storage options for the HX5521 Certified Node.

Table 5. Internal storage options

Description	Feature code	Quantity (min / max)				
Backplanes						
ThinkSystem SR550/SR650 3.5" SATA/SAS 12-Bay Backplane	AUR9	1/1				
ThinkSystem SR590/SR650 3.5" Rear HDD Kit	AURZ	0 / 1				
M.2 enablement kit						
ThinkSystem M.2 with Mirroring Enablement Kit	AUMV	1/1				

Configuration notes:

- One 12-bay SAS/SATA backplane and one M.2 with Mirroring Enablement Kit are derived by the configurator.
- If more than 12 drives are selected (SSDs for all flash configurations or a combination of HDDs and SSDs for hybrid configurations), the certified node provides 12 front and 2 rear drive bays (the Rear HDD Kit is derived by the configurator). If 12 or fewer drives are selected, the certified node provides 12 front drive bays only (the rear drive bays are not present).
- The M.2 with Mirroring Enablement Kit is connected to the Intel PCH via the PCIe link, and the kit supports two M.2 SATA SSDs configured in a RAID-1 drive group for software preload.

The following table lists M.2 drive selection options for software preload.

Table 6. Drive options for software preload

Description	Feature code	Quantity
ThinkSystem M.2 128GB SATA 6Gbps Non-Hot-Swap SSD	AUUV	2
ThinkSystem M.2 5100 240GB SATA 6Gbps Non-Hot Swap SSD	B5S4	2
ThinkSystem M.2 5300 240GB SATA 6Gbps Non-Hot Swap SSD	B8HS	2
ThinkSystem M.2 5100 480GB SATA 6Gbps Non-Hot Swap SSD	B11V	2
ThinkSystem M.2 5300 480GB SATA 6Gbps Non-Hot Swap SSD	B919	2

Configuration note: Two M.2 SATA SSDs are required for selection, and they must be of the same model and capacity.

The following table lists the storage controllers for internal storage of the HX5521 Certified Node.

Table 7. Controllers for internal storage

Description	Feature code	Quantity
ThinkSystem 430-16i SAS/SATA 12Gb HBA (non-RAID)	AUNM	1

Configuration note: A low profile SAS HBA for internal storage is derived by the configurator, and it occupies the PCIe slot 7

Drives for internal storage

The following tables list the drive selection options.

Table 8. Drive selection options: Hybrid configurations

Description	Part numbe r	Featur e code	Quantity (min / max)					
SSD selection (Cache tier): SAS 12Gb SSDs – PM1633a Capacity								
ThinkSystem 3.5" PM1633a 3.84TB Capacity SAS 12Gb Hot Swap SSD	4XB7A1017 3	B2XC	2/4					
SSD selection (Cache tier): SAS 12Gb SSDs – PM1635a Mainstream								
ThinkSystem 3.5" PM1635a 800GB Mainstream SAS 12Gb Hot Swap SS D	4XB7A1018 8	B2XD	2/4					
ThinkSystem 3.5" PM1635a 1.6TB Mainstream SAS 12Gb Hot Swap SSD	4XB7A1018 7	B2XE	2/4					
SSD selection (Cache tier): SAS 12Gb SSDs – PM1645 Mainstream								
ThinkSystem 3.5" PM1645 800GB Mainstream SAS 12Gb Hot Swap SSD	4XB7A1365 7	B4A3	2/4					
ThinkSystem 3.5" PM1645 1.6TB Mainstream SAS 12Gb Hot Swap SSD	4XB7A1365 8	B4A4	2/4					
SSD selection (Cache tier): SATA 6Gb SSDs – S4600 Mainstream								
ThinkSystem 3.5" Intel S4600 480GB Mainstream SATA 6Gb Hot Swap S SD	7SD7A0571 7	B0ZU	2/4					
ThinkSystem 3.5" Intel S4600 960GB Mainstream SATA 6Gb Hot Swap S SD	7SD7A0571 6	B0ZV	2/4					

ThinkSystem 3.5" Intel S4600 1.92TB Mainstream SATA 6Gb Hot Swap S SD	7SD7A0571 5	B109	2/4
SSD selection (Cache tier): SATA 6Gb SSDs – S4610 Mainstream			
ThinkSystem 3.5" Intel S4610 480GB Mainstream SATA 6Gb Hot Swap S SD	4XB7A1364 0	B49S	2/4
ThinkSystem 3.5" Intel S4610 960GB Mainstream SATA 6Gb Hot Swap S SD	4XB7A1364 1	B49T	2/4
ThinkSystem 3.5" Intel S4610 1.92TB Mainstream SATA 6Gb Hot Swap S SD	4XB7A1364 2	B49U	2/4
SSD selection (Cache tier): SATA 6Gb SSDs – PM883 Entry			
ThinkSystem 3.5" PM883 3.84TB Entry SATA 6Gb Hot Swap SSD	4XB7A1718 0	B6JZ	2/4
SSD selection (Cache tier): SATA 6Gb SSDs – S4510 Entry			
ThinkSystem 3.5" Intel S4510 3.84TB Entry SATA 6Gb Hot Swap SSD	4XB7A1362 9	B49H	2/4
HDD selection (Capacity tier): SAS 12Gb HDDs			
ThinkSystem 3.5" 10TB 7.2K SAS 12Gb Hot Swap 512e HDD	7XB7A0004 6	AUUG	4/8
HDD selection (Capacity tier): SATA 6Gb HDDs			
ThinkSystem 3.5" 4TB 7.2K SATA 6Gb Hot Swap 512n HDD	7XB7A0005	AUU8	6 / 12
ThinkSystem 3.5" 6TB 7.2K SATA 6Gb Hot Swap 512e HDD	7XB7A0005 2	AUUA	6 / 12
ThinkSystem 3.5" 8TB 7.2K SATA 6Gb Hot Swap 512e HDD	7XB7A0005 3	AUU9	4 / 10

7XB7A0005 AUUB 4 / 8

Table 9. Drive selection options: All Flash configurations

Description	Part numbe	Featur e code	Quantity (min / max)
SAS 12Gb SSDs – PM1633a Capacity			
ThinkSystem 3.5" PM1633a 3.84TB Capacity SAS 12Gb Hot Swap SSD	4XB7A1017 3	B2XC	4 / 14
SAS 12Gb SSDs – PM1635a Mainstream			
ThinkSystem 3.5" PM1635a 800GB Mainstream SAS 12Gb Hot Swap SS D	4XB7A1018 8	B2XD	4 / 14
ThinkSystem 3.5" PM1635a 1.6TB Mainstream SAS 12Gb Hot Swap SSD	4XB7A1018 7	B2XE	4 / 14
SAS 12Gb SSDs – PM1645 Mainstream			
ThinkSystem 3.5" PM1645 800GB Mainstream SAS 12Gb Hot Swap SSD	4XB7A1365 7	B4A3	4 / 14
ThinkSystem 3.5" PM1645 1.6TB Mainstream SAS 12Gb Hot Swap SSD	4XB7A1365 8	B4A4	4 / 14
SATA 6Gb SSDs – S4600 Mainstream			
ThinkSystem 3.5" Intel S4600 480GB Mainstream SATA 6Gb Hot Swap S SD	7SD7A0571 7	B0ZU	4 / 14
ThinkSystem 3.5" Intel S4600 960GB Mainstream SATA 6Gb Hot Swap S SD	7SD7A0571 6	B0ZV	4 / 14

7SD7A0571 5	B109	4 / 14	
4XB7A1364 0	B49S	4 / 14	
4XB7A1364 1	B49T	4 / 14	
4XB7A1364 2	B49U	4 / 14	
7SD7A0575 7	B114	4 / 14	
4XB7A1024 3	B48E	4 / 14	
4XB7A1024 4	B48F	4 / 14	
4XB7A1718 0	B6JZ	4 / 14	
SATA 6Gb SSDs – S4510 Entry			
4XB7A1362 9	B49H	4 / 14	
	4XB7A1364 0 4XB7A1364 1 4XB7A1364 2 7SD7A0575 7 4XB7A1024 3 4XB7A1024 4 4XB7A1718 0	5 B109 4XB7A1364 B49S 4XB7A1364 B49U 7SD7A0575 B114 4XB7A1024 B48E 4XB7A1024 B48F 4XB7A1718 B6JZ	

Configuration notes:

- For hybrid configurations, the HX5521 Certified Node supports from 4 to 12 capacity drives (HDDs) depending on the quantity of the cache drives (SSDs):
 - 2 cache drives: From 4 to 12 capacity drives in increments of 2 drives.
 - 4 cache drives: From 8 to 10 capacity drives in increments of 2 drives.
- For All Flash configurations, the HX5521 Certified Node supports from 4 to 14 SSDs in increments of 2 drives.
- All SSDs in the certified node must be of the same model and capacity. All HDDs in the certified node must be
 of the same type and capacity.

Network connectivity

The ThinkAgile HX5521 Certified Nodes provide base two- or four-port 1/10 GbE RJ-45 or 10 GbE SFP+ network connectivity with the onboard Intel X722 NIC and a LOM card installed in the certified node. Two, four, six, or eight additional 1/10 GbE RJ-45, 10 GbE SFP+, or 25 GbE SFP28 expansion ports can be selected, if required.

The following table lists the network adapter options that are available for selection.

Table 10. Network adapter selection options

Part numb er	Feature code	Quantity (min / max)
7ZT7A0054 8	AUKL	0 / 1
7ZT7A0054 9	AUKM	0 / 1
00MM860	ATPX	0 / 4*
	I	1
7ZT7A0054 6	AUKJ	0 / 1
7ZT7A0054 7	AUKK	0 / 1
		1
7ZT7A0053 7	AUKX	0 / 4*
I	ı	
01GR250	AUAJ	0 / 4*
	7ZT7A0054 8 7ZT7A0054 9 00MM860 7ZT7A0054 6 7ZT7A0054 7 7ZT7A0053	7ZT7A0054 AUKL 7ZT7A0054 AUKM 00MM860 ATPX 7ZT7A0054 AUKJ 7ZT7A0054 AUKK 7ZT7A0054 AUKK

^{*} Up to three network adapters are supported in the configurations with 14 drive bays.

Configuration notes:

- One of the 1/10 GbE RJ-45 or 10 GbE SFP+ LOM cards is required for selection, and it provides base network connectivity. Optional expansion ports can be selected, if needed.
- Supported transceivers or DAC cables should be purchased for the SFP+ and SFP28 ports, and UTP Category
 6 cables should be purchased for the 10 GbE RJ-45 ports. The maximum number of transceivers or cables that
 are supported per adapter equals the quantity of the adapter ports, and all adapter ports must have the same
 type of the transceiver or cable selected. The following transceiver and cables can be purchased:
 - UTP cables for 1/10 GbE RJ-45 ports
 - Transceivers and cables for 10 GbE SFP+ ports
 - Transceivers and cables for 25 GbE SFP28 ports

The following table lists cables for the 1/10 GbE RJ-45 ports.

Table 11. Cables for 1/10 GbE RJ-45 ports

Description	Part nu mber	Feature code
UTP Category 6 cables (Green) for 1/10 GbE RJ-45 ports		
0.75m Cat6 Green Cable	00WE12	AVFW
1.0m Cat6 Green Cable	00WE12 7	AVFX
1.25m Cat6 Green Cable	00WE13	AVFY
1.5m Cat6 Green Cable	00WE13 5	AVFZ
3m Cat6 Green Cable	00WE13	AVG0
10m Cat6 Green Cable	90Y3718	A1MT
25m Cat6 Green Cable	90Y3727	A1MW

The following table lists transceivers and cables for the 10 GbE SFP+ ports.

Table 12. Transceivers and cables for 10 GbE SFP+ ports

Description	Part nu mber	Feature code
10 GbE SFP+ SR transceivers for 10 GbE SFP+ ports		
Lenovo 10GBASE-SR SFP+ Transceiver	46C3447	5053
Lenovo 10GBASE-LR SFP+ Transceiver	00FE331	B0RJ

Optical cables for 10 GbE SFP+ SR transceivers		
Lenovo 0.5m LC-LC OM3 MMF Cable	00MN49 9	ASR5
Lenovo 1m LC-LC OM3 MMF Cable	00MN50 2	ASR6
Lenovo 3m LC-LC OM3 MMF Cable	00MN50 5	ASR7
Lenovo 5m LC-LC OM3 MMF Cable	00MN50 8	ASR8
Lenovo 10m LC-LC OM3 MMF Cable	00MN51 1	ASR9
Lenovo 15m LC-LC OM3 MMF Cable	00MN51 4	ASRA
Lenovo 25m LC-LC OM3 MMF Cable	00MN51 7	ASRB
Passive SFP+ DAC cables for 10 GbE SFP+ ports		
Lenovo 0.5m Passive SFP+ DAC Cable	00D6288	A3RG
Lenovo 1m Passive SFP+ DAC Cable	90Y9427	A1PH
Lenovo 1.5m Passive SFP+ DAC Cable	00AY764	A51N
Lenovo 2m Passive SFP+ DAC Cable	00AY765	A51P
Lenovo 3m Passive SFP+ DAC Cable	90Y9430	A1PJ

Γ

Lenovo 5m Passive SFP+ DAC Cable	90Y9433	A1PK	
Lenovo 7m Passive SFP+ DAC Cable	00D6151	A3RH	
Active SFP+ DAC cables for 10 GbE SFP+ ports			
Lenovo 1m Active DAC SFP+ Cable	00VX111	AT2R	
Lenovo 3m Active DAC SFP+ Cable	00VX114	AT2S	
Lenovo 5m Active DAC SFP+ Cable	00VX117	AT2T	
SFP+ active optical cables for 10 GbE SFP+ ports			
Lenovo 1m SFP+ to SFP+ Active Optical Cable	00YL634	ATYX	
Lenovo 3m SFP+ to SFP+ Active Optical Cable	00YL637	ATYY	
Lenovo 5m SFP+ to SFP+ Active Optical Cable	00YL640	ATYZ	
Lenovo 7m SFP+ to SFP+ Active Optical Cable	00YL643	ATZ0	
Lenovo 15m SFP+ to SFP+ Active Optical Cable	00YL646	ATZ1	
Lenovo 20m SFP+ to SFP+ Active Optical Cable	00YL649	ATZ2	

The following table lists transceivers and cables for the 25 GbE SFP28 ports.

Table 13. Transceivers and cables for 25 GbE SFP28 ports

Description	Part number	Feature code		
25 GbE SFP28 SR transceivers for 25 GbE SFP28 ports	25 GbE SFP28 SR transceivers for 25 GbE SFP28 ports			
Lenovo 25GBase-SR SFP28 Transceiver	7G17A0353 7	AV1B		
Optical cables for 25 GbE SFP28 SR transceivers				
Lenovo 0.5m LC-LC OM3 MMF Cable	00MN499	ASR5		
Lenovo 1m LC-LC OM3 MMF Cable	00MN502	ASR6		
Lenovo 3m LC-LC OM3 MMF Cable	00MN505	ASR7		
Lenovo 5m LC-LC OM3 MMF Cable	00MN508	ASR8		
Lenovo 10m LC-LC OM3 MMF Cable	00MN511	ASR9		
Lenovo 15m LC-LC OM3 MMF Cable	00MN514	ASRA		
Lenovo 25m LC-LC OM3 MMF Cable	00MN517	ASRB		
Passive copper cables for 25 GbE SFP28 ports				
Lenovo 1m Passive 25G SFP28 DAC Cable	7Z57A0355 7	AV1W		
Lenovo 3m Passive 25G SFP28 DAC Cable	7Z57A0355 8	AV1X		
Lenovo 5m Passive 25G SFP28 DAC Cable	7Z57A0355 9	AV1Y		

Active optical cables for 25 GbE SFP28 ports		
Lenovo 3m 25G SFP28 Active Optical Cable	7Z57A0354 1	AV1F
Lenovo 5m 25G SFP28 Active Optical Cable	7Z57A0354 2	AV1G
Lenovo 10m 25G SFP28 Active Optical Cable	7Z57A0354 3	AV1H
Lenovo 15m 25G SFP28 Active Optical Cable	7Z57A0354 4	AV1J
Lenovo 20m 25G SFP28 Active Optical Cable	7Z57A0354 5	AV1K

Power supplies and cables

The HX5521 Certified Nodes ship with two power supplies. The following table lists the power supply options that are available for selection.

Table 14. Power supply selection options

Description	Feature code	Quantity
ThinkSystem 750W (230/115V) Platinum Hot-Swap Power Supply	AVWD	2
ThinkSystem 750W (230V) Titanium Hot-Swap Power Supply	AVWE	2
ThinkSystem 1100W (230V/115V) Platinum Hot-Swap Power Supply	AVWF	2

Configuration notes:

- For N+N power redundancy, the power supplies should provide sufficient power without oversubscription for the selected node configuration. To ensure that the right power supply is chosen, you should always validate your certified node configuration using the latest version of the Lenovo Capacity Planner:
 - http://datacentersupport.lenovo.com/us/en/solutions/Invo-lcp
- Both power supplies in the certified node must be identical.

• The power supplies support AC (Worldwide) and HVDC (China only) power sources.

The ThinkAgile HX5521 Certified Nodes ship with two customer-configured power cords. The following table lists the rack power cables and line cords that are available for selection.

Table 15. Power cable selection options

Description	Part numb er	Feature code
Rack power cables		
1.0m, 10A/100-250V, C13 to IEC 320-C14 Rack Power Cable	00Y3043	A4VP
1.0m, 13A/100-250V, C13 to IEC 320-C14 Rack Power Cable	4L67A0836 7	B0N5
1.2m, 16A/100-250V, 2 Short C13s to Short C20 Rack Power Cable	47C2491	A3SW
1.5m, 10A/100-250V, C13 to IEC 320-C14 Rack Power Cable	39Y7937	6201
1.5m, 13A/100-250V, C13 to IEC 320-C14 Rack Power Cable	4L67A0836 8	B0N6
2.0m, 10A/100-250V, C13 to IEC 320-C14 Rack Power Cable	4L67A0836 5	B0N4
2.0m, 13A/125V-10A/250V, C13 to IEC 320-C14 Rack Power Cable	4L67A0836 9	6570
2.5m, 16A/100-250V, 2 Long C13s to Short C20 Rack Power Cable	47C2492	A3SX

2.8m, 10A/100-250V, C13 to IEC 320-C14 Rack Power Cable	4L67A0836 6	6311
2.8m, 13A/125V-10A/250V, C13 to IEC 320-C14 Rack Power Cable	4L67A0837 0	6400
2.8m, 10A/100-250V, C13 to IEC 320-C20 Rack Power Cable	39Y7938	6204
2.8m, 16A/100-250V, 2 Short C13s to Long C20 Rack Power Cable	47C2493	A3SY
4.1m, 16A/100-250V, 2 Long C13s to Long C20 Rack Power Cable	47C2494	A3SZ
4.3m, 10A/100-250V, C13 to IEC 320-C14 Rack Power Cable	39Y7932	6263
4.3m, 13A/125V-10A/250V, C13 to IEC 320-C14 Rack Power Cable	4L67A0837	6583
Line cords		
Argentina 2.8m, 10A/250V, C13 to IRAM 2073 Line Cord	39Y7930	6222
Argentina 4.3m, 10A/250V, C13 to IRAM 2073 Line Cord	81Y2384	6492
Australia/New Zealand 2.8m, 10A/250V, C13 to AS/NZS 3112 Line Cord	39Y7924	6211
Australia/New Zealand 4.3m, 10A/250V, C13 to AS/NZS 3112 Line Cord	81Y2383	6574

Brazil 2.8m, 10A/250V, C13 to NBR 14136 Line Cord	69Y1988	6532
Brazil 4.3m, 10A/250V, C13 to NBR14136 Line Cord	81Y2387	6404
China 2.8m, 10A/250V, C13 to GB 2099.1 Line Cord	39Y7928	6210
China 4.3m, 10A/250V, C13 to GB 2099.1 Line Cord	81Y2378	6580
Denmark 2.8m, 10A/250V, C13 to DK2-5a Line Cord	39Y7918	6213
Denmark 4.3m, 10A/250V, C13 to DK2-5a Line Cord	81Y2382	6575
Europe 2.8m, 10A/250V, C13 to CEE7-VII Line Cord	39Y7917	6212
Europe 4.3m, 10A/250V, C13 to CEE7-VII Line Cord	81Y2376	6572
India 2.8m, 10A/250V, C13 to IS 6538 Line Cord		6269
India 4.3m, 10A/250V, C13 to IS 6538 Line Cord		6567
Israel 2.8m, 10A/250V, C13 to SI 32 Line Cord		6218
Israel 4.3m, 10A/250V, C13 to SI 32 Line Cord	81Y2381	6579
Italy 2.8m, 10A/250V, C13 to CEI 23-16 Line Cord	39Y7921	6217

Italy 4.3m, 10A/250V, C13 to CEI 23-16 Line Cord	81Y2380	6493
Japan 2.8m, 12A/125V, C13 to JIS C-8303 Line cord	46M2593	A1RE
Japan 2.8m, 12A/250V, C13 to JIS C-8303 Line Cord	4L67A0835 7	6533
Japan 4.3m, 12A/125V, C13 to JIS C-8303 Line Cord	39Y7926	6335
Japan 4.3m, 12A/250V, C13 to JIS C-8303 Line Cord	4L67A0836 2	6495
Korea 2.8m, 12A/250V, C13 to KS C8305 Line Cord	39Y7925	6219
Korea 4.3m, 12A/250V, C13 to KS C8305 Line Cord	81Y2385	6494
South Africa 2.8m, 10A/250V, C13 to SABS 164 Line Cord	39Y7922	6214
South Africa 4.3m, 10A/250V, C13 to SABS 164 Line Cord	81Y2379	6576
Switzerland 2.8m, 10A/250V, C13 to SEV 1011-S24507 Line Cord	39Y7919	6216
Switzerland 4.3m, 10A/250V, C13 to SEV 1011-S24507 Line Cord	81Y2390	6578
Taiwan 2.8m, 10A/125V, C13 to CNS 10917-3 Line Cord	23R7158	6386

Taiwan 2.8m, 10A/250V, C13 to CNS 10917-3 Line Cord	81Y2375	6317
Taiwan 2.8m, 15A/125V, C13 to CNS 10917-3 Line Cord	81Y2374	6402
Taiwan 4.3m, 10A/125V, C13 to CNS 10917-3 Line Cord	4L67A0836 3	AX8B
Taiwan 4.3m, 10A/250V, C13 to CNS 10917-3 Line Cord	81Y2389	6531
Taiwan 4.3m, 15A/125V, C13 to CNS 10917-3 Line Cord	81Y2388	6530
United Kingdom 2.8m, 10A/250V, C13 to BS 1363/A Line Cord	39Y7923	6215
United Kingdom 4.3m, 10A/250V, C13 to BS 1363/A Line Cord	81Y2377	6577
United States 2.8m, 10A/125V, C13 to NEMA 5-15P Line Cord	90Y3016	6313
United States 2.8m, 10A/250V, C13 to NEMA 6-15P Line Cord	46M2592	A1RF
United States 2.8m, 13A/125V, C13 to NEMA 5-15P Line Cord	00WH545	6401
United States 4.3m, 10A/125V, C13 to NEMA 5-15P Line Cord	4L67A0835 9	6370
United States 4.3m, 10A/250V, C13 to NEMA 6-15P Line Cord	4L67A0836 1	6373

United States 4.3m, 13A/125V, C13 to NEMA 5-15P Line Cord	4L67A0836 0	AX8A	
---	----------------	------	--

Rack installation

The HX5521 Certified Nodes ship with a rail kit. The following table lists the rail kit options that are available for selection.

Table 16. Rack kit selection options

Description		Quantity (min / max)	
4-post rail kits			
ThinkSystem Tool-less Slide Rail	AXCA	0 / 1	
ThinkSystem Tool-less Slide Rail Kit with 2U CMA		0 / 1	
Lockable front bezel			
ThinkSystem 2U Security Bezel	AURX	0 / 1	

Configuration note: One of the rail kits is required for selection.

The following table summarizes the rail kit features and specifications.

Table 17. Rail kit features and specifications summary

Feature	Tool-less Slide Rail		
reature	Without CMA	With 2U CMA	
СМА	Not included	Included	
Rail length	730 mm (28.74 in.)	807 mm (31.8 in.)	
Rail type	Full-out slide (ball bearing)		
Tool-less installation	Yes		
In-rack maintenance	Yes		
1U PDU support	Yes		
0U PDU support	Limited*		
Rack type	IBM and Lenovo 4-post, IEC standard-compliant		
Mounting holes	Square or round		
Mounting flange thickness	2 mm (0.08 in.) – 3.3 mm (0.13 in.)		
Distance between front and rear mounting flanges^	609.6 mm (24 in.) – 863.6 mm (34 in.)		

^{*} If a 0U PDU is used, the rack cabinet must be at least 1100 mm (43.31 in.) deep if no CMA is used, or at least 1200 mm (47.24 in.) deep if a CMA is used. ^ Measured when mounted on the rack, from the front surface of the front mounting flange to the rear most point of the rail.

Software

The ThinkAgile HX Certified Nodes support the following hypervisors that are installed on the 2x M.2 SSDs configured in a RAID-1 drive group:

• Nutanix Acropolis Hypervisor (AHV) (Bundled with AOS)

- VMware ESXi 6.0 Update 3
- VMware ESXi 6.5 Update 1
- VMware ESXi 6.5 Update 2
- VMware ESXi 6.7 Update 1
- VMware ESXi 6.7 Update 3
- Microsoft Windows Server 2016 Datacenter (Hyper-V)

The following table lists the hypervisors available for factory preload selection.

Table 18. Hypervisors

Description	Feature code	Quantity
Nutanix SW Stack on Nutanix AHV (default selection)	B15S	1
Nutanix SW Stack on VMware ESXi 6.0	B15T	1
Nutanix SW Stack on VMware ESXi 6.5	B15R	1
Nutanix SW Stack on VMware ESXi 6.7	B63T	1
Nutanix SW Stack on Hyper-V 2016	B63U	1

The ThinkAgile HX Certified Nodes are shipped with the Nutanix software preloaded. Nutanix software licenses and software support are not included. Customers can use the existing Nutanix term-based software licenses and active support contracts, or they can purchase term-based software licenses and support contracts from Nutanix.

Configuration notes:

- The HX Certified Nodes support the Nutanix Software Pro and Ultimate editions; the Starter edition is not supported.
- The HX5521 Certified Nodes can be deployed as a cluster of 3 or more nodes (AOS 5.1.3 or later).
- The HX Certified Nodes support firmware updates from Nutanix Prism with the ThinkAgile HX Lifecycle Manager (UEFI, XCC, drives, network adapters, and SAS HBAs).

Systems management

The ThinkAgile HX Certified Nodes support the following systems management tools:

- Lenovo XClarity Controller
- · Light path diagnostics

- Lenovo XClarity Administrator and XClarity Pro
- · Lenovo XClarity Energy Manager

Lenovo XClarity Controller

The ThinkAgile HX Certified Nodes contain Lenovo XClarity Controller (XCC) Enterprise, which provides advanced service-processor control, monitoring, and alerting functions.

XClarity Controller Enterprise offers the following capabilities for the HX Certified Nodes:

- Gathering and viewing system information and inventory
- · Monitoring system status and health
- · Alerting and notifications
- · Event logging
- · Syslog alerting
- · Configuring security
- · Updating system firmware
- Real-time power usage monitoring
- Displaying graphics for real-time and historical power usage data and temperature
- · Capping power usage
- Remotely controlling power (Power on, Power off, Restart)

The XClarity Controller provides remote server management through the following interfaces:

- Intelligent Platform Management Interface (IPMI) Version 2.0
- Simple Network Management Protocol (SNMP) Version 3
- Common Information Model (CIM)
- Data Center Manageability Interface (DCMI) Version 1.5
- Redfish REpresentational State Transfer (REST) API
- Web browser with HTML5 support
- · Command-line interface
- Virtual Operator Panel with XClarity Mobile App via the front USB port with XClarity Controller access

Virtual Operator Panel provides quick access to system status, firmware, network, health, and alerts information. With proper authentication, it also allows to configure systems management and network settings and to control system power (Power on, Power off, Restart). The Virtual Operator Panel can be accessed from the XClarity Mobile App running on the Android or iOS mobile device that is connected to the front USB port with XClarity Controller access (See Components and connectors).

Light path diagnostics

The ThinkAgile HX5521 Certified Nodes include basic light path diagnostics, which provides the system LEDs on the front of the certified node (see Components and connectors) and the LEDs near the monitored components (for example, the DIMM error LEDs on the system board).

Lenovo XClarity Administrator and XClarity Pro

Lenovo XClarity Administrator is a centralized systems management solution that helps administrators deliver infrastructure faster. This solution integrates easily with Lenovo x86 servers, appliances, certified nodes, Top-of-Rack Ethernet switches, and storage systems, providing automated agent-less discovery, inventory, monitoring, and alerts across multiple systems. In addition, some managed endpoints support firmware updates and configuration management.

Lenovo XClarity Administrator is an optional software component for the ThinkAgile HX Certified Nodes which can be used to manage firmware upgrades outside of the Nutanix Prism software.

Notes:

- Lenovo XClarity Administrator can be downloaded and used at no charge to discover and monitor HX Certified Nodes and manage firmware upgrades for them.
- Optional Lenovo XClarity Pro subscription license that can be selected in the configurator provides software support for XClarity Administrator for the duration of the selected warranty period. If Lenovo XClarity software support is required, the XClarity Pro option must be selected.

The XClarity Pro license can be added during the initial purchase by selecting one of the software options listed in the following table.

Table 19. XClarity Pro selection options

Description	Feature code	Quantity (per node)
XClarity Pro	B0W3	1

Also, XClarity Pro licenses can be added after the initial deployment by purchasing one of the software license options listed in the following table.

Table 20. Lenovo XClarity Pro license options

	Part number		Quantity	
Description	NA, AP, Japan*	EMEA, LA**	(per node)	
Lenovo XClarity Pro, per Managed Endpoint w/1 Yr SW S&S	00MT201	00MT207	1	
Lenovo XClarity Pro, per Managed Endpoint w/3 Yr SW S&S	00MT202	00MT208	1	
Lenovo XClarity Pro, per Managed Endpoint w/5 Yr SW S&S	00MT203	00MT209	1	

^{*} NA = North America; AP = Asia Pacific.

Lenovo XClarity Administrator is available from Lenovo at no charge, and it offers the following features:

- · Auto-discovery and monitoring of HX Certified Nodes
- · Firmware updates and compliance enforcement
- External alerts and notifications via SNMP traps, syslog remote logging, and e-mail
- Secure connections to managed endpoints
- NIST 800-131A or FIPS 140-2 compliant cryptographic standards between the management solution and managed endpoints
- Integration into existing higher-level management systems such as cloud automation and orchestration tools through REST APIs, providing extensive external visibility and control over hardware resources
- An intuitive, easy-to-use GUI
- Scripting support with Windows PowerShell, providing command-line visibility and control over hardware resources

For more information, refer to the Lenovo XClarity Administrator Product Guide: http://lenovopress.com/tips1200

Lenovo XClarity Energy Manager

Lenovo XClarity Energy Manager provides a stand-alone, web-based agent-less power management console that provides real time data and enables customers to observe, plan and manage power and cooling for Lenovo servers and appliances. Using built-in intelligence, XClarity Energy Manager identifies power consumption trends and ideal power settings, and it performs cooling analysis so that customers can define and optimize their power-saving policies.

^{**} EMEA = Europe, Middle East, Africa; LA = Latin America

Lenovo XClarity Energy Manager offers the following capabilities:

- · Monitors room, row, rack, and device levels in the data center
- Reports vital system information, such as power, temperature and resource utilization
- Monitors inlet temperature to locate hot spots, reducing the risk of data or device damage
- Provides finely-grained controls to limit platform power in compliance with IT policy
- · Generates alerts when a user-defined threshold is reached

Lenovo XClarity Energy Manager license is included in the XClarity Controller Enterprise upgrade.

For more information, refer to the Lenovo XClarity Energy Manager web page: http://datacentersupport.lenovo.com/us/en/solutions/lnvo-lxem

Physical specifications

The ThinkAgile HX5521 Certified Nodes have the following dimensions and weight (approximate):

• Height: 87 mm (3.4 in.)

• Width: 445 mm (17.5 in.)

• Depth: 720 mm (28.3 in.)

• Weight (maximum): 32 kg (70.5 lb)

Operating environment

The ThinkAgile HX Certified Nodes comply with ASHRAE class A2 specifications. The node performance might be impacted when the operating temperature is outside the ASHRAE A2 specifications. Depending on the hardware configuration, some HX5521 Certified Nodes comply with ASHRAE class A3 and class A4 specifications. To comply with ASHRAE class A3 and class A4 specifications, the nodes must meet the following hardware configuration requirements:

- Processors with TDP more than or equal to 150 W not installed.
- Intel Xeon Gold 6126, 6132, 6134, and 6134M processors not installed.
- M.2 5100 SSDs not installed.

The ThinkAgile HX Certified Nodes are supported in the following environment:

- · Air temperature:
 - · Operating:
 - ASHRAE Class A4: 5 °C 45 °C (41 °F 113 °F); for altitudes above 900 m (2,953 ft), decrease the maximum ambient temperature by 1 °C for every 125-m (410-ft) increase in altitude
 - ASHRAE Class A3: 5 °C 40 °C (41 °F 104 °F); for altitudes above 900 m (2,953 ft), decrease the maximum ambient temperature by 1 °C for every 175-m (574-ft) increasein altitude
 - ASHRAE Class A2: 10 °C 35 °C (50 °F 95 °F); for altitudes above 900 m (2,953 ft), decrease the maximum ambient temperature by 1 °C for every 300-m (984-ft) increase in altitude
 - Non-operating: 5 °C 45 °C (41 °F 113 °F)
 - $\circ~$ Storage: -40 °C +60 °C (-40~ °F 140 °F)

- Maximum altitude: 3,050 m (10,000 ft)
- Humidity:
 - Operating:
 - ASHRAE Class A4: 8% 90% (non-condensing); maximum dew point: 24 °C (75 °F)
 - ASHRAE Class A3: 8% 85% (non-condensing); maximum dew point: 24 °C (75 °F)
 - ASHRAE Class A2: 8% 80% (non-condensing); maximum dew point: 21 °C (70 °F)
 - Storage: 8% 90% (non-condensing)
- · Electrical:
 - ∘ 100 127 (nominal) V AC; 50 Hz / 60 Hz (except 750 W Titanium power supplies)
 - 200 240 (nominal) V AC; 50 Hz / 60 Hz
 - 180 300 V DC (supported in China only)
- Acoustics (maximum configuration, operating): 6.2 bels
- Vibration
 - Operating: 0.21 G rms at 5 Hz to 500 Hz for 15 minutes across 3 axes
 - Non-operating: 1.04 G rms at 2 Hz to 200 Hz for 15 minutes across 6 surfaces
- Shock:
 - Operating: 15 G for 3 milliseconds in each direction (positive and negative X, Y, and Z axes)
 - Non-operating:
 - ∘ 12 kg 22 kg: 50 G for 152 in./sec velocity change across 6 surfaces
 - 23 kg 31 kg: 35 G for 152 in./sec velocity change across 6 surfaces

The following table lists the maximum system power load, rated inlet current, and system heat output based on the power supply and source voltage.

Table 21. Rated system power, inlet current, and system heat output

Power supply	Source voltage	Maximum power load pe r system (two power supplies)	Rated current p er inlet	System heat out put
	100 – 127 V AC	984 W	8.4 A	3357 BTU/hour
750 W Platinum	200 – 240 V AC	958 W	4.1 A	3269 BTU/hour
	180 – 300 V DC	958 W	3.5 A	3269 BTU/hour
750 W Titanium	200 – 240 V AC	949 W	4.1 A	3238 BTU/hour
750 W Handin	180 – 300 V DC	948 W	3.5 A	3235 BTU/hour
	100 – 127 V AC	1382 W	12 A	4715 BTU/hour
1100 W Platinum	200 – 240 V AC	1408 W	6 A	4804 BTU/hour
	180 – 300 V DC	1408 W	5.1 A	4804 BTU/hour

Regulatory compliance

The ThinkAgile HX Certified Nodes conform to the following regulations:

- United States FCC Part 15, Class A
- Canada ICES-003/NMB-03, Class A
- UL/CSA 60950-1
- Mexico NOM-019
- Argentina IEC60950-1
- Japan VCCI, Class A
- Australia/New Zealand AS/NZS CISPR 22, Class A
- China CCC GB4943.1, GB9254 Class A, GB17625.1
- Taiwan BSMI CNS13438, Class A; CNS14336-1
- Korea KN22, Class A; KN24
- Russia/GOST ME01; IEC-60950-1; GOST R 51318.22, 51318.24, 51317.3.2, and 51317.3.3
- IEC 60950-1 (CB Certificate and CB Test Report)

- Europe CE Mark (EN55022 Class A, EN60950-1, EN55024, EN61000-3 2, EN61000-3-3)
- · CISPR 22, Class A
- Germany TUV-GS (EN60950-1/IEC60950-1, EK1-ITB2000)
- Reduction of Hazardous Substances (ROHS)
- Energy Star 3.0

Warranty and support

The ThinkAgile HX Certified Nodes can be configured with a one- (PRC only), three-, four, or five-year hardware warranty and various levels of service coverage with a well-defined scope of services, including service hours, response time, term of service, and service agreement terms and conditions.

The base warranty provides 9×5 Next Business Day response with parts delivered. Lenovo's additional support services provide a sophisticated, unified support structure for a customer's data center, with an experience consistently ranked number one in customer satisfaction worldwide.

The following Lenovo support services are available for selection:

- Warranty service level upgrades (Preconfigured Support) are available to meet the on-site response time targets that match the criticality of customer's systems:
 - 1 (PRC only), 3, 4, or 5 years of service coverage.
 - 1-year or 2-year post-warranty extensions.
 - Foundation Service: 9x5 service coverage with next business day onsite response, with optional YourDrive YourData.
 - Essential Service: 24×7 service coverage with 4-hour onsite response or 24-hour committed repair (available only in select regions), bundled with YourDrive YourData.
 - Advanced Service: 24×7 service coverage with 2-hour onsite response or 6-hour committed repair (available only in select regions), bundled with YourDrive YourData.

Managed Services

Lenovo Managed Services provide continuous 24×7 remote monitoring (plus 24×7 call center availability) and proactive management of a customer's data center using state of the art tools, systems, and practices by a team of highly skilled and experienced Lenovo services professionals. Quarterly reviews check error logs, verify firmware and operating system device driver levels, and software as needed. Lenovo will also maintain records of latest patches, critical updates, and firmware levels, to ensure customer's systems are providing business value through optimized performance.

Technical Account Management (TAM)

A Lenovo Technical Account Manager helps customers optimize operations of their data centers based on a deep understanding of customer's business. Customers gain direct access to a Lenovo TAM, who serves as their single point of contact to expedite service requests, provide status updates, and furnish reports to track incidents over time. Also, a TAM helps proactively make servicerecommendations and manage service relationship with Lenovo to make certain that customer's needs are met.

Enterprise Software Support

Lenovo Enterprise Software Support is an additional support service that provides customers with software support on Microsoft, Red Hat, SUSE, and VMWare applications and systems. Around the clock availability for critical problems plus unlimited calls and incidents helps customers address challenges fast, without incremental costs. Support staff can answer troubleshooting and diagnostic questions, address product

compatibility and interoperability issues, isolate causes of problems, report defects to software vendors, and more.

YourDrive YourData

Lenovo's YourDrive YourData service is a multi-drive retention offering that ensures that customer's data is always under their control, regardless of the number of drives that are installed in their Lenovo server. In the unlikely event of a drive failure, customers retain possession of their drive while Lenovo replaces the failed drive part. Customer's data stays safely on customer premises, in their hands. The YourDrive YourData service can be purchased in convenient bundles with Foundation, Essential, or Advanced services.

Health Check

Having a trusted partner who can perform regular and detailed health checks is central to maintaining efficiency and ensuring that customer systems and business are always running at their best. Health Check supports Lenovo-branded server, storage, and networking devices, as well as select Lenovosupported products from other vendors that are sold by Lenovo or a Lenovo-Authorized Reseller.

Some regions might have different warranty terms and conditions than the standard warranty. This is due to local business practices or laws in the specific region. Local service teams can assist in explaining regionspecific terms when needed. Examples of region specific warranty terms are second or longer business day parts delivery or parts-only base warranty.

If warranty terms and conditions include onsite labor for repair or replacement of parts, Lenovo will dispatch a service technician to the customer site to perform the replacement. Onsite labor under base warranty is limited to labor for replacement of parts that have been determined to be field replaceable units (FRUs). Parts that are determined to be customer-replaceable units (CRUs) do not include onsite labor under base warranty.

If warranty terms include parts-only base warranty, Lenovo is responsible for delivering only replacement parts that are under base warranty (including FRUs) that will be sent to a requested location for self-service. Parts-only service does not include a service technician being dispatched onsite. Parts must be changed at customer's own cost and labor and defective parts must be returned following the instructions supplied with the spare parts. Lenovo support services are region-specific. Not all support services are available in every region. For information about Lenovo support services that are available in a specific region, refer to the following resources:

- Service part numbers in Data Center Solution Configurator (DCSC): http://dcsc.lenovo.com/#/services
- Lenovo Services Availability Locator https://lenovolocator.com/

For service definitions, region-specific details, and service limitations, refer to the following documents:

- Lenovo Statement of Limited Warranty for Infrastructure Solutions Group (ISG) Servers and System Storage http://pcsupport.lenovo.com/us/en/solutions/ht503310
- Lenovo Data Center Services Agreement http://support.lenovo.com/us/en/solutions/ht116628

Deployment services

The following optional Lenovo Professional Services are available for the ThinkAgile HX Certified Nodes to get customers up and running quickly:

• Basic Hardware Installation Services

- Unpacking and inspecting the systems
- Installing options and mounting the systems in a rack cabinet
- Connecting the systems to electrical power and network
- · Checking and updating firmware to the latest levels
- Verifying operations
- Disposal of the packaging materials (within the customer site)
- Nutanix deployment services Base (per node)
 - Conducting remote preparation and planning
 - Verifying firmware versions and performing firmware updates, if needed
 - Installing and configuring hypervisor and Nutanix controller VM
 - · Creating Nutanix cluster
 - Configuring storage
 - · Configuring administrative features
- Nutanix deployment services Advanced (per cluster)
 - · Configuring and integrating a virtualized environment:
 - Nutanix containers and Acropolis (AHV) cluster; or
 - VMware vCenter Server and vSphere cluster; or
 - Microsoft Hyper-V cluster and System Center Virtual Machine Manager
 - Transferring knowledge
- Nutanix deployment services Advanced with XClarity (per cluster)
 - · Nutanix deployment services Advanced
 - Installing Lenovo XClarity
 - Configuring Lenovo XClarity network settings and performing discovery and inventory
 - Installing system updates

For more information, refer to the Data Center Deployment Services web page: http://www.lenovo.com/us/en/data-center/services/deployment

Related publications and links

For more information, see these resources:

Lenovo ThinkAgile HX Series

http://www3.lenovo.com/us/en/p/WMD00000326

• Lenovo Data Center Solution Configurator (DCSC):

http://dcsc.lenovo.com

Nutanix documentation

http://portal.nutanix.com/#/page/docs

• Lenovo ThinkAgile HX Series Best Recipes

http://datacentersupport.lenovo.com/us/en/solutions/ht505413

· Lenovo Data Center Support

http://datacentersupport.lenovo.com

Related product families

Product families related to this document are the following:

- · ThinkAgile HX Series for Nutanix
- Nutanix Alliance
- · Hyperconverged Infrastructure
- Hyperconverged Infrastructure

Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service. Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

Lenovo (United States), Inc. 8001 Development Drive Morrisville, NC 27560 U.S.A.

Attention: Lenovo Director of Licensing

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary. Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk. Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may varysignificantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

This document, LP0889, was created or updated on April 14, 2020. Send us your comments in one of the following ways:

• Use the online Contact us review form found at:

https://lenovopress.lenovo.com/LP0889

 Send your comments in an e-mail to: comments@lenovopress.com

This document is available online at https://lenovopress.lenovo.com/LP0889.

Trademarks

Lenovo and the Lenovo logo are trademarks or registered trademarks of Lenovo in the United States, other countries, or both. A current list of Lenovo trademarks is available on the Web at https://www.lenovo.com/us/en/legal/copytrade/

The following terms are trademarks of Lenovo in the United States, other countries, or both:

Lenovo® Lenovo Services ThinkAgile ThinkSystem TruDDR4 XClarity®

The following terms are trademarks of other companies:

Intel® and Xeon® are trademarks of Intel Corporation or its subsidiaries.

Hyper-V®, Microsoft®, PowerShell, Windows PowerShell®, Windows Server®, and Windows® are trademarks of Microsoft Corporation in the United States, other countries, or both.

Other company, product, or service names may be trademarks or service marks of others.



Documents / Resources



<u>Lenovo ThinkAgile HX5521 Certified Node Server</u> [pdf] User Guide ThinkAgile HX5521, Certified Node Server, ThinkAgile HX5521 Certified Node Server

References

- Home Data Center Support Lenovo Support US
- ThinkAgile HX Best Recipes Lenovo Support US
- Lenovo Capacity Planner (LCP) Lenovo Support US
- Lenovo XClarity Energy Manager (LXEM) Lenovo Support US
- L DCSC Data Center Solution Configurator
- L DCSC Data Center Solution Configurator
- Lenovo ThinkAgile HX5521 Certified Node (Xeon SP Gen 2) Product Guide > Lenovo Press
- Lenovo XClarity Administrator Product Guide > Lenovo Press
- Lenovo Statement of Limited Warranty for Data Center Group (DCG) Servers, System Storage and Networking Lenovo Support US
- Nutanix Support & Insights
- X Nutanix Sizer
- Lenovo Infrastructure Solutions Group Services Agreement Lenovo Support US
- As-a-Service | Lenovo US
- Lenovo ThinkAgile HX Series | Software Defined Infrastructure | Lenovo US
- Services Availability Locator
- Lenovo ThinkAgile HX5521 Certified Node (Xeon SP Gen 1) Product Guide (withdrawn product) > Lenovo Press
- Lenovo Press
- Landrey ThinkAgile HX Series for Nutanix > Lenovo Press
- L Nutanix Alliance > Lenovo Press
- Lenovo Press
- Lenovo US | Lenovo US | Lenovo US

Manuals+,