



# LITETRONICS PRC Series LED Light Panel Retrofit Instruction Manual

[Home](#) » [Litetronics](#) » LITETRONICS PRC Series LED Light Panel Retrofit Instruction Manual 

## LITETRONICS PRC Series LED Light Panel Retrofit



### Contents


- [1 WHAT COMES IN THE BOX](#)
- [2 TOOLS NEEDED](#)
- [3 SAFETY INSTRUCTIONS AND WARNINGS](#)
- [4 INSTALLATION PROCEDURE](#)
- [5 Customer Support](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)

## WHAT COMES IN THE BOX

2 Mounting rails  
2 Side rails  
1 LED Light Panel Retrofit  
4 Self tapping screws  
Installation Instructions  
2 Safety cables  
1 Quick Connect  
1 Luminaire label

## TOOLS NEEDED

Screwdriver or power drill

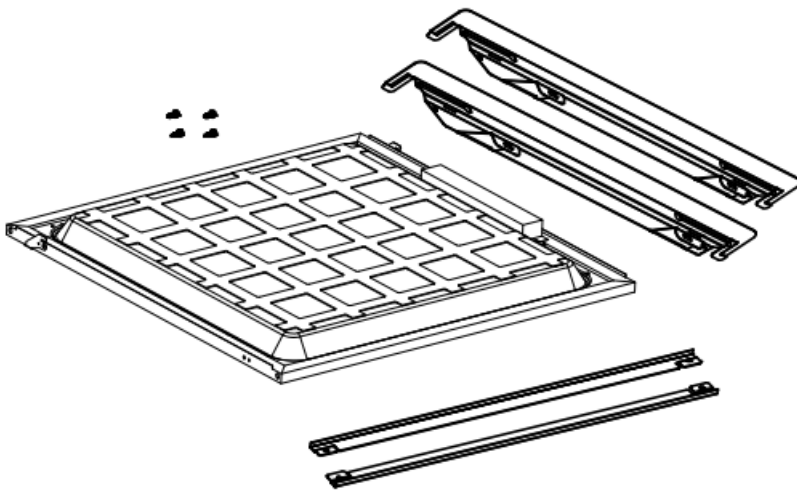

## SAFETY INSTRUCTIONS AND WARNINGS

### WARNINGS

Risk of fire or electric shock. LED Light Panel Retrofit kit installation requires knowledge of luminaires electrical system. If not qualified, do not attempt installation. Contact a qualified electrician. Luminaire wiring and electrical parts may be damaged when drilling for installation of retrofit kit. Check for enclosed wiring and components. Do not make or alter any open holes in the enclosure of wiring or electrical components during kit installation. Install this kit only in luminaires that have the construction features and dimensions shown in the photographs and/or drawings and where the input rating of the retrofit kit does not exceed the input rating of the luminaire. Only those open holds indicated in the photographs and/or drawings may be made or altered as a result of kit installation. Do not leave any other open holes in an enclosure of wiring or electrical components. To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

This LED Light Panel Retrofit kit shall only be installed into a UL/C-UL listed Fluorescent Recessed, Type IC or Non-IC, listed luminaire with a steel enclosure.

Risk of fire or electric shock. The electrical rating of these products are 120-277 Vac, the installer must determine whether they have 120-277 V at the luminaire before installation.

Risk of fire or electric shock. Install this kit only in the luminaires that have the construction features and dimensions shown in the photographs and/or drawings.

Risk of fire or electric shock. Luminaire wiring and electrical parts may be damaged when drilling for installation of LED retrofit kit. Check for enclosed wiring and components.

### DISCONNECT SAFETY INSTRUCTIONS:

This is a current rated device. Use in applications involving amperage beyond its rating can be dangerous and cause electrical fires. See note on this page for allowable current and voltage levels and do not exceed those levels.

Never remove wires from product as contact with electricity can cause serious injury or death. Shut off power at the circuit breaker or remove fuse when installing this product.

Improperly installed electrical wiring can be dangerous and cause electrical fires. This product must be used in accordance with the current rating and wire sizes listed.

**COPPER to COPPER ONLY.** Do not use on Aluminum. Temperature rating: 105° C (221° F) maximum. Flame Rated UL94V-0.

## INSTALLATION PROCEDURE

### READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

#### Preparation

1. Turn off power at the electrical panel.
2. Remove the lens/diffuser, tubes and ballast from the existing troffer.
3. Locate the wattage and CCT slide switch, which can be found on the outside of the driver, and adjust to the desired settings.

Wattage settings:

- 2' x 4' fixture: 23W (2,875 lumens) | 30W (3,750 lumens) | 36W (4,500 lumens)
- 2' x 2' fixture: 18W (2,250 lumens) | 22W (2,750 lumens) | 25W (3,125 lumens)
- 1' x 4' fixture: 18W (2,250 lumens) | 22W (2,750 lumens) | 25W (3,125 lumens)

CCT settings:


- 3500K | 4000K | 5000K

#### Rail installation

4. Insert the mounting rails on the opposite sides of the troffer. Slide them between the troffer and t-grid.


See Figure 1.

**FIGURE 1**

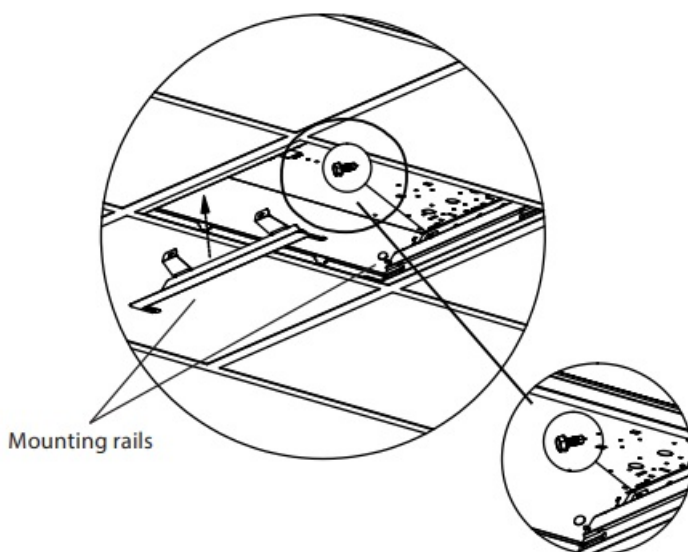

5. Next, insert the side rails on the remaining opposite sides of the troffer, between the troffer and t-grid, and insert the end tabs into the slots on the mounting rails. See Figure 2.


**FIGURE 2**

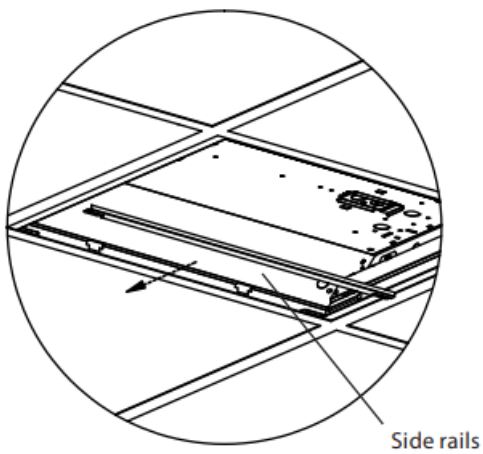

6. Secure the mounting rails to the troffer using the included self-drilling screws. See Figure 1.


**Panel installation**

7. Locate the two panel hinges on the side edge of the panel. Insert the hinges into the keyhole on the mounting rails. This will allow the panel to hang freely. **See Figure 3.**

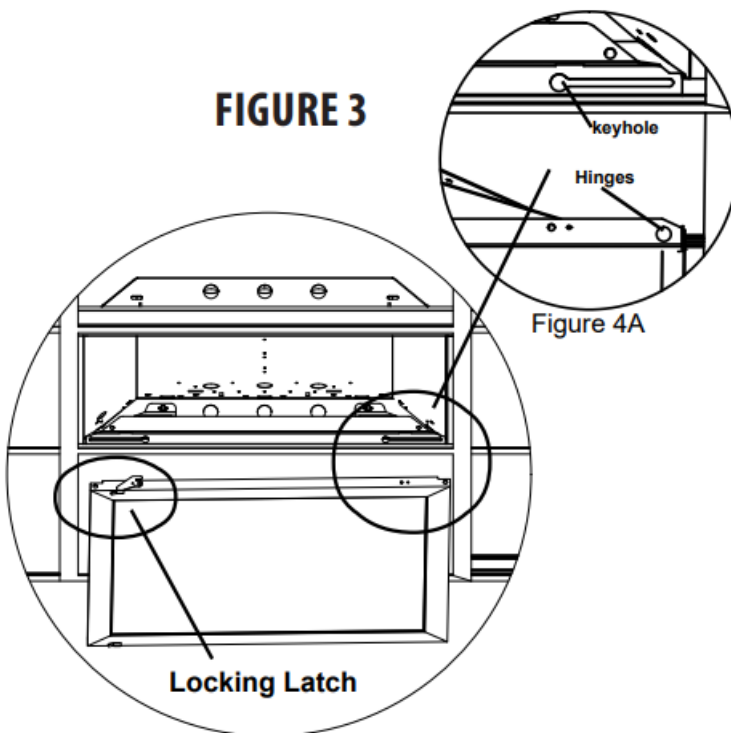


8. Attach the two seismic safety cables from the panel to the mounting rail clip. **See figure 4.**

**FIGURE 4**

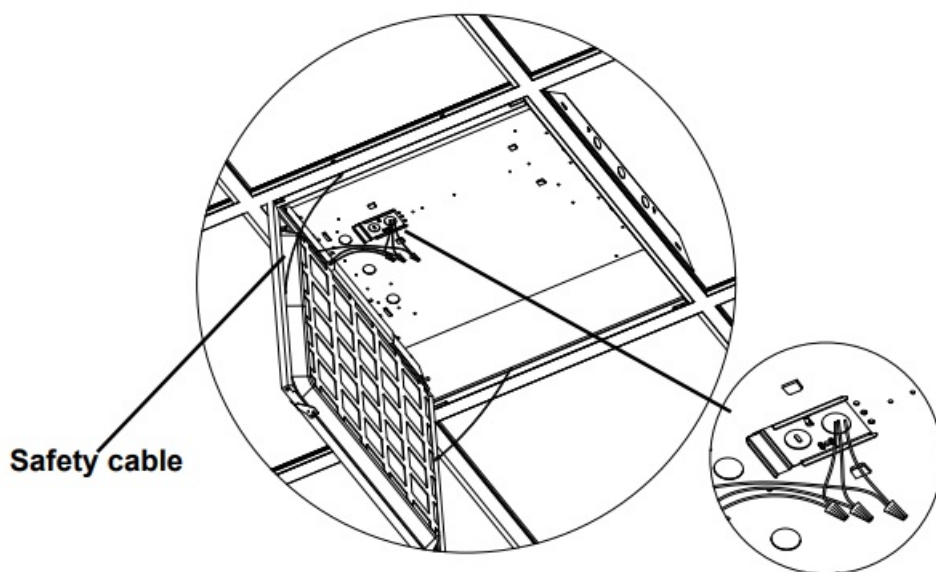

9. Connect power wires AC-L (Black) and AC-N (White) into the open side of the quick-connect.
10. Connect the ground wire.
11. Connect Purple (Dim+) and Pink (Dim-) to \*0-10V dimmer (if required) with help of wire nuts (not included).  
\*Follow dimmer control manufacturer instructions
12. Apply the luminaire label to the inside of the troffer.
13. Locate the locking latches (2) on the panel and rotate them to the open or install position.
14. Swing the panel up so it's even with the ceiling. Then rotate the locking latches (2) so that they engage the mounting rail tabs. Panel should be flush to ceiling. See **Figure 5**.

**FIGURE 5**

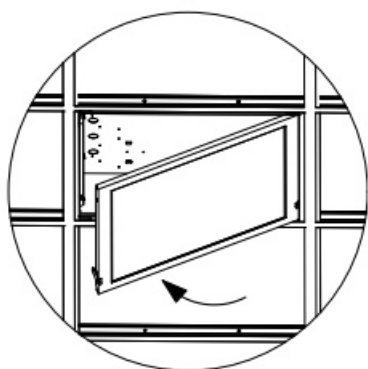

15. Your installation is complete. Once all retrofit kits have been installed you can restore power.

The information and product specifications contained in these instructions are based upon data believed to be accurate at the time of printing. This information is subject to change without notice and without incurring liability. If you have questions regarding specific product details, please contact us at 800-860-3392 or via email at [customerservice@litetronics.com](mailto:customerservice@litetronics.com).

To check for an updated version of these instructions, please visit [www.litetronics.com](http://www.litetronics.com).

## Customer Support



Thank you for choosing


6969 W. 73rd Street  
Bedford Park, IL 60638

[WWW.LITETRONICS.COM](http://WWW.LITETRONICS.COM)

Customer [Service@Litetronics.com](mailto:Service@Litetronics.com) or 1-800-860-3392

# LITETRONICS®

## Documents / Resources

	<p><a href="#">LITETRONICS PRC Series LED Light Panel Retrofit</a> [pdf] Instruction Manual PRC-Series, PRC Series LED Light Panel Retrofit, LED Light Panel Retrofit, Light Panel Retrofit , Panel Retrofit, Retrofit</p>
--	--

## References

- [DLC DLC Qualified Products Lists - DesignLights](#)
- [Commercial Lighting Company | LED Lighting Solutions](#)

[Manuals+](#)