



ring Floodlight Cam Wired Plus User Guide

[Home](#) » [Ring](#) » ring Floodlight Cam Wired Plus User Guide 

Contents

1 ring Floodlight Cam Wired Plus User Guide

- 1.1 Quick Start
- 1.2 Shut off power at the breaker!
- 1.3 Prep your Floodlight Cam for installation
- 1.4 Remove your existing floodlight
- 1.5 Choose your screws
- 1.6 Attach the metal mounting bracket
- 1.7 Install the plastic mounting plate
- 1.8 Hang it up
- 1.9 Connect the wires
- 1.10 Mount the light fixture
- 1.11 Restore power at the breaker
- 1.12 Complete setup in the Ring App
- 1.13 Review, share and download
- 1.14 What is Ring Protect?
- 1.15 Why do I want it?
- 1.16 How much does it cost?
- 1.17 How do I sign up?

2 Documents / Resources

2.1 References

3 Related Posts

ring Floodlight Cam Wired Plus User Guide





WARNING: Risk of electrical shock.

Disconnect power at the fuse or circuit breaker before installing.

Verify that the supply voltage is correct. Connect fixture to a 100 VAC~240 VAC 50/60 Hz power source.

Properly ground fixture.

Always follow code standards when installing wired connections.

CAUTION: Risk of fire. Do not install near combustible or flammable surfaces.

NOTICE: Do not connect this light fixture to a dimmer switch or timer.

Your Floodlight Cam must be installed on a 4" round UL listed weatherproof electrical box.

This manual is for informational purposes only. Working with electricity can be dangerous unless proper safety precautions are taken. If you are not comfortable or are inexperienced with the processes and tools described in this manual, we recommend that you hire a licensed electrician.

Quick Start

1. Open the Ring app and select Set Up a Device.

Then follow the in-app instructions.


2. Scan this code.

This identifies your Ring device to make setup fast and easy.




Shut off power at the breaker!

You'll be working with electrical wires during the install process. If you don't know where your breaker is or how to turn off power to your floodlight circuit, we recommend you hire a licensed electrician.

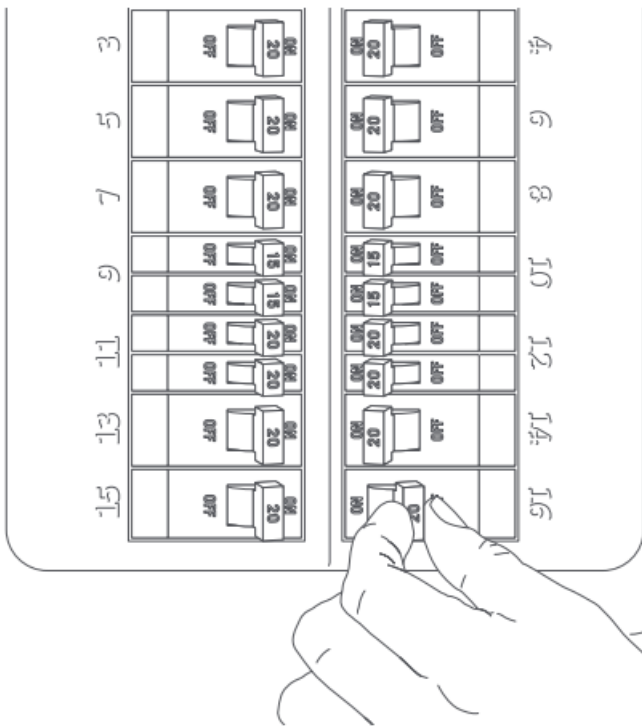


Prep your Floodlight Cam for installation

First, rotate the lights out of the way, like this...

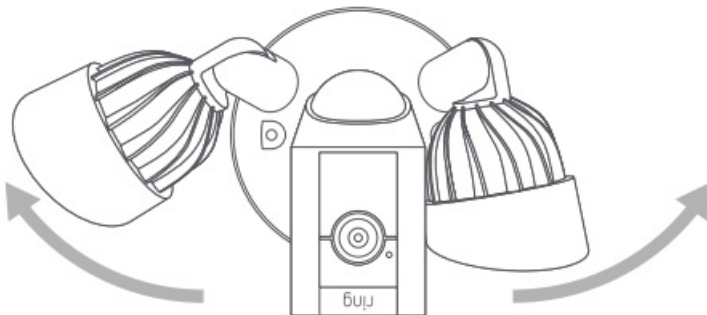


If you're mounting on an eave or overhang, your camera is already in position.

If you're mounting to a wall, rotate the camera into position like this...

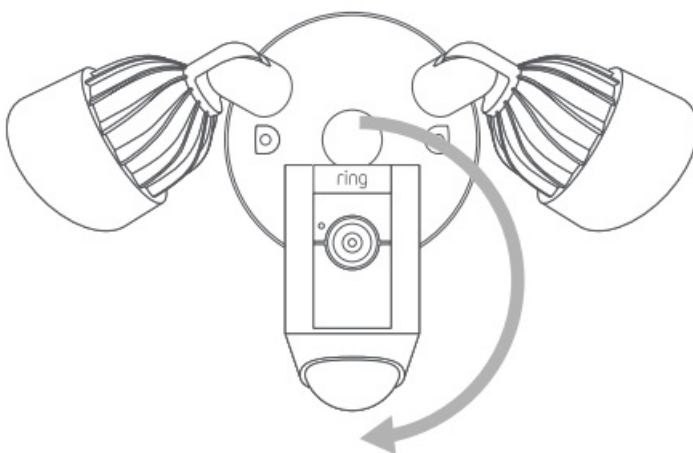


Remove your existing floodlight

With power off at the breaker, remove your existing floodlight from the junction box it's attached to and disconnect the wires.

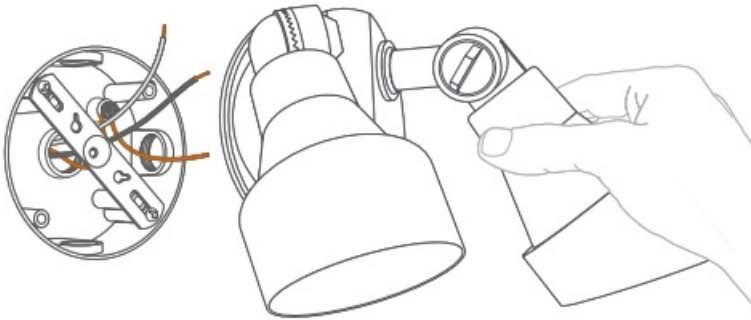

If there is a metal bracket attached to your junction box, remove that as well.

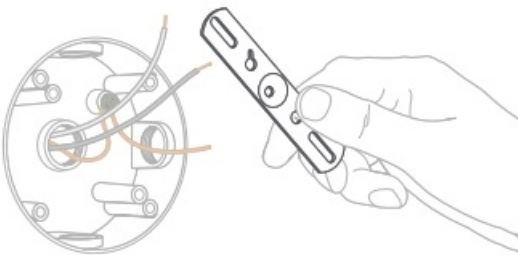

Choose your screws

Select a set of screws from the bags marked “A” through “F” that fit your junction box to secure the metal mounting bracket. One size does not fit all here, so we sent several.

Save a screw from either Bag B or C. You will use it on the next page.

Bag A	Standard screws. These should fit most junction boxes.
Bag B & C	Longer screws to reach the screw holes in recessed junction boxes.
Bag D, E & F	Best for older boxes with smaller screw holes.

Attach the metal mounting bracket

With the screws you selected in the previous step, secure the metal mounting bracket to your junction box using either pair of screw holes. Be sure to align the bracket so that the “FRONT” text faces outwards.




Install the plastic mounting plate

Pull gently from the opening of the plastic plate to free it from the fixture, then feed your power wires through the opening.


With your power wires fed through the mounting plate, center it over the metal mounting bracket. If you're installing on a wall, the "UP" arrow should point up. If you're installing under an eave, it should point towards the wall.

Then, insert one of the screws from Bag B or C into the center hole, and tighten to secure.

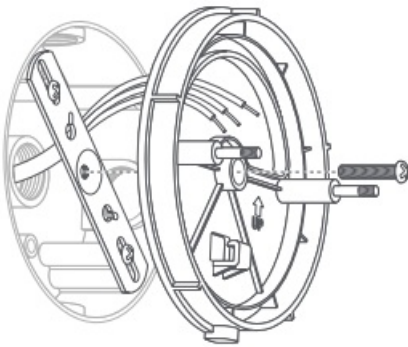

Hang it up

Locate the nylon strap on the back of your Floodlight Cam light fixture, and loop the buckle at the end over the hook on the mounting plate. Make sure the buckle and hook are secure before releasing the light fixture.

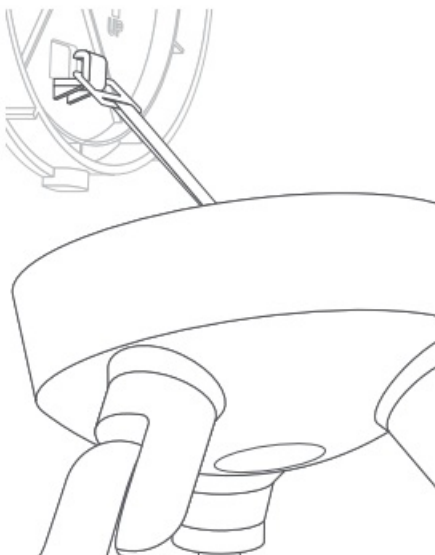

Connect the wires

The green wire on your Floodlight Cam is the ground wire. With power still off at the breaker, use a wire nut from the bag marked “G” to connect the green (or ground) wire from your Floodlight Cam to the green wire coming from your junction box.


The white wire on your Floodlight Cam is a neutral wire. Use another wire nut from the bag marked “G” to connect the white wire from your Floodlight Cam to the white (or neutral) wire coming from your junction box.

The black wire on your Floodlight Cam is a hot wire. Use another wire nut from the bag marked “G” to connect the black wire from your Floodlight Cam to the black (or hot) wire from your junction box.

Give all 3 wire connections and wire nuts a gentle tug to make sure they are secure.



WARNING: If you can't easily identify the wires coming out of your junction box, or have difficulty with or are uncomfortable connecting them, consult with a licensed electrician.

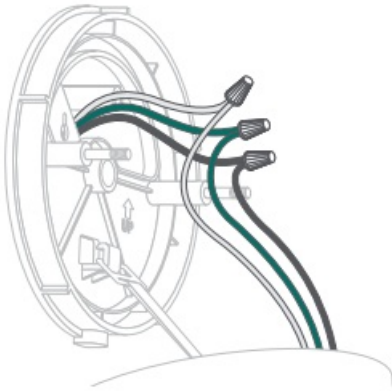

Mount the light fixture

Tuck the power wires into the junction box, then align the two holes on the light fixture with the threaded posts on the plastic mounting plate. Slide the light fixture onto the posts and push it firmly into place.


Secure your fixture using two of the hex cap nuts from Bag G over the ends of the threaded posts. Remove the reversible bit from the included screwdriver and use the handle to tighten the hex cap nuts.

Once your Floodlight Cam is secured, apply a weatherproof silicone caulk or sealant (not included) around the outside, where the Floodlight Cam and junction box meet.



Restore power at the breaker

Now that your Floodlight Cam is installed, you can turn power back on at the breaker. The lamps on your Floodlight Cam will flash once it's powered on.

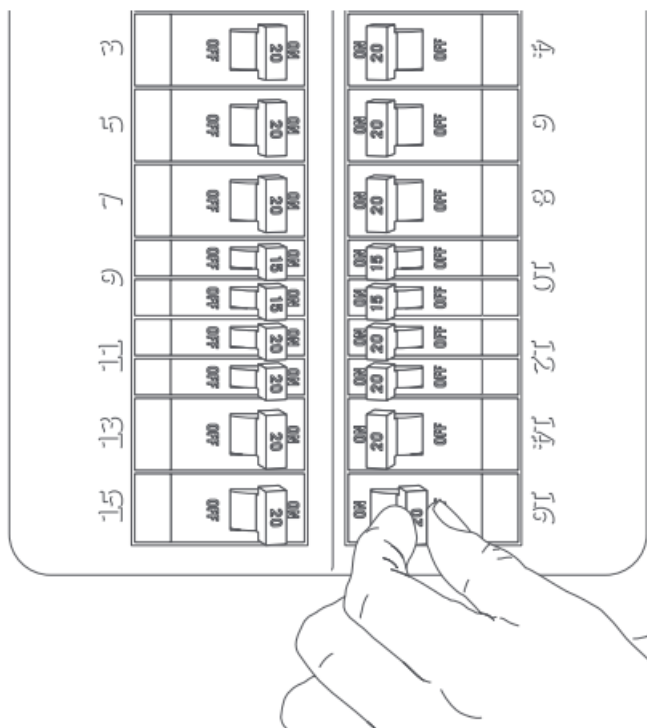


Complete setup in the Ring App

Once your Floodlight Cam powers on, follow the instructions to continue with setup in the app.

Review, share and download

Your new device comes with a free 30-day trial of our **Ring Protect** video recording service.

To continue your subscription and save your videos, please visit ring.com/protect-plans

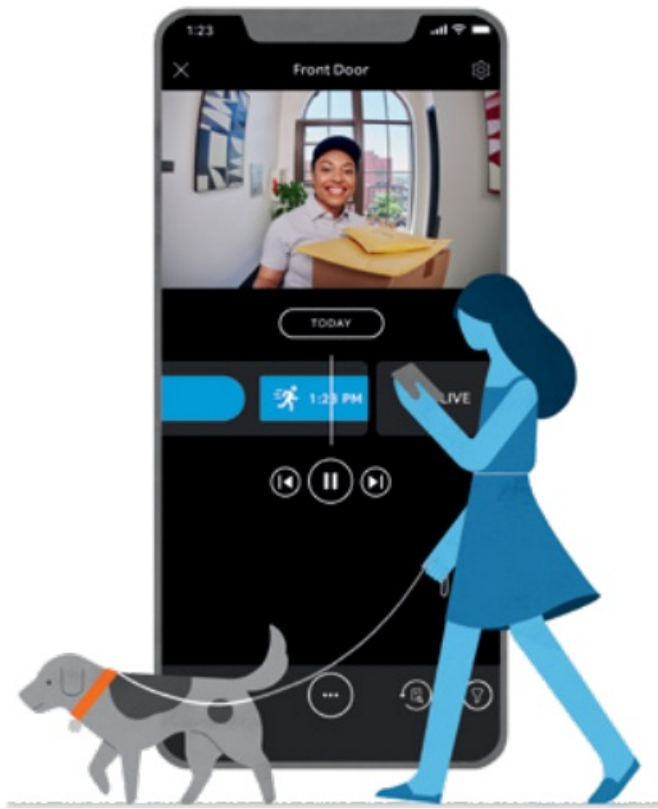

What is Ring Protect?

Ring Protect is a subscription service that stores videos from your Ring devices.

Why do I want it?

Ring lets you interact with visitors and monitor your property in real time, while Ring Protect allows you review and share those videos anytime.

How much does it cost?

Ring Protect starts at \$3 USD/month or \$30 USD/year per Ring doorbell or camera.*

* \$5 CAD per month or \$50 CAD per year

How do I sign up?

Simply log into your Ring account at ring.com/protect-plans, and follow the on-screen instructions.

For additional help, visit ring.com/help

Or give us a call

US 1 800 656 1918
Canada 1 855 300 7289
Worldwide +1 310 929 7085

For a list of all our customer support numbers, visit ring.com/callus



For information on our warranty, theft protection, and Ring Protect Plans, visit ring.com/legal

© 2021 Ring LLC or its affiliates.

Ring and all related marks are trademarks of Ring LLC or its affiliates.

XX-XXXXXX-XX

Documents / Resources

	ring Floodlight Cam Wired Plus [pdf] User Guide Floodlight Cam Wired Plus
	ring Floodlight Cam Wired Plus [pdf] User Guide Floodlight Cam Wired Plus, Floodlight Cam, Wired Plus Camera, Floodlight Camera

References

- [a Amazon Digital Services and Device Support - Amazon Customer Service](#)
- [Home Security Systems, Cameras, Alarms, and Smart Home Automation | Ring](#)
- [Ring: Security Systems, Cameras, Alarms, and Smart Home Automation | Ring](#)
- [Legal Information, Support & Resources | Ring](#)
- [Ring Protect Plans | Home Security and Video Monitoring Service | Ring](#)

[Manuals+](#).