# **Quick Guide**

## **Attention**

The purpose of this Quick Guide is to help you understand the operation of the TENS unit much more quickly, and the contents of the quick guide are not a substitute for the user manual. Please read the user manual carefully before use to understand the contraindications and warnings. Please consult your doctor before use if you're not sure whether you can use this device.

## **OPERATION STEPS**

Note: Do not use it while charging.








3. Attach the pads to the skin firmly.

device.



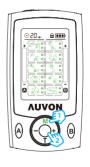

5. Choose the connected channel.

6. Select a mode.





## 7. Adjust intensity.








- 9. Lock / Unlock the screen by holding () for 3 seconds.
- 10. Turn off the device after massage.





11. Remove the pads (do not pull the wire).

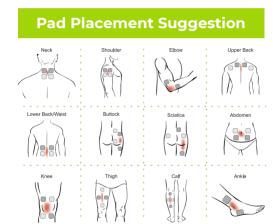

#### Notes:

- Do not use the unit while bathing, sleeping, driving, operating machinery, or during any electrically-stimulated activity.
- 2. The electrode pads should not be overlapped nor placed on the artery, broken skin, or on the same side of the arm/leg.



# **USER MANUAL**

# **Dual Channel TENS Massager**

Please read the product introduction carefully before using the product

Model AS8012

# **TABLE OF CONTENTS**

1.	Explanation of TENS	7
2.	Standard Package	7
3.	Illustration of the Device	8
4.	Operating Instructions	10
	4.1 Note Before Use	10
	4.2 How to Use	10
	4.3 After Use	15
	4.4 Charge the Battery	16
5.	Mode Instruction	16
	5.1 Mode Description	16
	5.2 Pad Placement Suggestion	19
6.	TENS Electrode Pads & Pads Holder	21
	6.1 Features	21
	6.2 Instruction	22
	6.3 Electrode Pads Care and Storage	23
	6.4 Electrode Pads Precautions	24
7.	Safety Precautions and Warnings	25
	7.1 Prohibited Conditions	25
	7.2 Prohibited Individuals	26
	7.3 Prohibited Areas	26
	7.4 Prohibited Activities	26
8.	Trouble Shooting	27
9.	Features	30
10	. Symbols	30
	Certification	
12	Customer Service	32


# Explanation of TENS

Transcutaneous Electrical Nerve Stimulation (TENS) is a non-invasive, drug-free method of pain control. TENS uses tiny electrical impulses sent through the skin to nerves to modify your pain perception. TENS is used for temporary relief of pain associated with sore and aching muscles in the shoulder, waist, back, neck, upper extremities (arm), and lower extremities (leg) due to strain from exercise or normal household work activities.

# 2. Standard Package

- AUVON® Dual Channel TENS Massager
- Pin Pads
- Pads Holder
- Pouch
- Set of Lead Wires
- USB Cable
- User Manual

# 3. Illustration of the Device

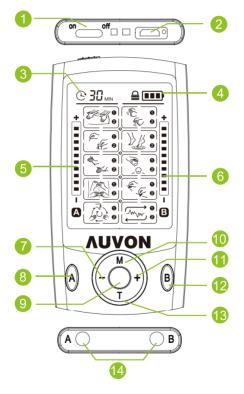

- On / off switch
- (2) USB port
- Time indicator
- Battery indicator
- (5) Adjustable Intensity (A Channel)
- 6 Adjustable Intensity (B Channel)
- 7) Intensity Decrease (-)
- (8) Channel A
- 9 Lock button
- (10) Mode Selection
- (11) Intensity Increase (+)
- (12) Channel B
- (13) Time Selection
- 14) Two output connector

# 4. Operating Instructions

#### 4.1 Note Before Use

- Do not use this device during charging.
- The backlight of the screen will automatically come off after 10 seconds of no operation; the machine will automatically shut down when the set time is over.
- You may experience tingling, trembling, or muscle pulling when using the device, so please try out all the modes and select the one that's most comfortable for you.
- For initial use, the intensity should be set between 1-3. If you feel the intensity is weak in 1-2 minutes, gradually increase it and select the most comfortable setting.
- It is recommended to use the device for 20-30 minutes and to stop using it when pain is relieved.

#### 4.2 How to Use

 Clean and dry the application area, and do not attach electrode pads to the hairy and broken skin.




TIP: Use it on the hairless, no oil and no sweat part, or it will reduce the pads' adhesion.

2. Take out the pads from the sealed packaging and keep the packaging for future storage.



3. Connect one pair of electrode pads to one lead wire and plug the other end of the wire into the A or B output of the device.

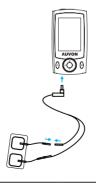

4. Grab the corner of the electrode pad and peel it off the protective film, and **do not pull the wire directly.** Attach one pair of electrode pads to the massage area and press the edge of the electrode pads firmly on your skin to make sure full contact. For additional relief, use the second port with two additional pads on the area. (Make sure the unit is off when you attach the pads.)

NOTE: Each lead wire needs to be connected to a pair of pads (2 pads), or it won't work.



Turn on the device by sliding the on/off switch on the top of the unit.



6. Channel Option: Choose the channel A/ B by pressing the A/B button, and the selected channel will flash



7. Mode Option: Press the M button to choose main mode and press the center button () to choose submode under the selected main mode

NOTE: The intensity of the channel will revert to the lowest setting with each mode selection.



8. Intensity Option: To increase or decrease the intensity of the selected channel, please press the "+/-" button. Includes 20 Levels, each indicator bar represents 2 strength levels. For initial use, the intensity should be set between 1-3. If you feel the intensity is weak in 1-2 minutes, gradually increase it and select the most comfortable setting.



9. With the "T" button you can set the massage time from 10-60 minutes and when the remaining time is up, the device will automatically turn off.

NOTE: It is recommended that each area should not use this device for more than 30 minutes at a time. Stop using it if the pain is relieved.



10. Press and hold the Center button of for 3 seconds to lock the device, then the intensity, mode, and time can't be adjusted. Press the center button for 3 seconds again to unlock the screen

NOTE: Do not move the electrode pads or remove the lead wires during the use, or you may be shocked.



#### 4.3 After Use

- 1. Turn off the device by sliding the on/off switch on the top of the unit.
- Grab a corner of the electrode pad and slowly peel it away from the skin, do not pull the wire, and avoid touching the gel as much as possible.
- Place the sticky side of the pad on the transparent film or pad holder and remove the lead wire connector from the electrode pads gently.
- 4. Store the electrode pads in the storage bag and reseal tightly to prevent them from dry-out. Store them at room or cool temperature (between 5 °C-35 °C/41°F-95°F) and keep out of direct sunlight.
- 5. Organize the wires with the cable tie and store all of them in the pouch for the store.

## 4.4 Charge the Battery

- When the battery icon shows "
   " or the massage strength decreases, it indicates that the battery needs to charge. Turn off the unit.
- Connect the device and the charger with a USB extension cord. Plug the charger into any power outlet, the power icon appears and blinks, and the time display value will update to the percentage of charge.
   Other icons will not display on the screen.

Charging	Input	100-240V AC 50/60Hz 0.25A
Parameters	Output	DC 5V

• The machine does not work while charging. Normal charging will last approximately 2-3 hours.

TIP: Charge the unit at least every 3 months if it is not used regularly.

# 5. Mode Instruction

# 5.1 Mode Description

Main Mode	Mode Number	Pulse Rate (Hz)	Pulse Width (µs)
	1	75	80
9	2	75	80
		11-98	00

Main Mode	Mode Number	Pulse Rate (Hz)	Pulse Width (µs)
	3	2	80
		2	
	4	11-98	80
		90	
(£, 0)	5	10-55	80
( ) ( ) ( ) ( ) ( ) ( ) ( ) ( )	6	75	80
		11-98	
\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	7	47	80
	8	67	80
		90	
	9	90	80
	10	2	
		75	80
		11-98	
	11	98	80
وَ مِنْ الْمَالِينِ الْمَالِينِ الْمَالِينِ الْمَالِينِ الْمَالِينِ الْمَالِينِ الْمَالِينِ الْمَالِينِ الْمَا	12	4	90
		90	80

Main Mode	Mode Number	Pulse Rate (Hz)	Pulse Width (µs)
	13	4	80
	13	80	00
20		1	
	14	11-98	80
		90	
	15	63	80
		3	
	16	66	80
		11-98	
	17	63	80
		98	
		1.6	
	18	92	80
		92	
		98	
		1.6	
	19	67	80
	19	90	OU
	20	2.6-1.1	80
	20	80	00

## **5.2 Pad Placement Suggestion**

#### **Neck Pain**



Modes: 5, 7

#### Shoulder Pain



Modes: 5, 6, 19, 20

Tennis Elbow



Modes: 3, 4, 5, 7

Carpal Tunnel Syndrome



Modes: 9, 13, 15

Back Pain



Modes: 1, 2, 5, 6, 7, 8, 20

#### Sciatica



Modes: 10, 11, 12, 14, 16, 17, 18, 20

## Hip/Thigh Pain



Modes: 3, 5, 7

#### Period Pain



Modes: 19, 20

#### Knee Pain



Modes: 5, 7

## Claf Pain



Modes: 7, 8

#### Ankle Pain



Modes: 3, 4


#### Plantar Fasciitis



Modes: 5, 7


# 6. TENS Electrode Pads & Pads Holder

#### 6.1 Features

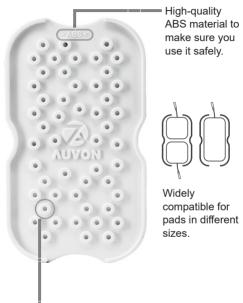


The salient points are designed specially to lessen damage to the pads.


#### 6.2 Instruction

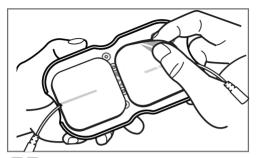

Stick the electrode pads on the holder to avoid getting dust.

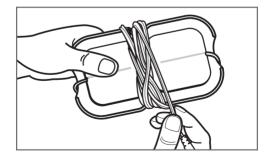

Wind the thread around the holder for easy use as shown.

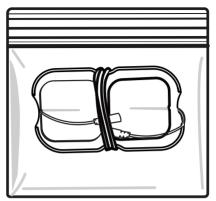

Step 3

Step 3: Store the electrodes in the storage bag and reseal the bag tightly.

## 6.3 Electrode Pads Care and Storage

- •Do not cover the sticky side of the electrode pads with subjects like dry paper or dust, if you do, please drop a few drops of water and clean with finger pulp to remove dirt.
- •To extend the electrode pads' lifespan, drop a few drops of water on the sticky side and dry it naturally on the pad holder with the gel side facing up, then it will become sticky again. (Excessive water will decrease the stickiness.)
- •Cover the sticky side of the electrode pads with the transparent film, and store them in the sealed bag. (Dust on the gel will decrease the stickiness of the electrode pads.)

- •Please store the electrode pads in a cool (between 5°C-35°C/41°F-95°F) and dry place. Do not expose the electrode pads to sunlight or any extreme temperatures to prolong the lifespan of the electrode pads.
- When the electrode pad has the following conditions, please do not use it and promptly replace it: gel melting; gel damaged; electrode pads not sticking; electrode pads deformed.

#### 6.4 Electrode Pads Precautions

- Do not use it when driving a motor vehicle, bathing, showering, swimming, or exercising.
- Do not use the following areas: heart, spine, eyes, mouth, carotid artery, or throat; broken, excessively swollen and red, infected and inflamed, or rash skin (e.g. phlebitis, thrombophlebitis, varicose veins).
- •Do not apply ointment or solvent to the electrode pads or the area where to be used.
- The electrode pads should not touch metal objects like belt buckles, necklaces, or other metal worn under clothes.
- •Please refer to the following principles when using:

\*During use, please ensure your hands and application area are clean and dry to avoid electric shock when inserting and removing electrode pads and wires.

\*Please attach electrode pads to a flat area to ensure the electrode does not warp. Avoid placing the electrode pads on joints such as the knee, elbow, ankle, etc.

\*Do not overlap or bend the electrode pads when applying to the skin, or the device may stop work-

ing, and the gel may be damaged when separating. The electrode pads should be at least one inch apart from each other. Changing the distance between the electrode pads or the orientation of the electrode pads can change the electrical sensation.

\*Ensure each connection port is well connected before use, or the current may be unstable. Do not move the electrode pads or unplug the lead wires by hand during the usage, or you will be shocked.

\*It is recommended to use the electrode pads for 20-30 minutes per part, 1-2 times a day, with the intensity based on personal feeling. Attaching the pads to one area for a long time will make the skin unbreathable and lead to redness or itching. If your skin is irritated during the use, stop using the electrode pads and consult your doctor.

\*Please turn off the unit first and remove the pads from your skin, or you will be shocked.

\*When removing the electrode pads, grab the corner of the electrode pad with your finger pulp and peel it off, do not touch the gel with your nail, and do not pull the wire, or the electrode pad and lead wire will be damaged.

•Keep electrode pads out of the reach of children or pets.

# 7. Safety Precautions and Warnings

### 7.1 Prohibited Conditions

- The wire is broken.
- The electrode pads are not sticky, deformed or damaged.

•The lead wire connection port is broken.

#### 7.2 Prohibited Individuals

- Pregnant women, infants and children.
- People who do not have the ability to express their thoughts or intentions.
- People who are incapable of operating the device by themselves.
- People who have a tendency to bleed internally after an injury or fracture.
- Patients with suspected or confirmed heart disease or epilepsy.

#### 7.3 Prohibited Areas

- Any part of the head or face.
- Any part of the throat and its vicinity, can cause severe muscle spasms and lead to choking.
- The heart and its vicinity or genital area.
- · Open wounds or rash areas.
- Swollen, red, infected or inflamed areas.
- Areas of skin erosion (caused by varicose veins, phlebitis, thrombophlebitis, and thrombosis).
- · Sites on or near cancerous lesions.
- Skin that lacks normal sensation.
- Do not use the electrode pads in the following two areas at the same time, because the current may cause heart rhythm disorders, or even cause death.
- a. Both sides of the chest (left and right or front and back) or through the chest.
- b.Calves of both legs.
- c. Bottom of both legs.

#### 7.4 Prohibited Activities

• Shower or bath.

- Sleeping.
- Driving or operating machines.
- Exercising.
- Any activities that cannot be interfered with.

# 8. Trouble Shooting

If your device is not operating properly, please check below for common problems and suggested solutions. If the recommended action does not solve the problem, please contact customer service: support@iauvon.com.

Problem	Possible Cause	Solution
	The intensity is not increased for the right channel.	Try to increase the intensi- ty for the right channel and wait for 1 minute to feel the pulse.
The unit is on but no pulse	Only apply 1 electrode pad to the massage area.	Attach a pair of electrode pads(of the same channel) to the massage area.
is felt from the pads.	Poor connection between the electrode pads and the device.	Connect both ends of the lead wires to the electrode pads and the device tightly or change a new lead wire.
	Poor contact between the electrode pads and massage area.	Attach electrode pads to the skin (no hair, unbroken and flat) firmly.

Problem	Possible Cause	Solution
One pad feels	Different body areas react differently.	Try to change the position of the electrode pads.
stronger than the other.	Poor wire connection.	Plug the wire into the output port completely. If it does not work, replace the wire and try again.
Power cuts off	Low battery.	Charge the battery and a full charge may take 2-3 hours.
during use.	The default timer is finished.	Set the time again with the "T" button from 10-60 minutes.
	Low battery.	Charge the battery and a full charge may need 2-3 hours.
	The device is charging.	Unplug the charging cable and then turn it on again.
The device can't turn on.	The power button cannot move.	The button may be stuck, please shake the body, and then try to dial the button.
	The power button fails.	If the button is already in the ON position, toggle it to the OFF position and try to restart.

Problem	Possible Cause	Solution
The skin	Excessive usage time or the intensity is too high.	Reduce the application time or decrease the intensity.
or the skin feels irritated.	The electrode pad surface is worn out.	When the pad has the following conditions, please do not use and promptly replace it: gel melting; patch does not stick; pads deformed; gel damaged.
	The screen is locked.	If there's a lock icon   on the top right side of the screen, please long press the center button   to unlock it.
Can't adjust the time/ intensity/ mode.	Adjust the intensity for the wrong channel.	If you want to adjust the intensity for channel A, press the "A" button and make sure the "A" icon is selected and blinking, then adjust the intensity. Channel B is the same.
	Mode switch only in main modes.	Press the M button to choose the main mode and press the center button to choose a submode under the selected main mode.

## 9. Features

Mechanism	Technical Description
Wave Form	Symmetrical Bi-Phasic Square
Pulse Voltage	0-165V (Load: 500 ohm)
Power source	180mA lithium battery
Size	10.3cm(L)x5.5cm(W)x1.2cm(H)
Weight	76.4grams.
Operating Condition	Atmosphere Pressure: 700Hpa~1060Hpa.
Remark	There may be a +/-5% tolerance of all parameters and +/-20%tolerance of amplitude & p; voltage.

# 10. Symbols

Symbol	Meaning
À	Attention, consult accompanying documents

Symbol	Meaning
↟	BF Isolated Applied Part
	Class II equipment
X	Disposal in accordance with Directive 2002/96/EC
	MANUFACTURER
سا	Date when the medical device was manufactured.
EC REP	AUTHORISED REPRESENTATIVE IN THE EUROPEAN COMMUNITY
<b>(3)</b>	Pls read the user manual before use
<b>C E</b> 2797	CE Mark, meets compliance of applicable directives and regulation in EU

Symbol	Meaning
IP22	IIIP Classification: The first number 2: Protected against access to hazardous parts with a finger, and the jointed test finger of 12 mm $\Phi,$ 80 mm length, shall have adequate clearance from hazardous parts, and protected against solid foreign objects of 12.5 mm $\Phi$ and greater. The second number: Protected against vertically falling water drops when enclosure is tilted up to 15°. Vertically falling drops shall have no harmful effects when the enclosure is tilted at any angle up to 15" on either side of the vertical.

## 11. Certification

The device complies with following normative documents: ANSI/ES 60601-1, IEC60601-1-2, IEC60601-1-11, IEC 60601-2-10, ISO 10993-5, ISO 10993-10, FDA, MDD, CA65.

# 12. Customer Service

24-Month Limited Warranty

Lifetime Technical Support

+1(678)829-7256

