


## 1 Cautions before Installation (This may differ from the product specification.)

- Installation Space**
- Secure enough installation space in the bathroom and check whether it disturbs the bathroom door.

- Secure water outlet at least 100mm away from the floor.
- It can cause the discoloration of wall.

\* If you have shorter rough in than 11", you can use an **offset flange** for installation.  
 \* If you have well water system, please contact us before installation.  
 E-mail : support@vovousa.com

Floor  
Drain  
installation  
space

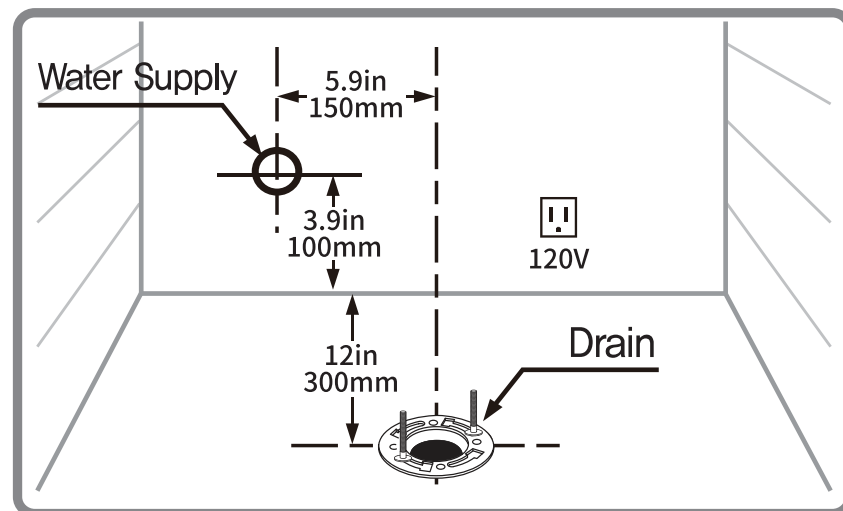


- Water Pressure**
  - Minimum 1.5 kgf/cm<sup>2</sup> (0.15 MPa) water pressure is required.  
If the pressure is not secured, please be aware that the flushing may not work properly to discharge the dirt.
  - Even if other modifiers are used at the same time, it still requires more than the minimum required water pressure. The maximum water pressure is 7.5 kgf/cm<sup>2</sup> (0.75 MPa).

### ※ Extract bad water before install

- Direct the supply hose end into a 3 gal (11.4L) or larger bucket.
- Make sure that the supply stop can provide a minimum of 1.5gal (5.7L) or more in 10 seconds.
- Shut off the water supply.


Proceed to next step

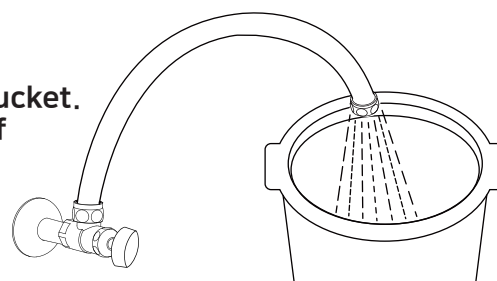


## 2 Drawing for Installation (unit : mm / in)

Remote control Type


PB-707S  
PB-101S

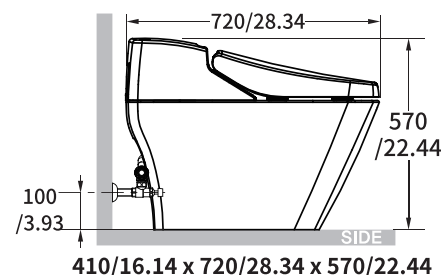


TCB 090SA  
TCB 090S  
TCB 090SA (Black)  
TCB 090S (Black)  
RTB 090WA  
RTB 090W  
TC-090  
TC-090W

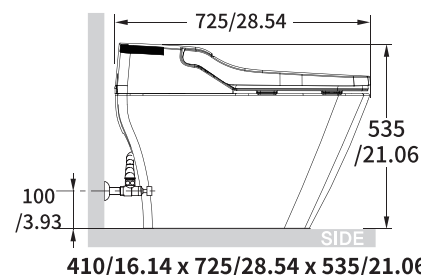

TCB 9100WA  
TCB 9100GA  
TCB 9100W  
TCB 9100G

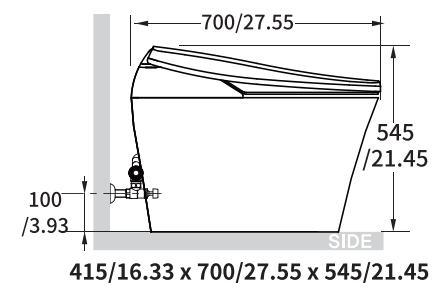

TCB 8100B  
TCB 8100W  
TCB 8100N  
TCB 8200SA  
TCB 8200S  
TCB 8200SA (Black)  
TCB 8200S (Black)

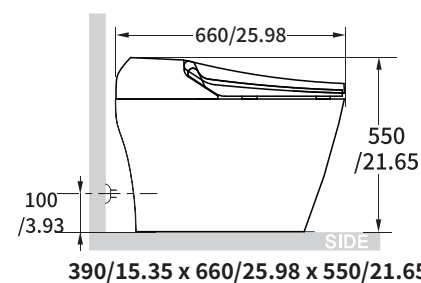

## 3 FAQ

**Q** :What is electrical requirements? Is it energy efficient?

**A** : **6~10 Amps at 120V, 60 Hz** is necessary for this item.

A separate circuit breaker is recommended.

It has a power save mode which uses least amount of energy.

**Q** : Power save LED light is keep flashing. (Turned off and on)


**A** : Please open the valve, please check the water has entered to the bidet.

If it still flashes, please try reset.

**(Unplug the cord and plug it back after 30 seconds)**

**Q** : How long is the cord?

**A** : **4ft (1.2m).**

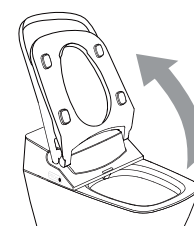


- Please open the seat and the lid when you reset the bidet toilet

## 4 Installation Accessories

### 1 Installation Accessories

★Recommended installation method★

★Requires installation by plumber★

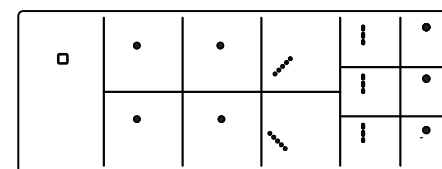

Remote control


Each product may use a different remote controller.




Wall Mount




Wax Ring

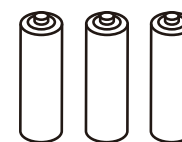

AA Batteries (x3)




Screws (x2)



Anchors (x2)



Conversion Nut



Water Hose  
(1" x 1/2")


## 5 Installation (This may differ from the product specification.)

### ① Installation Accessories


- Attach the provided water hose to your water shutoff valve.

\*You may need to use the included conversion nut to fit your water shutoff valve.


Simply screw the conversion nut into the 1/2" side of the hose before connecting it to your water shutoff valve.

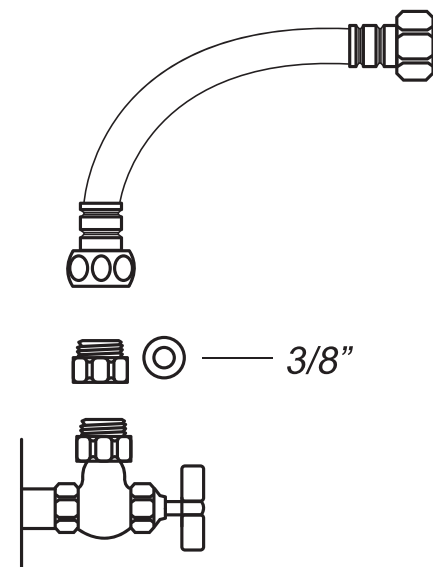

### ② How to install the Ceramic



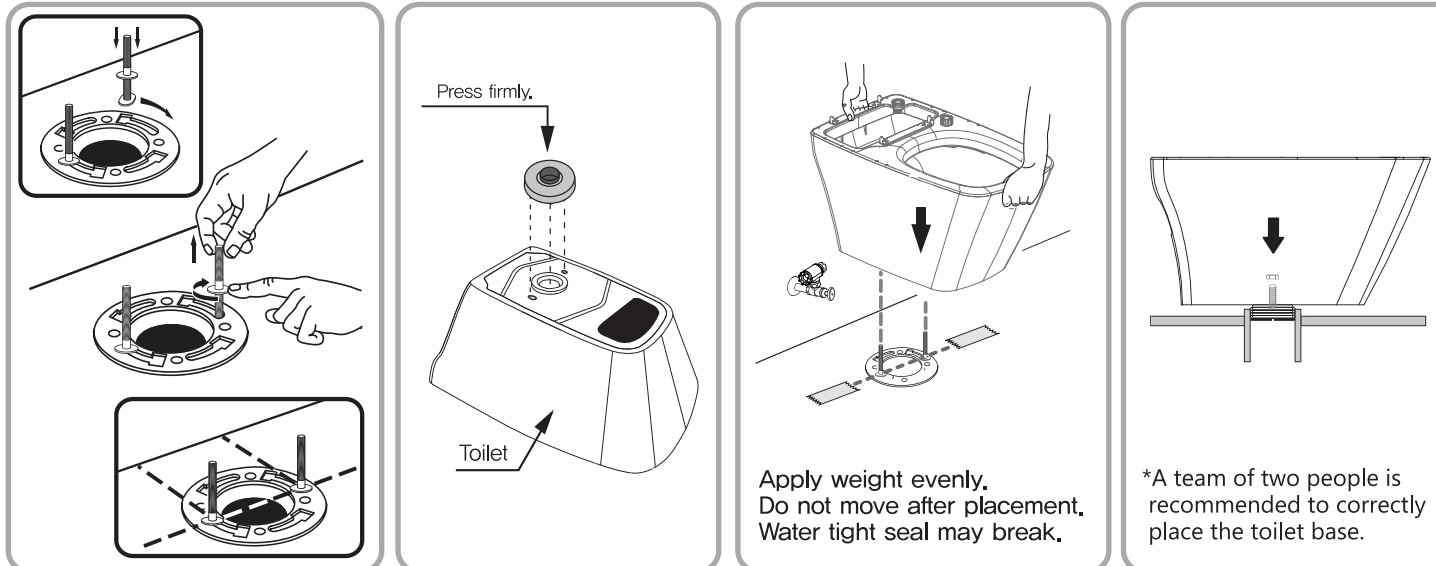


### ③ Connect Hose

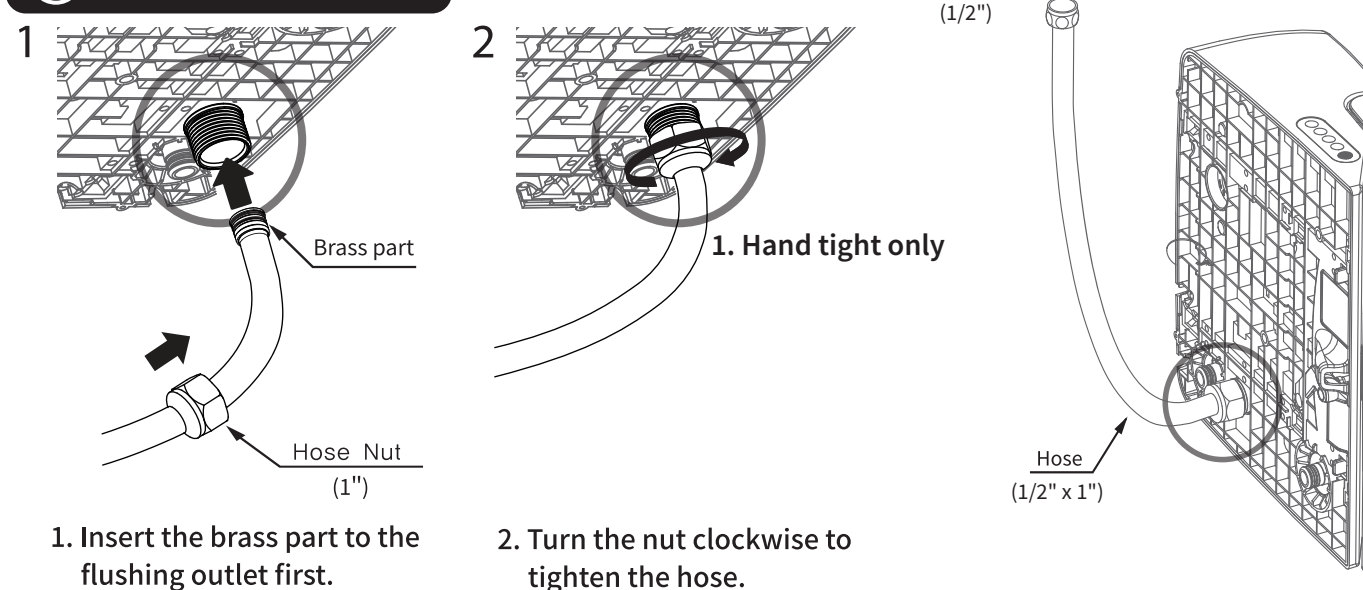


### ④ Connect Bidet to Toilet

1. Assemble the toilet with bidet, jet spray outlet and bowl washing outlet.
2. Insert the hose into the filter.
3. Insert bidet's fixing hook onto the toilet's fixing hook until it "clicks".

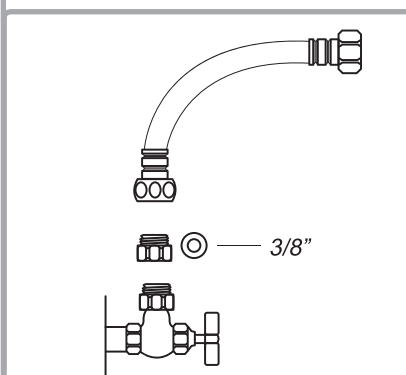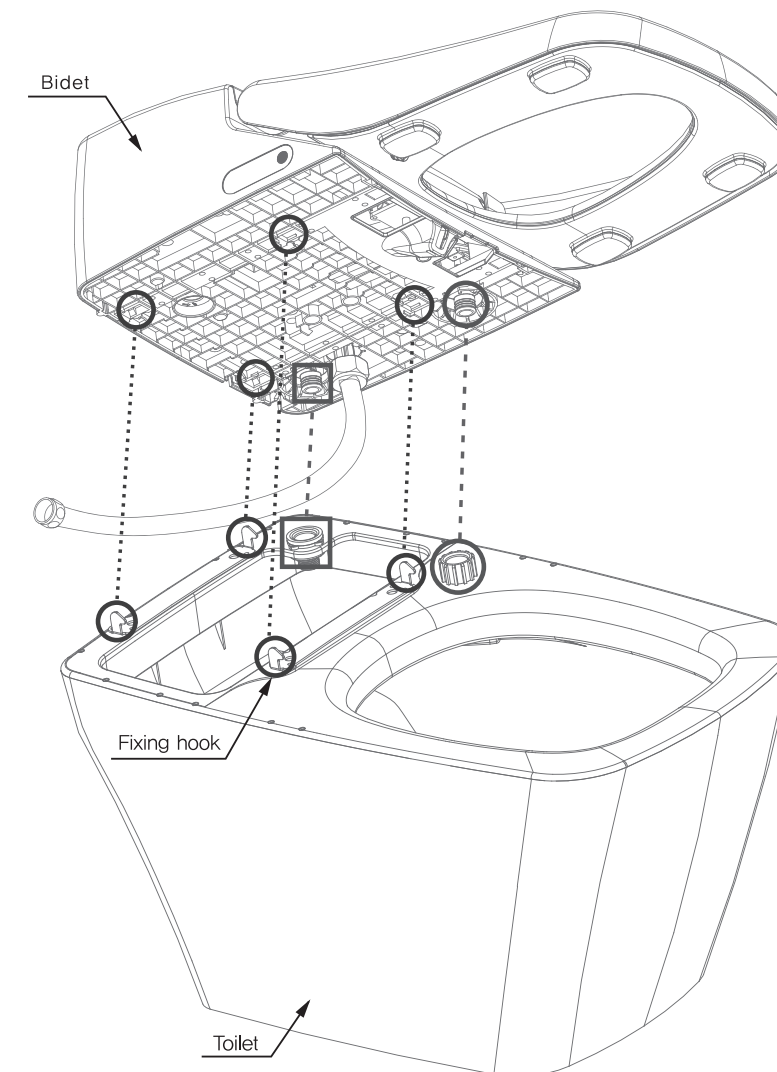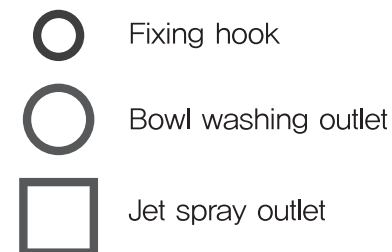

### ⑤ Open the water valve

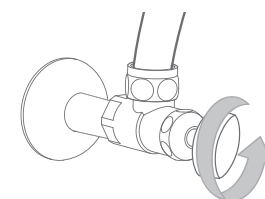



※ The water may overflow out of the rim when cleaning the bowl in the region with high water pressure.

Using a screwdriver, turn the shutoff valve clockwise to reduce the water pressure.

★ ★ Please plug in the power only after completing all installation and opening the water valve.

### ⑥ Connect Power

1. Insert the power plug into the outlet
2. Press the flush button - Water will fill the ceramic bowl.

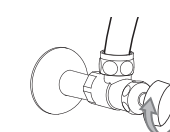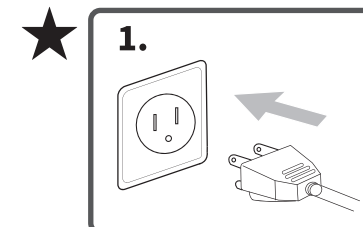

Turn the shutoff valve clockwise.

