Mega System Technologies, Inc.

# Quick Start Guide

## NetAgent*W* Cloud Card

### Step 1 : Application installation

Install the "Cloud4UPS" APP by scan the QR code from the device label



Or, " Cloud4UPS" application is available for download from Apple APP store, or Google Play.



**iOS**



**Android**

## Step 2 : Sign up, activate account and Login



## Step 3 : Scan and add device

Click "+" in the upper right corner of the homepage



Select "BT Scanning" to search and add device that within 1 meter from the mobile device (Bluetooth must be enabled)

Select "Search in LAN"  if the device has been removed, this is to search available device under same network as the mobile device to be add again

## Step 4: Setup completed, start to monitoring your UPS.

Once the device is successful added, it will be listed in the homepage



In additional to the APP, Cloud4UPS  account can also be access through web browser
https://cloud4ups.com


## Firmware Upgrade

Firmware updates are functionality improvements and enhancements.  When newer firmware version is available, the following icon appears on the interface.
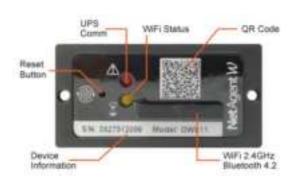


Click on "Device Upgrade" from the menu, and select the device that to execute firmware upgrade.



**IMPORTANT:** Do NOT turn OFF the power or press the reset button of the device during upgrade process.

# Hardware Description



## Setting/Reset Button

| Action (release to trigger) | Orange | Red | Description |
|---|---|---|---|
| Press once | Blinking | Off | WPS pairing |
| Press for 3~10 seconds | Off | Blinking | Clear WiFi setting then reboot |
| Press for 12 seconds | Blinking | Blinking | Reset to factory default |

## LED Indication Table

| LED Color | Behavior | Description |
|---|---|---|
| Green | Solid | Power On |
| Orange | Blinking | WiFi not connected (No SSID) |
| Orange | Fast Blinking (3 times every 2 seconds) | Connecting to SSID |
| Orange/Red | Alternate Blinking | Firmware Upgrading |
| Orange | Gradually Brighter | WiFi connection normal but fail to connect with Cloud server |
| Orange | Solid | Normal connection with Cloud |
| Orange | Fast Blinking | Data transmitting |
| Red | Solid | No connection with UPS |
| Red | Blinking | Communication with UPS abnormally |

**Mega System Technologies, Inc**

www.megatec.com.tw

For technical support, please contact service@megatec.com.tw