

[What's in the Box](#)

[Overview](#)

[Product Overview](#)

[LCD Screen Guide](#)

[Recharging Your Power Station](#)

[AC Recharging \(1800W Max\)](#)

[Solar Panel Recharging \(2400W Max\)](#)

[Car Recharging \(120W\)](#)

[Powering On / Off](#)

[Powering Your Devices](#)

[AC Charging](#)

[USB Charging](#)

[Car Socket Charging](#)

[Uninterruptible Power Supply \(UPS\)](#)

[Connect With an Expansion Battery](#)

[Connect with Anker SOLIX Home Power Panel](#)

[Anker App for Smart Control](#)


[Light](#)

[Carry Your Power Station](#)

[FAQ](#)


[Specifications](#)

[What's in the Box](#)

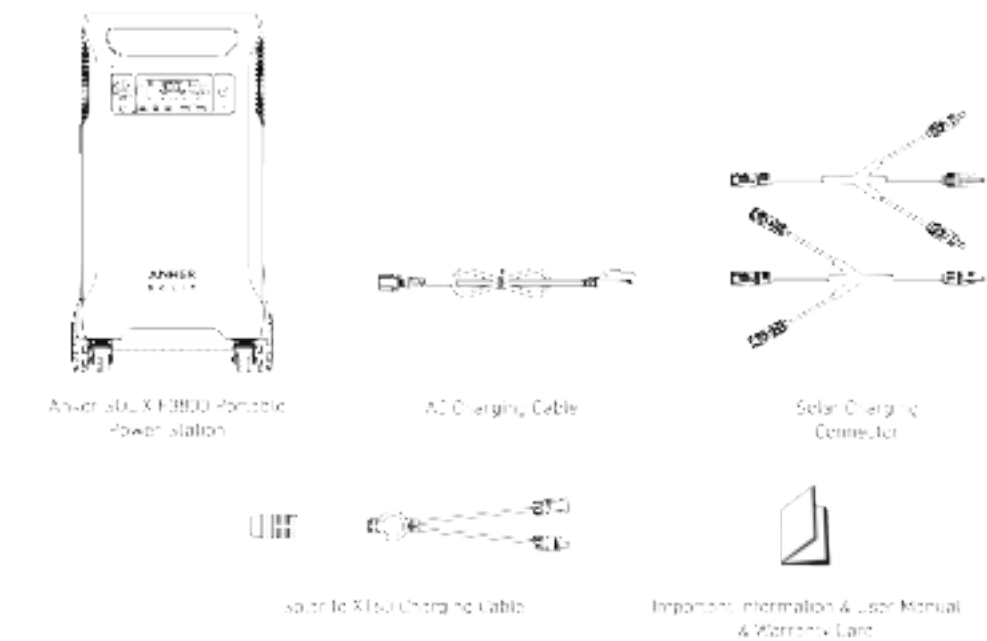

[Overview](#)

[Product Overview](#)

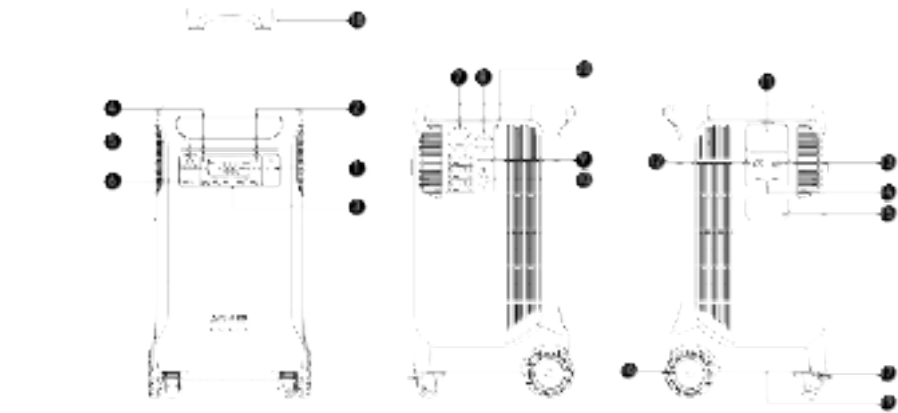


On/Off Button	Display Button
USB Ports	IoT Button
Car Socket	Car Socket Button
NEMA 14-50 AC Output Port	NEMA L14-30R AC Output Port
NEMA 5-20R AC Output Ports (Left three ports have UPS function)	Overcharge Protection (AC Output)
Home Panel Power Port	AC Input Port
Overcharge Protection (AC Input)	Dual Solar Input and Car Input
Expansion Battery Port	Wheels

 Anker SOLIX F3800 Portable Power Station only supports 12V car recharging. 24V car recharging cannot be used.



Powering On / Off

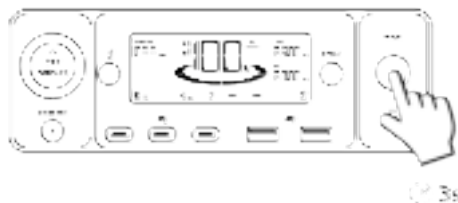

Press the ON/OFF button for 3 seconds to turn your power station on or off.
When the "Remaining Battery" indicator shows on the LCD screen, your power station is ready to charge devices.

	• When powered on, press the DISPLAY button to turn the screen on or off. • The auto-off time can be set in the Anker app. • The power station will power off automatically if the output buttons are turned off and no power loads are detected for 12 hours. The standby duration can be set in the Anker app.
--	--


Powering Your Devices

 To ensure safe power supply with the 240V AC ports, the neutral (N) and ground (PE) wires of the inlet box or transfer switch must be properly connected. Missing neutral (N) and ground (PE) wires may cause appliances damaged on the circuit.

AC Charging

•120V AC Port


Press the AC outlet button and connect your devices to the 5–20R output ports.

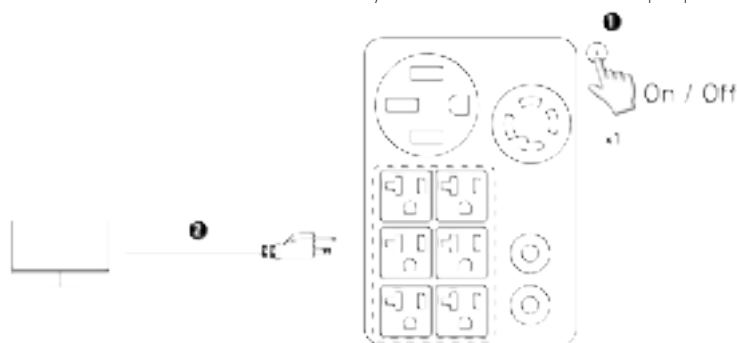


•240V AC Port

1. Press the AC outlet button and connect the power station to your inlet box or transfer switch via the L14–30R or 14–50 AC output port. It can supply 240V power to devices.

 To ensure safe power supply to your inlet box or transfer switch via the 240V AC ports, check and confirm that the neutral and ground wires of the inlet box or transfer switch are properly connected.

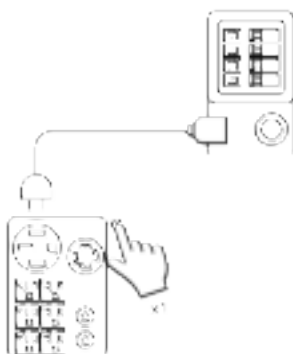


2. Double-press the AC outlet button to turn on the EV mode, wait until the car icon appears on the screen, then connect your device to the L14–30R or 14–50 AC output port. When the power station is in EV mode charging, it cannot be charged via AC simultaneously.

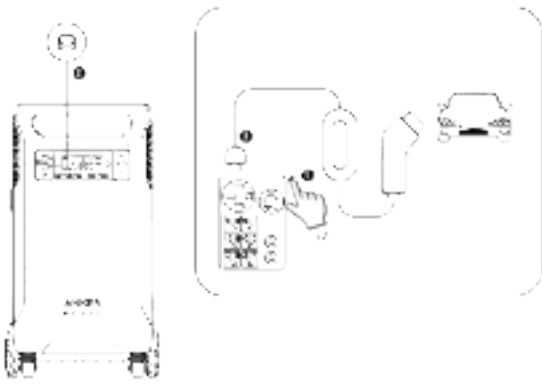


USB Charging

Connect your devices to the USB ports.

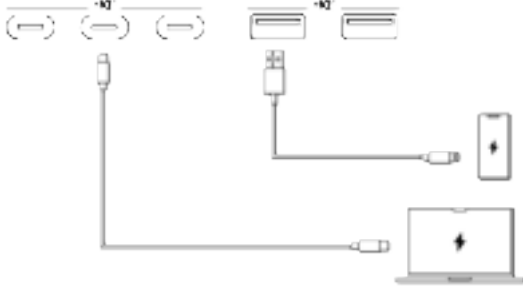


Car Socket Charging

Turn on the car socket and connect your devices to start charging.

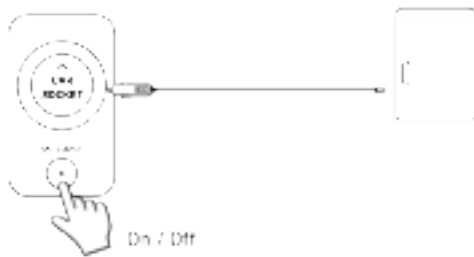


Uninterruptible Power Supply (UPS)

To use the UPS feature, connect your power station to a wall outlet with the AC charging cable, then press the AC outlet button and connect your devices via the UPS AC output ports.

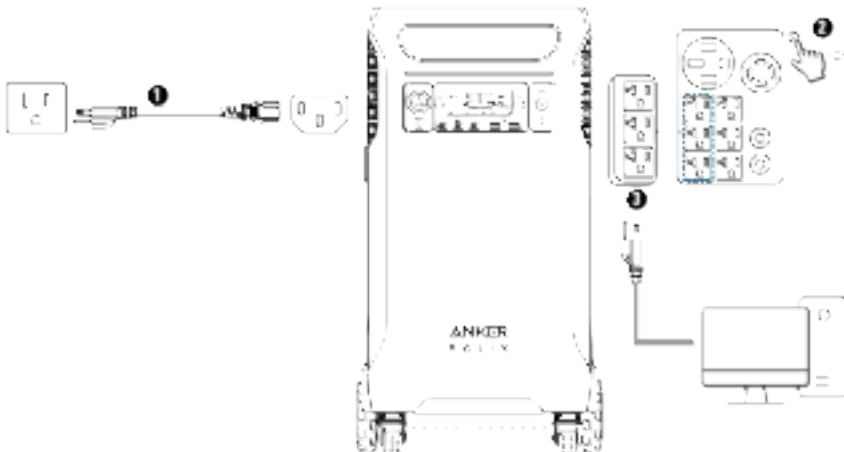


Connect With an Expansion Battery

Your power station can be connected with expansion batteries to increase the capacity up to 26880Wh. Please refer to the user manual of Anker SOLIX BP3800 Expansion Battery for detailed instructions.

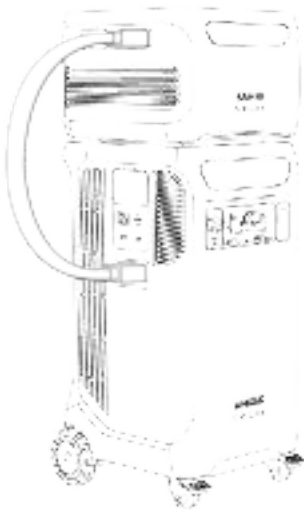

Connect with Anker SOLIX Home Power Panel


Your power station can be connected with Anker SOLIX Home Power Panel to power your entire house. Please refer to the user manual of Anker SOLIX Home Power Panel for detailed instructions.

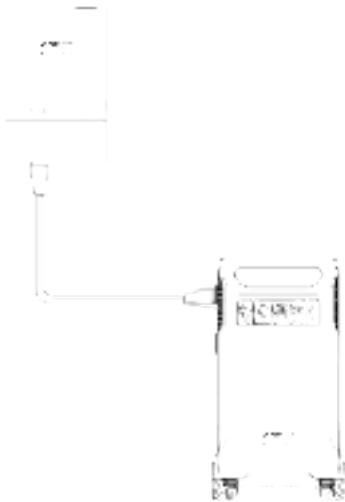

Anker App for Smart Control

You can remotely control your power station using the Anker app.

1. Download the Anker app from the App Store (iOS devices) or Google Play (Android devices), or by scanning the QR code.

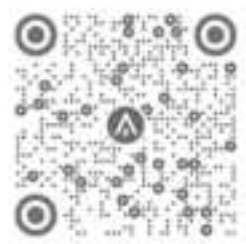


2. Connect the device to a network before using the app for the first time. After connecting successfully, you can connect your device off-grid.

3. Firmware update: You will be informed once a new firmware version is detected when you connect the power station to the app. During the update, ensure the power station is being charged and connected to Wi-Fi.


Light

Turn ON/OFF the light on Anker App.

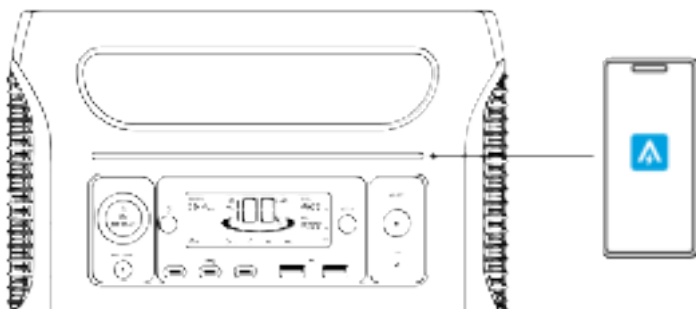


Carry Your Power Station


1. Lay the power station flat.

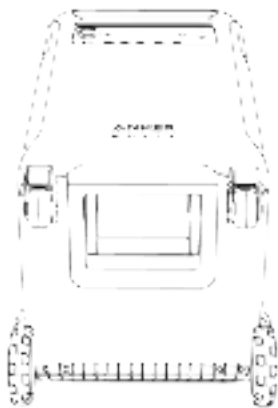

2. Open the bottom folding handle.

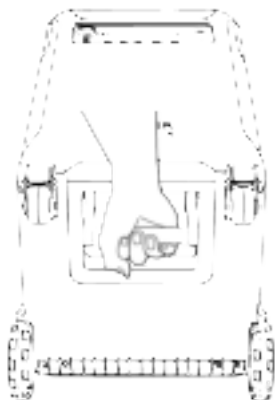

3. Grab the bottom and top handles to lift the power station.

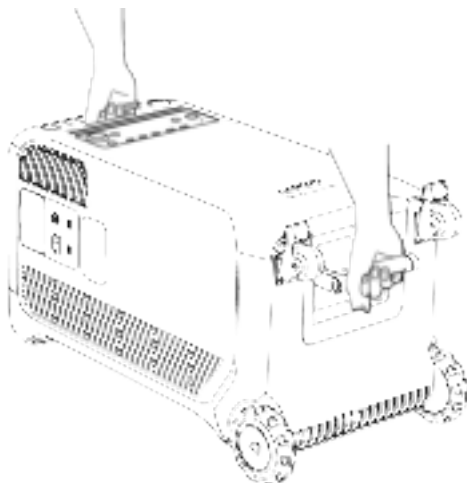

FAQ

Q1: What is the maximum power output of the AC output ports?

The AC output ports can deliver a maximum of 6000W to connected devices. Each group of NEMA 5-20R AC Output Ports can deliver 2400W (120V/20A) of power.

Q2: What should I do when the AC output port fails?

If AC output does not work, check to see if the overcharge protection switch is switched on. If it is on, press down to reset and then continue working.



Q3: What should I do when using a solar charger to charge my power station?

The solar input supports an 11-60V solar charger with an XT-60 connector. If you use an 11-15V solar charger, the current supports 10A max. When you use a 15-60V solar charger, the current supports 27A max.

Q4: Can the USB-C ports charge the power station (input only), or are they output only?


The USB-C ports support output only.

Q5: What should I do when AC recharging fails?

If AC recharging does not work, check if the overload protection switch is turned on. If it is on, press down to reset and then continue recharging.



Q6: How do I reset my power station?
If your power station is not working correctly, insert a paper clip or pin into the reset hole for 1 second for a factory reset. If the power station still doesn't work, please contact support@anker.com.

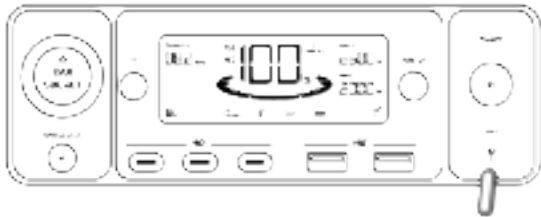

Q7: Why is the power station not working after it hasn't been used for a long time?
If the power station is stored at a low capacity for a long time, lithium batteries will self-consume power which may lead to a quick discharge. This often leads to poor conductivity and a reduced battery lifespan that causes the battery not to work.

Q8: How should I store and maintain the power station?
When storing your power station, please make sure that you:

- 1) Turn off the main power button.
- 2) Store the power station in a dry and cool environment.
- 3) Check the remaining battery capacity each week. If the battery level is below 30%, fully charge the power station. Do not forget to charge it to 100% once every 3 months.

Q9: How do I charge my electric vehicle via the power station?
Double-press the AC outlet button to activate EV mode charging. Make sure to set the charging rate of the EV charger to less than 25A to avoid overloading the output to your electric vehicle, such as a Tesla.

Specifications

Battery Type	LiFePO4 Cell
Cell Part Number	32140FS-1500mAh
Cell Number	80
Cell Capacity	51.2Vdc 75Ah/3840Wh
AC Input	120V~ 15A (3 hours Max), 12A (continue), 60Hz L+N+PE
AC Input Power (Charging)	1800W Max
AC Input Power (Bypass Mode)	1440W Max
Solar Panel Input 1	11-32V $\blacksquare$ 10A; 32V-60V $\blacksquare$ 25A (1200W Max, firmware 1.7.8 or earlier version) 11-15V $\blacksquare$ 10A; 15V-60V $\blacksquare$ 27A Max (1200W Max, firmware 2.1.1 or later version)
Solar Panel Input 2	11-32V $\blacksquare$ 10A; 32V-60V $\blacksquare$ 25A (1200W Max, firmware 1.7.8 or earlier version) 11-15V $\blacksquare$ 10A; 15V-60V $\blacksquare$ 27A Max (1200W Max, firmware 2.1.1 or later version)
Car Charger Output	12V $\blacksquare$ 10A
Home Panel Power Port	3800W Max (AC Input), 6000W Max (AC Output), 120V/240V, L1+L2+N+PE
AC Output Power (Total)	6000W Max
AC Output 1	120V~ 20A Max, 60Hz, 2400W Max
AC Output 2	120V~ 20A Max, 60Hz, 2400W Max
AC Output (NEMA 14-50 / L14-30)	120V/240V~ 25A Max, 60Hz, 6000W Max
USB-A Output	5V $\blacksquare$ 2.4A (12W Max Per Port)
USB-C Output	5V $\blacksquare$ 3A / 9V $\blacksquare$ 3A / 15V $\blacksquare$ 3A / 20V $\blacksquare$ 3A / 20V $\blacksquare$ 5A (100W Max Per Port)
UPS	20ms
Discharging Temperature	-4°F-104°F / -20°C-40°C
Charging Temperature	32°F-104°F / 0°C-40°C
Size	27.6×15.3×15.6 in / 70.2×38.8×39.5 cm
Net Weight	60 kg / 132.2 lbs