

ServeRAID M1015 SAS/SATA Controller for System x Product Guide (withdrawn product)

The ServeRAID M1015 SAS/SATA Controller for System x is an entry-level 6 Gbps SAS 2.0 PCI Express 2.0 RAID controller. The adapter has two internal mini-SAS connectors to drive up to 16 devices and supports the same base RAID 0, 1, and 10 feature set and drivers as the M5000 series controllers. With the attachment of the ServeRAID M1000 Advanced Feature Key, the ServeRAID M1015 offers the option of RAID 5 and SED Encryption Key management, while still being sensitive to administrator cost concerns in an entry-level RAID environment. This RAID controller provides connectivity to internal direct-attach or expander-attached hard disk, solid-state, or self-encrypting drives.



Figure 1. ServeRAID M1015 SAS/SATA Controller

Did you know?

6 Gbps SAS 2.0 technology has been introduced to address data off-load bottlenecks in the direct-access storage environment. This new throughput doubles the transfer rate of the previous generation. SAS 2.0 is designed for backward compatibility with 3 Gbps SAS as well as with 3 Gbps SATA hard drives. Regardless of the drive speed, 6 Gbps ServeRAID adapters will deliver significant performance improvements in both read and write applications as compared with their 3 Gbps predecessors.

Self-encrypting drives are based on a new technology that helps prevent data from being accessed without authorization. These drives adhere to the Trusted Computing Group (TCG) Enterprise Security Subsystem Class specification and are National Security Agency qualified to provide government-grade encryption. With self-encrypting drives, if a drive is removed from its storage system or the server it is housed in, the data on that drive is encrypted and useless to anyone who attempts to access it without the appropriate security authorization.

Part number information

Table 1. Ordering part number and feature code

Description	Part number	Feature code
ServeRAID M1015 SAS/SATA Controller	46M0831	0095
ServeRAID M1000 Series Advanced Feature Key	46M0832	9749

The ServeRAID M1015 part number includes the following items:

- One ServeRAID M1015 adapter card with full-height bracket
- One replaceable low-profile (2U) bracket
- Documentation CD
- The Important Notices Document

Figure 2 shows the ServeRAID M1000 Series Advanced Feature Key attached to the ServeRAID M1015 controller just above the heat sink.

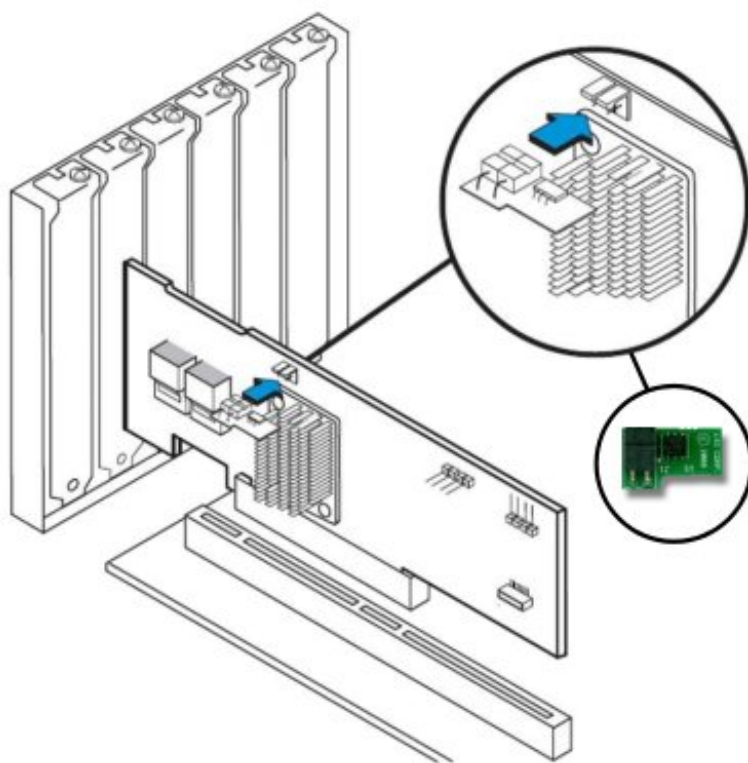


Figure 2. ServeRAID M1000 Series Advanced Feature Key

Specifications

The ServeRAID M1015 SAS/SATA Controller has the following specifications:

- Eight internal 6 Gbps SAS/SATA ports
- Supports SAS and SATA drives (but not in the same RAID volume)
- Two Mini-SAS internal connectors (SFF-8087)
- 6 Gbps throughput per port
- LSI SAS2008 6 Gbps RAID on Chip (ROC) controller
- x8 PCI Express 2.0 host interface
- Supports RAID levels 0, 1, 10 (RAID levels 5 and 50 with optional ServeRAID M1000 Series Advanced Feature Key)
- Connects to up to 16 SAS or SATA drives
- Supports up to 16 logical volumes
- Supports LUN sizes up to 64 TB
- Configurable stripe size up to 64 KB
- Compliant with Disk Data Format (DDF) configuration on disk (COD)
- S.M.A.R.T. support

Features

The ServeRAID M1015 SAS/SATA Controller has the following features:

- Auto-resume on array rebuild or array reconstruction after loss of system power
Auto-resume uses non-volatile NVRAM to save rebuild progress during a host reboot or power failure to automatically resume from the last checkpoint. Auto-resume will ensure data integrity is maintained through the process. The card supports a number of features that are able to be implemented without rebooting the server. Applications such as email and web server benefit from avoiding downtime during transition.
- Online Capacity Expansion
Online Capacity Expansion (OCE) allows the capacity of a virtual disk to be expanded by adding new physical disks or making use of unused space on existing disks, without requiring a reboot.
- Online RAID Level Migration
Online RAID Level Migration (also known as logical drive migration) provides the ability to migrate a virtual disk from any RAID level to any other RAID level without requiring a reboot. System availability and application functionality remain unaffected.
- Fast initialization for quick array setup
- Consistency check for background data integrity
Consistency Check verifies that all stripes in a virtual disk with a redundant RAID level are consistent. The consistency check will mirror data when an inconsistent stripe is detected for a RAID 1 and recreating the parity from the peer disks when in the case of a RAID 5. Consistency checks can be scheduled to take place periodically.
- Extensive online configuration options: advanced monitoring and event notification
Management tools provide convenience for configuration of logical volumes plus alerting when errors have occurred or are about to occur.
- Patrol Read for media scanning and repairing

Patrol read is a background sentry service designed to proactively discover and correct media defects (bad sectors) that arise normally as a disk drive ages. The service issues a series of verify commands and if a bad block is discovered, the card's firmware will use RAID algorithms to recreate the missing data and remap the sector to a good sector. The task is interruptible based on controller activity and host operations. The firmware also provides an interface where the patrol read task can be initiated, set up for continuous operation, and terminated from a management application. Patrol read can be activated by manual command or automatically.

- Global and dedicated Hot Spare with Revertible Hot Spare support:
A hot spare rebuilds data from all virtual disks within the disk group in which it is configured. ServeRAID provides the ability to define a physical disk as a hot spare to replace a failed drive. Hot spares may be configured as either global or dedicated. A global hot spare allows any physical drive to be designated as a hot spare. A dedicated hot spare will allow the user to assign a hot spare drive to a particular array of the same drive type.

The ServeRAID M1000 Series Advanced Feature Key enables the following features:

- RAID levels 5 and 50
- LSI SafeStore: support for self-encrypting drive (SED) services
 - Instant secure erase
 - Local key management

LSI SafeStore encryption services offer instant secure erase and local key management for SEDs. This technology represents a significant step forward in securing data on a disk drive from any unauthorized access or modification resulting from theft, loss, or repurposing of drives:

- Instant secure erase permanently removes data when repurposing or decommissioning SEDs.
- SafeStore local key management provides the necessary management and protection of SEDs using a simple pass phrase, security key identifier, and security key file that can be set and applied to all SEDs assigned to a ServeRAID adapter. This removes the complexity of managing each SED's unique encryption key and essentially relieves the administrator from most of the daily tasks of securing data.

Note: To use the SED services of the ServeRAID M1000 Series Advanced Feature Key, you must use self-encrypting drives as listed in "Supported disk drives" below.

Operating environment

The ServeRAID M1015 SAS/SATA Controller is supported in the following environment:

- Temperature:
 - At 0-1000 m (0-3000 ft): 10-35° C (50-95° F)
 - At 1000-2100 m (3000-7000 ft): 10-32° C (50-90° F)
- Relative humidity: 20-80% (non-condensing)

Warranty

One-year limited warranty. When installed on a System x server, these cards assume your system's base warranty and any warranty upgrade. Batteries are consumables and therefore are not covered under warranty.

Supported servers

The ServeRAID M1015 is supported on the System x servers listed in Table 2.

Table 2. Supported System x servers (Part 1)

		x3100 M3	x3200 M2	x3200 M3	x3250 M2	x3250 M3	x3350	x3400	x3400 M2	x3400 M3	x3455	x3500	x3500 M2	x3500 M3
ServeRAID M1015	46M0831	N	N	Y	N	Y	N	N	Y	Y	N	N	Y	Y

Table 2. Supported System x servers (Part 2)

	x3550	x3550 M2	x3550 M3	x3620 M3	x3630 M3	x3650	x3650 T	x3650 M2	x3650 M3	x3655	x3690 X5	x3755	x3755 M3	x3850 M2	x3950 M2	x3850 X5
ServeRAID M1015	N	Y	Y	Y	Y	N	N	Y*	Y	N	Y	N	Y	N	N	Y

* The ServeRAID M1015 also supports the Hot-Swap SAS/SATA 4 Pack HDD Kit option of the x3650 M2, part number 46D2516.

See ServerProven Web site for the latest information about the adapters supported by each System x server type: <http://www.lenovo.com/us/en/serverproven/>

Supported operating systems

- Microsoft Windows Server 2003, Web Edition
- Microsoft Windows Server 2003/2003 R2, Datacenter Edition
- Microsoft Windows Server 2003/2003 R2, Datacenter x64 Edition
- Microsoft Windows Server 2003/2003 R2, Enterprise Edition
- Microsoft Windows Server 2003/2003 R2, Enterprise x64 Edition
- Microsoft Windows Server 2003/2003 R2, Standard Edition
- Microsoft Windows Server 2003/2003 R2, Standard x64 Edition
- Microsoft Windows Server 2008 R2
- Microsoft Windows Server 2008, Datacenter x64 Edition
- Microsoft Windows Server 2008, Datacenter x86 Edition
- Microsoft Windows Server 2008, Enterprise x64 Edition
- Microsoft Windows Server 2008, Enterprise x86 Edition
- Microsoft Windows Server 2008, Standard x64 Edition
- Microsoft Windows Server 2008, Standard x86 Edition
- Microsoft Windows Server 2008, Web x64 Edition
- Microsoft Windows Server 2008, Web x86 Edition

- Microsoft Windows Small Business Server 2003/2003 R2 Premium Edition
- Microsoft Windows Small Business Server 2003/2003 R2 Standard Edition
- Microsoft Windows Small Business Server 2008 Premium Edition
- Microsoft Windows Small Business Server 2008 Standard Edition
- Red Hat Enterprise Linux 4 AS for AMD64/EM64T
- Red Hat Enterprise Linux 4 AS for x86
- Red Hat Enterprise Linux 4 ES for AMD64/EM64T
- Red Hat Enterprise Linux 4 ES for x86
- Red Hat Enterprise Linux 4 WS/HPC for AMD64/EM64T
- Red Hat Enterprise Linux 4 WS/HPC for x86
- Red Hat Enterprise Linux 5 Server Edition
- Red Hat Enterprise Linux 5 Server Edition with Xen
- Red Hat Enterprise Linux 5 Server with Xen x64 Edition
- Red Hat Enterprise Linux 5 Server x64 Edition
- Red Hat Enterprise Linux 6 Server Edition
- Red Hat Enterprise Linux 6 Server x64 Edition
- SUSE LINUX Enterprise Server 10 for AMD64/EM64T
- SUSE LINUX Enterprise Server 10 for x86
- SUSE LINUX Enterprise Server 10 with Xen for AMD64/EM64T
- SUSE LINUX Enterprise Server 11 for AMD64/EM64T
- SUSE LINUX Enterprise Server 11 for x86
- SUSE LINUX Enterprise Server 11 with Xen for AMD64/EM64T
- VMware ESX 4.0
- VMware ESX 4.1
- VMware ESXi 4.0
- VMware ESXi 4.1

See the ServerProven Web site for the latest information about the specific versions and service packs supported: <http://www.lenovo.com/us/en/serverproven/>. Click **System x servers**, then **Disk controllers** to see the support matrix. Click the check mark that is associated with the System x server in question to see the details of the operating system support.

Related publications

For more information refer to the following documents:

- U.S. Announcement Letter
<http://ibm.com/common/ssi/cgi-bin/ssialias?infotype=dd&subtype=ca&&htmlfid=897/ENUS109-739>
- ServeRAID M1015 *User's Guide* and *Install Guide*
<http://ibm.com/support/entry/portal/docdisplay?Indocid=MIGR-5083720>
- ServerProven compatibility:
<http://www.lenovo.com/us/en/serverproven/>
- System x RAID products home page:
<http://shop.lenovo.com/us/en/systems/servers/options/systemx/storage/raid-adapters/raid-controllers/>
- ServeRAID software matrix:
<http://ibm.com/support/entry/portal/docdisplay?Indocid=SERV-RAID>

Related product families

Product families related to this document are the following:

- [RAID Adapters](#)

Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service. Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

Lenovo (United States), Inc.
8001 Development Drive
Morrisville, NC 27560
U.S.A.
Attention: Lenovo Director of Licensing

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary. Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk. Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

© Copyright Lenovo 2022. All rights reserved.

This document, TIPS0740, was created or updated on May 17, 2011.

Send us your comments in one of the following ways:

- Use the online Contact us review form found at:
<https://lenovopress.com/TIPS0740>
- Send your comments in an e-mail to:
comments@lenovopress.com

This document is available online at <https://lenovopress.com/TIPS0740>.

Trademarks

Lenovo and the Lenovo logo are trademarks or registered trademarks of Lenovo in the United States, other countries, or both. A current list of Lenovo trademarks is available on the Web at <https://www.lenovo.com/us/en/legal/copytrade/>.

The following terms are trademarks of Lenovo in the United States, other countries, or both:

Lenovo®
ServeRAID
ServerProven®
System x®

The following terms are trademarks of other companies:

Linux® is the trademark of Linus Torvalds in the U.S. and other countries.

Microsoft®, Windows Server®, and Windows® are trademarks of Microsoft Corporation in the United States, other countries, or both.

Other company, product, or service names may be trademarks or service marks of others.