AudioCodes Family of Session Border Controllers

# Version 7.2 to 7.4 Upgrade Procedure

Mediant 9000/9030/9080 SBC
Mediant Server Edition (SE) SBC
Mediant Virtual Edition (VE) SBC
Mediant Cloud Edition (CE) SBC



		Table of Contents			
1	Intr	oduction	7		
2	Upg	grading Standalone Mediant 9000/9030/9080/SE	9		
	2.1 2.2 2.3 2.4	Prerequisites Service Affecting Upgrade Procedure Rollback Procedure	9		
3 Pr		grading High-Availability (HA) Mediant 9000/9030/9080/SE via Hitless ure	13		
	3.1 3.2 3.3 3.4 3.5	Prerequisites Service Affecting Upgrade Summary 3.3.1 Upgrading Device in a Media Transcoding Cluster Upgrade Procedure Rollback Procedure	13 13 14 14		
4 Hit	Upg less	grading High-Availability (HA) Mediant 9000/9030/9080/SE via Non- Procedure	17		
	4.1 4.2 4.3 4.4	Prerequisites Service Affecting Upgrade Procedure Rollback Procedure	17 18		
5	Upg	Upgrading via Side-By-Side Deployment on VMware, KVM or Hyper-V			
	5.1 5.2 5.3 5.4	Process Overview Prerequisites Service Affecting Detailed Procedure	21 21		
6	Upg	grading Standalone Mediant VE on VMware	23		
	6.1 6.2 6.3 6.4 6.5	Prerequisites Service Affecting Upgrade Summary Rollback Procedure Alternative Upgrade Procedure	23 23		
7	Upg	grading Standalone Mediant VE on KVM	.27		
	7.1 7.2 7.3 7.4 7.5	Prerequisites Service Affecting Upgrade Procedure Rollback Procedure Alternative Upgrade Procedure	27 27 28		
8	Upg	grading Standalone Mediant VE on Hyper-V	31		
	8.1 8.2	Prerequisites			



	8.3	Upgra	de Procedure	31
	8.4		ck Procedure	
	8.5	Alterna	ative Upgrade Procedure	32
9	Upg	rading	High-Availability (HA) Mediant VE on VMware, KVM or H	yper-V33
	9.1	Prerec	quisites	33
	9.2		e Affecting	
	9.3		de Procedure	
	9.4		ck Procedure	
	9.5	Alterna	ative Upgrade Procedure	34
		9.5.1 9.5.2	Alternative Upgrade Procedure – Hitless Option	
10	Upg	rading	Mediant CE on VMware, KVM or Hyper-V	45
	10.1	Prerec	quisites	45
			e Affecting	
			de Procedure	
	10.4	Rollba	ck Procedure	46
11	Upg	rading	Mediant VE on Public Clouds (AWS / Azure / Google Clo	ud)47
12	Upg	rading	Mediant CE on Public Clouds (AWS / Azure / Google Clo	oud)49

Configuration Note Notices

#### **Notice**

Information contained in this document is believed to be accurate and reliable at the time of printing. However, due to ongoing product improvements and revisions, AudioCodes cannot guarantee accuracy of printed material after the Date Published nor can it accept responsibility for errors or omissions. Updates to this document can be downloaded from <a href="https://www.audiocodes.com/library/technical-documents">https://www.audiocodes.com/library/technical-documents</a>.

This document is subject to change without notice.

Date Published: March-10-2021

### **WEEE EU Directive**

Pursuant to the WEEE EU Directive, electronic and electrical waste must not be disposed of with unsorted waste. Please contact your local recycling authority for disposal of this product.

## **Customer Support**

Customer technical support and services are provided by AudioCodes or by an authorized AudioCodes Service Partner. For more information on how to buy technical support for AudioCodes products and for contact information, please visit our website at <a href="https://www.audiocodes.com/services-support/maintenance-and-support">https://www.audiocodes.com/services-support/maintenance-and-support</a>.

## Stay in the Loop with AudioCodes











# **Abbreviations and Terminology**

Each abbreviation, unless widely used, is spelled out in full when first used.

# General Notes, Warnings, and Safety Information



Note: OPEN SOURCE SOFTWARE. Portions of the software may be open source software and may be governed by and distributed under open source licenses, such as the terms of the GNU General Public License (GPL), the terms of the Lesser General Public License (LGPL), BSD and LDAP, which terms are located at <a href="https://www.audiocodes.com/services-support/open-source/">https://www.audiocodes.com/services-support/open-source/</a> and all are incorporated herein by reference. If any open source software is provided in object code, and its accompanying license requires that it be provided in source code as well, Buyer may receive such source code by contacting AudioCodes, by following the instructions available on AudioCodes website.



## **Document Revision Record**

LTRT	Description
28724	Initial document release.
28725	Software rollback procedure; restore HA Ethernet Group; upgrading Mediant CE on VMware, KVM or Hyper-V

## **Documentation Feedback**

AudioCodes continually strives to produce high quality documentation. If you have any comments (suggestions or errors) regarding this document, please fill out the Documentation Feedback form on our website at <a href="https://online.audiocodes.com/documentation-feedback">https://online.audiocodes.com/documentation-feedback</a>.

Configuration Note 1. Introduction

## 1 Introduction

This document provides step-by-step instructions on how to upgrade the following AudioCodes session border controllers (SBC) from Version 7.2 to Version 7.4:

- Mediant 9000/9030/9080
- Mediant SE
- Mediant VE deployed in VMware, Hyper-V and KVM environments
- Mediant CE deployed in VMware, Hyper-V and KVM environments

Both standalone and high-availability (HA) deployment modes are covered in this document.



**Note:** Upgrade instructions for Mediant VE/CE deployed in public clouds (Azure, AWS, and Google Cloud) are provided in the corresponding Mediant VE/CE Installation Manuals.

Since 7.2 and 7.4 software versions are based on different operating systems (CentOS 6 and CentOS 8, respectively), such software upgrade cannot be performed through the regular Software Upgrade Wizard using the CMP file. Instead, use the procedures described in this document to upgrade the device.

The following 7.2 software versions can be upgraded to 7.4 version:

- 7.20A.260.\*
- 7.20A.258.\*
- 7.20A.256.\*
- 7.20A.204.540 or 7.20A.204.878



**Note:** The 7.40A.005.\* version lacks new features added in the 7.20A.260 stream. Customers who are currently running the 7.20A.260.\* version are recommended to postpone upgrade until the 7.40A.100.\* version is released.



This page is intentionally left blank.

# 2 Upgrading Standalone Mediant 9000/9030/9080/SE

This chapter describes the upgrade procedure for standalone Mediant 9000/9030/9080/SE.

## 2.1 Prerequisites

Prior to upgrading the device, make sure the following prerequisites are met:

- ISO file of 7.4 version (based on CentOS Stream 8)
- Connection to the iLO server management interface (also referred to as "Remote Console")
- Connection to the Mediant 9000/9030/9080/SE Web interface



**Note:** The below instructions assume that your server's iLO server management interface provides Remote Console functionality. iLO interface on Mediant 9030/9080 servers includes this functionality. However, iLO interface on Mediant 9000 does not include it.

For Mediant 9000, or if you don't have a remote connection to the iLO server management interface, do the following:

- 1. Burn the ISO file of 7.4 version to a physical DVD disk.
- 2. Use a physical VGA terminal and keyboard to perform the installation.

## 2.2 Service Affecting

Upgrading the device is service affecting. The upgrade process requires manual backup and restore of device configuration. The process takes approximately 30 minutes to complete.

## 2.3 Upgrade Procedure

- > To upgrade standalone Mediant 9000/9030/9080/SE:
- 1. Back up configuration and the license key from the currently running software (7.2) so that you can restore them later if you rollback the device from Version 7.4 to 7.2:
  - a. Log in to the SBC's Web interface.
  - On the toolbar, click Actions > Configuration File, and then click Save Configuration Package.
  - c. Navigate to SETUP > ADMINISTRATION > LICENSE > License Key, and then click the Save License Key to File icon
    .
- 2. Install the new 7.4 software version from the ISO file using the iLO interface:




**Note:** If you are using a physical VGA terminal and keyboard, insert the DVD disk into the DVD-ROM drive, reboot the server by pressing **Power** button, and then continue with Step **f**.

a. Connect to the iLO server management interface.



- b. Open the Remote Console.
- c. On the toolbar, choose Virtual Media > CD/DVD > Local \*.iso file:

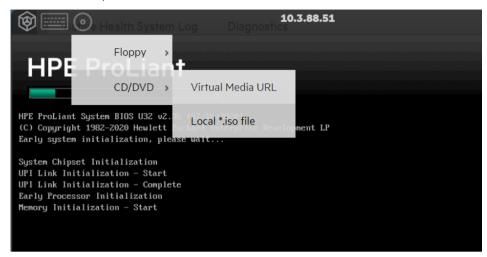

- d. Browse to the ISO file of 7.4 version (based on CentOS Stream 8).
- e. On the toolbar, choose Menu > Power > Reset; the server reboots and the Mediant SBC Installation menu is displayed.



f. Type **upgrade**, and then press Enter to start installation.



**Note:** During installation from the ISO file / DVD disk, the hard drive is formatted. However, because you typed **upgrade**, the SBC configuration (INI file, auxiliary files and TLS certificates) and the license key will be preserved.

- **g.** Wait until installation is complete (approximately 10 minutes), and then disable the virtual CD/DVD drive that was selected before the installation.
- h. Press ENTER to reboot the server.
- 3. Wait until the server starts. Verify that it is running the new 7.4 software version, by connecting to its Web interface and checking the version on the MONITOR page. Verify that the SBC configuration is preserved.

# 2.4 Rollback Procedure

If you need to rollback software from Version 7.4 to 7.2, do the following:

- 1. Install Version 7.2 from the ISO file or physical DVD disk.
- 2. Restore the configuration package and license key from the backup.
- 3. If needed, restore the customized device certificate and/or trusted root certificates.



This page is intentionally left blank.

# 3 Upgrading High-Availability (HA) Mediant 9000/9030/9080/SE via Hitless Procedure

This chapter describes the upgrade procedure for high-availability (HA) Mediant 9000/9030/9080/SE deployment, which consists of two units running as an active/standby pair.

The procedure is hitless, meaning that during the upgrade process, the SBC service is preserved. For a slightly quicker non-hitless procedure, see Upgrading High-Availability (HA) Mediant 9000/9030/9080/SE via Non-Hitless Procedure.

## 3.1 Prerequisites

Prior to upgrading the device, make sure the following prerequisites are met:

- ISO file of 7.4 version (based on CentOS Stream 8)
- CMP of "intermediate" 7.4 version same version number as above, but based on CentOS 6
- Connection to the iLO server management interface (also referred to as "Remote Console") on both units
- Connection to the Mediant 9000/9030/9080/SE SSH and Web interfaces



**Note:** The below instructions assume that your server's iLO server management interface provides Remote Console functionality. iLO interface on Mediant 9030/9080 servers includes this functionality. However, the iLO interface on Mediant 9000 does not include it.

For Mediant 9000 product, or if you don't have a remote connection to iLO server management interface, do the following:

- Burn the ISO file of the 7.4 version to a physical DVD disk.
- Use a physical VGA terminal and keyboard to perform the installation.

# 3.2 Service Affecting

Upgrading the device is not service affecting. Device configuration is preserved during the upgrade. The process takes approximately two hours to complete.

## 3.3 Upgrade Summary

The upgrade procedure consists of the following main steps:

- Install "intermediate" 7.4 version the same baseline, but based on CentOS 6 on both units.
  - The upgrade is performed through the regular Software Upgrade Wizard using the CMP file.
  - Note that "intermediate" software version is intended for a temporary use during software upgrade only; it should not be used for a regular deployment in production.
- 2. Install the new "final" 7.4 software version, based on CentOS Stream 8, on the redundant unit from the ISO file, using the iLO interface. Installation is performed in **upgrade** mode, which preserves all existing configuration and the license key.



- 3. Perform an HA switchover.
- **4.** Install the new "final" 7.4 software version, based on CentOS Stream 8, on the remaining (currently redundant) unit from the ISO file, using the iLO interface. Installation is also performed in **upgrade** mode.

## 3.3.1 Upgrading Device in a Media Transcoding Cluster

If the Mediant 9000/9030/9080/SE device is part of a Media Transcoding Cluster, perform the following steps *prior* to starting the upgrade:

- 1. Log in to the SBC's Web interface.
- 2. Navigate to MONITOR > Device Information page.
- 3. Check if vMC Firmware File is listed under LOADED FILES.
- 4. If the file is listed, delete it by clicking **Delete**.

Upgrade Media Transcoding Cluster as follows:

- Upgrade Mediant 9000/9030/9080/SE device to 7.4 version first. Make sure that the device is fully upgraded (to "final" 7.4 version based on CentOS Stream 8) prior to proceeding to the next step.
- Upgrade Media Components to 7.4 version as described in section 'Upgrading the Cluster Software Version' of Mediant 9000 SBC Series User Manual.


## 3.4 Upgrade Procedure

- > To upgrade HA Mediant 9000/9030/9080/SE via hitless procedure:
- 1. Back up configuration and the license key from the currently running software (7.2) so that you can restore them later if you rollback the device from Version 7.4 to 7.2:
  - a. Log in to the SBC's Web interface.
  - On the toolbar, click Actions > Configuration File, and then click Save Configuration Package.
  - c. Navigate to SETUP > ADMINISTRATION > LICENSE > License Key, and then click the Save License Key to File icon
- 2. Install the "intermediate" 7.4 version (same baseline as the "final" 7.4 version, but based on CentOS 6) through the regular Software Upgrade wizard. The upgrade is performed using the CMP file and installs the "intermediate" 7.4 software on both units.
- 3. Install the "final" 7.4 version (based on CentOS Stream 8) on the redundant unit:



**Note:** If you are using a physical VGA terminal and keyboard, insert the DVD disk into the DVD-ROM drive, reboot the server by pressing the **Power** button, and then continue with Step **f**.

- a. Connect to the iLO server management interface of the redundant unit.
- b. Open the Remote Console.

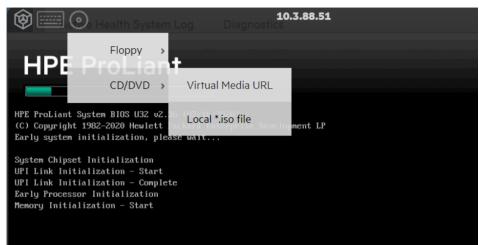

c. On the toolbar, choose Virtual Media > CD/DVD > Local \*.iso file:

- d. Browse to the ISO file of the "final" 7.4 version (based on CentOS Stream 8).
- e. On the toolbar, choose Menu > Power > Reset; the server reboots and the Mediant SBC Installation menu is displayed.



f. Type **upgrade**, and then press Enter to start installation.



**Note:** During the installation from the ISO file / DVD disk, the hard drive is formatted. However, because you typed **upgrade**, the SBC configuration (INI file, auxiliary files and TLS certificates) and the license key will be preserved

- g. Wait until installation is complete (approximately 10 minutes), and then disable the virtual CD/DVD drive that was selected before the installation.
- h. Press ENTER to reboot the server.



- 4. Wait until the redundant unit completes the reboot and synchronizes with the active unit:
  - a. Log in to the SBC's Web interface.
  - b. Navigate to the MONITOR page.
  - c. Wait until both units are displayed and HA status is "Synchronized".
- 5. Make the redundant unit (that has "final" 7.4 software version) active:
  - a. On the MONITOR page, check which unit is active.
  - **b.** If the first unit (that wasn't upgraded to "final" 7.4 version yet) is active, perform a switchover, by clicking **Actions** > **Switch Over** on the toolbar.
- **6.** Repeat steps 3-4 on the remaining unit (which is currently the redundant unit).

## 3.5 Rollback Procedure

If you need to rollback software from Version 7.4 to 7.2, do the following:

- 1. Install Version 7.2 from the ISO file or physical DVD disk, on both units.
- 2. Restore the HA network setting on both units and make sure that they are properly connected and operate as an HA pair.
- 3. Restore the configuration package and license key from the backup.
- 4. If needed, restore the customized device certificate and/or trusted root certificates.

## **Upgrading High-Availability (HA) Mediant** 4 9000/9030/9080/SE via Non-Hitless **Procedure**

This chapter describes the upgrade procedure for high-availability (HA) Mediant 9000/9030/9080/SE deployment, which consists of two units running as an active/standby pair.

The procedure is non-hitless, meaning that during the upgrade, the SBC service is **not** available. Compared to the hitless procedure, described in the previous section, this procedure is slightly quicker and requires less configuration steps.

#### 4.1 **Prerequisites**

Prior to upgrading the device, make sure the following prerequisites are met:

- ISO file of 7.4 version (based on CentOS Stream 8)
- Connection to the iLO server management interface (also referred to as "Remote Console") on both units
- Connection to the Mediant 9000/9030/9080/SE Web interface



Note: The below instructions assume that your server's iLO server management interface provides Remote Console functionality. The iLO interface on Mediant 9030/9080 servers includes this functionality. However, the iLO interface on Mediant 9000 does not include it.

For Mediant 9000, or if you don't have a remote connection to iLO server management interface, do the following:

- 1. Burn the ISO file of 7.4 version to a physical DVD disk.
- Use a physical VGA terminal and keyboard to perform the installation. 2.



## 4.2 Service Affecting

Upgrading the device is service affecting. The upgrade process requires manual backup and restore of device configuration. The process takes approximately one hour to complete.


## 4.3 Upgrade Procedure

- To upgrade HA Mediant 9000/9030/9080/SE via non-hitless procedure:
- 1. Back up configuration and the license key from the currently running software (7.2) so that you can restore them later if you rollback device from Version 7.4 to 7.2:
  - a. Log in to the SBC's Web interface.
  - On the toolbar, click Actions > Configuration File, and then click Save Configuration Package.
  - c. Navigate to SETUP > ADMINISTRATION > LICENSE > License Key, and then click the Save License Key to File icon
- 2. Install the new 7.4 software version on the redundant unit:



**Note:** If you are using a physical VGA terminal and keyboard, insert the DVD disk into the DVD-ROM drive, reboot the server by pressing **Power** button, and then continue with Step **f**.

- a. Connect to the iLO server management interface.
- b. Open the Remote Console.
- c. On the toolbar, choose Media > CD/DVD > Local \*.iso file:

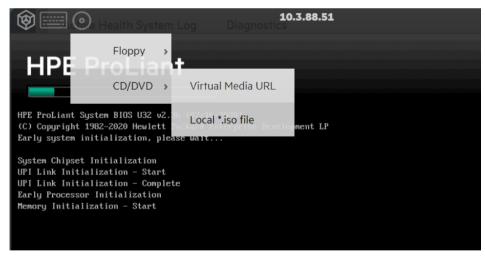

d. Browse to the ISO file of 7.4 version (based on CentOS Stream 8).

On the toolbar, choose Menu > Power > Reset; the server reboots and the Mediant SBC Installation menu is displayed.



f. Type **upgrade**, and then press Enter to start installation.



**Note:** During installation from the ISO file / DVD disk, the hard drive is formatted. However, because you typed **upgrade**, the SBC configuration (INI file, auxiliary files and TLS certificates) and the license key will be preserved.

- **g.** Wait until installation is complete (approximately 10 minutes), and then disable the virtual CD/DVD drive that was selected before the installation.
- Power off the active unit.
- Press Enter to reboot the redundant unit.



**Note:** It is imperative to power off the active unit prior to rebooting the redundant unit, because it still has the 7.2 software version installed.

- 3. Wait until the redundant unit starts. Verify that it is running the new 7.4 software version, by connecting to its Web interface and checking the version on the MONITOR page. Verify that the SBC configuration is preserved.
- **4.** Repeat Step 2 on the remaining unit (which is currently powered off). When the installation completes, do not power off the active unit because it's already running the 7.4 software version.
- Wait until both units become synchronized:
  - a. Log in to the SBC's Web interface.
  - b. Navigate to the MONITOR page.
  - c. Wait unit both units are displayed and HA status displays "Synchronized".



## 4.4 Rollback Procedure

If you need to rollback software from Version 7.4 to 7.2, do the following:

- 1. Install Version 7.2 from the ISO file or physical DVD disk, on both units.
- 2. Restore the HA network setting on both units and make sure that they are properly connected and operate as an HA pair.
- 3. Restore the configuration package and license key from the backup.
- 4. If needed, restore the customized device certificate and/or trusted root certificates.

# 5 Upgrading via Side-By-Side Deployment on VMware, KVM or Hyper-V

This chapter describes the procedure for upgrading from Version 7.2 to 7.4, Mediant VE deployed on VMware, KVM or Hyper-V, via side-by-side deployment of the 7.4 version along the existing 7.2 version.

## 5.1 Process Overview

The process consists of the following steps:

- 1. Deploy a new Mediant VE instance from the 7.4 version image (OVF / QCOW2 / VHD).
- 2. Switch live traffic from the old Mediant VE instance to the new one.
- 3. Delete the old Mediant VE instance when it's no longer needed.

Compared to the in-place upgrade process described in subsequent sections (6, 7, 8 and 9), the side-by-side process has the following advantages and disadvantages:

#### Advantages:

- If any problems are experienced with the new 7.4 version, software roll-back to the old version is quick and simple.
- Traffic may be gradually moved to a new instance (assuming that VoIP equipment that sent the traffic to the SBC supports such functionality), thereby providing better control over the upgrade process.

#### Disadvantages:

- Requires the use of additional virtual machines for the duration of the upgrade.
- Requires a change of the IP addresses and therefore, requires reconfiguration of VoIP equipment that communicates with the SBC.

# 5.2 Prerequisites

Prior to implementing the procedure, make sure the following prerequisites are met:

- Image file of 7.4 version for specific virtual environment OVF / QCOW2 / VHD
- Connection to the virtual environment's management interface
- Credentials on virtual environment that allow creation of new virtual machines
- Connection to the Mediant VE Web interface

# 5.3 Service Affecting

The process is not service affecting. However, SBC IP addresses are changed and therefore, VoIP equipment that communicates with the SBC must be updated accordingly. The process takes approximately one hour to complete.



## 5.4 Detailed Procedure

- To upgrade Mediant VE on VMware, KVM or Hyper-V from 7.2 to 7.4 version via side-by-side installation:
- 1. Deploy a new Mediant VE instance from the 7.4 version image. Refer to Mediant Virtual Edition (VE) Installation Manual for detailed instructions.
- Download the configuration file (.ini) from the existing Mediant VE instance (Actions > Configuration File > Save INI File).
- **3.** Remove all networking configuration from the downloaded file, using one of the following methods:
  - Using ini\_cleanup.py script from the Mediant VE Installation Kit, which is available on www.audiocodes.com portal.

```
# python ini cleanup.py old.ini new.ini
```

- Manually: Open the file in a text editor (e.g. Notepad++), and then delete the following elements:
  - Configuration tables: PhysicalPortsTable, EtherGroupTable, DeviceTable, InterfaceTable, MtcEntities
  - Configuration parameters: HARemoteAddress, HAUnitIdName, HARemoteUnitIdName, HAPriority, HARemotePriority, HALocalMAC, HARemoteMAC
- Obtain, activate and apply the license to the new Mediant VE instance. Refer to section Licensing the Product in Mediant Virtual Edition (VE) SBC Installation Manual for detailed description.
- 5. Switch live traffic from the old Mediant VE instance to the new one. This typically requires a change in the SBC's IP address in the VoIP equipment that communicates with the SBC. Consider performing gradual traffic migration if your VoIP equipment supports it. For example, first switch 10% of your live traffic to the new Mediant VE instance, verify that it is processed as expected, and only then switch the rest of the traffic.
- **6.** After all live traffic is switched to the new Mediant VE instance and service operates normally, delete the old Mediant VE instance.

# 6 Upgrading Standalone Mediant VE on VMware

This chapter describes the upgrade procedure for standalone Mediant VE on VMware.

## 6.1 Prerequisites

Prior to upgrading the device, make sure the following prerequisites are met:

- "OVF archive" of 7.4 version (based on CentOS Stream 8)
- Connection to the VMware Web interface (vSphere or vCenter)
- Connection to the VMware host through SSH interface
- VMware credentials that allow creation and modification of virtual resources as described in the upgrade procedure below
- At least 40 GB of storage space available in the VMware datastore
- Connection to the Mediant VE Web interface

## 6.2 Service Affecting

Upgrading the device is service affecting. Device configuration is preserved during the upgrade. The process takes approximately 30 minutes to complete.

## 6.3 Upgrade Summary

The recommended upgrade procedure described below includes the following steps:

- 1. Create a new virtual disk with 7.4 software from the "OVF archive".
- 2. Stop the virtual machine.
- 3. Mount the new virtual disk (with 7.4 version) as the primary disk and the old disk (with 7.2 version) as the secondary disk.
- **4.** Start the virtual machine; the new SBC software automatically copies all existing configuration and the license key from the secondary disk.
- 5. Detach the secondary disk.

#### To upgrade Mediant VE on VMware:

- 1. Enable SSH access to the VMware host:
  - **a.** Log in to the VMware Web interface. The instructions below use vSphere UI, but you may perform similar operations using vCenter UI instead.
  - Navigate to Host > Actions > Services, and then turn on Enable Secure Shell (SSH).
- 2. Upload the disk image (VMDK) of the 7.4 version to the VMware datastore:
  - a. Extract the VMDK file from the 7.4 version "OVF archive".
  - **b.** Log in to the VMware Web interface. The instructions below use vSphere UI, but you may perform similar operations using vCenter UI instead.
  - c. Open the Datastore browser (Storage > datastore1 > Datastore browser).
  - d. Create a directory where the 7.4 image (VMDK) will be stored (e.g., "images").
  - e. Upload the extracted VMDK file to the created directory.



- Create a copy of the 7.4 disk image (VMDK) file for the specific virtual machine and convert it into native ESXi format:
  - a. Connect to the VMware host via SSH interface.
  - **b.** Run the following commands:

```
cd /vmfs/volumes/datastore1/<vm-name>/
vmkfstools -i ../images/<image-name>.vmdk new-disk.vmdk
```

- 4. Stop the VM (Virtual Machines > VM > Actions > Shut down).
- 5. Attach a new disk to the VM as the primary disk, keeping the old one as secondary:
  - a. Open the VM settings (Virtual Machines > VM > Actions > Edit settings).
  - **b.** Add the new disk to the VM:
    - Click Add hard disk > Existing hard disk.
    - Navigate to the VM folder, and select the new-disk.vmdk file created in the previous step.
  - c. Swap hard disks so that the new hard disk becomes the primary disk and the old hard disk becomes secondary:
    - Open "New Hard disk" settings, and then change 'Virtual Device node' from SCSI (0:1) to SCSI (0:0).
    - Open (old) "Hard disk 1" settings, and then change 'Virtual Device node' from SCSI (0:0) to SCSI (0:1).
  - Under VM Options, change 'General Options' > 'Guest OS Version' to CentOS 8
     (64-bit). If such an option is unavailable, choose CentOS 7 (64-bit) instead.
  - e. Click Save to apply the changes.
- 6. Start the VM (Virtual Machines > VM > Actions > Power on).
- 7. Wait until the VM completes the boot and displays the CLI prompt. During this process, VM copies all configuration and the license key from the secondary disk.
- **8.** Verify that the VM is running the new 7.4 software version, by connecting to its Web interface and checking the version on **MONITOR** page. Verify that SBC configuration is preserved.
- 9. Stop the VM (Virtual Machines > VM > Actions > Shut down).
- 10. Remove the secondary disk:
  - a. Navigate to Virtual Machines > VM > Actions > Edit settings.
  - b. Locate the hard disk that is connected as "SCSI (0:1)" (typically, it is named "Hard disk 2"), and then delete it.
  - Click Save to apply the changes.
- 11. Start the VM (Virtual Machines > VM > Actions > Power on).



**Note:** It's recommended to keep the old disk in case you need to rollback to the old software version (for whatever reason).

### 6.4 Rollback Procedure

If you need to rollback software from Version 7.4 to 7.2, do the following:

- 1. Stop the VM.
- 2. Detach the new disk (with Version 7.4) and attach the old disk (with Version 7.2).
- Start the VM.

## 6.5 Alternative Upgrade Procedure

Some VMware deployments may lack the ability to attach a secondary hard disk and/or swap the virtual machine's primary hard disk. This may happen, for example, if you are using some "private cloud" solution on top of VMware that doesn't support virtual machine configuration via standard vSphere / vCenter interface.

- If, for whatever reason, the above-described recommended procedure cannot be implemented, use the following alternative procedure instead:
- 1. Back up the device configuration, by downloading the configuration package from it.
- Check if some customization was done for the device certificate and/or trusted root certificates.

The default device configuration is as follows:

- Device certificate has a Common Name that starts with "ACL\_" and is self-signed.
- Trusted Root Certificates list is empty.

If the device certificate was customized or some certificates were added to the Trusted Root list, make sure that you have the means to restore them (e.g., generate a new device certificate) as they are deleted during the upgrade.

- 3. Delete the current virtual machine, and then create a new one from the "OVF archive". Alternatively, you may keep the current virtual machine shut down because you will be using the same network IP addresses on the new virtual machine.
- 4. Configure the new virtual machine to use the same network IP address as the old one.
- 5. Obtain and activate the license for the new virtual machine.
- 6. Restore the configuration package from the backup.
- If your device is connected to OVOC, enable the SNMP protocol, by setting the Disable SNMP parameter to No (parameter's default value was changed in 7.4 version).
- 8. If your device had the Telnet server enabled prior to the upgrade and you want to keep it enabled, configure the **Embedded Telnet Server** parameter (parameter's default value was changed in 7.4 version).
- 9. Restore the device certificate and/or trusted certificates if needed.



This page is intentionally left blank.

# 7 Upgrading Standalone Mediant VE on KVM

This chapter describes the upgrade procedure for standalone Mediant VE on KVM.

# 7.1 Prerequisites

Prior to upgrading the device, make sure the following prerequisites are met:

- QCOW2 image of 7.4 version (based on CentOS Stream 8)
- Connection to the KVM host via SSH interface
- KVM credentials that allow creation and modification of virtual resources, as described in the upgrade procedure below
- At least 40 GB of storage space available on the KVM host
- Connection to the Mediant VE Web interface

## 7.2 Service Affecting

Upgrading the device is service affecting. Device configuration is preserved during the upgrade. The process takes approximately 30 minutes to complete.

# 7.3 Upgrade Procedure

The recommended upgrade procedure described below includes the following steps:

- 1. Create a new virtual disk with 7.4 software from the QCOW2 image.
- 2. Stop the virtual machine.
- 3. Mount the new virtual disk (with 7.4 version) as the primary disk and the old disk (with 7.2 version) as the secondary disk.
- **4.** Start the virtual machine; the new SBC software automatically copies all existing configuration and the license key from the secondary disk.
- Detach the secondary disk.

### To upgrade Mediant VE on KVM:

- 1. Upload the 7.4 QCOW2 image to the KVM host:
  - Connect to the KVM host from the SCP/SFTP client (e.g., WinSCP).
  - b. Upload the QCOW2 image file. The correct QCOW2 image extension is .qcow2. If you received a ZIP file, extract the QCOW2 file from it prior to uploading it.
- 2. Create a copy of the 7.4 QCOW2 image for the specific virtual machine:
  - a. Connect to the KVM host via the SSH interface.
  - b. Run the following commands:

```
DIR=/var/lib/libvirt/images
sudo cp <image>.qcow2 $VMDIR/<vm-name>-disk.qcow2
```

3. Stop the VM:

sudo virsh shutdown <vm-name>



- 4. Attach the new disk to the VM as the primary disk, keeping the old one as secondary:
  - a. Attach the new disk to the VM:

```
sudo virsh attach-disk <vm-name> \
$DIR/<vm-name>-disk.qcow2 hdb --config
```

**b.** Open the VM settings editor:

```
virsh edit <vm-name>
```

- c. Change the target device names for <disk> elements:
  - For the new disk, set the target device name to hda.
  - For the old disk, set the target device name to hdb.
- 5. Start the VM:

```
sudo virsh start <vm-name>
```

- **6.** Wait until the VM completes the boot and displays the CLI prompt. During this process, VM copies configuration and the license key from the secondary disk.
- Verify that the VM is running the new 7.4 software version, by connecting to its Web interface and checking the version on the MONITOR page. Verify that SBC configuration is preserved.
- 8. Detach the secondary disk:

```
sudo virsh shutdown <vm-name>
sudo virsh detach-disk <vm-name> hdb --config
sudo virsh start <vm-name>
```



**Note:** It's recommended to keep the old disk in case you need to rollback to the old software version (for whatever reason).

## 7.4 Rollback Procedure

If you need to rollback software from Version 7.4 to 7.2, do the following:

- 1. Stop the VM.
- 2. Detach the new disk (with Version 7.4) and attach the old disk (with Version 7.2).
- Start the VM.

## 7.5 Alternative Upgrade Procedure

Some KVM deployments may lack the ability to attach a secondary disk and/or swap the virtual machine's primary disk. This may happen, for example, if you are using some "private cloud" solution on top of KVM (e.g., OpenStack that doesn't support virtual machine configuration via the **virsh** command).

- If, for whatever reason, the above-described recommended procedure cannot be implemented, use the following alternative procedure instead:
- 1. Back up device configuration, by downloading the configuration package from it.
- Check if some customization was done for device certificate and/or trusted root certificates:

Default device configuration is as follows:

- Device certificate has a Common Name that starts with "ACL\_" and is self-signed.
- Trusted Root Certificates list is empty.

If the device certificate was customized or some certificates were added to the Trusted Root list, make sure that you have the means to restore them (e.g., generate a new device certificate) as they are deleted during the upgrade.

- 3. Delete the current virtual machine, and then create a new one from the QCOW2 image. Alternatively, you may keep the current virtual machine shut down because you will be using the same network IP addresses on the new virtual machine.
- 4. Configure the new virtual machine to use the same network IP address as the old one.
- 5. Obtain and activate the license for the new virtual machine.
- 6. Restore the configuration package from the backup.
- 7. If your device is connected to OVOC, enable the SNMP protocol by setting the **Disable SNMP** parameter to **No** (parameter's default value was changed in 7.4 version).
- 8. If your device had the Telnet server enabled prior to the upgrade and you want to keep it enabled, configure the **Embedded Telnet Server** parameter (parameter's default value was changed in 7.4 version).
- 9. Restore the device certificate and/or trusted root certificates, if needed.



This page is intentionally left blank.

# 8 Upgrading Standalone Mediant VE on Hyper-V

This chapter describes the upgrade procedure for standalone Mediant VE on Hyper-V.

## 8.1 Prerequisites

Prior to upgrading the device, make sure the following prerequisites are met:

- VHD image of 7.4 version (based on CentOS Stream 8)
- Connection to the Hyper-V host
- Hyper-V credentials that allow creation and modification of virtual resources, as described in the upgrade procedure below
- At least 20 GB of storage space available on the Hyper-V host
- Connection to the Mediant VE Web interface

## 8.2 Service Affecting

Upgrading the device is service affecting. Device configuration is preserved during the upgrade. The process takes approximately 30 minutes to complete.

# 8.3 Upgrade Procedure

The recommended upgrade procedure described below includes the following steps:

- 1. Create a new virtual disk with 7.4 software from the VHD image.
- 2. Stop the virtual machine.
- 3. Mount the new virtual disk (with 7.4 version) as the primary disk and the old disk (with 7.2 version) as the secondary disk.
- **4.** Start the virtual machine; the new SBC software automatically copies all existing configuration and the license key from the secondary disk.
- Detach the secondary disk.

### To upgrade Mediant VE on Hyper-V:

- 1. Copy the 7.4 VHD image to the Hyper-V host. Place it in the same folder where the existing VM disk is located (e.g., C:\Hyper-V\Virtual Hard Disks). Provide a unique name for the copied image (e.g., <vm-name>-disk.vhdx).
- Stop the VM (VM > Actions > Shut down).
- 3. Open VM Settings (VM > Actions > Settings).
- 4. Under IDE Controller 0, add a new hard drive, click Browse, choose the copied image, and then click Apply.
- **5.** Make the new hard drive the primary one, by setting its **Location** to **0**.
- 6. Make the old hard drive the secondary one, by setting its **Location** to 1.
- Click Apply to apply the changes.
- 8. Start the VM (VM > Actions > Start).
- **9.** Wait until the VM completes the boot and displays the CLI prompt. During this process, VM copies configuration and the license key from the secondary disk.



- 10. Verify that the VM is running the new 7.4 software version, by connecting to its Web interface and checking the version on the MONITOR page. Verify that SBC configuration is preserved.
- 11. Stop the VM (VM > Actions > Shut down).
- 12. Remove the old hard drive.
- 13. Start the VM (VM > Actions > Start).



**Note:** It's recommended to keep the old hard drive in case you need to rollback to the old software version (for whatever reason).

## 8.4 Rollback Procedure

If you need to rollback software from Version 7.4 to 7.2, do the following:

- 1. Stop the VM.
- 2. Detach the new hard drive (with Version 7.4) and attach the old hard drive (with Version 7.2).
- Start the VM.

## 8.5 Alternative Upgrade Procedure

Some Hyper-V deployments may lack the ability to attach a secondary disk and/or swap the virtual machine's primary disk. This may happen, for example, if you are using some "private cloud" solution on top of Hyper-V that doesn't support virtual machine configuration via standard Hyper-V management interface.

- If, for whatever reason, the above-described recommended procedure cannot be implemented, use the following alternative procedure instead:
- Back up device configuration, by downloading the configuration package from it.
- Check if some customization was done for the device certificate and/or trusted root certificates:

Default device configuration is as follows:

- Device certificate has a Common Name that starts with "ACL\_" and is self-signed.
- Trusted Root Certificates list is empty.

If the device certificate was customized or some certificates were added to the Trusted Root list, make sure that you have the means to restore them (e.g., generate a new device certificate) as they are deleted during the upgrade.

- 3. Delete the current virtual machine, and then create a new one from the VHD image. Alternatively, you may keep the current virtual machine shut down because you will be using the same network IP addresses on the new virtual machine.
- 4. Configure the new virtual machine to use the same network IP address as the old one.
- 5. Obtain and activate the license for the new virtual machine.
- Restore the configuration package from the backup.
- 7. If your device is connected to OVOC, enable the SNMP protocol by setting the **Disable SNMP** parameter to **No** (parameter's default value was changed in 7.4 version).
- 8. If your device had Telnet server enabled prior to the upgrade and you want to keep it enabled, configure the **Embedded Telnet Server** parameter (parameter's default value was changed in 7.4 version).
- Restore the device certificate and/or trusted root certificates if needed.

# 9 Upgrading High-Availability (HA) Mediant VE on VMware, KVM or Hyper-V

This chapter describes the upgrade procedure for high-availability (HA) Mediant VE deployment on VMware, KVM or Hyper-V, which consists of two virtual machines running in an active/standby pair.

## 9.1 Prerequisites

Prior to upgrading the device, make sure the following prerequisites are met:

- Image file of 7.4 version (based on CentOS Stream 8) for specific virtual environment
   OVF / QCOW2 / VHD
- CMP of "intermediate" 7.4 version same version number as above, but based on CentOS 6
- Connection to the virtual host's management interface
- Connection to the Mediant VE Web interface

# 9.2 Service Affecting

Upgrading the device is not service affecting. Device configuration is preserved during the upgrade. The process takes approximately 1 hour to complete.

## 9.3 Upgrade Procedure

The recommended upgrade procedure described in this section is built upon the recommended upgrade procedure for standalone Mediant VE on VMware, KVM or Hyper-V environments, described in the corresponding sections above.

This recommended procedure preserves complete SBC configuration and the license key of the upgraded Mediant VE instance, which greatly simplifies upgrade of the high-availability (HA) deployment. If you are unable to upgrade your Mediant VE instances via the recommended procedure, refer to the alternative upgrade procedure described in Alternative Upgrade Procedure.

#### > To upgrade HA Mediant VE on VMware, KVM or Hyper-V:

- 1. Install the "intermediate" 7.4 version (same baseline as "final" 7.4 version, but based on CentOS 6) via the regular Software Upgrade wizard.
- Install the "final" 7.4 version (based on CentOS Stream 8) on the redundant unit. Use
  the recommended upgrade procedure as described in the sections above for standalone
  Mediant VE deployment in your environment.
- 3. Wait until the redundant unit properly connects to the active one:
  - a. Log in to the SBC's Web interface.
  - **b.** Open the MONITOR page and verify that both units are displayed and the HA status is "Synchronized".
- 4. Make the redundant unit (which has the "final" 7.4 software version) active:
  - a. Log in to the SBC's Web interface.
  - b. Open the MONITOR page.
  - c. Check which unit is active. If the first unit (that wasn't upgraded to "final" 7.4 version yet) is active, perform a switchover by clicking **Actions > Switch Over** on the toolbar.
- 5. Repeat Steps 2-3 on the remaining unit (which is currently redundant).



## 9.4 Rollback Procedure

If you need to rollback software from Version 7.4 to 7.2, do the following:

- 1. Stop both VMs.
- 2. Detach the new disk (with Version 7.4) and attach the old disk (with "intermediate" Version 7.4).
- 3. Start the VMs.
- Install Version 7.2 via the regular Software Upgrade Wizard, using the corresponding CMP file.

## 9.5 Alternative Upgrade Procedure

This chapter describes the alternative upgrade procedure for high-availability (HA) deployment of Mediant VE on VMware, KVM or Hyper-V environments. This procedure is relevant **only** when you cannot upgrade Mediant VE instances via the recommended upgrade procedure, as described in the previous section. This may happen, for example, if you are using some "private cloud" solution on top of VMware, KVM or Hyper-V environments (e.g., OpenStack that doesn't support swapping of virtual machine's primary disk).

The procedure is built upon the alternative upgrade procedure for standalone Mediant VE on VMware, KVM or Hyper-V environments, described in the corresponding sections above. This procedure doesn't preserve configuration and the license key of the upgraded Mediant VE instance and therefore, is more complicated and takes longer to complete than the recommended procedure.

You have two options for implementing the alternative upgrade procedure:

- **Hitless upgrade:** This option preserves SBC service during the upgrade, but takes longer and is more complicated.
- Non-hitless upgrade: With this option SBC service is down during the upgrade. However, the procedure is faster and simpler to implement.

## 9.5.1 Alternative Upgrade Procedure – Hitless Option

- To upgrade HA Mediant VE on VMware, KVM or Hyper-V via alternative upgrade procedure while preserving SBC service:
- 1. Ensure that SSH server is enabled in SBC configuration:
  - a. Log in to the SBC's Web interface.
  - b. Navigate to SETUP > ADMINISTRATION > WEB & CLI > CLI Settings.
  - c. Ensure that the **Enable SSH Server** parameter value is set to **Enable**.
- 2. Install the "intermediate" 7.4 version (same baseline as the "final" 7.4 version, but based on CentOS 6) through the regular Software Upgrade wizard. The upgrade is performed using the CMP file and installs the "intermediate" 7.4 software on both units.
- 3. Back up the current license key of both units:
  - a. Log in to the SBC's Web interface.
  - b. Navigate to SETUP > ADMINISTRATION > LICENSE > License Key, click Save

License Key to File icon , and then save the downloaded file.

- 4. Enable SSH connection to the redundant unit:
  - a. Log in to the SBC's CLI interface via SSH protocol.

putty.exe <sbc\_ip> -l <username> -pw <password>

b. Enable SSH proxy to redundant unit, by configuring some port for it (e.g., 1022):

```
configure system

cli-settings

ssh-red-device-port 1022

exit
```



**Note:** Your SSH session may stop responding after running the **exit** command. If this happens, close the current SSH session and proceed to the next step.

- 5. Connect to the CLI interface of the redundant unit via SSH proxy on the active unit:
  - a. Establish a new SSH connection to the SSH proxy port configured above:

```
putty.exe <sbc_ip> -P 1022 -l <username> -pw <password>
```

**b.** Use the following command to check that you are logged into the redundant unit:

```
show high-availability status
```

The output should contain "Unit HA state is: Redundant".

- 6. Back up HA configuration on the redundant unit.
  - a. Capture configuration of the HA network interface:
    - Run the following command:

```
show running-config | between network-if exit
```

The command outputs a list of all network interfaces and their configuration, for example:

```
interface network-if 0
   ip-address 10.3.88.52
   prefix-length 16
   gateway 10.3.0.1
   name "O+M+C"
   underlying-dev "vlan 1"
   exit

interface network-if 1
   application-type maintenance
   ip-address 10.44.88.52
   prefix-length 16
   name "ha"
   underlying-dev "ha"
   exit
```

- ii. Identify the network interface with application-type maintenance and copy/paste its configuration to a local file on your PC for future use.
- b. Capture configuration of the HA network device:



i. Run the following command:

```
show running-config | between network-dev exit
```

The command outputs a list of all network devices and their configuration, for example:

```
network-dev 0
    underlying-if "GROUP_1"
    name "vlan 1"
    tagging untagged
    exit

network-dev 1
    vlan-id 4
    underlying-if "GROUP_4"
    name "ha"
    tagging untagged
    exit
```

- ii. Identify the network device whose name matches the underlying-dev name of the HA network interface and copy/paste its configuration to a local file on your PC for future use.
- c. Capture configuration of the HA Ethernet Group:
  - Run the following command:

```
show network ether-group
```

The command outputs a list of Ethernet groups, for example:

G. Num	Group Name	Mode	State
0	GROUP_1	GROUP_TYPE_SINGLE/1	Up
1	GROUP_2	GROUP_TYPE_SINGLE/1	Up
2	GROUP_3	GROUP_TYPE_NON/0	Up
3	GROUP_4	GROUP_TYPE_2RX_1TX/3	Up

- ii. Identify the Ethernet Group by name that matches the underlying-if name of the HA network device. This is the HA Ethernet Group. Its index is displayed in the first column (G. Num).
- iii. Run the following command:

```
show running-config | between ether-group exit
```

The command outputs a list of all Ethernet Groups and their configuration, for example:

```
ether-group 0

mode single

member1 "GE_1"

exit

ether-group 1

mode single
```

```
member1 "GE_2"
exit

ether-group 2
exit

ether-group 3

mode 2rx-1tx
member1 "GE_3"
member2 "GE_4"
exit
```

- iv. Identify the HA Ethernet Group by its index, and then copy-paste its configuration to a local file on your PC for future use.
- d. Capture generic HA settings:
  - i. Run the following command:

```
show running-config | between high-availability exit
```

The command outputs a list of HA parameters, for example:

```
high-availability settings
unit-id-name "Device 2"
remote-address 10.44.88.54
redundant-unit-id-name "Device 1"
exit
```

- ii. Copy/paste configuration of the following parameters: remote-address, unit-id-name and priority (if present) to a local file on your PC for future use.
- 7. Delete the existing virtual machine that corresponds to the redundant unit and create a new virtual machine from the 7.4 image file. Provision a new virtual machine in the same way as the old one (use the same number of vCPUs / RAM, connect to the same virtual networks, use the same IP addresses, etc.).

### Notes:



- The size of the 7.2 version image (based on CentOS 6) is 10 GB. The size of the 7.4 version image (based on CentOS Stream 8) is 20 GB. Therefore, virtual disk size changes after the virtual machine rebuild.
- Instead of deleting the existing virtual machine, you may stop it and postpone
  deletion until after the upgrade is finished. However, keep in mind that the new
  virtual machine will be provisioned with the same IP addresses as the old one;
  therefore, you can't have both old and new virtual machines running at the same
  time.



- 8. Configure the redundant unit so that it's CLI interface can be accessed from the active unit:
  - **a.** Connect to the redundant unit's CLI interface via the virtual console provided by you virtual environment.
  - **b.** Wait until the server reboots and the Mediant SBC command line interface (CLI) login prompt is displayed, and then log in using the following default credentials:
    - Username: Admin
    - Password: Admin
  - c. Enter the configuration mode

```
enable
Admin
```

d. Change the application type of the default network interface to media:

```
configure network
  interface network-if 0
    application-type media
    exit
exit
```

e. If vlan-id of the HA network device (captured in Step 6) equals 1, change the vlan-id of the default network device to 2:

```
configure network
  network-dev 0
    vlan-id 2
    exit
exit
```

- f. Restore the HA network device and interface configuration, but make the following changes:
  - If the HA network interface's ID is 0 (zero), change it to 1.
  - Change the HA interface's application-type to oamp instead of maintenance.

### Notes:



- The below commands are used as an example; use the data captured in Step 6 instead. DO NOT restore generic HA settings (e.g., remote-address) at this stage.
- Since virtual consoles typically lack copy/paste capabilities, you need to manually type the commands. Use CLI auto-completion capabilities (via Tab or '?' character) while typing the commands.

```
configure network
  network-dev 1
    vlan-id 4
    underlying-if "GROUP_4"
```

```
name "ha"

tagging untagged
exit

interface network-if 1

application-type oamp
ip-address 10.44.88.52
prefix-length 16
name "ha"
underlying-dev "ha"
exit
exit
```

- g. Restore the HA Ethernet group configuration:
  - i. Run the following command:

```
show network ether-group
```

The command outputs a list of Ethernet groups, for example:

```
G. Num Group Name
                            Group Members
       -----
  0
       GROUP 1
                             GE 1 ,
                     . . .
  1
       GROUP 2
                             GE 2 ,
                      . . .
  2
       GROUP 3
                             GE 3 ,
                             GE 4 ,
       GROUP 4
```

- ii. Identify groups to which HA Ethernet ports (listed as member1 / member2 in HA Ethernet group configuration captured in Step 6) are currently attached.
- iii. If HA Ethernet ports are not attached to the correct groups:
  - Detach the HA Ethernet ports from their current groups; for example:

```
configure network
ether-group 2
member1 ""
exit
ether-group 3
member1 ""
exit
```

• Restore HA Ethernet group configuration; for example:

```
configure network
  ether-group 3
    mode 2rx-1tx
  member1 "GE_3"
```



```
member2 "GE_4"
    exit
exit
```

h. Reboot the redundant unit:

reload now

- Wait until the redundant unit completes the reboot and displays the CLI login prompt.
- Configure License Key on the redundant unit:
  - a. Connect to the CLI interface of the redundant unit via SSH proxy on the active unit:

```
putty.exe <sbc_ip> -P 1022 -l <username> -pw <password>
```



#### Notes:

- The above command uses port 1022 configured for SSH proxy in Step 4. If you used a different port, then change the command accordingly.
- Connection to the CLI interface via SSH proxy on the active unit supports copy/paste functionality that greatly simplifies license key configuration, as described in the following steps.
- b. Use the following command to check that you are logged into the redundant unit:

```
show high-availability status
```

The output should contain "Unit HA state is: NotInit".

c. Enter the configuration mode:

```
enable
Admin
```

d. Determine the redundant unit's serial number, by running the following command:

```
show system version
```

e. Open the License Key file backed up in Step 2 and determine the license key that corresponds to the redundant unit's serial number. The license key file looks as follows:

```
[LicenseKeys]
S/N<serial-number-1>=<license-key-1>
S/N<serial-number-2>=<license-key-2>
```

f. Restore the license key. Use the redundant unit's license key instead of <license-key> in the below command. Place the value in double quotation marks to ensure that it is properly configured:

```
configure system
  feature-key "<license-key>"
  exit
```



**Note:** It is imperative to put the license-key> value in double quotation marks as
it may contain special symbols (e.g., question mark) that may be interpreted by CLI
shell as commands and result in wrong license key configuration.

- 10. Restore HA configuration on the redundant unit:
  - **a.** Use the connection to the CLI interface of redundant unit via virtual console, as in Step 8.



**Note:** Do not use the connection via SSH proxy established in Step 9 because you will be changing network configuration of the redundant unit and this connection will be lost.

- b. Log in using the following default credentials:
  - Username: Admin
  - Password: Admin
- c. Enter the configuration mode:

```
enable
Admin
```

**d.** Enter the network configuration mode:

```
configure network
```

e. Change the application type of HA network interface to maintenance. Use the ID of the HA network interface configured in Step 8 instead of <ha-interface-id> (in the above example, ha-interface-id is 1):

```
interface network-if <ha-interface-id>
   application-type maintenance
   exit
```

f. Change the application type of the default network interface to oamp:

```
interface network-if 0
    application-type oamp
    exit
```

**g.** Configure generic HA settings:



**Note:** The below commands are used as an example; use the data captured in Step 6 instead.

```
high-availability settings
unit-id-name "Device 2"
remote-address 10.44.88.54
exit
```



h. Exit the network configuration mode:

exit

i. Reboot the redundant unit:

reload now

- 11. Wait until the redundant unit completes the reboot and synchronizes with the active unit.
  - a. Log in to the SBC's Web interface.
  - b. Navigate to the **MONITOR** page.
  - **c.** Wait unit both units are displayed and HA status is "Synchronized".
- 12. Make the redundant unit (that has "final" 7.4 software version) active:
  - a. On the **MONITOR** page, check which unit is active.
  - **b.** If the first unit (that wasn't upgraded to "final" 7.4 version yet) is active, perform a switchover, by clicking **Actions** > **Switch Over** on the toolbar.
- 13. Repeat steps 5 through 10 on the remaining unit (which is currently the redundant unit).
- 14. Disable the SSH connection to the redundant unit (enabled in Step 4):
  - a. Log in to the SBC's CLI interface via SSH protocol:

```
putty.exe <sbc ip> -l <username> -pw <password>
```

b. Disable SSH proxy to the redundant unit, by configuring port 0 for it:

```
configure system

cli-settings

ssh-red-device-port 0

exit
```

## 9.5.2 Alternative Upgrade Procedure – Non-Hitless Option

- To upgrade HA Mediant VE on VMware, KVM or Hyper-V via alternative upgrade procedure without SBC service preservation:
- 1. Back up configuration and the license key from the currently running software (7.2):
  - a. Log in to the SBC's Web interface.
  - On the toolbar, click Actions > Configuration File, and then click Save Configuration Package.
  - c. Navigate to SETUP > ADMINISTRATION > LICENSE > License Key, and then click the Save License Key to File icon
- 2. Check if the device has customized certificates and ensure that they can be restored after the upgrade:
  - a. Navigate to SETUP > IP NETWORK > SECURITY > TLS Contexts.
  - b. For each configured TLS Context, select its row and then click Certificate Information and Trusted Root Certificates at the bottom of the screen.
  - c. Check if some customization was done for the device certificate and/or trusted root certificates.

Default device configuration is as follows:

- Device certificate has a Common Name that starts with "ACL\_" and is selfsigned
- Trusted Root Certificates list is empty
- **d.** If the device certificate was customized or some certificates were added to the Trusted Root list, make sure that you have the means to restore them (e.g., generate a new device certificate) because they are deleted during the upgrade.

3. Delete the existing virtual machines for both active and redundant units and create new virtual machines from the 7.4 image file. Provision new virtual machines in the same way as the old ones (use the same number of vCPUs / RAM, connect to the same virtual networks, use the same IP addresses, etc.).

### **Notes:**



- The size of the 7.2 version image (based on CentOS 6) is 10 GB. The size of the 7.4 version image (based on CentOS Stream 8) is 20 GB. Therefore, virtual disk size changes after the virtual machine rebuild.
- Instead of deleting existing virtual machines, you may stop them and postpone
  deletion until after the upgrade is finished. Keep in mind however, that new virtual
  machines will be provisioned with the same IP addresses as the old ones and
  therefore, you may not have both old and new virtual machines running at the
  same time.
- 4. Power off the second unit and leave only the first unit running.
- 5. Configure the management IP address on the first unit, as described in the section "Changing Default IP Address to Suit your Network Addressing Scheme" of "Mediant Software SBC User Manual". Use the same management IP address that was assigned to the SBC prior to the upgrade.
- 6. Restore configuration from the backup:
  - a. Log in to the SBC's Web interface.
  - **b.** On the toolbar, click **Actions** > **Configuration File**.
  - c. Click Load Configuration Package and then choose the configuration package backed up in Step 1; the device automatically reboots.
  - d. Wait until the device completes the reboot.
- 7. Power off the first unit and power on the second unit.
- 8. Repeat steps 5 through 6.
- 9. Power on the first unit.
- 10. Wait until both units become synchronized:
  - a. Log in to the SBC's Web interface.
  - b. Navigate to the **MONITOR** page.
  - c. Wait unit both units are displayed and HA status is "Synchronized".
- 11. Restore the license from the backup:
  - a. Navigate to SETUP > ADMINISTRATION > LICENSE > License Key,
  - b. Click **Load File** and then choose the license key backed up in Step 1.
  - c. Click Apply License Key and then choose Non-Hitless Upgrade to apply the license in the fastest possible way.
- **12.** Enable SNMP if your device is connected to OVOC:
  - **a.** After you upgrade to version 7.4, the SNMP protocol is disabled (because the default value of the **Disable SNMP** parameter was changed to **Yes**).
  - b. If your device is connected to OVOC for management or licensing navigate to SETUP > ADMINISTRATION > SNMP > SNMP Community and then change the Disable SNMP parameter to No. Reset the device to apply the new configuration.



- 13. Enable Telnet server (if needed):
  - c. After you upgrade to version 7.4, the Telnet server is disabled (because the default value of the Embedded Telnet Server parameter was changed to Disable).
  - d. If your device had Telnet server enabled prior to the upgrade and you want to keep it enabled, navigate to SETUP > ADMINISTRATION > WEB & CLI > CLI Settings and then change the Embedded Telnet Server parameter to Enable Unsecured.
- 14. If needed, restore the customized device certificate and/or trusted root certificates.

# 10 Upgrading Mediant CE on VMware, KVM or Hyper-V

This chapter describes the upgrade procedure for Mediant CE deployment on VMware, KVM or Hyper-V, which consists of multiple virtual machines:

- Two Signaling Components, running as an active/standby pair
- Multiple Media Components

## 10.1 Prerequisites

Prior to upgrading the device, make sure the following prerequisites are met:

- Image file of Version 7.4 (based on CentOS Stream 8) for the specific virtual environment (OVF / QCOW2 / VHD)
- CMP file of "intermediate" 7.4 version (same version number as above, but based on CentOS 6)
- Connection to the virtual host's management interface
- Connection to the Signaling Component's Web interface

## 10.2 Service Affecting

Upgrading the device is not service affecting. Device configuration is preserved during the upgrade. The process takes approximately 2 hours to complete.

## 10.3 Upgrade Procedure

- > To upgrade Mediant CE on VMware, KVM or Hyper-V:
- 1. Delete **vMC Firmware File** from the Signaling Components:
  - a. Log in to the Signaling Component's Web interface.
  - b. Navigate to MONITOR > Device Information page
  - c. Check if vMC Firmware File is listed under LOADED FILES.
  - d. If the file is listed, delete it by clicking **Delete**.
- Install the "intermediate" 7.4 version (same baseline as "final" 7.4 version, but based on CentOS 6) on Signaling Components' VMs, using the regular Software Upgrade wizard. There is no need to install the "intermediate" 7.4 version on Media Components' VMs.
- 3. Install the "final" 7.4 version (based on CentOS Stream 8) on the Signaling Components' VMs. Use the upgrade procedure as described in the previous sections for HA Mediant VE deployment in your environment.
- 4. Install the "final" 7.4 version (based on CentOS Stream 8) on the Media Components' VMs. Use the upgrade procedure as described in the previous sections for standalone Mediant VE deployment in your environment.



## 10.4 Rollback Procedure

Refer to the rollback procedure in the previous sections for upgrading Signaling Components and Media Components.

# 11 Upgrading Mediant VE on Public Clouds (AWS / Azure / Google Cloud)

If you are running software version from the 7.20CO stream (based on CentOS 8), you can upgrade to 7.4 version (based on CentOS Stream 8) using a CMP file and the regular Software Upgrade Wizard or other SBC management interfaces (e.g., **copy firmware** CLI command).

If you are running software version from the 7.20A stream (based on CentOS 6), the upgrade requires a rebuild of existing Mediant VE instances from the new 7.4 image. Refer to the section Upgrading the Software Version in the Mediant VE Installation Manual for specific public cloud environment for detailed instructions.



This page is intentionally left blank.

# 12 Upgrading Mediant CE on Public Clouds (AWS / Azure / Google Cloud)

If you are running software version from 7.20CO stream (based on CentOS 8) you can upgrade to 7.4 version (based on CentOS Stream 8) using CMP file and regular Software Upgrade Wizard or other SBC management interfaces (e.g. **copy firmware** CLI command).

If you are running software version from 7.20A stream (based on CentOS 6) the upgrade will require rebuild of existing Mediant CE instances from the new 7.4 image. Refer to the Mediant CE Installation Manual for detailed instructions.

## **International Headquarters**

1 Hayarden Street, Airport City Lod 7019900, Israel

Tel: +972-3-976-4000 Fax: +972-3-976-4040

#### AudioCodes Inc.

200 Cottontail Lane Suite A101E Somerset NJ 08873

Tel: +1-732-469-0880 Fax: +1-732-469-2298

Contact us: <a href="https://www.audiocodes.com/corporate/offices-worldwide">https://www.audiocodes.com/corporate/offices-worldwide</a>

Website: https://www.audiocodes.com/

Documentation Feedback: <a href="https://online.audiocodes.com/documentation-feedback">https://online.audiocodes.com/documentation-feedback</a>

©2021 AudioCodes Ltd. All rights reserved. AudioCodes, AC, HD VoIP, HD VoIP Sounds Better, IPmedia, Mediant, MediaPack, What's Inside Matters, OSN, SmartTAP, User Management Pack, VMAS, VoIPerfect, VoIPerfectHD, Your Gateway To VoIP, 3GX, VocaNom, AudioCodes One Voice, AudioCodes Meeting Insights, AudioCodes Room Experience and CloudBond are trademarks or registered trademarks of AudioCodes Limited. All other products or trademarks are property of their respective owners. Product specifications are subject to change without notice.

Document #: LTRT-28725

