

Web Guide

Extension software (AI Processing Relay)


Contents

1. Introduction	1
1.1 Product Overview	1
1.2 Features	2
1.3 Installation conditions of the product	2
1.4 Precautions	2
2. Preparation	4
2.1 Install this product	4
2.2 Install extension software to be linked with this product	5
2.3 Configure a camera to be linked with this product	6
3. Basic settings	7
3.1 Configure this product	7
3.2 Configure extension software to be linked with this product	11
3.3 Configure i-PRO Active Guard	11
3.4 Configure i-PRO Active Guard for VMS to receive AI-VMD and AI Occupancy Detection alarms	13
4. Other	16
4.1 Specifications	16
4.1.1 Required environment and PC specifications	16
4.1.2 About this product	16
4.1.3 Camera to install this product	17
4.1.4 Linked cameras	17
4.1.5 JPEG one shot mode	19
4.2 Trademarks and Registered Commercial Code	20
4.3 Open Source Software	21
4.4 Copyright	22
4.5 Disclaimer	23

1. Introduction

This manual explains how to install the Extension software AI Processing Relay (hereinafter referred to as "this product") on the cameras and the settings required prior to starting operation. Since this product is intended to be installed and used with a camera, please be sure to read the instruction manual of your camera as well. In addition, some of the screens shown in this manual may differ from the screens shown depending on your camera model and the version of "i-PRO Configuration Tool" (hereinafter referred to as "iCT") or "i-PRO Active Guard".

1.1 Product Overview

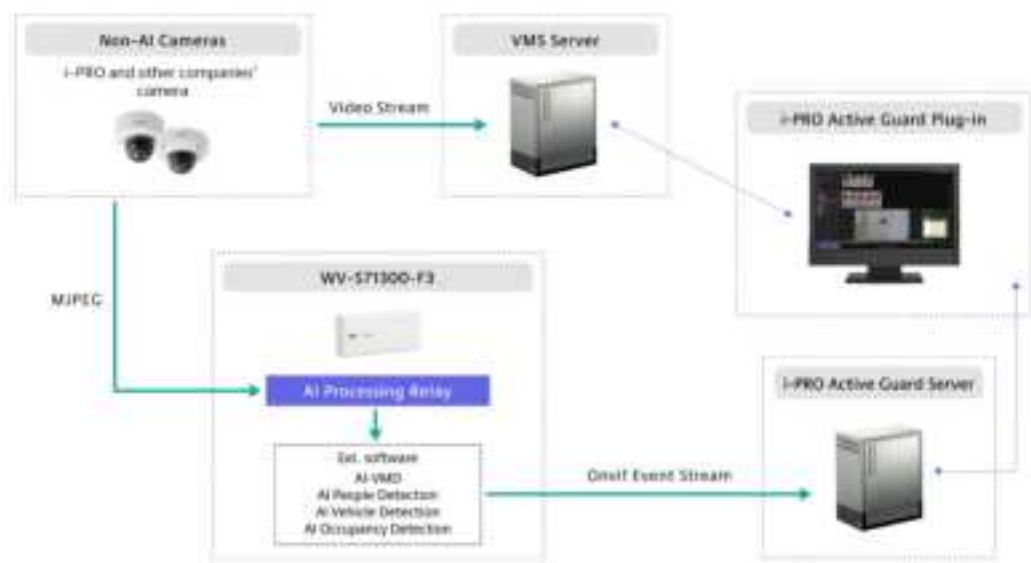

This product is software for more convenient use of AI network cameras (sold separately). This product can perform AI processing on video from cameras that do not have AI functions by installing this product on the camera, configuring the camera to work with this product, and configuring extension software.

This product is guaranteed to work with the WV-S71300-F3. The recommended camera to be linked to this product is a camera manufactured by i-PRO. If the linked camera supports MJPEG data (stream) transmission via HTTP or HTTPS, this product can receive MJPEG and perform AI processing. AI processing is handled by the extension software installed in the WV-S71300-F3. These extension software are required separately. This product can be used in combination with

the following extension software:

- AI-VMD (AI Video Motion Detection)
- AI People detection
- AI Vehicle detection
- AI Occupancy detection

The extension software outputs the Onvif Event Stream and Best Shot as AI processing results. i-PRO Active Guard is required to operate this product.



- One other camera can be connected to one WV-S71300-F3 with this product installed.

1.2 Features

This product can receive MJPEG data from other cameras, perform AI processing with AI Extension Software, and perform alarm reception and image search with i-PRO Active Guard. This product can be used when you want to add an AI function to a camera already installed.

1.3 Installation conditions of the product

This product receives MJPEG data from the linked camera and processes AI by extension software installed in the WV-S71300-F3. Installation conditions of the linked cameras, such as angle of view, are in accordance with the installation conditions of each application. AI detection performance depends on the image quality of the linked camera. Please confirm operation with the actual camera before use.

1.4 Precautions

- (1) This product must be used with the latest firmware for WV-S71300-F3.
- (2) The WV-S71300-F3 with this product installed cannot perform AI processing on its own video using the extension software.

- (3) One WV-S71300-F3 with this product installed is required for one camera. 2 or more cameras cannot be connected to this product simultaneously.
- (4) Up to two extension software can be installed on WV-S71300-F3 in addition to this product.
- (5) A command to acquire MJPEG data from the linked camera is required. The resolution and frame rate that can be processed by this product are 1920x1080@5fps or 1280x720@5fps.
- (6) When this product is installed on WV-S71300-F3, the processing of extension software installed on WV-S71300-F3 may stop until this product is properly configured. Once the settings of this product are completed and MJPEG data is received from the linked camera, extension software will operate correctly.
- (7) If this product is uninstalled, restart WV-S71300-F3. Extension software installed on WV-S71300-F3 will not work properly.

2. Preparation

The flow up to operation is as follows. This chapter describes 1), 2), and 3).

- 1) Install this product.
→ [2.1 Install this product](#)
- 2) Install extension software.
→ [2.2 Install extension software to be linked with this product](#)
- 3) Configure a camera to be linked with this product.
→ [2.3 Configure a camera to be linked with this product](#)
- 4) Start operation

2.1 Install this product

- 1) Access the product's download site and download [AI Processing Relay].



For the download site of this product, please refer to the following:

→ [Click here for downloads](#)




Do not use spaces or multi-byte characters in the destination directory name.

- 2) Select "Setup" > "Detailed setting" > "Ext. software" > "Software mng." on the WV-S71300-F3.

2. Preparation

2.2 Install extension software to be linked with this product

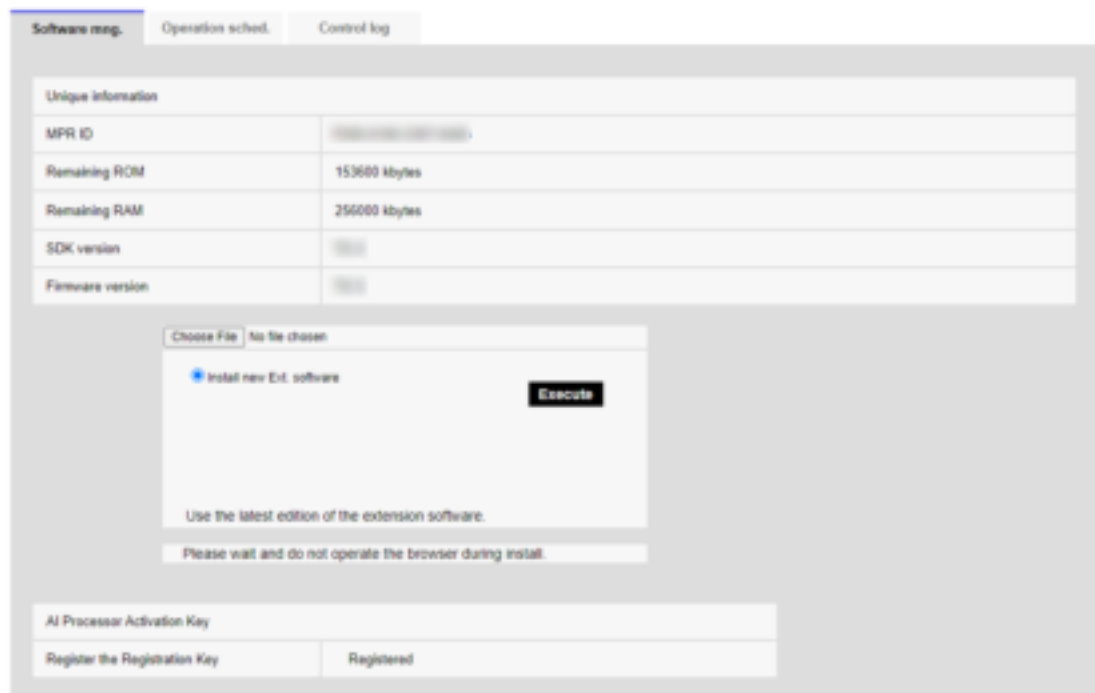

- 3) Click the "Choose File" button and select the downloaded "AIProcessingRelay_vXXX.ext".
- 4) Confirm that "Install new Ext. software" is selected and click "Execute". Installation of the software starts. When the installation is complete, AI Processing Relay is added to the Extension software list and the Ext. software screen.



- Do not turn off the camera during installation.
- Do not perform any operation during installation until the installation is completed.

2.2 Install extension software to be linked with this product

This product performs AI processing in conjunction with the following applications. Please refer to the manuals of each extension software for installation instructions.

- AI-VMD (AI Video Motion Detection)
- AI People detection
- AI Vehicle detection
- AI Occupancy Detection

2.3 Configure a camera to be linked with this product


Configure the settings for the camera to be linked to this product. Please refer to the manual of the camera for the setting method. Set the following items.

- Set the stream to output MJPEG data.
- Set the resolution of the MJPEG data to 1920x1080 or 1280x720.
- Set the frame rate of the MJPEG data to 5fps

3. Basic settings

3.1 Configure this product

- 1) After installing the "AI Processing Relay", an entry for "AI Processing Relay" will be added to the "Ext. software" tab of the "Setup" > "Detailed setting" page of the WV-S71300-F3.

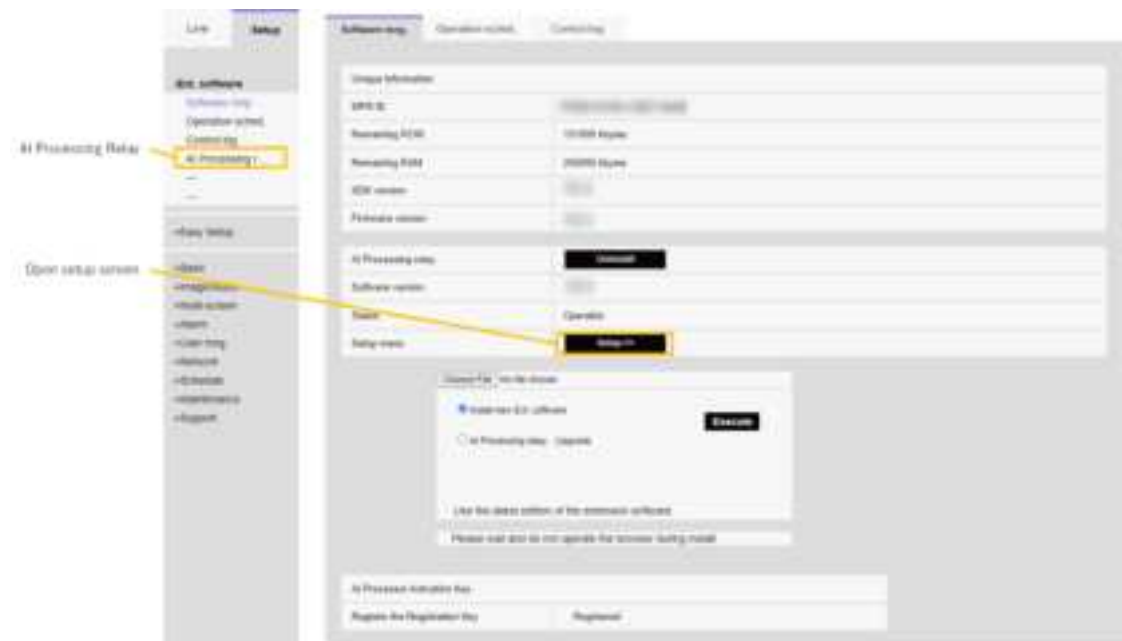

- 2) Click the "Setup" button to open the setting screen.
- 3) Enter information about the camera to be linked to this product.
 - Camera username
Enter the username that has been set for the camera to be linked.
Default setting: blank
 - Camera password
Enter the camera password that has been set for the camera to be linked.
Default setting: blank
 - Protocol
Select the protocol used to access the linked camera from this product.
Default setting: HTTP
 - IP address

3. Basic settings

3.1 Configure this product

Enter the IP address assigned to the camera to be linked.

Default setting: blank

- Port number

Enter the port number of the protocol to be used for the linked camera.

Default setting: blank

- Http Jpeg stream URL

Enter the command to receive the MJPEG data from the linked camera.

Enter the command after the IP address of the camera.

Do not enter a leading `"/`. The leading `"/` will be automatically completed by this product.

In the case of a multi-sensor camera, please include the channel specification in the command.

Default setting: blank

Example: i-PRO camera (single-lens camera)

`cgi-bin/mjpeg?stream=1&frame=5`

- Channel

Enter the channel of the camera to be linked, using a number between 1 and 4. Enter 1 if the camera to be linked is a single-lens camera. If the camera to be linked is a multi-sensor camera, enter the channel to acquire MJPEG data. The information entered in this field is used when connecting to the i-PRO Active Guard.

Default setting: 1

3. Basic settings

3.1 Configure this product

Video sending camera information

Camera user name	
Camera's password	
Protocol	☐ HTTPS ☒ HTTP
IP address	
Port number	
Http jpeg stream URL	
Channel	

When you press the "Set" button, you may be asked to authenticate. When an alert is displayed, enter the "Camera user name" and "Camera's password" for the video sending camera and sign in.

Set

Result

Http jpeg stream full URL	
Received image	
Resolution	
Frame rate	



- Enter the information for the camera to be linked, not the information for the WV-S71300-F3, in the configuration fields for this product.

- 4) Press the "Set" button
- 5) Enter username and password

An alert will appear asking you to enter a username and password. Enter the username and password for the camera to be linked and press the "Sign in" button.

Sign in

http://192.168.0.198

Your connection to this site is not private

Username

Password

Sign in **Cancel**

3. Basic settings

3.1 Configure this product



- The username and password entered for the alert must be the username and password of the camera to be linked, not the username and password of the WV-S71300-F3.

6) The results received from the linked cameras are displayed in the Result column.

- Http jpeg stream full URL

Displays the URL to receive MJPEG data from the linked camera.

- Received image

The image of MJPEG data received from the linked camera is displayed. The image is updated at 1 fps regardless of the received frame rate.

- Resolution

The resolution of the MJPEG data received from the linked camera is displayed. The resolution of the camera to be linked must be set to 1920x1080 or 1280x720.

- Framerate

Displays the frame rate of the MJPEG data received from the linked camera. 4.0 to 6.0 is the recommended value. If the recommended value is not displayed, change the frame rate of the linked camera to 5fps. If the value displayed in Framerate is lower than the recommended value even after setting the frame rate of the linking camera to 5fps, lower the bit rate of the MJPEG data from the linking camera.

Video sending camera information	
Camera user name	admin
Camera password	*****
Protocol	☐ HTTPS ☒ HTTP
IP address	192.168.0.198
Port number	88
Http jpeg stream URL	http://192.168.0.198:88/mjpeg?stream=1&frame=5
Channel	1

When you press the "Set" button, you may be asked to authenticate. When an alert is displayed, enter the "Camera user name" and "Camera password" for the video sending camera and sign in.

Set

Result	
Http jpeg stream full URL	http://192.168.0.198:88/mjpeg?stream=1&frame=5
Received image	
Resolution	1920x1080
Framerate	5.0



- The WV-S71300-F3 should be used in its default settings.

3.2 Configure extension software to be linked with this product

Please refer to the manual of each extension software to set up the software. An alert may appear when opening the extension software screen. Enter the username and password of the camera to be linked to the alert. The live image of the linked camera will be displayed on the configuration screen of the extension software.



- The username and password for the alert must be the username and password of the camera to be linked, not the username and password of the WV-S71300-F3.
- AI-VMD Mode selection should be set to "Normal angle mode".
- iCT does not display the live image of the linked camera. Please set the area settings, etc. from the link displayed in iCT.

3.3 Configure i-PRO Active Guard

Refer to the i-PRO Active Guard manual for i-PRO Active Guard settings. Only the contents

3. Basic settings


3.3 Configure i-PRO Active Guard

related to the linkage of this product are explained below.


- 1) Click "Camera Registration".
- 2) Select "Add" – "Add AI Processing Relay App".



- 3) Enter the IP address and authentication information for the camera in which this product is installed, and click "Check" and "Register".

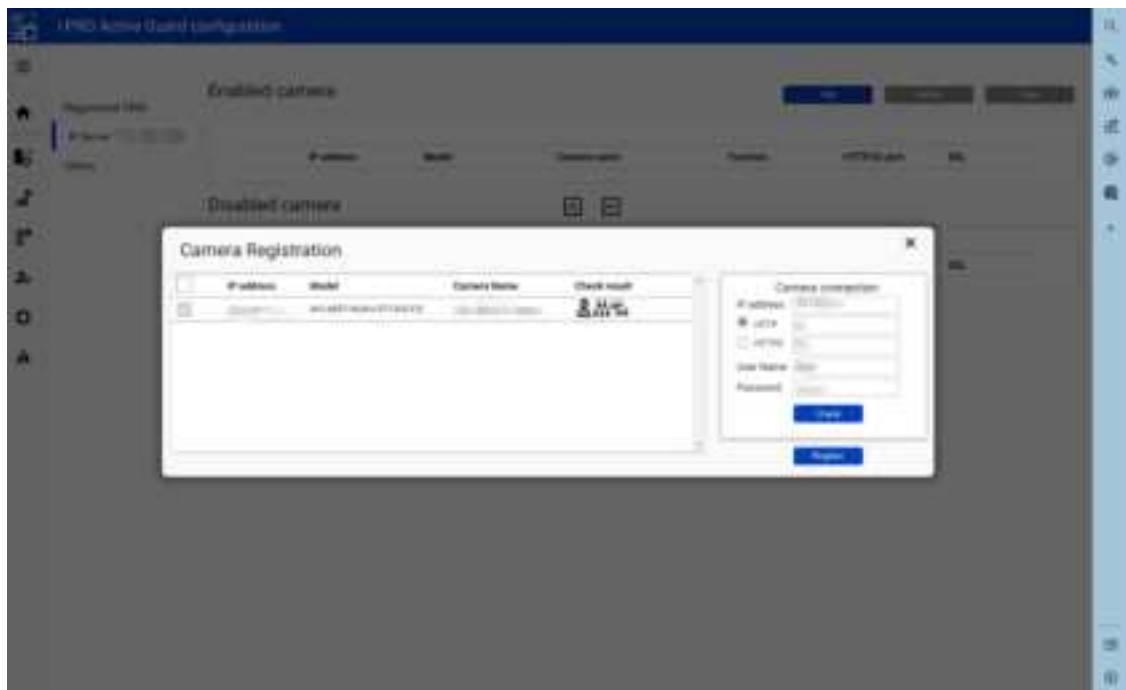

- 4) Click "Restart" to restart the i-PRO Active Guard server.

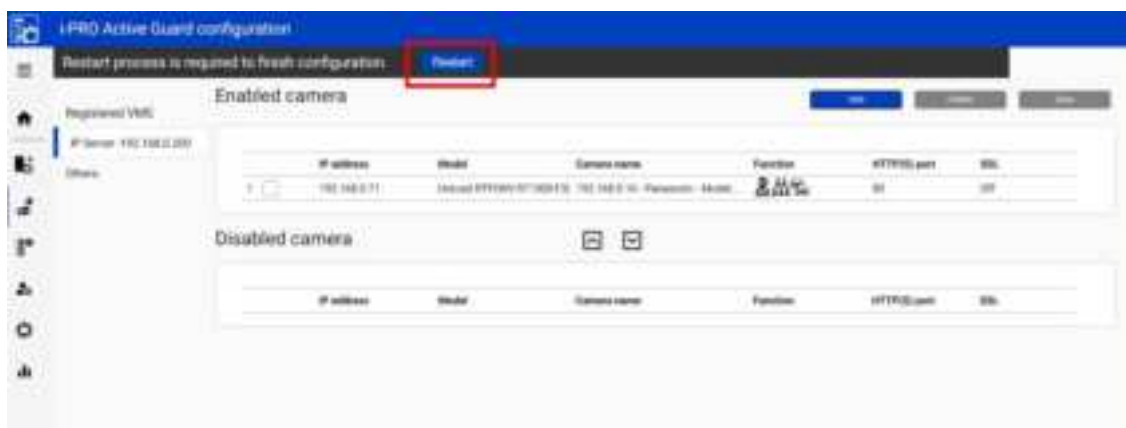

3. Basic settings

3.4 Configure i-PRO Active Guard for VMS to receive AI-VMD and AI Occupancy Detection alarms




The following settings must be made in advance.

- [3.1 Configure this product](#)
- Registration of cameras to be linked with this product to VMS. However, cameras installed this product do not need to register to VMS.

3.4 Configure i-PRO Active Guard for VMS to receive AI-VMD and AI Occupancy Detection alarms

If you use Genetec / Milestone VMS, you need to configure the following settings to notify alarms. i-PRO Active Guard will notify Genetec / Milestone VMS of the AI-VMD and AI Occupancy Detection alarms by making the following settings. If you use Video Insight VMS, you do not need the following settings.


- (1) Open i-PRO Active Guard's VMS server screen and press the "Add" button.

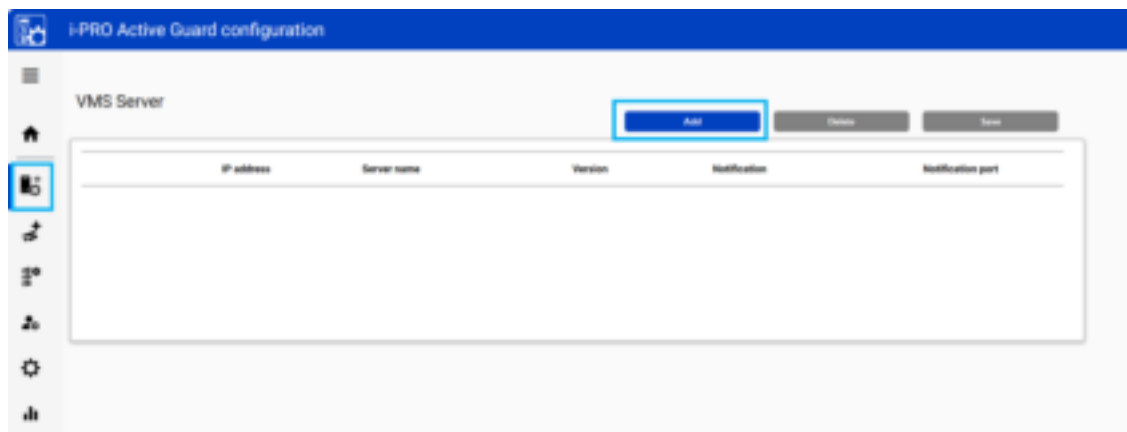

- (2) Press the "Test" button after entering the VMS information. When "Success" is displayed, press the "Save" button.

3. Basic settings

3.4 Configure i-PRO Active Guard for VMS to receive AI-VMD and AI Occupancy Detection alarms

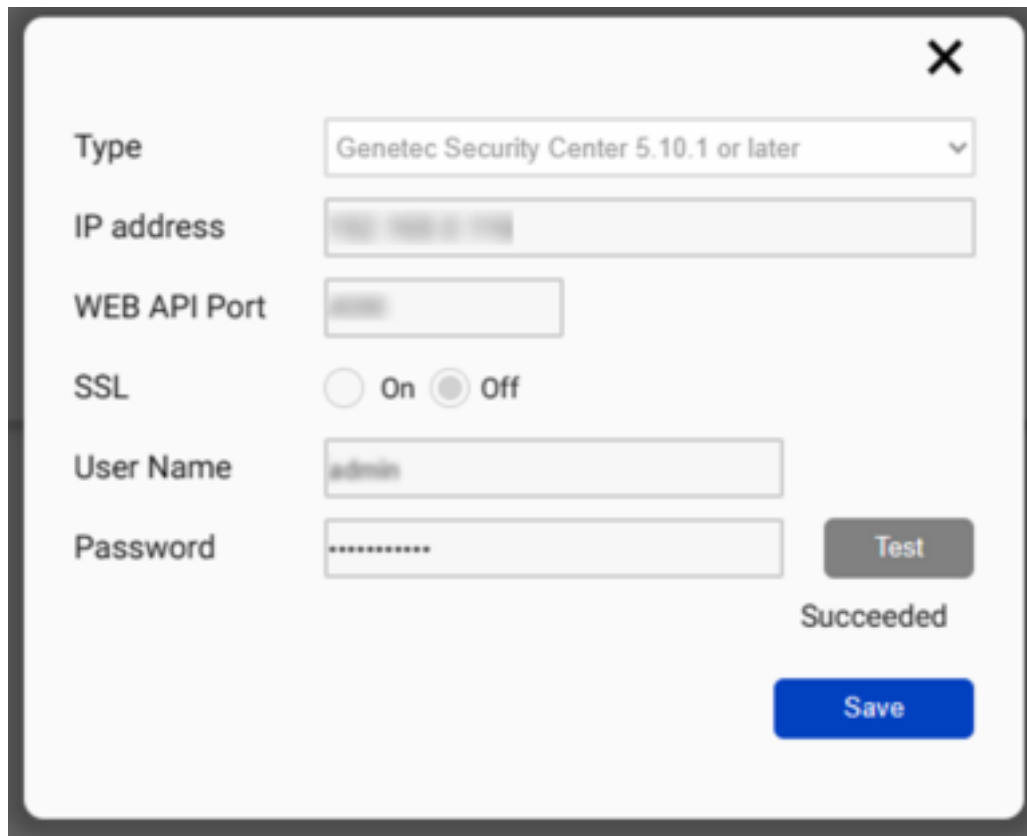

- **Type**
Select Genetec Security Center or Milestone XProtect.
 - **IP address**
Enter the IP address of Genetec Security Center or Milestone XProtect.
 - **WEB API Port**
Enter the port number of the Genetec Security Center or Milestone XProtect.
 - **Notification Port (Milestone XProtect only)**
Enter the Milestone XProtect notification port number.
 - **SSL**
Select On to enable SSL connection or Off to disable SSL connection.
 - **User Name**
Enter the User Name for Genetec Security Center or Milestone XProtect.
 - **Password**
Enter your Genetec Security Center or Milestone XProtect password.
- (3) The configured VMS appears on the VMS Server screen.
- (4) Check the Alarm of AI Processing relay app in the Notification column. i-PRO Active Guard will notify VMS of AI-VMD and AI Occupancy Detection alarms.

- ### 3. Basic settings
- #### 3.4 Configure i-PRO Active Guard for VMS to receive AI-VMD and AI Occupancy Detection alarms



4. Other

4.1 Specifications

4.1.1 Required environment and PC specifications

It is recommended to use a display that can display in 1980 x 1080 Image capture size. For the specifications of the PC used to configure the camera, please read the manual for the WV-S71300-F3 and the camera to be linked.

4.1.2 About this product

Item	Description
Input	1ch
Input format from the camera to be linked	MJPEG 1920x1080@5fps or MJPEG 1280x720@5fps
Linked cameras	- i-PRO H.265 camera - Other Company Camera
Extension software	- Up to 2 can be operated simultaneously. - Supported extension software: AI-VMD / AI People detection / AI Vehicle detection / AI Occupancy detection
Supported systems	Video Insight / Genetec / Milestone / ASM300 with i-PRO Active Guard

Note:

- For “ASM300 with i-PRO Active Guard” supports only i-PRO cameras.
- For “Video Insight with i-PRO Active Guard”, AI Occupancy Detection alarms are not supported because they do not go through i-PRO Active Guard.

Supported functions with AI Processing Relay for each system

Video Insight with i-PRO Active Guard

	AI-VMD	AI People Detection	AI Vehicle Detection	AI Occupancy Detection
Alarm Management	✓	✓	✓	N/A
Similarity Search	–	✓	✓	–
Statistics Dashboard	✓	✓	✓	✓

Genetec / Milestone with i-PRO Active Guard

	AI-VMD	AI People Detection	AI Vehicle Detection	AI Occupancy Detection
Alarm Management	✓	✓	✓	✓
Similarity Search	–	✓	✓	–
Statistics Dashboard	✓	✓	✓	✓

WV-ASM300 with i-PRO Active Guard (only i-PRO Camera is supported)

	AI-VMD	AI People Detection	AI Vehicle Detection	AI Occupancy Detection
Alarm Management	✓	✓	✓	✓
Similarity Search	–	✓	✓	–
Statistics Dashboard	✓	✓	✓	✓

4.1.3 Camera to install this product

WV-S71300-F3 is recommended for the camera to install this product.

4.1.4 Linked cameras

The camera to be linked must support MJPEG 1920x1080@5fps or MJPEG 1280x720@5fps output. In addition, a command to receive MJPEG data is required. Examples of MJPEG

4. Other

4.1 Specifications

commands from various companies are shown below. The following commands are not guaranteed to work with all cameras. Please check the operation of your camera before use.

Manufacturer	MJPEG command example (Http Jpeg stream URL)	Full URL (Http jpeg stream full URL)	Camera setting
i-PRO	cgi-bin/mjpeg? stream=1&frame=5	http://<camera IP> /cgi-bin/mjpeg? stream=1&frame=5 or https://<camera IP> /cgi-bin/mjpeg? stream=1&frame=5	Open the Image/Audio > Image settings screen of the i-PRO camera and make the following settings: – Refresh interval (JPEG): 5fps – JPEG(1) > Image capture size: 1920x1080 or 1280x720
Advidia	video/mjpeg/stream1	http://<camera IP> /video/mjpeg/stream1	This command is for an advidea camera with stream1 set to MJPEG. The Advidea camera settings should be set to “No Authentication” and the connection from AI Processing Relay should be HTTP. Example: Setup > Security > NetworkSecurity > Authentication > HTTP Authentication = None
AXIS	axis-cgi/mjpg/video.cgi? resolution=1920x1080&fps=5	http://<camera IP> /axis-cgi/mjpg/video.cgi? resolution=1920x1080&fps=5 or https://<camera IP> /axis-cgi/mjpg/video.cgi? resolution=1920x1080&fps=5	

Manufacturer	MJPEG command example (Http Jpeg stream URL)	Full URL (Http jpeg stream full URL)	Camera setting
Hanwha	stw-cgi/video.cgi? msubmenu=stream&action= view&Profile=1&CodecType=MJP EG&Resolution=1920x1080&Fra meRate=5	http://<camera IP> /stw-cgi/video.cgi? msubmenu=stream&action= view&Profile=1&CodecType=MJP EG&Resolution=1920x1080&Fra meRate=5 or https://<camera IP> /stw-cgi/video.cgi? msubmenu=stream&action= view&Profile=1&CodecType=MJP EG&Resolution=1920x1080&Fra meRate=5	This command is used when MJPEG is set as Profile 1 on a Hanwha camera.
VIVOTEK	video1s1.mjpg	http://<camera IP> /video1s1.mjpg or https://<camera IP> /video1s1.mjpg	

4.1.5 JPEG one shot mode

JPEG one shot mode continuously receives JPEG images from the linked camera and performs AI processing on the received images. Although MJPEG is recommended for this product, if your camera does not support MJPEG CGI, try the JPEG one shot mode. Please complete the installation of AI Processing Relay before following the steps below.

- Enter the following CGI to enable JPEG one shot mode

```
http://<camera IP>/cgi-bin/adam.cgi?
methodName=setApplicationPreference&appName=AiEncoderApp&pre
fType=Integer&prefName=OneShot&value=1

value=1 : JPEG one shot mode on
value=0 : JPEG one shot mode off
```
- Configure AI Processing Relay with reference to [3.1 Configure this product](#).

4. Other

4.2 Trademarks and Registered Commercial Code

For "Http Jpeg stream URL", enter the command to receive JPEG one shot.

Example: i-PRO camera (single-lens camera)

`cgi-bin/camera?stream=1`

(3) If an image is displayed in the Result column, the JPEG one shot mode is working.



- In JPEG one shot mode, a still image is displayed on the AI-VMD and AI Occupancy Detection demo screens.
- AI processing in JPEG one shot mode may not reach the recommended frame rate of 5 fps due to frequent communication with the linked camera.

Examples of JPEG one shot commands from various companies are shown below. The following commands are not guaranteed to work with all cameras. Please check the operation of your camera before use.

Manufacturer	MJPEG command example (Http Jpeg stream URL)	Full URL (Http jpeg stream full URL)	Camera setting
Bosch	snap.jpg	http://<camera IP>/snap.jpg or https://<camera IP> /snap.jpg	
Avigilon	media/cam0/still.jpg	http://<camera IP> /media/cam0/still.jpg or https://<camera IP> /media/cam0/still.jpg	

4.2 Trademarks and Registered Commercial Code

- Internet Explorer and Microsoft Edge are registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- Google Chrome is a trademark of Google LLC.
- Firefox is a trademark of the Mozilla Foundation in the United States and other countries.
- ONVIF is a trademark of ONVIF Inc.

4.3 Open Source Software

This product uses the following open source software. See “Open Source Software” for the corresponding license statement.

Software name	License Name
libjpeg-turbo	The IJG (Independent JPEG Group) License, which is listed in README.iyg The Modified (3-clause) BSD License The zlib License

Open Source Software

libjpeg-turbo Licenses

libjpeg-turbo is covered by three compatible BSD-style open source licenses:

The IJG (Independent JPEG Group) License, which is listed in [README.iyg](#)

This license applies to the libjpeg API library and associated programs (any code inherited from libjpeg, and any modifications to that code.)

The Modified (3-clause) BSD License, which is listed below

This license covers the TurboJPEG API library and associated programs, as well as the build system.

The [zlib License](#)

This license is a subset of the other two, and it covers the libjpeg-turbo SIMD extensions.

The Modified (3-clause) BSD License

Copyright (C)2009–2023 D. R. Commander. All Rights Reserved.

Copyright (C)2015 Viktor Szathmáry. All Rights Reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the libjpeg-turbo Project nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS", AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

4.4 Copyright

Transferring, copying, disassembling, decompiling, or reverse engineering the software contained in this product is prohibited. Exporting any software contained in this product in violation of export laws and regulations is also prohibited.

4.5 Disclaimer

- This product is designed to obtain images for surveillance of a specific area. This product is not intended to prevent crimes by itself.
- Under no circumstances will we be held responsible for any of the following:
 - Any incidental, special or consequential damage or damage arising directly or indirectly in connection with this product
 - Any inconvenience, damage, or damage incurred due to the inability of an image to be displayed or recorded or the loss of recorded information due to any reason including failure or failure of this product
 - Failure or inconvenience, damage, or damage caused by a system combined with a third party device
 - Claims or claims for damages caused by breaches of privacy by individuals or groups that have become a subject as a result of the use of surveillance images and records that have become public due to some reason (including use with User Authentication Off).
 - The stored information is lost for some reason (including when this product is initialized due to forgetting the authentication information such as username and password)