GARMIN

Garmin Pilot for Android™

Copyright © 2012-2022 Garmin Ltd. or its subsidiaries. All rights reserved.

This manual reflects the operation of Software version 8.2.1 or later. Some differences in operation may be observed when comparing the information in this manual to earlier or later software versions. Some differences may also be observed when comparing the information in this manual to your device.

Garmin International, Inc., 1200 East 151st Street, Olathe, Kansas 66062, U.S.A. Contact Garmin Product Support at fly.garmin.com

Garmin AT, Inc., 2345 Turner Road SE, Salem, OR 97302, U.S.A. Contact Garmin Product Support at fly.garmin.com

Garmin (Europe) Ltd., Liberty House, Hounsdown Business Park Southampton, Hampshire SO40 9LR U.K. Contact Garmin Product Support at fly.garmin.com

Garmin Corporation, No. 68, Zhangshu 2nd Road, Xizhi District, New Taipei City, Taiwan Contact Garmin Product Support at fly.garmin.com

Web Site Address: flygarmin.com

Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express written permission of Garmin. Garmin hereby grants permission to download a single copy of this manual and of any revision to this manual onto a hard drive or other electronic storage medium to be viewed for personal use, provided that such electronic or printed copy of this manual or revision must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Garmin®, SafeTaxi®, FliteCharts®, and VIRB® are registered trademarks of Garmin Ltd. or its subsidiaries. Garmin Pilot™, D2™, D2 Air™ & Marq™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Android™ is a trademark of Google, Inc.

Canadian Radar is provided by Environment Canada.

©2022 The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. Other trademarks and trade names are those of their respective owners.





WARNING: Do not rely solely upon the indicators shown on the Panel Display Pane to maneuver the aircraft.



WARNING: The altitude displayed by Garmin PilotTM on the Panel Page is geometric height above Mean Sea Level and could vary significantly from the altitude displayed by pressure altimeters. Always use pressure altitude displayed by the aircraft altimeter when determining or selecting aircraft altitude.



WARNING: Do not use outdated database information. Databases used in the Garmin PilotTM must be updated regularly in order to ensure the information remains current. Pilots using any outdated database do so entirely at their own risk.



WARNING: To aid in device security, use a properly supported device that is dedicated to the aircraft and not shared with personal use.



WARNING: To reduce the risk of unsafe operation, carefully review and understand all aspects of Garmin PilotTM User documentation and the Pilot's Operating Handbook of the aircraft. Thoroughly practice basic operation prior to actual use. During flight operations, carefully compare indications from Garmin PilotTM to all available navigation sources, including the information from other NAVAIDs, visual sightings, charts, etc. For safety purposes, always resolve any discrepancies before continuing navigation.



WARNING: Garmin PilotTM has a very high degree of functional integrity. However, the pilot must recognize that providing monitoring and/or self-test capability for all conceivable failures is not practical. Although unlikely, it may be possible for erroneous operation to occur without a fault indication shown by Garmin PilotTM. It is thus the responsibility of the pilot to detect such an occurrence by means of cross-checking with all redundant or correlated information available in the cockpit.



WARNING: For safety reasons, Garmin PilotTM operational procedures must be learned on the ground.





WARNING: The United States government operates the Global Positioning System and is solely responsible for its accuracy and maintenance. The GPS system is subject to changes which could affect the accuracy and performance of all GPS equipment. Portions of Garmin Pilot™ utilize GPS as a precision electronic NAVigation AID (NAVAID). Therefore, as with all NAVAIDs, information presented by Garmin Pilot™ can be misused or misinterpreted and, therefore, can become unsafe.



WARNING: Do not use basemap (land and water data) information for primary navigation. Basemap data is intended only to supplement other approved navigation data sources and should be considered as an aid to enhance situational awareness.



WARNING: Do not use the indicated data link weather product age to determine the age of the weather information shown by the data link weather product. Due to time delays inherent in gathering and processing weather data for data link transmission, the weather information shown by the data link weather product may be significantly older than the indicated weather product age.



WARNING: Do not use data link weather information for maneuvering in, near, or around areas of hazardous weather. Information contained with in data link weather products may not accurately depict current weather conditions.



WARNING: Do not rely solely upon the display of traffic information for collision avoidance maneuvering. The traffic display does not provide collision avoidance resolution advisories and does not under any circumstances or conditions relieve the pilot's responsibility to see and avoid other aircraft



WARNING: Do not rely solely upon the display of traffic information to accurately depict all of the traffic within range of the aircraft. Due to lack of equipment, poor signal reception, and/or inaccurate information from aircraft or ground stations, traffic may be present that is not represented on the display.





WARNING: Use of an unapproved wireless device inserted into the SD card slot of your Garmin navigator may induce a malfunction, may cause damage to the unit, will void the Garmin warranty, and may nullify the airworthiness approval of the installation. The only wireless device currently certified for use in a compatible Garmin avionics system SD card slot is the Garmin Flight Stream 510. Do not insert an unapproved wireless device into the SD card slot of your Garmin avionics system.



NOTE: All visual depictions contained within this document, including screen images of Garmin PilotTM panel and displays, are subject to change and may not reflect the most current Garmin PilotTM software and aviation databases.



NOTE: Temporary Flight Restriction (TFR) data is provided by the FAA and may not be updated outside of normal business hours. Confirm data currency through alternate sources and contact your local FSS for interpretation of TFR data.



NOTE: The navigation databases used in Garmin navigation systems contain Special Procedures. Prior to flying these procedures, pilots must have specific FAA authorization, training, and possession of the corresponding current, and legitimately-sourced chart (approach plate, etc.). Inclusion of the Special Procedure in the navigation database DOES NOT imply specific FAA authorization to fly the procedure.



SOFTWARE LICENSE AGREEMENT

BY USING THE DEVICE, COMPONENT OR SYSTEM MANUFACTURED OR SOLD BY GARMIN ("THE GARMIN PRODUCT"), YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY. Garmin Ltd. and its subsidiaries ("Garmin") grants you a limited license to use the software embedded in the Garmin Product (the "Software") in binary executable form in the normal operation of the Garmin Product. Title, ownership rights, and intellectual property rights in and to the Software remain with Garmin and/or its third-party providers. You acknowledge the Software is the property of Garmin and/or its third-party providers and is protected under the United States of America copyright laws and international copyright treaties. You further acknowledge the structure, organization, and code of the Software are valuable trade secrets of Garmin and/or its third-party providers and the Software in source code form remains a valuable trade secret of Garmin and/or its third-party providers. You agree not to reproduce, decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the Software or any part thereof or create any derivative works based on the Software. You agree not to export or re-export the Software to any country in violation of the export control laws of the United States of America.



Rev	Date	Change Summary
Υ	July, 2022	Updated for Application version 8.2.1 Enhanced Terminal NOTAMs Enhanced Airport Information Page Enhanced Database Concierge for Flight Stream 510
W	November, 2021	Updated for Application version 8.1 D2 Air X10 Support Graphical NOTAMS for NAVAIDs Enhanced Trip Planning Enhanced Dialogue(s) Google In-App Purcahses
V	September, 2021	Updated for Application version 8.0 Graphical NOTAMs for Obstacles & Airspace New User Set-up Guide Enhanced Route Data & Chart Downloads for Active Flight Plan
U	February, 2021	Updated for Application version 7.7 Enhanced Start-up Experience Enhanced Aviation Database via ADB2 Integration Microsoft Flight Sim 2020 Integration Enhanced Data Sync Settings Procedure Selector (SID's & STAR's) Enhanced NOTAM Widget
T	October, 2020	Updated for Application version 7.6.1 Visited Airports Aerial Airport View via Google Maps
S	October, 2020	Updated for Application version 7.6 D2 Air Support Aera 760 Support Tab Bar Enhanced Demo Mode
R	July, 2020	Updated for Application version 7.5 European Autorouting



Q	February, 2020	Updated for Application version 7.4 Enhanced Air Data & Analytics Emergency Button Chart Annotations GI 275 Support Enhanced Flight Profile View
Р	November, 2019	Updated for Application version 7.3 Images Refreshed Throughout Bug Fixes Throughout GNC 355 Support Clearance Delivery Phone Numbers Removal of FAA Domestic Filing Form Type to Support The ICAO Filing Mandate. Flight Profile View Enhanced Air Data & Analytics Enhanced Connext Screen
N	July, 2019	Updated for Application version 7.2 Advanced Aircraft Performance Weight & Balance Storm Cell Movement Area Forecast Discussion D2 Delta PX Support MARQ Aviator Watch Support Weather Imagery Quick Fuel Set Added SiriusXM Lightning, TFRs, Echo Tops, Winds Aloft, & Icing GPS175/GNX375 Support Model Output Statistics (MOS) Base Reflectivity Radar FBO Fees



M	March, 2018	Updated for Application version 6.3 Worldwide Winds Aloft Coverage Icing Forecast Radar & Infrared Satellite Color Palettes Chart Overlays Enhanced Stadium TFRs Glide Range Ring Logbook Tracks
		Auto-Download Pilot Updates D2® Charlie Series Watch Support Split-Screen Synthetic Vision Checklists GDL 51/51R Support
		GDL 52/52R Support Virb 360 Camera Support Logbook Photos Logbook Auto-Logging FastFind Predictive Waypoint Entry Helicopter Charts
		Units Preferences Nearest (NRST) Navigation Functionality Airspace Altitude Labels Highest Point Along Route Synthetic Vision
L	November, 2016	Updated for Application version 5.4.4 Flight Stream 510 Integration Logbook Features D2® Bravo & Bravo Titanium Pilot Watches Support Enhanced Map PIREP Overlay Sequential Chart Navigation & Chart Printing Features Best Runway Recommendations Added to Airport Information & Airports Widget
K	April, 2016	Updated for Application version 5.2.1 Aera 660 Support. Added Altitude to PIREP Map Overlay. Personal Minimums Added to Pilot Profile. Enhanced & Syncronyzed Chart Funcionality. Enhanced Bookmarks Functionality for Flight Plans.



J	April, 2016	Updated for Application version 5.1 GTX 345 Support Enhanced Trip Planning Procedures Added Traffic Alerts Leidos Flight Service Integration Enhanced Charts Enhanced Scratch Pad Added Screen Lock Added Light & Dark Modes Added Night Mode for SafeTaxi Added VIRB Integration Added Google Maps™ Service in Airport Info Added Airport Widget to Split-screen Added Demo Mode Added Warnings for Trips with Airports Below VFR/IFR mins
Н	August, 2015	Updated for Application version 4.3 Enhanced GDL 39 Support Added Connext Features Added Flight Stream Support Added Alternate Colors for Flight Conditions Added Airport Facilities Directory Added Support for Alternate Storage Locations (e.g. SD cards) Added G3X Touch Support Added GLO Support Added Terrain & Obstacles Database
G	April, 2014	Updated for Application version 3.0: Added Support for Offline Vector Maps Added Distance Measuring Tool Added Fuel Range Rings Added Track Vector Added Extended Runway Centerlines Added Auto-zoom Added Map Decluttering Option



F	January, 2014	Updated for Application version 2.8: Added GDL 39 Support (3D) Enhanced Attitude Indicator Display in Navigation Panel Enhanced Airport Information with 'Right' Traffic Patterns
E	November, 2013	Updated for Application version 2.7: Added Proposed Routes Added Keep Screen On Added Decoded TAFs Added D2® Watch Support
D	July, 2013	Updated for Application version 2.6: Added Airspace Widget Added Combined Map Layers Changed Trip Planning to File & Brief Added Routes to File & Brief Added Display Time Format Added Tools Menu for Alerts Configuration (Time/Distance) Added Custom Ownship Icons
С	May, 2013	Updated for Application version 2.4: Added Scratch Pad Added Split-Screen Traffic Enhanced Trip Planning
В	January, 2013	Updated for Application version 2.3: Enhanced Airport Information Page Chart Next Cycle Downloads
А	December, 2012	Initial Release

Table of Contents



OVERVIEW	1
Plan File Fly Log	
Features	
About This Handbook	
Android™ Tricks for Pilots	
New User Set-Up Guide	
Help File	
Map Pane Controls	
Map/Chart Selection and Settings	
General	
Pilot and Aircraft Info	41
User Content	44
Units	46
Data Services	47
GPS	49
Flight Simulation Integration	49
Downloads	51
Subscriptions	52
Sync	54
Synthetic Vision (Premium Subscription)	55
Synthetic Vision Operation	56
Logbook	
Flight Log Entries	61
Flight Log Fields	64
Logbook Photos	66
Logbook Auto-Logging	67
Logbook Tracks	68
Endorsements	6 <u>9</u>
Currency	71
Reports	71
Logbook Settings	
Weight and Balance	
Downloads	
Chart Updates	
Checklists	91
PLAN	97
FastFind Predictive Waypoint Entry	
Flight Plan	
Actions Menu	
Advanced Aircraft Performance	
Demo Mode	
Airport Information	
I	

Table of Contents



Trip Planning 150 Preparing to File 151 Planning a Trip 153 European Autorouting 157 Navlog 164 Brief 167 File Flight Plan 168 FLY 170 Map Page 170 Map Page 171 Map Settings 171 Overlays 180 Radar / IR Color 188 Opacities 181 Ownship/Route 181 Distance Measuring Tool 207 Split-Screen 208 Weather Sources 223 Weather Widgets 224 Weather Widgets 224 Weather Product Age and Source 228 Weather Products 228 Data Link Traffic (Optional) 252 System Status 255 Tarfiic Description 256 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 260 Scratch Pad 278 <th>FILE</th> <th></th> <th>150</th>	FILE		150
Planning a Trip 153			
European Autorouting		Preparing to File	151
European Autorouting		Planning a Trip	153
Naviog			
FLY 170 Map Page 170 Map Pane Controls 171 Map Settings 172 Overlays 180 Radar / IR Color 180 Opacities 181 Ownship/Route 181 Distance Measuring Tool 207 Split-Screen 208 Weather Sources 223 Weather Widgets 224 Weather Map Overlays 227 Weather Product Age and Source 228 Weather Products 228 Weather Products 228 Data Link Traffic (Optional) 252 System Status 255 Traffic Description 256 Terrain 261 Terrain Information 265 Obstacle Information 265 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad 278 CONNEXT 280 Situational Data Status 280 ADS-8 Status 280 SiriusXM Status 284 <		Navlog	164
FLY 170 Map Page 170 Map Pane Controls 171 Map Settings 172 Overlays 180 Radar / IR Color 180 Opacities 181 Ownship/Route 181 Distance Measuring Tool 207 Split-Screen 208 Weather Sources 223 Weather Widgets 224 Weather Map Overlays 227 Weather Product Age and Source 228 Weather Products 228 Data Link Traffic (Optional) 252 System Status 255 Traffic Description 256 Terrain 261 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad 278 CONNEXT 280 Status 280 Situational Data Status 280 SiriusXM Status 282 Fight Plan Transfer 285 SiriusXM Audio 288<		Brief	167
Map Page 170 Map Pane Controls 171 Map Settings 172 Overlays 180 Radar / IR Color 180 Opacities 181 Ownship/Route 181 Distance Measuring Tool 207 Split-Screen 208 Weather Sources 223 Weather Widgets 224 Weather Wap Overlays 227 Weather Products 228 Weather Products 228 Weather Products 228 Data Link Traffic (Optional) 255 System Status 255 Traffic Description 256 Terrain 261 Terrain Information 262 Obstacle Information 265 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad 278 CONNEXT 280 Situational Data Status 280 SiriusXM Status 282 SiriusXM Audio 288		File Flight Plan	168
Map Page 170 Map Pane Controls 171 Map Settings 172 Overlays 180 Radar / IR Color 180 Opacities 181 Ownship/Route 181 Distance Measuring Tool 207 Split-Screen 208 Weather Sources 223 Weather Widgets 224 Weather Wap Overlays 227 Weather Products 228 Weather Products 228 Weather Products 228 Data Link Traffic (Optional) 255 System Status 255 Traffic Description 256 Terrain 261 Terrain Information 262 Obstacle Information 265 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad 278 CONNEXT 280 Situational Data Status 280 SiriusXM Status 282 SiriusXM Audio 288	FLY		170
Map Pane Controls 171 Map Settings 172 Overlays 180 Radar / IR Color 188 Opacities 181 Ownship/Route 181 Distance Measuring Tool 207 Split-Screen 208 Weather Sources 223 Weather Widgets 224 Weather Map Overlays 227 Weather Product Age and Source 228 Weather Products 228 Data Link Traffic (Optional) 252 System Status 255 Tarfic Description 256 Terrain 261 Terrain Information 265 Obstacle Information 265 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad 278 CONNEXT 280 Situational Data Status 280 Situational Data Status 280 SiriusXM Status 281 Fight Plan Transfer 285 SiriusXM Audio 288			
Map Settings. 172 Overlays. 180 Radar / IR Color 180 Opacities. 181 Ownship/Route 181 Distance Measuring Tool. 207 Split-Screen. 208 Weather Sources 223 Weather Widgets. 224 Weather Map Overlays 227 Weather Product Age and Source 228 Weather Products. 228 Data Link Traffic (Optional) 252 System Status 255 Traffic Description 256 Terrain 261 Terrain Information 265 Obstacle Information 265 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad 278 CONNEXT 280 Situational Data Status 280 Situational Data Status 280 SiriusXM Status 284 Features 285 SiriusXM Audio 288			
Overlays. 180 Radar / IR Color 180 Opacities. 181 Ownship/Route 181 Distance Measuring Tool. 207 Split-Screen. 208 Weather Sources 223 Weather Widgets. 224 Weather Map Overlays. 227 Weather Product Age and Source 228 Weather Products. 228 Data Link Traffic (Optional) 252 System Status. 255 Traffic Description. 256 Terrain 261 Terrain Information 262 Obstacle Information 265 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad. 278 CONNEXT 280 Situational Data Status. 280 Situational Data Status. 280 SiriusXM Status 284 Features 285 Flight Plan Transfer 285 SiriusXM Audio 288		•	
Radar / IR Color 180 Opacities 181 Ownship/Route 181 Distance Measuring Tool 207 Split-Screen 208 Weather Sources 223 Weather Widgets 224 Weather Map Overlays 227 Weather Product Age and Source 228 Weather Products 228 Data Link Traffic (Optional) 255 System Status 255 Traffic Description 256 Terrain 261 Terrain Information 262 Obstacle Information 265 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad 278 CONNEXT 280 Situational Data Status 280 Situational Data Status 280 SiriusXM Status 284 Features 285 Flight Plan Transfer 285 SiriusXM Audio 288			
Opacities. 181 Ownship/Route 181 Distance Measuring Tool 207 Split-Screen 208 Weather Sources 223 Weather Widgets 224 Weather Map Overlays 227 Weather Product Age and Source 228 Weather Products 228 Weather Products 228 Data Link Traffic (Optional) 252 System Status 255 Traffic Description 256 Terrain 261 Terrain Information 262 Obstacle Information 265 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad 278 CONNEXT 280 Status 280 Situational Data Status 280 SiriusXM Status 284 Features 285 Flight Plan Transfer 285 SiriusXM Audio 288		,	
Ownship/Route 181 Distance Measuring Tool 207 Split-Screen 208 Weather Sources 223 Weather Widgets 224 Weather Map Overlays 227 Weather Product Age and Source 228 Weather Products 228 Data Link Traffic (Optional) 252 System Status 255 Traffic Description 256 Terrain 261 Terrain Information 262 Obstacle Information 265 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad 278 CONNEXT 280 Status 280 Situational Data Status 280 SiriusXM Status 284 Features 285 Flight Plan Transfer 285 SiriusXM Audio 288			
Distance Measuring Tool 207 Split-Screen 208 Weather Sources 223 Weather Widgets 224 Weather Map Overlays 227 Weather Product Age and Source 228 Weather Products 228 Data Link Traffic (Optional) 252 System Status 255 Traffic Description 256 Terrain 261 Terrain Information 262 Obstacle Information 265 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad 278 CONNEXT 280 Situational Data Status 280 Situational Data Status 280 SiriusXM Status 284 Features 285 Flight Plan Transfer 285 SiriusXM Audio 288			
Split-Screen 208 Weather Sources 223 Weather Widgets 224 Weather Map Overlays 227 Weather Product Age and Source 228 Weather Products 228 Weather Products 228 Data Link Traffic (Optional) 252 System Status 255 Traffic Description 256 Terrain 261 Terrain Information 262 Obstacle Information 265 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad 278 CONNEXT 280 Situational Data Status 280 Situational Data Status 282 SiriusXM Status 284 Features 285 Flight Plan Transfer 285 SiriusXM Audio 288		·	
Weather Sources 223 Weather Widgets 224 Weather Map Overlays 227 Weather Product Age and Source 228 Weather Products 228 Data Link Traffic (Optional) 255 System Status 255 Treffic Description 256 Terrain 261 Terrain Information 262 Obstacle Information 265 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad 278 CONNEXT 280 Situational Data Status 280 Situational Data Status 280 SiriusXM Status 284 Features 285 Flight Plan Transfer 285 SiriusXM Audio 288		<u> </u>	
Weather Widgets. 224 Weather Map Overlays. 227 Weather Product Age and Source 228 Weather Products. 228 Weather Products. 228 Weather Products. 228 Weather Products. 228 Weather Product Age and Source 228 Weather Product Age and Source 228 System Status. 255 Tarffic (Optional) 255 Terrain 261 Terrain Description. 261 Terrain Information. 262 Obstacle Information. 265 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts. 268 Scratch Pad. 278 CONNEXT. 280 Situational Data Status. 280 ADS-B Status. 280 SiriusXM Status. 284 Features. 285 Flight Plan Transfer. 285 SiriusXM Audio. 288			
Weather Map Overlays 227 Weather Product Age and Source 228 Weather Products 228 Weather Products 228 Weather Products 228 Weather Products 228 Weather Product Age and Source 228 Weather Product Age and Source 228 System Status 255 Taffic Optional 252 Terrain Status 261 Terrain Information 265 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad 278 CONNEXT 280 Status 280 Situational Data Status 280 ADS-B Status 280 SiriusXM Status 284 Features 285 Flight Plan Transfer 285 SiriusXM Audio 288			
Weather Product Age and Source 228 Weather Products 228 Data Link Traffic (Optional) 252 System Status 255 Traffic Description 256 Terrain 261 Terrain Information 262 Obstacle Information 265 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad 278 CONNEXT 280 Status 280 Situational Data Status 280 ADS-B Status 282 SiriusXM Status 284 Features 285 Flight Plan Transfer 285 SiriusXM Audio 288			
Weather Products			
Data Link Traffic (Optional)252System Status255Traffic Description256Terrain261Terrain Information262Obstacle Information265Terrain and Obstacle Alerts (Premium Subscription)265Charts268Scratch Pad278CONNEXT280Status280Situational Data Status280ADS-B Status282SiriusXM Status284Features285Flight Plan Transfer285SiriusXM Audio288			
System Status. 255 Traffic Description. 256 Terrain 261 Terrain Information. 262 Obstacle Information. 265 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad. 278 CONNEXT 280 Situational Data Status 280 ADS-B Status 282 SiriusXM Status 284 Features 285 Flight Plan Transfer 285 SiriusXM Audio 288	D		
Traffic Description 256 Terrain 261 Terrain Information 262 Obstacle Information 265 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad 278 CONNEXT 280 Status 280 Situational Data Status 280 ADS-B Status 282 SiriusXM Status 284 Features 285 Flight Plan Transfer 285 SiriusXM Audio 288			
Terrain 261 Terrain Information. 262 Obstacle Information. 265 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad 278 CONNEXT 280 Situational Data Status 280 ADS-B Status 282 SiriusXM Status 284 Features 285 SiriusXM Audio 288			
Terrain Information. 262 Obstacle Information. 265 Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad 278 CONNEXT 280 Status 280 Situational Data Status 280 ADS-B Status 282 SiriusXM Status 284 Features 285 Flight Plan Transfer 285 SiriusXM Audio 288	Te		
Obstacle Information			
Terrain and Obstacle Alerts (Premium Subscription) 265 Charts 268 Scratch Pad 278 CONNEXT 280 Status 280 Situational Data Status 280 ADS-B Status 282 SiriusXM Status 284 Features 285 Flight Plan Transfer 285 SiriusXM Audio 288			
Charts 268 Scratch Pad 278 CONNEXT 280 Status 280 Situational Data Status 280 ADS-B Status 282 SiriusXM Status 284 Features 285 Flight Plan Transfer 285 SiriusXM Audio 288			
Scratch Pad 278 CONNEXT 280 Status 280 Situational Data Status 280 ADS-B Status 282 SiriusXM Status 284 Features 285 Flight Plan Transfer 285 SiriusXM Audio 288	Cl		
Status 280 Situational Data Status 280 ADS-B Status 282 SiriusXM Status 284 Features 285 Flight Plan Transfer 285 SiriusXM Audio 288			
Status 280 Situational Data Status 280 ADS-B Status 282 SiriusXM Status 284 Features 285 Flight Plan Transfer 285 SiriusXM Audio 288	CONN	FXT	280
Situational Data Status 280 ADS-B Status 282 SiriusXM Status 284 Features 285 Flight Plan Transfer 285 SiriusXM Audio 288			
ADS-B Status 282 SiriusXM Status 284 Features 285 Flight Plan Transfer 285 SiriusXM Audio 288			
SiriusXM Status			
Features285Flight Plan Transfer285SiriusXM Audio288			
Flight Plan Transfer	Fe		
SiriusXM Audio	•		
		5	

Table of Contents



Devices	300
Pairing a Device	300
Troubleshooting a Device	300
Garmin Pilot Compatible Watch	300
Flight Stream	
GDL 39	
GDL 51/51R	306
GDL 52/52R	306
GLO	306
aera 660/760	
G3X Touch	
GTX 345/45R	309
GPS 175/GNC 355/GNX 375	
GI 275	
SUBSCRIPTIONS	314
Geo-Referenced FliteCharts	
SafeTaxi	
ADDINING A LIGHNOF A CREEKING AND WARD AND	
APPENDIX A: LICENSE AGREEMENT AND WARRANTY	
Contact Garmin	
End-User License Agreement	
AOPA Airport Directory Notice	
SiriusXM Satellite Radio Service Agreement	
Weather Data Warranty	320
INDEX	Indev-1
Index	Index 1



OVERVIEW

PLAN FILE FLY LOG

Garmin Pilot™ is the most comprehensive suite of tools for the Android designed specifically for general aviation and corporate pilots. Flight planning, DUAT(S) filing, charts, interactive maps, weather briefing resources, navigation capabilities, and a digital logbook; it's all included. The app's intuitive interface closely resemble those on the newest Garmin touchscreen avionics for seamless transition from preflight to in-flight. Plan, file, fly with Garmin Pilot.

FEATURES

- Charts: VFR Sectionals, TAC, low and high IFR en-route, airport diagrams and approach procedures. Automatically generated binders instantly organize charts for the current flight plan.
- Optional geo-referenced Garmin FliteCharts® and Garmin SafeTaxi® both show aircraft position on approach charts or taxiways.
- Weather Maps: Animated radar, AIRMETs, SIGMETs, Lightning, PIREPs, METARs, TAFs, Winds Aloft, TFRs, Lightning, Infrared and Visible Satellite.
- Extensive textual and graphical products: AIRMETs, SIGMETs, PIREPs, METARs, TAFs, Winds Aloft, and NOTAMs.
- Dynamic weather overlays with the current route displayed on the map
- AOPA Airport Directory and Fuel Prices
- Flight plan filing via a Filing Service Provider
- Comprehensive weather data direct from the National Weather Service and Environment Canada



NOTE: All visual depictions contained within this document, including screen images of Garmin PilotTM, are subject to change and may not reflect the most current Garmin PilotTM software and aviation databases.



ABOUT THIS HANDBOOK

This operating handbook is designed to provide a comprehensive guide to help with understanding how to use Garmin Pilot for reviewing aviation weather, airport information, creating and filing flight plans, and for viewing charts, maps, and navigation data in-flight.

ANDROID™ TRICKS FOR PILOTS

Android tablets are offered by a variety of manufactures and features can vary widely. It is important to know the features of a tablet before using Garmin Pilot for navigation. Some tablets are offered with one or two connectivity options; Wi-Fi or Wi-Fi + Cellular. It is also important to know which connectivity option is available before using Garmin Pilot for navigation.

There are also a few things to know about a tablet's basic features and settings that will enhance the Garmin Pilot experience. Some features of this application will vary between handsets and tablets. These features are not hidden, but they may not be immediately apparent. It is recommended to get completely familiar with the tablet and its features by reading the User's Guide for the tablet and/or the User's Guide for the tablet's Android version (Garmin Pilot requires Android 2.3 or later).

GPS

Global Positioning System (GPS) receiving capability is optional on some Android tablets. Garmin Pilot can be used without GPS for flight planning, but the navigation features will be inoperative. If the tablet does not include a GPS receiver, a Garmin GLOTM portable GPS and GLONASS receiver, or a Garmin GDL 39 or GDL 39 3D portable GPS and ADS-B receiver will be required to take advantage of the navigation features of Garmin Pilot. Alternative or third-party GPS sources known to work with Garmin Pilot are: Bad Elf, Dual Electronics XGPS150 Universal Bluetooth GPS, and GNS 5870 MFI Bluetooth GPS receiver. Other portable GPS sources may also work with Garmin Pilot.



DISPLAY ORIENTATION

Many devices have a default setting that will enable the unit to automatically rotate the display to either portrait or landscape according to which edge of the unit is facing upward. This automatic setting can be quite troublesome in the cockpit as the solid-state accelerometers are very sensitive to movement and can cause the display to rotate unexpectedly.

The primary means of enabling/disabling the rotation lock is via the Settings Menu. Each device may have other options to lock the display orientation, consult the User's Guide.

Locking Display Orientation:

- 1) On the Android device, touch **Settings** > **Display**.
- 2) Touch When device is rotated.
- 3) Touch Stay in current orientation.

GLARE REDUCTION

One limitation of some devices in the cockpit, is glare. There are number of ways to mitigate the effects of this glare using aftermarket screen protectors and similar products. However, one can do reasonably well by simply adjusting the display brightness.

Adjusting Display Brightness:

- 1) On the Android device, touch **Settings** > **Display** > **Brightness Level**.
- 2) Use the slider control to manually adjust the display brightness.
- **Or:** Within Garmin Pilot, touch **Home** > **Brightness** under the Tools section and use the slider control to set the desired display brightness.




NOTE: Some Android devices have an "Automatic brightness" setting. It may be necessary to turn this off to manually adjust the device's screen brightness.



GENERAL GARMIN PILOT OPERATING GUIDELINES

Garmin Pilot by default will open on the Map Page. If the application has been recently used it will resume on the most recently viewed page. From any page, it is possible to access any desired feature by touching, flicking, and/or dragging a finger on the active areas of the display that appear as buttons, slide controls, flick lists, text fields, or icons. As with most applications, text fields automatically open a QWERTY keyboard for easy text entry.

Also like other applications that use maps, panning is done by "touch-dragging" a finger across the display, and magnifying or zooming is done by double-touching the display, by pinching, or use the button. Reversing the pinch gesture or touching the will de-magnify or zoom out. Additionally, double-touching the screen will increase magnification in 50% intervals and center the map over the area tapped.

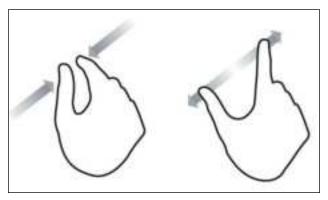

Pinch Zoom



Garmin Pilot can be used in either portrait or landscape orientation and will respond to the Android's automatic orientation feature. The map may be displayed in either full screen or Split-Screen in either orientation. The lower half of the display in portrait orientation or second (non-map) display in landscape orientation has the following functions; Widgets, Panel, Charts, SafeTaxi, Traffic, VIRB, Terrain, Checklist, or Synthetic Vision.

To streamline navigation throughout the app, Garmin Pilot now offers a Tab Bar at the bottom of the screen, which may be used as an alternative to the Home Screen Main Menu.

Displaying Tab Bar:

- 1) Touch **Settings** > **General**.
- 2) Touch **Tab Bar** to adjust the Interface Style. Tap **Classic** to return to the legacy Home Screen Menu interface style.
- Panel Mode is customizable and can be configured to display an instrument panel
 with virtual instruments to indicate GPS altitude, ground speed, vertical speed,
 course, and lateral deviation as well as a table with multiple configurable data
 fields for monitoring navigation data.
- Widget Mode enables a series of customizable data windows called 'Widgets' to be displayed. Widgets offer quick access to a variety of aviation weather products (METARs, TAFs, Winds Aloft, NOTAMs, etc...) for nearby or selected airports.

Charts, SafeTaxi, Traffic when viewed in split-screen, have the same function, navigation, and capabilities as the full screen versions of these products, just displayed in half screen. Garmin Pilot requires a data connection for downloading maps and other data prior to departure, but once everything needed for the flight is downloaded, it is ready to navigate. The Downloads Menu in the Garmin Pilot settings options will indicate when new downloadable data products are available upon connection to the Internet.



NOTE: With some of their newer devices, Android is moving away from buttons, both physical or virtual, and replacing their functionality with gesture-based navigation by default. Navigating within Garmin Pilot will differ accordingly throughout depending on your device settings.



GETTING STARTED



Garmin Pilot is fully functional immediately upon installation, but there are a few things that can be set up in order to optimize performance right away. For those using Garmin Pilot for the first time, there is a New User Set-Up Guide feature that will provide additional assistance. Simply choose 'Yes, help me get started' from the greeting page on a new installation of Garmin Pilot and answer a handful of questions in the set-up wizard to customize your Garmin Pilot experience.

NEW USER SET-UP GUIDE

INTRODUCTION

- The first page of the New User Set-Up Guide provides a link to the License Agreement, where the 'End User License Agreement' can be viewed. After viewing, touch Agree And Continue.
- The second page requests Location Permission, touch **Ok** to continue.
- The third page starts the Required Downloads necessary before using Garmin
 Pilot, touch **Start** to continue. A 'Downloading' icon should now be displayed in
 the top portion of the screen.
- The fourth page allows the user to continue with the New User Set-Up Guide by touching Yes, Help Me Get Started. If the User already has a sign-in associated with Garmin Pilot, touch No, Take Me To Sign In to skip the New User Set-Up Guide and enter the appropriate credentials.



CUSTOMIZATION

If the User selected **Yes, Help Me Get Started**, the New User Set-Up Guide continues with the second phase, customization. There are four main sections within the second phase: **Pilot Information**, **Add An Aircraft**, **How You Fly**, and **Where You Fly**.

Entering Pilot Information:

- **1)** Complete the Name, Phone, and Address text boxes on the Contact Information page.
- 2) Touch **Personal Minimums.** The settings entered will tell Garmin Pilot when to alert the User if VFR, IFR, or Wind Limitations are exceeded for a flight plan.
- 3) Touch **VFR Minimums** and enter the desired limitations.
- **4)** Touch **IFR Minimums** and enter the desired limitations.
- **5)** Touch **Wind Limits** and enter the desired limitations.
- **6)** Touch **OK** to save and continue. When the information is successfully entered and saved, a green checkmark will be displayed next to the section.

Entering Aircraft Information:

- 1) If able, select an aircraft from the list to load specific information necessary for accurate calculations throughout Garmin Pilot.
- 2) If the desired aircraft is not available on the list provided, touch Aircraft Not Found? and enter the appropriate information. When the information is successfully entered and saved, a green checkmark will be displayed next to the section.


Entering 'How You Fly' Information:

- 1) If the User will be using Garmin Pilot for Visual Flight Rules (VFR), touch VFR.
- 2) If the User will be using Garmin Pilot for both VFR and Instrument Flight Rules (IFR), touch VFR / IFR. When the information is successfully entered and saved, a green checkmark will be displayed next to the section.



Entering 'Where You Fly' Information:

- 1) Set the radius of the area most often flown by adjusting the slider.
- **2)** Touch **OK** to save and continue. When the information is successfully entered and saved, a green checkmark will be displayed next to the section.

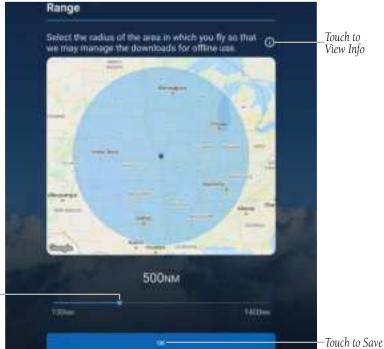

Slide to Adjust_ Radius

New User Set-Up Guide - 'Where You Fly' - Range

Once the four Customization sections are completed, Garmin Pilot will reccommend downloads based upon the New User's information. If neccessary, the User can adjust the 'Where You Fly' radius by touching **Adjust Typical Flying Radius**. To start the reccommended downloads, touch the checkbox next to 'Download Additional Data (xxxMB).




NOTE: Downloads may also be set-up and/or adjusted at a later date by selecting 'Downloads' from the More menu.



NOTE: A Wi-Fi connection is reccommended for all Downloads.



Once the User completes the New User Set-Up Guide and/or enters the necessary Sign In credentials, the best place to start is with the highly intuitive Settings Menu, which can be found by momentarily touching the Home Button and then the Settings Icon. The Settings Menu is always available from the Home Button.

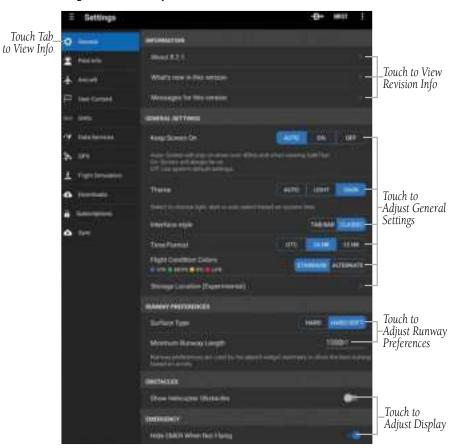

Settings - General

From the Settings Menu it is possible to set up or change the time format, input pilot profile and aircraft information, manage user waypoints, set up the preferred flight plan filing service, manage data subscriptions and much more. All of these and more selections are available by touching the tab associated with the desired function. The show/hide features like the Navigation Information (on the map display) can be accessed in the Map Context Menu (1) located in the upper right of the navigation bar.



HELP FILE

The content of the User's Guide is mirrored in the in-app help file providing context sensitive instructions for getting the most out of a Garmin Pilot subscription. The help file can be accessed from any page, by touching the Map Context Menu () located in the Navigation Bar and then touching **Help** in the page sensitive menu. Alternatively, the Help file can be accessed from the Home Button () as well. Navigating within the Help File is as easy as touching any of the hyperlinks.

Accessing the Help File:

Touch **Menu** > **Help**. The Help File will open to context sensitive content.

USER'S GUIDE

The Full Manual is a PDF formatted User's Guide for Garmin Pilot. The first time the file is accessed, the device will ask to choose a default PDF viewer. The Full Manual has a linked table of contents, index, and Bookmarks for easy navigation. The Full manual can also be downloaded from www.garmin.com.



NOTE: The Full Manual will open to the most recently accessed page. Use the Bookmarks or Page Slider to quickly navigate the file.

Accessing the Full Manual:

- 1) Touch Menu > Help.
- 2) Touch **Download** to download, touch **View**, to view the manual once downloaded. Anytime an updated manual is available the View button will revert to a Download button.


Accessing the Full Manual at www.garmin.com:

- 1) Open www.garmin.com in a web browser.
- 2) In the top right corner of the page hover the pointer over **Support**.
- 3) Select Aviation Support.
- 4) Scroll down and select Aviation Manuals..
- 5) Type "Pilot" into the **Enter a Product Name or Serial Number** search bar.
- **6)** From the next drop down menu select **Garmin Pilot™**.
- **7)** Select the desired User's Guide to download, e.g. Garmin Pilot for Android User's Guide.



NAVIGATION BAR


Garmin Pilot's user interface is comprised of icons and active areas that provide access to the various features and functions of the application. The Navigation Bar, located at the top of every page, provides access to many of the basic functions.



Navigation Bar

HOME BUTTON

The Home Button (is the primary means of accessing many of the features of Garmin Pilot. The Home Button provides quick access to the various pages within Garmin Pilot.

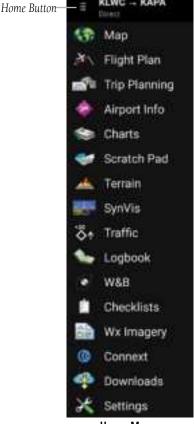

Home Menu



HOME BUTTON ICONS

Touch the following icon to display the associated function:

	Мар	Displays the Map Page, which provides full en-route navigation capabilities on a moving map.	
H	Flight Plan	Displays the Active Flight Plan Page, where flight plans can be created, stored, shared, modified, and reversed.	
	Trip Planning	Displays the Trip Planning Page, which manages all of the trip planning details for each trip.	
*	Airport Info	Displays the Airport Information Page, which includes basic airport info, frequencies, runways, procedures, weather, NOTAM's, FBO's, fuel prices/fees, FAA remarks, & Nav Aids.	
*	Charts	Displays the Charts Page, where various navigational charts can be viewed when properly downloaded.	
₩	Scratch Pad	Displays the Scratch Pad Page, which allows the pilot to quickly draw or write down information on the device screen.	
*	Terrain	Displays the Terrain View, which displays altitudes of terrain and obstructions relative to the aircraft position and altitude.	
	Synthetic Vision	Displays the Synthetic Vision View, which depicts a forward-looking attitude display of the topography immediately in front of the aircraft.	
*39 ♦ ↑	Traffic	Displays the Dedicated Traffic Page.	
•	Logbook	Displays the Logbook Page, which allows the pilot to record pertinent flight information such as currency, endorsements, and photos.	
•	Weight & Balance	Displays the Weight & Balance, which is calculated to determine if the airplane is properly loaded within CG limits.	
	Checklists	Displays the Checklists Page where specific aircraft electronic checklists can be viewed to ensure proper flight procedures.	



	WX Imagery	Displays the Weather Imagery Page, providing various meteorological data for both real-time and forecast weather events.
©	Connext	Displays the Connext Page, which allows the wireless sharing of data between devices via Bluetooth®, or, if properly equipped, Wi-Fi.
	Downloads	Displays the Downloads Page, which automatically downloads file updates and next cycles as they become available.
×	Settings	Displays the Settings Page, which includes General, Pilot Info, Aircraft, User Waypoints, Units, Weather Data, GPS, Downloads, Subscrptions, & Sync.
Home Button Icons		

TOOLS

The Tools options at the bottom of the Home menu provides access to Demo Mode, Stopwatch, Lock Screen option, Full Screen option, Brightness options, Alerts, and the Help file.


STOPWATCH

The Stopwatch feature changes the title bar to display a standard stopwatch, showing hours, minutes and seconds.

Using the Stopwatch:

- 1) Touch Home > Stopwatch.
- 2) Touch the **Start/Pause** button to start the timer.
- 3) Touch the **Start/Pause** button again to pause the timer.
- **4)** Touch the **Reset button (a)** at any time to reset the timer to zero.
- **5)** Touch **Home** > **Stopwatch** to disable the stopwatch and return the title bar to normal display.



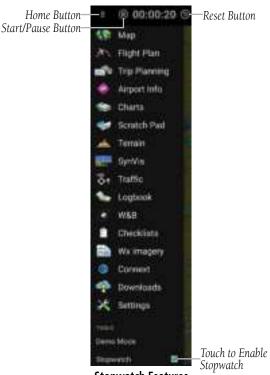

Stopwatch Features

LOCK SCREEN

The Lock Screen feature keeps the current map or chart from moving in case the screen is accidentally touched while displaying important information.

Locking the Screen:

- Touch Home > Lock Screen. The title bar turns gray to show the screen is locked. A 'Screen Locked' message is displayed if the map or chart is swiped.
- 2) Touch to unlock the screen and return to normal function.



Locked Map Screen



FULL SCREEN

The Home Menu provides access to the Full Screen mode. Simply touch **Home** > **Full Screen** to activate.




NOTE: Not all screens/devices support full screen mode. This setting will reset upon app start.

Full Screen Mode Actions

- **1)** Swipe down from the top of the screen to view navigation controls.
- 2) Swipe in from the left to open the Home Menu.
- **3)** To exit Full Screen Mode, swipe in from the left to open the Home Menu and un-check the box next to Full Screen Mode.

BRIGHTNESS

The Home Menu provides access to the display brightness control. Simply touch **Home** > **Brightness** to display a display brightness slider and set the desired display brightness. Move the slider to the right to increase display brightness or left to decrease brightness.

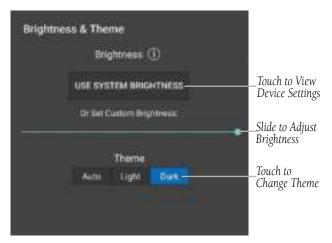

Brightness & Theme Settings



NOTE: To enable the in application brightness settings some Android devices may require disabling the "Automatic brightness" setting for the system brightness.



ALERTS

Create Alerts based on time or location. Alerts that are based on time, can range from 10 seconds to several hours. Time alerts can also be set to repeat. Location based Alerts can be set At, Before, or After a Flight Plan Waypoint.

Creating a time based alert:

- 1) Touch Home > Alerts > Add Alert.
- 2) Touch Time > Tap to Set.
- **3)** Enter the desired count down time (HH:MM:SS).
- **4)** If desired, use the Repeating **On/Off** switch, to enable/disable repeating.
- 5) If desired, touch the **Alert Message (Optional)** button and use the keypad to enter a custom message.
- 6) Touch Save.

Creating a location based alert:

- 1) Touch Home > Alerts > Add Alert.
- **2)** Touch **Location**.
- 3) Touch the **Relationship** field and select **Before**, **At**, or **After**.
- **4)** Touch the **Distance** field, and use the keypad to set the desired distance in nautical miles.
- 5) Touch the **Waypoint** field, and select the desired waypoint from the list.
- **6)** If desired, touch the **Alert Message (Optional)** button, and use the keypad to enter a custom message.
- **7)** Touch **Save**.



Alerts - Main




Editing Alerts:

- 1) Touch Home > Alerts > Edit.
- 2) Touch the desired alert for the list.
- **3)** Touch the desired field(s) to edit.
- 4) Touch **Save**, to save changes.

Deleting Alerts:

- 1) Touch Home > Alerts > Edit.
- 2) Touch 🔵 > **Delete** to delete the Alert.

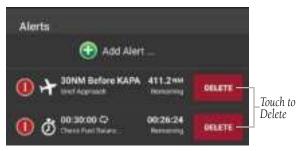

Deleting Alert

DIRECT-TO

The Direct-To button can be accessed from any page, and provides a quick and easy way to navigate direct to any waypoint (e.g., Flight Plan Waypoint, Nearest Waypoints, or User Waypoints). When Direct-To is active, the user can cancel Direct-To or reactivate Direct-To at any time. Re-activating Direct-To will calculate the direct to from the current position.



Direct-to Dialogue



NEAREST

The nearest navigation button located on the top menu bar can be accessed from any page, and provides a quick and easy way to locate airports, NAVAIDs, Intersection, User Waypoint, ARTCC, FSS, and Airspace.

Displaying the nearest airport:

- 1) Touch MIST > Type > Airport.
- If including in nearest search, touch to toggle the Private, Military, Seaplane, or Heliport switches ON/OFF, as desired.
- **3)** Touch once to select the Nearest Airport from the list, and touch again to display the airport information.



Nearest Airports

Displaying Nearest VOR, NDB, Intersection, VRP, or User Waypoint:

- 1) Touch $\mathbb{NHST} > \mathsf{Type}$.
- 2) Touch VOR, NDB, Intersection, VRP, or User Waypoint.
- **3)** Touch the nearest 'VOR', 'NDB', 'Intersection', 'VRP', or 'User Waypoint' from the list to display the navigation information.



Displaying Nearest ARTCC or FSS:

- 1) Touch $\mathbb{NHST} > \mathsf{Type}$.
- 2) Touch ARTCC or FSS.
- 3) Touch the nearest 'ARTCC' or 'FSS' from the list.
- **4)** Touch again to display additional information.

Displaying Nearest Airspace:

- 1) Touch MIST > Type.
- 2) Touch Airspace.
- **3)** Touch the nearest 'Airspace' from the list.
- **4)** Touch again to display additional information.

Setting Nearest Airport Runway Surface Type:

- 1) Touch Home > **> General**.
- 2) Touch Hard, or Hard/Soft in the Runway Surface Type field.

Setting the nearest airport minimum runway length:

- 1) Touch Home > **| > General**.
- **2)** Touch the Minimum Runway Length field to enter a value.




Settings - Runway Preferences

EMERGENCY MODE

The red Emergency (EMER) button located on the Navigation Bar can be accessed from any page and proveds a quick way to reduce the pilot's workload in an emergency situation. The EMER button will display the following:



- The Glide Range Ring using terrain and winds aloft data.
- The Emergency checklist in Split-Screen mode if configured.

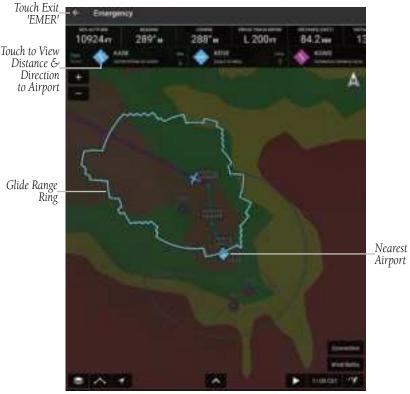

Emergency Mode (EMER) - Glide Range Ring

The EMER button can be configured to be displayed only when in flight.


Setting the EMER button to be displayed only when in flight:

- **2)** Scroll to the **Emergency** section.
- 3) Touch to toggle the **Hide EMER When Not Flying** button, as desired.



MENU

The Menu Button provides a page-sensitive menu structure. Each page has specific menu options that control, search, navigate, or display page-sensitive menu items. For example, the data bar fields can be displayed on the Map Page by touching the 'Show Navigation Info' checkbox. Touch each data field to change the navigation data displayed.

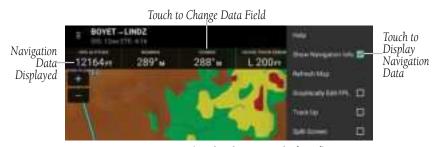

Map Page Menu (Navigation Data Displayed)

GLIDE RANGE RING



NOTE: To enable the Glide Range Ring on the Map, the User must have a valid premium subscription, an updated terrain database downloaded, and the Glide Ratio setting toggled 'On' for the selected Aircraft in the active Flight Plan.

This feature is an aid to estimate accessible airports and terrain if the aircraft were forced into glide circumstances. The displayed ring updates in real time, derived from the selected aircraft's altitude, speed, and performance details. Since Garmin Pilot supports multiple aircraft, the Glide Range Ring refers to the current active flight plan to determine which aircraft performance details to calculate the ring shape.

The Glide Range Ring requires glide performance details to be specified in Garmin Pilot's settings. This is accessed through **Home** > Aircraft. Touch on an aircraft (not aircraft type) to edit its details, and scroll down to the Glide section to specify the **Glide Ratio** and **Best Glide Speed**. Refer to the aircraft documentation for these values.



The **Glide Range Buffer** setting can be used to shrink the Glide Range Ring in situations where glide performance is expected to be less than ideal, perhaps due to shifting winds. Increasing this setting will decrease the size of the Glide Range Ring. Enabling **Shape Glide Ring for Terrain** will alter the shape of the Glide Range Ring to show intersection with terrain.

Enabling **Shift Glide Ring for Wind** will factor in local wind conditions when calculating the Glide Range Ring shape. Note the Glide Range Ring uses the most recent weather data, which may be outdated if Garmin Pilot does not have access to real time weather data over Wi-Fi or with outboard hardware such as a GDL 39.

Enabling/Disabling the Glide Range Ring:

- 1) Touch > Ownship/Route.
- 2) Touch to toggle **Display Glide Range Ring**, as desired.



Glide Range Rings



Navigation Data	Description
Altitude	The current GPS altitude or geometric height above MSL in feet.
Bearing	The compass direction from the present position to a destination waypoint.
Course	The magnetic direction from the last waypoint to the active waypoint.
Cross Track Error	desired course in nautical miles.
Distance (Dest) The distance to the destination waypoint in the Active Flight Plan The distance to the next waypoint in the Active Flight Plan. The estimated time at which the aircraft should reach the destination waypoint, based upon current speed and track. The estimated time at which the aircraft should reach the next waypoint, based upon current speed and track.	
Distance (Next)	71
ETA (Dest)	destination waypoint, based upon current speed and track.
ETA (Next)	
ETE (Dest)	The estimated time it takes to reach the destination waypoint from the present position, based upon current ground speed.
ETE (Next)	, , , , , , , , , , , , , , , , , , , ,
Ground Speed	The velocity the aircraft is traveling relative to the ground.
Heart Rate *	Heart rate from a wrist or chest heart rate monitor.
Latitude	Current latitude.
Longitude	Current longitude.
Next Waypoint	Next waypoint on the route of flight
Pitch	Current pitch. (GDL 39 3D only)
Pulse Oximeter**	Displays the saturation of oxygen in the blood
Roll	Current roll. (GDL 39 3D only)
Time	Current time
Track	The direction of aircraft movement relative to the ground.
Vertical Speed	The rate of climb or descent (GPS-derived).
Wx-Wind	The wind speed/direction at the nearest weather reporting station.
Wx-Visibility	The visibility at the nearest METAR reporting station
Wx-Altimeter	The altimeter setting at the nearest METAR reporting station.
Wx-Ceiling	The ceiling at the nearest METAR reporting station
*D2 Bravo Titanium, D2 Charl	
**D2 Air, D2 Delta PX, D2 Mac	h series, MARQ® Aviator series.

Navigation Data Field Options




MAP PANE CONTROLS

The Map Pane has a number of buttons that control the Base Map, Map Overlays and center map and split-screen. The table below shows the Map Pane Controls.

Control	lcon	Description
Map Settings	\$	Map/Chart Selection/Settings, Map Overlay Selection, Overlay Opacity Settings, and General Map Settings
Center on	7	Centers the Map Pane on the current GPS location.
Aircraft	7	Highlighted in blue when selected.
Center on	^	Centers the entire route in Map Pane. Highlighted in
Route		blue when selected.
Zoom In	+	Zooms In on the map
Zoom Out		Zooms out on the map
Split-Screen	^~	Selects full screen map or partial map with Widgets, Panel, Charts, and SafeTaxi.
Map Orientation	№ №	Toggles map orientation from north up to track up. The Icon is blue when track up is active.
Filter Settings	T	Displays a list of active and upcoming Airspace & NOTAM filters along with the ability to adjust filter display settings.

Map Pane Controls



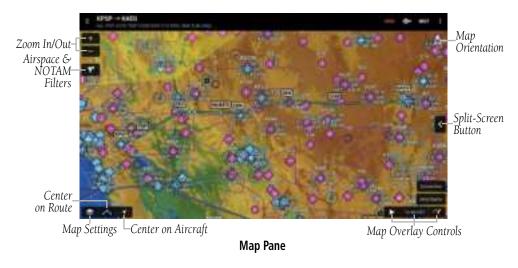

MAP/CHART SELECTION AND SETTINGS

There are three maps and three charts available for display on the Map Page. The following charts are available for viewing in the map area: Sectional TAC, IFR Low, and IFR High. Charts are high-resolution color images that resemble the paper version of the National Aeronautical Navigation Products (AeroNav) published charts. The Roads/Borders Map is a very basic map showing major roads, bodies of water, boarders and Flight Plan information. Both IFR and VFR maps are vector-based interactive maps that are populated with aeronautical information such as airports, navigation aids, maximum and minimum airspace altitudes, airspaces, and victor airways.



Map/Chart Menu



Selecting a Helicopter Chart Overlay:



NOTE: A chart basemap must be selected to display helicopter overlays.



NOTE: For information on downloading Helicopter Charts, refer to 'Downloads', discussed later in this section.

- 1) After downloading the desired Helicopter Charts, touch > Map/Chart.
- 2) Touch a chart basemap (VFR, IFR Low, or IFR High).
- Touch a Helicopter Overlay (U.S. VFR Helicopter, Gulf VFR Helicopter, or Gulf IFR Helicopter).





Selecting Helicopter Chart Overlay



VFR Helicopter Chart Overlay



Accessing Advanced Map Settings:

- 1) Touch > Map/Chart > Map Name > (5).
- 2) Touch General, Airports, Nav Aids, Airspaces, or Cities.
- **3)** Use the sliders and selection buttons to set Visibility Ranges and Label Sizes for map features.
- **4)** To give the new settings a name, Touch **General > Map Name**, and use the keyboard to enter a name.
- **5)** Touch **Done** to save and exit, or touch **Restore Defaults** to restore the default Map Theme setting.



Advanced Map Settings - General

Map Setting Categories	Map Item	Options					
	Topography		Off, Shac	le, or On			
General	Map Color	White, Green, or Brown					
	Map Type	IFR, or VFR					
	Map Name	User Defined Name					
		Large Airports	Med Airports	Small Airports	Pvt Airports		
Airports	Visibility	Off - 200 nm	Off - 50 nm	Off - 20 nm	Off - 20 nm		
	Range	Heliports	Seaplane Bases	SafeTaxi			
		Off - 20 nm	Off - 50 nm	Off - 2 nm			
	Label Size	Off, Small, Medium, Large					



		VOR		NI	OB .		Intersection	
	Visibility	Off - 100 nm		Off - 50 nm		Off - 10 nm		
Nav Aids	Range	VRP		Low Airways		High Airways		
		Off - 10 nm		Off - 100 nm			Off - 100 nm	
	Label Size	VOR, NDB, Intersection, VRP						
	Label Size		Off, Small, Medium, Large					
	Filter All	Hide All Airs		S		nart Airspace		
	Airspaces	Numerio	al Ent	·		On	/Off	
		Class B		Class C			Class D	
		Off - 200 nm			00 nm		Off - 100 nm	
	Visibility	Class E/TRSA			TMA		Control Area CTA	
	Range	Off - 100 nm			00 nm	Off - 100 nm		
		Control Zone CTR		ATZ/TIZ/MATZ		Euro Airway		
		Off - 100 nm		Off - 1		Off - 100 nm		
Airspaces	SUA Visibility Range	Restricted		t/Warning Parachute			MOA	
/ mspaces		Off - 200 nm	Off - 200 nm		Off - 100 nm		Off - 200 nm	
		ADIZ	Danger		Other			
		Off - 100 nm	Off - 100 nm		Off - 100	nm		
		Airspace Size						
		Off, Small, Medium, Large						
	Label Style	Airspace Style						
		Standard, Enhanced						
		Airspace Color						
		Standard, Dark						
	Visibility	Large City		dium City	Small Ci	,	Small Town	
Cities	Range	Off - 500 nm		- 200 nm	Off - 100		Off - 50 nm	
	Label Size	Large City, Medium City, Small City, Small Town						
		Off, Small, Medium, Large						

Advanced Map Settings



NOTAM FILTERS

Enabling NOTAMs Based On Active Flight Plan:



NOTE: When enabled, only the NOTAMs that will be effective during the Estimated Time Enroute (ETE) of the Active Flight Plan, plus a three (3) hour margin, will be displayed on the Map or within the applicable Widget.

- 1) From any page, touch **Home** > \bigsim > \bigsim > \bigsim.
- **2)** Touch **((iii)** to view info.
- 3) Touch to enable NOTAM filter.

Adjusting Upcoming NOTAM Visibility:



NOTE: Determines how far in the future to show NOTAMs on the Map or within the applicable Widget. Does not apply when NOTAMs are filtered based on the Active Flight Plan.

- 1) From any page, touch **Home** > \$\int_{\text{1}} > \$\int_{\text{2}} > \$\int_{\text{1}}\$.
- **2)** Touch **(1)** to view info.
- **3)** Touch the "+" or "-" button to adjust the timeframe (hours).

Enabling Hide Obstacle NOTAMs:

- 1) From any page, touch Home > > > > > > > >
- 2) Touch next to 'Hide Obstacle NOTAMs' to enable/disable.

Enabling Hide UAS NOTAMs:

- 1) From any page, touch **Home** > \$\frac{1}{3} > \$\frac{1}{3}\$.
- 2) Touch next to 'Hide UAS NOTAMs' to enable/disable.



SETTINGS

Located under the Home Button, touch the Settings Icon to open the Settings Menu. The Settings Menu tabs customize and manage Garmin Pilot features, subscriptions, Pilot Info, Aircraft Info and much more.

GENERAL

The General Settings tab provides access to settings for Keep Screen On, Theme, Time Format, Flight Condition Colors, Runway Preferences, Navigation, Altert Configuration Setup, Alert Type Setup, Synthetic Vision, & General Data Protections Regulation (GDPR). Touch **About** to display the current version of the Garmin Pilot Application, copyright information, and contact information (both email and phone) for Garmin Aviation Support. Touch the email address to compose an email and send it directly to Garmin Aviation Support. Sending a support email in this manner will automatically populate the email with information that will greatly aid Garmin in troubleshooting and resolving any issues that may arise.



NOTE: A data connection (e.g., Wi-Fi or cellular) is required to send and receive email.

Touch **What's new in this version...** to view information about what's new in the latest Garmin Pilot update.

KEEP SCREEN ON

The Keep Screen On settings provide three options for controlling the device display settings when using Garmin Pilot.

- Auto: The screen will stay on when the device GPS senses a ground speed over 40 kts and when viewing SafeTaxi
- **On**: The screen will always be on.
- **Off**: Uses the system default display settings.

Configuring Screen Settings:

- 1) From any page, touch **Home** > **1**.
- 2) Touch the **General** Tab.
- **3)** Touch **Auto**, **On** or **Off** to select the desired Keep Screen On settings.



THEME

The provided alternate themes allow Garmin Pilot to be used in various lighting scenarios. The **Light** theme uses dark text on a bright background that's easier to see during the day and in direct sunlight. The Dark theme uses bright text on a dark background that's much more comfortable in low-light situations. The Auto option will automatically switch between the two based on the time of day.

Configuring Interface Themes:

- From any page, touch **Home** > ******. 1)
 - Touch the **General** Tab.
- 3) Touch **Auto**, **Light** or **Dark** to select the desired setting.

0r

2)

- 1) From any page, touch **Home** > **Brightness**.
- Touch **Auto**, **Light** or **Dark** to select the desired setting. 2)


INTERFACE STYLE

The Tab Bar, located at the bottom of the screen, when selected, may be used as an alternate means of accessing many of the features of Garmin Pilot. The Tab Bar is configurable and provides guick access to the various pages within Garmin Pilot (Map, Flight Plan, Trip Planning, Airport Info, Charts, Weather Imagery, Scratch Pad, Terrain, Traffic, Checklists, Synthetic Vision, Logbook, Weight and Balance, Connext, Downloads, & Settings).



Adjusting Interface Style:

- 1) Touch Settings > General.
- 2) Touch **Tab Bar** to adjust the Interface Style.
- 3) Touch Classic to return to the legacy Home Screen Menu interface style.

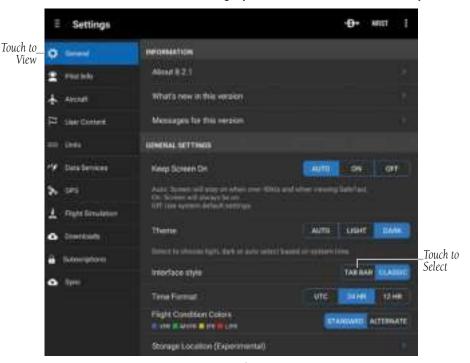

Settings - General - Interface Style Selection



TAB BAR ICONS

Touch the following icon to display the associated function:

③ Map	Мар	Displays the Map Page, which provides full enroute navigation capabilities on a moving map.
y** Flight Plan	Flight Plan	Displays the Active Flight Plan Page, where flight plans can be created, stored, shared, modified, and reversed.
Ei Trips	Trip Planning	Displays the Trip Planning Page, which manages all of the trip planning details for each trip.
Airports	Airport Info	Displays the Airport Information Page, which includes basic airport info, frequencies, runways, procedures, weather, NOTAM's, FBO's, fuel prices/fees, FAA remarks, & Nav Aids.
A Charts	Charts	Displays the Charts Page, where various navigational charts can be viewed when properly downloaded.
₩x Imagery	WX Imagery	Displays the Weather Imagery Page, providing various meteorological data for both real-time and forecast weather events.
Scratch Pad	Scratch Pad	Displays the Scratch Pad Page, which allows the pilot to quickly draw or write down information on the device screen.
A Terrain	Terrain	Displays the Terrain View, which displays altitudes of terrain and obstructions relative to the aircraft position and altitude.
Traffic	Traffic	Displays the Dedicated Traffic Page.
✓ Checklists	Checklists	Displays the Checklists Page where specific aircraft electronic checklists can be viewed to ensure proper flight procedures.
.rh. SynVis	Synthetic Vision	Displays the Synthetic Vision View, which depicts a forward-looking attitude display of the topography immediately in front of the aircraft.



 Logbook	Logbook	Displays the Logbook Page, which allows the pilot to record pertinent flight information such as currency, endorsements, & photos.
WAB	Weight & Balance	Displays the Weight & Balance, which is calculated to determine if the airplane is properly loaded within CG limits.
@ Connext	Connext	Displays the Connext Page, which allows the wireless sharing of data between devices via Bluetooth®, or, if properly equipped, Wi-Fi.
Downloads	Downloads	Displays the Downloads Page, which automatically downloads file updates and next cycles as they become available.
☆ Settings	Settings	Displays the Settings Page, which includes General, Pilot Info, Aircraft, User Content, Alerts, Units, Downloads, Subscrptions, FltPlan.com, Data Services, & Flight Simulation.
		Tab Bar Icons

CUSTOMIZE TAB BAR ICONS

The More menu contains the items not visible in the tab bar, which may be reordered or hidden from view. The order of the items in the tab bar may be customized by clicking **More** > **Edit.** Long press the desired Tab Bar icon to start customizing, using the drag-and-drop gesture to move icons to their desired location. The item to the right of the horizontal line is dynamic and displays the most recently viewed feature from the More menu.



NOTE: The Tab Bar will show between zero (0) and three (3) recent tabs with the remaining space on the Tab Bar reserved for user selected items which is dependent on screen size and device orientation. In the event a device only has enough space to show three (3) tabs, no recent tabs will be shown, instead the tabs shown will be two (2) user selected items and the More tab.

	User Selected Icons				Most Recent		
3		12	•		12		14
Men	Flight Plan	Tripp	Altronto	Charte	Scritch Pad	Logbook	More


Current Page Touch to View



Customizing Tab Bar Icons:

- 1) From anywhere in Garmin Pilot, touch **More** > **Edit** to display the Drag and Drop to Reorder window.
- 2) The Tab Bar and More Menu icons are displayed. Scroll down to view the complete list of icons in the More Menu.
- **3)** Long press on the desired icon until the background is highlighted (blue), then drag and drop the icon in the desried location.
- If necessary, touch **Restore** to load the previous selection and sequence of icons.
- **5)** Touch **Save** to continue or **Cancel** to close without saving.

Touch to Customize Tab Bar

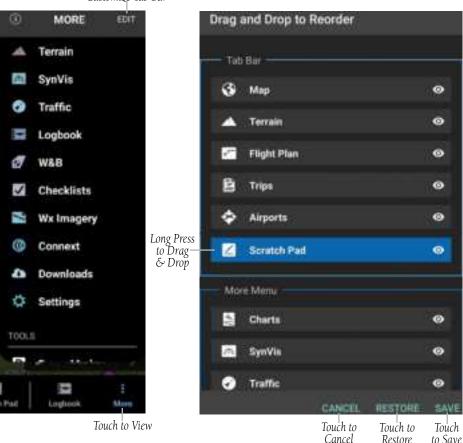


Tab Bar Customization



Hiding Tab Bar Icons:

- 1) From anywhere in Garmin Pilot, touch **More** > **Edit** to display the Drag and Drop to Reorder window.
- 2) The Tab Bar and More Menu icons are displayed. Scroll down to view the complete list of icons in the More Menu.
- 3) Touch ot Hide and remove from the available icon(s) on the Tab Bar.
- **4)** If necessary, touch **Restore** to unhide and load the previous selection and sequence of icons.
- **5)** Touch **Save** to continue or **Cancel** to close without saving.

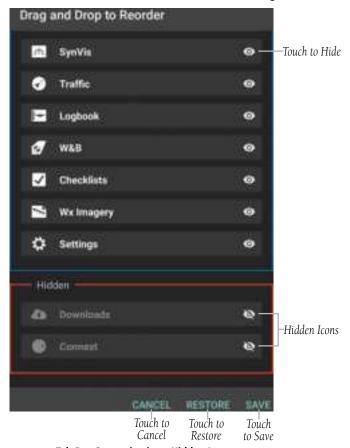

Tab Bar Customization - Hidden Icons



RUNWAY PREFERENCES

Setting Runway Preferences will adjust the Best Runway recommendations made by the Airport Information page and the airport widget. The default **Surface Type** is Hard/ Soft which will recommend any runway. Changing this to Hard will only recommend asphalt and concrete runways. Setting the **Minimum Runway Length** will only recommend runways to the specified length or greater.



NOTE: Runway preferences are used by the airport widget summary to show the best runway based on winds.

OBSTACLES

Configuring Helicopter Obstacles:

- 1) From any page, touch Home > ${\red{1}}$.
- **2)** Touch the **General** Tab.
- **3)** Touch **1** to toggle **Show Helicopter Obstacles** as desired.

EMERGENCY

Configuring Hide EMER When Not Flying:

- **2)** Touch the **General** Tab.
- 3) Touch to toggle **Hide EMER When Not Flying** as desired.

NAVIGATION

Configuring Automatic Safe Taxi:

- 1) From any page, touch Home > 🔏
- 2) Touch the **General** Tab.
- 3) Touch to toggle **Automatic Safe Taxi** as desired.



NOTE: With a SafeTaxi subscription and when Automatic SafeTaxi is On, SafeTaxi will launch after landing at the destination airport when ground speed drops below 40 kts.



ALERT CONFIGURATION SETUP

The Alert Configuration Setup section allows the pilot the ability to toggle Notifications On/Off for vibration settings as well as select a desired ringtone. When Notifications are On, a Garmin Pilot Icon will appear in the device notification area (e.g. the top banner) when the configured alert criteria is met (e.g., time or location).

Configuring Alert Notifications:

- **1)** From any page, touch **Home** >
- 2) Touch the **General** Tab.
- Touch Notification Ringtone to select a ringtone, or set to None to disable audio notifications.
- **4)** Touch to toggle **Vibrate** as desired.

ALERT TYPE SETUP

Configuring Terrain Alerts:

- 1) From any page, touch Home >
- **2)** Touch the **General** Tab.
- **3)** Touch **1** to toggle **Terrain Alerts** as desired.

Configuring Traffic Alerts (Traffic Device Required):

- 1) From any page, touch **Home** > **1**.
- **2)** Touch the **General** Tab.
- 3) Touch to toggle **Traffic Alerts** as desired.

Configuring Audio:

- 1) From any page, touch **Home** >
- 2) Touch the **General** Tab.
- 3) Touch Audio options OFF, MALE, or FEMALE.



Configuring Trip Weather Alerts:

- From any page, touch **Home** > ******.
- Touch the **General** Tab. 2)
- Touch **to toggle Trip Weather Alerts** as desired. 3)



NOTE: Trip Weather Alerts are activated when weather for one or more trips goes below minimums set by the User.

SYNTHETIC VISION

Configuring Roll Indication:

- From any page, touch **Home** > ******.
- **2)** Touch the **General** Tab.
- 3) Touch Roll Indication options SKY POINTER, or GROUND POINTER.

GENERAL DATA PROTECTION REGULATION (GDPR)

The GDPR is a regulation in the European Union on data protection and privacy for all individual citizens of the European Union and the European Economic Area. It also addresses the transfer of personal data outside the EU and EEA areas. If applicable, touch the **Reset** button.


Resetting General Data Protection Regulation:

- From any page, touch **Home** > **1**.
- Touch the General Tab.
- **3)** Touch **Reset** button in the **GDPR** section, as desired.



NOTE: For additional information, please visit https://eugdpr.org and/or click on Privacy Policy button.



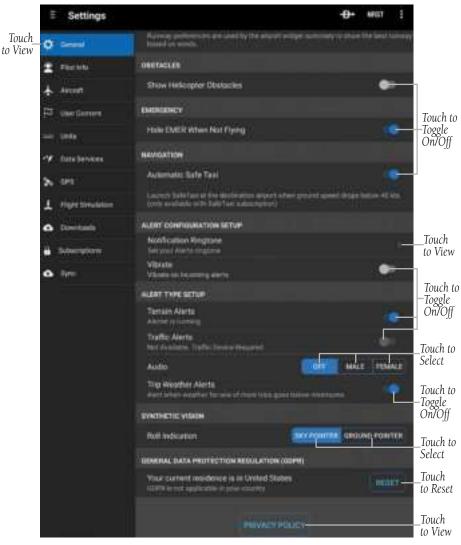

Settings - General Cont'd



PILOT AND AIRCRAFT INFO



NOTE: A data connection (e.g., Wi-Fi or cellular) is required to file flight plans.

If a Garmin Pilot account is already signed into the app, Pilot and Aircraft information will automatically be synchronized. To add a new pilot touch **Home** > Pilot Info > Pilot Info > Touch in each field and use the on-screen keyboard to enter the requested information (e.g., Name, Address, Telephone, Personal Minimums, and preferred Filing Service). Add aircraft information by touching **Home** > Aircraft > Pilot , enter aircraft Identifier, Type, Equip Suffix, Home Base, Primary and Secondary Color, TAS, and Fuel information. To link Garmin Pilot with a Filing Service Provider, under Pilot Information, enter username and password information for the preferred provider. By linking to a Filing Service Provider, Garmin Pilot can file flight plans.

Entering Pilot Information:

- 1) From any page, touch **Home** >
- 2) Touch Pilot Info >
- 3) Enter the Pilot Information by touching each field and use the keyboard.
- 4) Touch **Save**, to save Pilot Information.



Pilot Information Entry



PERSONAL MINIMUMS


Each pilot that's registered on a Garmin Pilot account can specify personalized parameters for VFR, IFR and Wind minimums. These settings are considered by the Garmin Pilot app when planning trips.

Available parameters are:

- VFR minimums for ceiling and visibility for day and night flights
- IFR minimums for ceiling and visibility for day and night arrivals and departures
- Maximum wind speed, wind gusts, and crosswind component for arrival(s) and departure(s)

Configuring Personal Minimums:


- 1) From any page, touch **Home** >
- Touch the Pilot Info Tab >Or: Touch a current Pilot in the list to edit.
- 3) Touch VFR, IFR or Winds.
- **4)** Enter the preferred ceiling minimums in feet.
- **5)** Enter the preferred visibility minimums in statute miles.
- **6)** Enter the preferred maximum wind speeds in knots.
- 7) Touch Save.

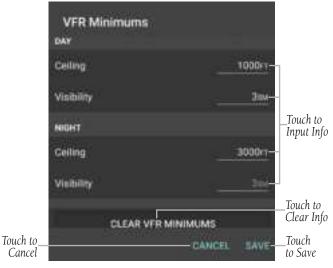



Entering Aircraft Information:

- 1) From any page, touch **Home** > *****
- **3)** Enter Required and/or optional Aircraft Information by touching each field and use the keyboard.
- 4) Touch **Save**, to save Aircraft Information.

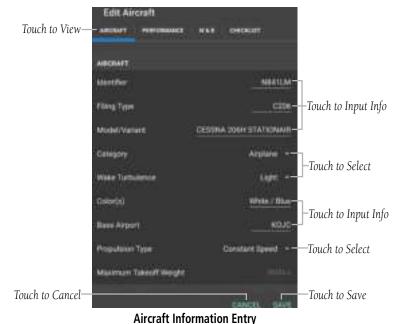

-----**,**

ATC PROPOSED ROUTE NOTIFICATIONS

ATC Proposed Route Notifications are Push notifications, that include a proposed route for departures and destinations for previously filed flight plans. Notifications come in the notification area if Garmin Pilot is not currently active, or as Pop-ups within Garmin Pilot. To accept the proposed route and make it the Flight Plan, ensure Make Flight Plan is set to **On**, and touch **Brief** to open the Trip Planning Page. To dismiss the notification and not make it the Flight Plan, ensure Make Flight Plan is set to **Off**, and touch **Dismiss** to remove the popup.



Subscribing to ATC Proposed Route Notifications:

- From any page, touch **Home** > ******.
- Touch the **Aircraft** Tab > 2)
 - **Or**: Touch a current Aircraft in the list, to edit.
- Scroll down & touch to **Subscribe** to Proposed Route Notifications. 3)
- Touch **Save**, to save Aircraft Information. 4)

USER CONTENT

The User Content Tab provides a guick and easy way to create and view stored user waypoints. User waypoints are synchronized across devices. When creating a new user waypoint, Garmin Pilot provides three ways to specify the precise location.

If **Lat/Lon** is selected, Garmin Pilot can accept the coordinates in three formats: degrees in decimal (hdd.dddd); degrees and minutes in decimal (hddd.mm.mmmmm'); and degrees, minutes and seconds in decimal (hddd.mm'ss.s").


Rad/Dist can accept locations around a specified VOR station, using a radial and distance.

Rad/Rad can accept locations as the intersection of two radials of two different VOR stations



Creating/Editing a User Waypoint from User Content Tab:

- 1) From any page, touch **Home** > ******.
- 2) Touch the User Content Tab.
- 3) Touch button to display the **New User Waypoint** dialog box. **Or**: Touch a current User Waypoint in the list to edit.
- **4)** Enter a name.
- **5)** Define the waypoint location by Lat/Lon, Rad/Dist, or Rad/Rad.
- **6)** Touch **Save** to save the waypoint, or **Cancel** to exit.
- 7) If the waypoint was saved, touch 🔁 button to view on Google Maps.

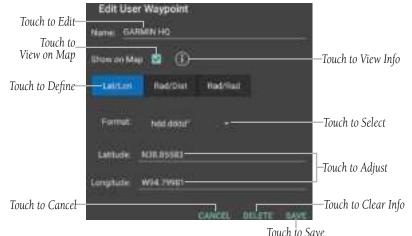

Edit User Waypoint



UNITS

The Units Tab can set the displayed units of measure for the following metrics:


- Distance
- Velocity
- Fluid Volume
- Weight

- Weight & Balance
- Runway Length
- **Temperature**
- Visibility

- Wind Speed
- Altimeter
- Pressure
- Latitude/Longitude

Adjusting Units Settings:

- From any page, touch **Home** > ******. 1)
- Touch the **Units** Tab. 2)
- 3) Touch the unit of measurement to display options and adjust as desired.
- If necessary, touch **Restore Defaults** to revert back to factory settings. 4)

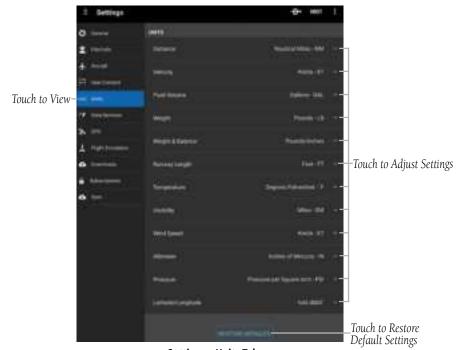

Settings - Units Tab



DATA SERVICES

The Data Services Tab provides information about the current source of weather data and the age of Garmin Weather Data items cached on the device. The age and status of weather data for FIS-B-sourced weather is viewable under the corresponding FIS-B Device tab. Weather data is available from three sources, Garmin Weather Data Services, FIS-B weather when connected to a compatible FIS-B device via a Connext link. Garmin Weather Data Services requires a data connection through Wi-Fi or cellular network. FIS-B weather requires additional hardware.

Adjusting Worldwide NOTAM Coverage Settings:

- I) From any page, touch **Home** > **※**.
- 2) Touch the Data Services Tab.
- Touch next to Worldwide NOTAM Coverage to toggle On/Off. This feature will be automatically enabled with the proper subcription updated and downloaded.


Adjusting Worldwide Winds Aloft Coverage Settings:

- 1) From any page, touch Home > X
- 2) Touch the Data Services Tab.
- Touch next to **Worldwide Winds Aloft Coverage** to toggle On/Off. The winds aloft forecast data is based on the Global Forecast System (GFS) weather model and provides detailed coverage for the selected area. This feature will be automatically enabled with the proper subcription updated and downloaded



Adjusting Baron Mobile Link Settings:

- **I)** From any page, touch **Home** > $igwedge{\mathbb{K}}$.
- 2) Touch the Data Services Tab.
- Touch next to Connection Status to toggle On/Off. Baron Mobile Link provides in-cockpit weather using your XM weather receiver and the Mobile Link Wi-Fi device.
- **4)** If necessary, touch **1** to view info regarding the current Wi-Fi connection.

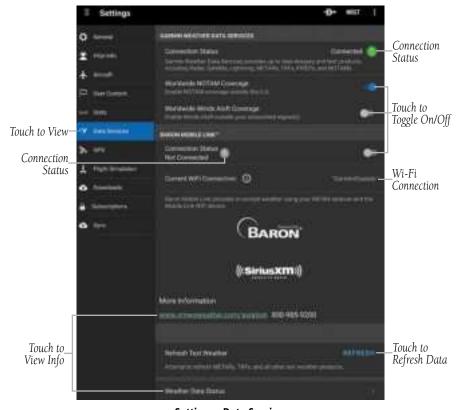

Settings - Data Services



GPS

Most Android devices are built with an internal GPS receiver. These may work fine in smaller aircraft but often a stronger, external GPS receiver is necessary. If an Android device does not include a GPS receiver, then a Garmin GLO™ portable GPS and GLONASS receiver or a Connext GPS and ADS-B receiver will be required to take advantage of the navigation features of Garmin Pilot. Third party GPS receiver applications are no longer recommended for Garmin Pilot to receive location data.

Adjusting GPS Settings:

- 1) From any page, touch **Home** >
- 2) Touch the GPS Tab to view and adjust connected devices.



Settings - GPS Tab

FLIGHT SIMULATION INTEGRATION

The Flight Simulation Tab provides information about the status of a flight simulator associated with the current Garmin Pilot account and device. Garmin Pilot can connect to your X-Plane or Microsoft Flight Simulator 2020 (MSFS 2020) software through a Wi-Fi connection. To aid in User accessibility, detailed instructions on how to connect to the desired flight simulator are provided within Garmin Pilot.





NOTE: Garmin Pilot requires X-Plane version 10.30 or higher.




NOTE: The Android device running Garmin Pilot, and the computer with the flight simulator software, should be connected to the same Wi-Fi access point.

Connecting Garmin Pilot to a Flight Simulator:

- **1)** From any page, touch **Home** >
- 2) Touch the Flight Simulation Tab.
- 3) Touch to toggle the Use Simulator Data On/Off.
- 4) Touch How to connect with MSFS 2020.

Or: Touch How to connect with X-Plane.

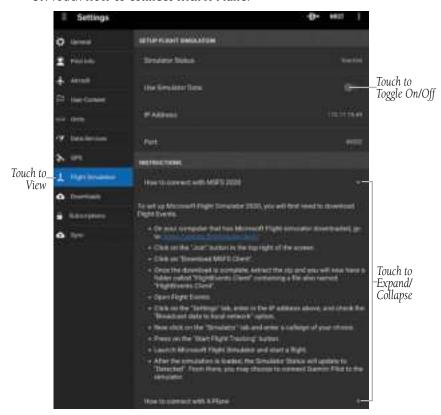

Settings - Flight Simulation - Microsoft Flight Simulator 2020



DOWNLOADS

The Downloads Tab allows the User to adjust settings for a multiple items. First, **Auto-Download Pilot Updates**, which automatically downloads file updates and next cycles as they become available. Second, Allow Mobile Data, which allows Mobile Data for large downloads when Wi-Fi is not availble. Lastly, **Enable Download Map**, which provides a visual display of certain downloadable areas (if mapping information is available). If disabled, this will show all downloads in list form instead.



NOTE: More details related to the specifics of the Downloads portion of Garmin Pilot are presented in greater detail at later stages of this document.

Adjusting Auto-Download Pilot Updates Settings:

- From any page, touch **Home** > ******.
- Touch the **Downloads** Tab. 2)
- 3) Touch next to Auto-Download Pilot Updates to toggle On/Off.



NOTE: When toggled 'On', this setting may require additional storage space on the device. Please ensure the device has the proper storage space available.


Adjusting Allow Mobile Data Settings:

- From any page, touch **Home** > ******.
- Touch the **Downloads** Tab. 2)
- Touch next to **Allow Mobile Data** to toggle On/Off. 3)

Adjusting Enable Download Map Settings:

- From any page, touch **Home** > ******.
- Touch the **Downloads** Tab. 2)
- Touch next to **Enable Download Map** to toggle On/Off. 3)



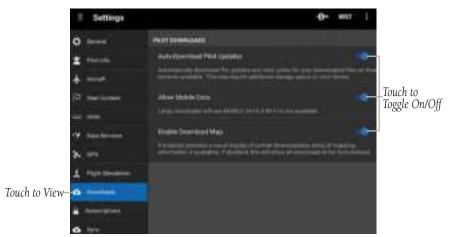

Settings - Downloads

SUBSCRIPTIONS

To manage your Garmin Pilot subscriptions, please touch **Home** > **Subscriptions**. Alternatively, this information is also on flygarmin.com. Please make sure to sign in with the same account information that you are using on your device. Many users will add a US Premium Subscription to their Garmin Pilot account, which, in addition to the standard features, adds:

- Geo-referenced FliteCharts
- Chart Overlays on Map
- Icing Forecasts
- Terrain Alerts

- Obstacle Alerts
- Synthetic Vision
- Safetaxi Airport Diagrams

Purchasing or renewing a subscription or add-on:

- **1)** Visit flygarmin.com
- Click on the GARMIN PILOT tab in the upper portion of the screen to view, assign, or purchase new Garmin Pilot subscriptions.
- **3)** Enter the e-mail address and password for your Garmin Account to purchase the desired subscription(s) or add-on(s).






NOTE: With an active subscription, Garmin Pilot can be installed on up to three devices at the same time, typically a mobile phone and a tablet device.

Viewing/Adjusting Account:

- 1) From any page, touch **Home** > **Subscriptions**.
- 2) When properly downloaded, green text will be displayed listing an Expiration Date.
- **3)** If necessary, touch the **Manage Account** button to view current Garmin Pilot subscriptions and the device(s) using these items via flygarmin.com.

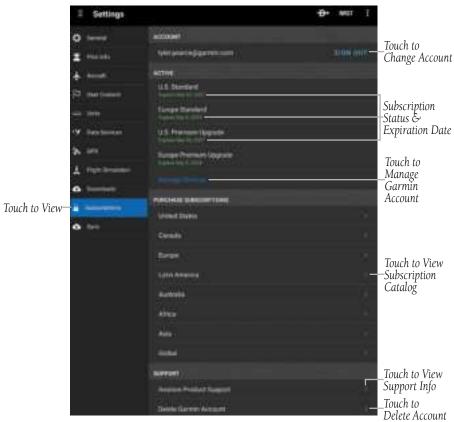

Settings - Subscriptions



SYNC


The Sync Tab provides information about the sync status of any data associated with the current device. The User can view the Last Attempt (Date & Time) and Status (Synced or Sync Failed) of various pieces of data such as Trips, Aircraft, Pilots, User Waypoints, Stored Flight Plans, Database Concierge, Logbook, Checklists, Performance, and Weight and Balance.

Viewing/Adjusting Sync Status:

- **I)** From any page, touch **Home** > igwedge
- 2) Touch the Sync Tab.
- 3) Touch the SYNC NOW button next to the desired data category. If successful, "Synced" will be displayed in green text along with the Date (MM:DD) and Time (HH:MM). If unsuccessful, "Not Synced" will be displayed in red text along with the Date (MM:DD) and Time (HH:MM).
- **4)** If necessary, touch the **Clear Local Sync Data** button.



NOTE: Touching the Clear Local Sync Data button will clear all local sync data and pull down data stored on the cloud. Only perform this action if there are issues with the sync data.

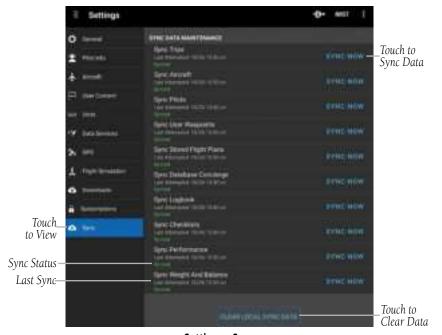




SYNTHETIC VISION (PREMIUM SUBSCRIPTION)



NOTE: Synthetic Vision requires either a Flight Stream 510/210, GDL 52/52R, GDL 39 3D, GTX 345, GTX 45R, G3X Touch, and a Premium subscription.

Synthetic Vision depicts a forward-looking attitude display of the topography immediately in front of the aircraft. The depicted imagery is derived from the aircraft attitude, heading, GPS three-dimensional position, and databases of terrain, obstacles, and other relevant features.

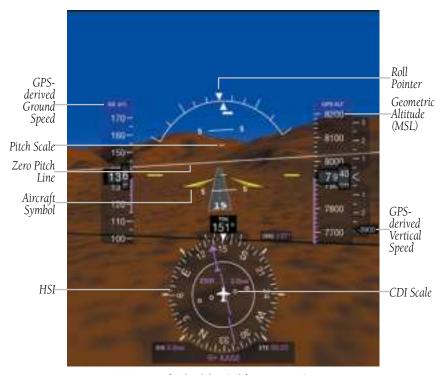

Synthetic Vision (with GDL 39 3D)

The Synthetic Vision terrain display shows land contours (colors are consistent with those of the topographical map display), large water features, towers, and other obstacles over 200' AGL that are included in the obstacle database. Cultural features on the ground such as roads, highways, railroad tracks, cities, and state boundaries are not displayed.



Terrain is integrated within Synthetic Vision to provide visual alerts to indicate the presence of terrain and obstacle threats relevant to the projected flight path. Terrain alerts are displayed in red and yellow shading.

The terrain display is intended for situational awareness only. It may not provide the accuracy or fidelity on which to base decisions and plan maneuvers to avoid terrain or obstacles. Navigation must not be predicated solely upon the use of the terrain or obstacle data displayed by Synthetic Vision.



NOTE: 'No Attitude Information' is displayed in place of the Attitude Indicator when compatible devices are not configured.

SYNTHETIC VISION OPERATION

Synthetic Vision is activated by touching **Home** >

Activating night mode:

- 1) From any page, touch Home >
- 2) Touch Menu > Night Mode.

ZERO PITCH LINE

The Zero Pitch Line is drawn completely across the display and represents the aircraft attitude with respect to the horizon. It may not align with the terrain horizon, particularly when the terrain is mountainous or when the aircraft is flown at high altitudes.



TRAFFIC (OPTIONAL)

When paired with a Flight Stream 510, Flight Stream 210, GDL 52/52R, GDL 39/GDL 39 3D, GTX 345, or GTX 45R Synthetic Vision displays ADS-B traffic information. Traffic symbols are displayed in their approximate locations. Traffic symbols are displayed in three dimensions, appearing larger as they are getting closer, and smaller when they are further away. Traffic within 250 feet laterally of the aircraft will not be displayed. Traffic symbols and coloring are consistent with that used for traffic displayed on the Map Page. If the traffic altitude is unknown, the traffic will not be displayed.




Synthetic Vision - Traffic



RUNWAYS

Runway data provides improved awareness of runway location with respect to the surrounding terrain. All runway thresholds are depicted at their respective elevations as defined in the database. In some situations, where threshold elevations differ significantly, crossing runways may appear to be layered. As the aircraft gets closer to the runway, more detail such as runway numbers and centerlines are displayed.

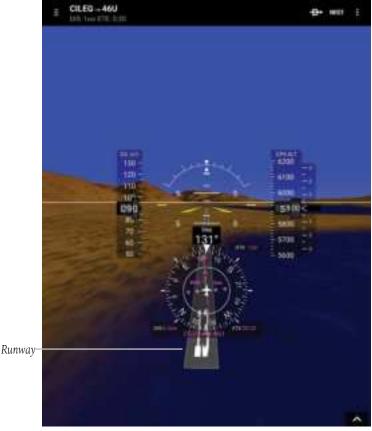

Synthetic Vision - Runway



SYNTHETIC VISION TERRAIN AND OBSTACLE DATA

Terrain alerting on the synthetic vision display corresponds to the red and yellow X symbols on the Map Page. In some instances, a terrain or obstacle alert may be issued with no conflict shading displayed on the synthetic vision. In these cases, the conflict is outside the Synthetic Vision field of view. Obstacles are represented on the synthetic vision display by standard two-dimensional tower symbols found on the Inset Map and Navigation Map. Unlike the Map Page, obstacles on the synthetic vision display do not change colors to warn of potential conflict with the aircraft's flight path until the obstacle is associated with an actual terrain alert. Obstacles greater than 1000 feet below the aircraft altitude are not shown



Synthetic Vision - Terrain - Caution



Synthetic Vision - Terrain - Warning



It is preferred to download the medium or high resolution terrain data when using Synthetic Vision. The 3D view may not draw correctly with low resolution terrain data.



Synthetic Vision - High Resolution Terrain Data



Synthetic Vision - Low Resolution Terrain Data



LOGBOOK

The Garmin Pilot Logbook feature allows the pilot to record pertinent flight information to include the following:

- Generate automatic logbook entries using GPS data collected during the flight.
- Add manual entries or modify auto-entries.
- Notification of auto-generated entries via red badges on Logbook icon.
- Smart Suggestions auto-populates previously used instructor and aircraft information.
- Track currency information including day and night take-offs, night duration, and cross country.
- Enter signed endorsements and generate reports.
- Optional automatic synchronization with the flyGarmin website.
- Adding photographs to logbook entries.


The Garmin Pilot logbook requires at least one aircraft entered in **Home** > **Aircraft** in order to create valid entries. If a logbook entry is created without any aircraft types, the Aircraft Type field will prompt to add an aircraft type.

FLIGHT LOG ENTRIES

Manually Adding Logbook Entry:

- 1) From any page, touch **Home** >
- 2) If necessary, touch **Entries** at the top of the page.
- 3) Touch Add Entry. Garmin Pilot will create a new entry.
- 4) Touch the desired Flight Log entry field(s) to add flight data.
- 5) Under the Duration section, use the buttons to copy the value from the Total field to another field.
- **6)** If the flight included multiple approaches, touch **Add Approach** for each.
- 7) If the flight was dual given, the instructor enters the following fields: Instructor Name, Certificate Number, and Certificate Expiration.
 - **a)** Touch **Add Signature** to sign the entry.
 - b) Touch Save.



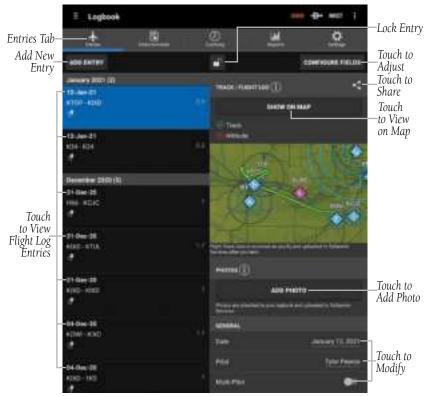

Logbook Entries

Enabling Automatic Flight Log Entries:



NOTE: The terrain download is recommended for optimum performance of Automatic Flight Logging.

- 1) From any page, touch **Home** > Settings.
- 2) Scroll down to the **Automatic Flight Log Setup** fields.
- 3) Touch next to **Enable Auto Flight Logging**.
- **4)** If desired, enter a value for any of the following **Automatic Flight Log Setup** fields.



Enable Flight Tracking	Taxi Time Added	Include Heliports
Flying Speed Threshold	Merge Legs Into Single	Manually Accept
	Entry	Automatic Logs
Flying Altitude (AGL)	Max Time Between	
Threshold	Legs To Merge	
 Vertical Speed Threshold 	Include Seaplane Bases	

Automatic Flight Log Setup Fields



Automatic Flight Log Setup


Accepting Automatic Flight Log Entries:

- 1) From any page, touch **Home** > Entries.
- 2) Touch Auto-Gen Flights.
 Optionally, touch Accept All to add all automatic entries to the Logbook.
- **3)** Touch a flight log entry.
- **4)** Touch **Accept** to add the entry to the logbook.



Deleting Automatic Flight Log Entries:

- 1) From any page, touch **Home** > **Entries**.
- 2) Touch Auto-Gen Flights.
- **3)** Touch a flight log entry.
- 4) Touch Delete.

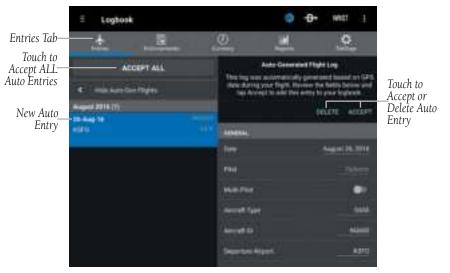

Flight Log Entry - Automatic

Modifying Flight Log Entry:

- **2)** Touch the desired entry to modify.
- **3)** Modify the desired Flight Log entry fields.

Deleting Flight Log Entry:

- 1) From any page, touch **Home** > **Entries**.
- **2)** Touch and hold the desired entry to delete.
- **3)** If desired, touch additional entries to delete.
- 4) Touch 🗊 at the top of the screen to delete or touch 🗲 to cancel.

FLIGHT LOG FIELDS

The order of the Flight Log Fields can be arranged, and each flight log field can be configured ON or Off.



Configuring logbook fields:

- 1) From any page, touch **Home** > **Entries**.
- **2)** Touch the desired entry to configure or touch **Add Entry** to create a new entry.
- 3) Touch Configure Fields.
- **4)** Touch and drag to arrange the fields in the desired order.
- **5)** Touch next to desired fields to hide or display them.
- 6) Touch Done.



Logbook - Add Entry - Configure Fields



LOGBOOK PHOTOS

The Logbook Photos feature allows the pilot to attach unlimited photos to logbook flight entries.

- Logbook photos may be taken while in flight using a device's camera, and are automatically added to the provisional logbook entry.
- Logbook photos can be attached to existing logbook entries from the device's photo library or flyGarmin.
- Logbook photos are securely stored within flyGarmin and can be synced across all devices.

Adding photos to a logbook entry:

- 1) From any page, touch Home > 🌉
- 2) Touch **Add Entry** or an existing logbook entry and select the **Add Photo** icon.
- **3)** Take a photo from the device, add one from the device's photo library, or add a photo from the Virb photo library.



Logbook Photos




LOGBOOK AUTO-LOGGING

The Logbook Auto-Logging view on the logbook entries tab captures and displays real-time flight data including:

- Duration of flight
- Time of departure
- Distance flown
- Average speed
- Maximum altitude
- Maximum speed

Logbook Auto-Logging also supports taking photos while in flight or attaching images from the device's library to the logbook entry.



Logbook Auto-Logging




LOGBOOK TRACKS

Garmin Pilot automatically creates a track of a flight and attaches the file to the entry in the logbook.

Viewing logbook tracks:

- 1) From any page, touch Home >
- 2) Touch **Show on Map** on a selected logbook entry.

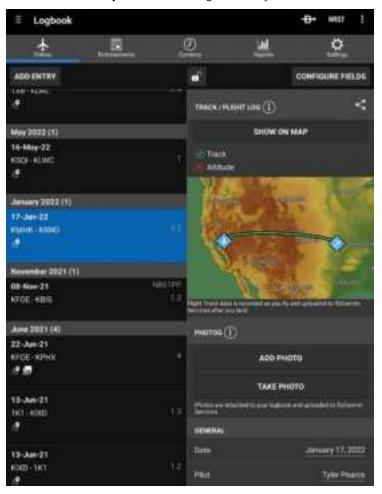

Logbook Tracks



Adding Logbook Widget From Split-Screen Mode:

- 2) Touch Add Widget and select Logbook Tracks.

Hiding Logbook Tracks From the Map:

- 1) From any page, touch **Home** > **\$\frac{1}{3}^{2}\$**.
- **2)** Long press on the desired area in the Map Pane until the Radial Menu appears.
- 3) Select the **Track** icon from the radial menu.
- **4)** Touch on the **Hide** button to remove the track on the map.

ENDORSEMENTS

Viewing Endorsements:

- 2) Touch the desired endorsement.




Endorsement View



Adding Endorsements:

- 1) From any page, touch **Home** > **Endorsements**.
- 2) Touch Add Endorsement.
- 3) Touch Type.
- **4)** Touch the desired Type from the list.
- 5) The pilot enters the following Endorsement Fields: First Name, MI, Last Name; Gender; Pilot Certificate; Certificate Number; Make and Model.
- 6) Touch Title.
- **7)** Enter a title for the endorsement and touch **Done**.
- **8)** If desired, enter the **FAA Category**, date **Issued**, and date **Expires**.
- 9) The instructor enters the following Instructor fields: **Instructor Name**, **Certificate Number**, and **Certificate Expiration**.
 - a) Touch Add Signature to sign the entry.
 - **b)** Touch **Save**.

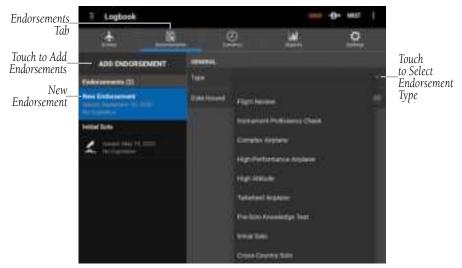

Logbook - Endorsements

Deleting an Endorsement:

- 2) Touch and hold the desired endorsement to delete.
- **3)** If desired, touch additional endorsements to delete.
- 4) Touch at the top of the screen to delete or touch to cancel.



CURRENCY

To View Currencies, touch **Home** > **Currency**. When the currency type has been met, **o** is displayed as well as the date last met, expiration date, and days remaining. When the currency type has not been met **o** is displayed.



Logbook - Currency

Adding a currency type:

- 2) Touch Add Currency Type.
- **3)** Touch the desired Currency Type from the list.

Deleting a currency type:

- 1) From any page, touch **Home** > Currency.
- **2)** Touch and hold the desired currency to delete.
- 3) If desired, touch additional currencies to delete.
- 4) Touch at the top of the screen to delete or touch to cancel.

REPORTS


The Reports tab shows categorized summaries of logbook entries. These summaries are broadly divided into Visited Airports, Entry Fields, Aircraft Types and Characteristics. All four categories can further be organized by time frame, using the lookback options on the left side of the screen. The Reports tab also supports a selectable custom date range. To change the custom date range, touch to display the Custom Dates window.



The Visited Airports category shows the total number of visits to specific airports from a recorded flight log data. Visited Airports data can be viewed as a List or on the Map. List View displays data in descending order, with the most frequently visited airport at the top, along with the airport I.D., and the total number of visits. Touch the desired Airport Name to view flight details, such as Date, Departure, and Duration.

Viewing Visited Airports - List View:

- 2) Select the desired Date Range on the lefthand side of the screen.
- 3) Touch in the bottom, right corner of the screen to display the List View.
- **4)** Touch the desired Airport Name to view details.

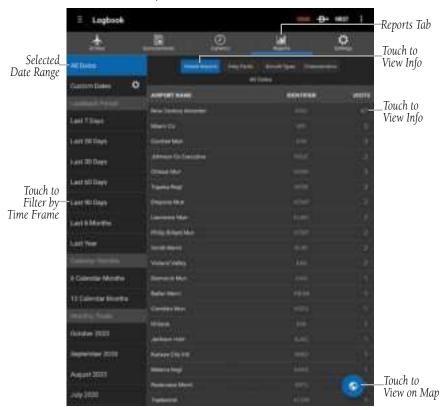


Logbook - Reports - Visited Airports - List View



Viewing Visited Airports - Map View:

- 1) From any page, touch **Home** > **Property** > **Reports** > **Visited Airports**.
- 2) Select the desired Date Range on the lefthand side of the screen.
- 3) Touch in the bottom, right corner of the screen to display the Map View.
- 4) Touch the desired Airport I.D. to view details.

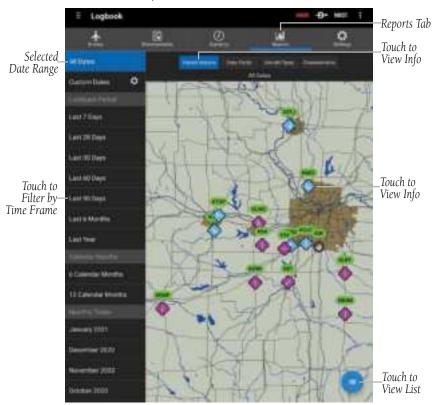


Logbook - Reports - Visited Airports - Map View



The Entry Fields category shows totals of numeric flight log data. This category also includes an Aircraft Types field for narrowing flight log data to aircraft types specified in Logbook Settings. This Aircraft Types field is different than the Aircraft Types category.

Viewing Entry Fields:

- 1) From any page, touch **Home** > Reports > Entry Fields.
- 2) Select the desired Date Range on the lefthand side of the screen.
- **3)** Touch the **All Types** field in the upper right corner and adjust to filter data as desired.
- **4)** Scroll down to view logbook entries categorized by Summary, Flight Data, Flight Time, General Operations, and IFR Operations.

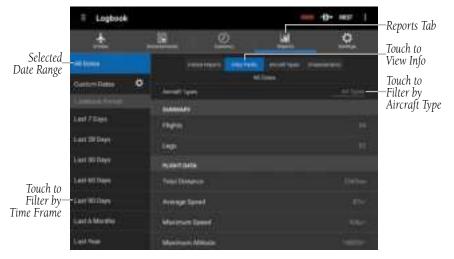


Logbook - Reports - Entry Fields



The Aircraft Types category displays total data specific to aircraft types instead of flights.

Viewing Aircraft Types:

- 1) From any page, touch **Home** > Reports > Aircraft Types.
- 2) Select the desired Date Range on the lefthand side of the screen.
- 3) Scroll down to view logbook entries categorized by Aircrafty Type(s) and Aircraft Identifier(s).

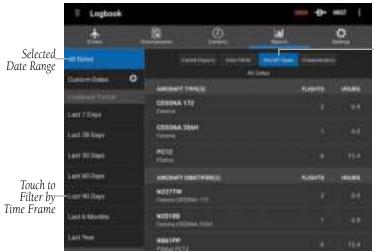

Touch to Display Flights/ Hours by Aircraft Type


Logbook - Reports - Aircraft Types



The Characteristics category displays flight log data pertaining to aircraft characteristics, regardless of aircraft type or flights.

Viewing Characteristics:

- 1) From any page, touch **Home** > Reports > Characteristics.
- 2) Select the desired Date Range on the lefthand side of the screen.
- **3)** Scroll down to view logbook entries categorized by General Characteristics (Retractable Landing Gear, Complex, High Performance, etc.), Engine Type, Arcraft Category, Aircraft Class, and Aircraft Manufacturer.

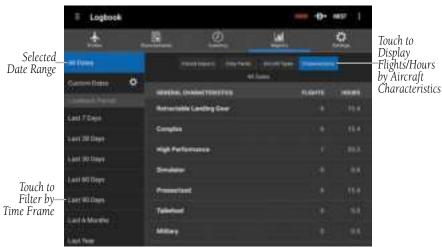

Logbook - Reports - Characteristics




LOGBOOK SETTINGS

GENERAL SETTINGS

The Settings tab provides options to fine tune Logbook functions. **Sync Logbook to flyGarmin** will enable or disable storing logbook entries to Garmin's web service. By default, the Logbook shows time values in decimal hours. Touch **Duration Field Display Format** to change time values to hours + minutes. **Logbook Display Order** can be used to reverse the order of logbook entries in the other logbook tabs.


Logbook Settings can be accessed by touching **Settings**. > **Settings**.

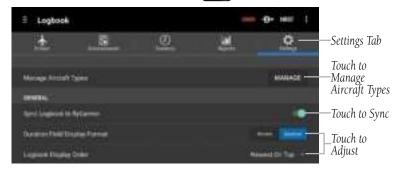

Logbook Settings - General

MANAGING AIRCRAFT TYPES

Touch **Manage** to add, delete and edit aircraft information used in Logbook entries. Aircraft type information here is used in the Entries tab, providing options in the Type fields for new flight log entries. This aircraft information is also separate from the aircraft information found in **Home** > **Aircraft**, which is used for flight planning.

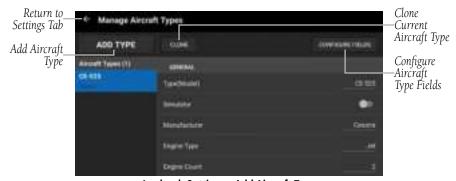

Logbook Settings - Add Aircraft Type



Adding Aircraft Type:

- From any page, touch Home > Settings > Manage.
- 2) Touch Add Aircraft Type. Garmin Pilot will create a new aircraft type entry.
- 3) Touch the desired Aircraft Type entry field(s) to add an entry.

Modifying Aircraft Type:

- 1) From any page, touch **Home** > Settings > Manage.
- 2) Touch the desired Aircraft Type to modify.
- **3)** Touch the desired Aircraft Type entry field(s) to modify.

Copying Aircraft Type:

- 1) From any page, touch Home > > Settings > Manage.
- **2)** Touch the desired aircraft type to copy > **Clone**.

Deleting Aircraft Type:

- 1) From any page, touch **Home** > Settings > Manage.
- 2) Touch and hold the desired aircraft type to delete.
- 3) Touch at the top of the screen to delete or touch to cancel.

Configuring Aircraft Type Fields:

- 1) From any page, touch **Home** > Settings > Manage.
- 2) Touch any aircraft type
- 3) Touch Configure Fields.
- **4)** Touch and drag to arrange the fields in the desired order.
- **5)** Touch and drag the switch ON/OFF to display the desired fields **> Done.**



Logbook Settings - Configure Aircraft Type Fields



PILOT INFORMATION

When a new flight log entry or endorsement is created, the Pilot, Gender, Pilot Certificate, and Pilot Certificate Number fields will automatically populate with information specified here. This applies to both manual and automatic flight log entries.

Pilot Information Settings can be accessed by touching **Settings**.



AUTOFILL FROM TOTAL DURATION

These options will automatically copy the Total Duration value when a new flight log entry is created. This applies to both manual and automatic flight log entries.

Logbook Autofill From Total Duration Settings can be accessed by touching _____> **Settings.** Scroll down to adjust as necessary.



Logbook Settings - Pilot Info & Autofill



CARRYOVER FROM LAST ENTRY

When a new flight log entry is created, Garmin Pilot looks at the previous flight log and fills in these fields based on the previous entry.

Logbook Carryover From Last Entry Settings can be accessed by touching **Settings.** Scroll down to adjust as necessary.





Logbook Settings - Carryover From Last Entry

AUTOMATIC FLIGHT LOG SETUP



NOTE: The terrain download is recommended for optimum performance of Automatic Flight Logging.

When **Automatic Flight Log** is enabled, Garmin Pilot detects takeoff and landing to automatically create a flight log entry.

Logbook Automatic Flight Log Setup Settings can be accessed by touching > **Settings.** Scroll down to adjust as necessary. The settings below allow the pilot to configure the behavior of the flight log function.





Logbook Settings - Automatic Flight Log Setup

Enable Auto Flight Logging	Allows Garmin Pilot to automatically create flight logs.	
Enable Flight Tracking	Allows Garmin Pilot to automatically create a flight track.	
Flying Speed Threshold	Used to optimize the detection of takeoff	
Flying Altitude (AGL) Threshold	when terrain is not available. If terrain has been downloaded then it is used to determine	
Vertical Speed Threshold	when the aircraft is flying.	
Taxi Time Added	Automatically added to the total duration to account for taxi time on the ground. Defaults to zero.	
Merge Legs Into Single Entry	These parameters control if two flights will be	
Max Time Between Legs To Merge	automatically merged into one logbook entry.	
Include Seaplane Bases	Enable these options if operating out of a seaplane base or heliport.	
Include Heliports		
Manually Accept Automatic Flightlogs	When enabled, the user must manually review and accept all auto-generated flight log entries.	

Automatic Flight Log Setup Fields



WEIGHT AND BALANCE

Weight and balance is calculated within Garmin Pilot to determine if the airplane is properly loaded within CG limits. Garmin Pilot syncs the current flight plan to incorporate initial fuel and winds aloft data into the weight and balance calculations. Aircraft performance data may be imported from Garmin's aircraft library or manually entered from the aircraft's Pilot Operating Handbook (POH), into Garmin Pilot.

Entering Weight and Balance data:

- 1) After adding an aircraft and performance data in , touch **Home** >
- 2) Touch the N-number to select the desired aircraft.
- **3)** Enter the weights for each station.
- 4) Touch the 'Fuel Load' field and use the weight slider or touch Maximum Fuel, 30 Minute Reserve, 45 Minute Reserve, or 60 Minute Reserve.
- is displayed when the aircraft is loaded within the CG envelope.
- is displayed when the aircraft is loaded out of the CG envelope.



Weight and Balance - CG Limits Exceeded





Weight and Balance - Within CG Limits



DOWNLOADS



NOTE: If charts are not downloaded to the device they will not be available for viewing without a data connection. Download all applicable charts for your planned flight including alternates.



NOTE: Chart files can be very large and may take some time to download. It is recommended that downloads be done over Wi-Fi. Additional charges may apply for downloads done over a cellular network.



NOTE: With the availability of electronic charts in Garmin Pilot, it is still advisable to carry another source of charts on board the aircraft.



NOTE: A data connection (e.g., Wi-Fi or cellular) is required to download or update charts.

The Downloads Menu is divided into two sections. The Navigation & Airports section allows for downloading US Navigation Data, Airport Info, and SafeTaxi information. The Procedures & Charts section allows for downloading VFR Sectional Charts, WAC Charts, IFR Low and High Altitude Charts, and Instrument Procedures for the Continental US as well as Alaska and Hawaii.

The Downloads Menu is divided into two columns. The Left column shows items available for download as indicated by the blue down arrows () or blue text. The right column is the Download Queue, shows the download status and a list of queued downloads.

The submenus for VFR Sectional Charts, WAC Charts and IFR Low and High Altitude Charts display the Chart Selection Screen, which is a map showing the charts as outlined areas. To select all available charts touch the file folder in the lower right corner and touch **Select All** from the list or touch the outlined area for the desired chart(s). After selecting the chart(s) to download touch the Download Arrow in the lower right corner. Terminal Procedure charts can be viewed and downloaded from the Airport Info Page, under the Procedures tab as well.

The **Auto-Download Pilot Updates** feature, automatically download file updates and next cycles of existing data and charts as they become available.



Configuring Auto-Download Pilot Updates:

- 1) From any page, touch **Home** > **X** > **Downloads** Tab.
- 2) Touch next to **Auto-Download Pilot Updates**, as desired.

Configuring Allow Mobile Data:

- From any page, touch Home > > Downloads Tab.
- 2) Touch an next to Allow Mobile Data, as desired.

Configuring Enable Download Map:

- 1) From any page, touch **Home** > **> Downloads** Tab.
- 2) Touch make next to Enable Download Map, as desired.



Settings - Downloads

Downloading US Navigation Data, Airport Info or SafeTaxi:


- 1) From any page, touch **Home** > .
- **2)** Touch **(1)** to begin downloading the desired information.



Downloading Current Cycle Sectional, IFR Low Altitude, or IFR High Altitude Charts:

- 1) From any page, touch **Home** >
- **2)** From the **VFR / IFR Enroute Charts** list select the submenu for the desired chart.
- 3) Touch Current.
- **4)** Touch the outlined area on the Chart Selection Screen for the desired chart(s).
- 5) Touch DOWNLOAD

Or: Select All > **DOWNLOAD** to download all available charts.

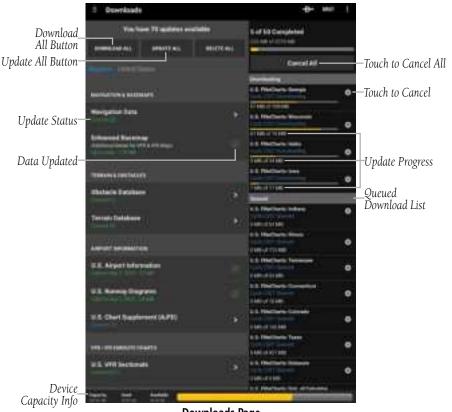

Downloads Page



Downloading Next Cycle Sectional, IFR Low Altitude, or IFR High Altitude Charts:



2)

chart.

NOTE: Sectional Charts are updated individually on the chart schedule and are available for download, typically 5 days prior to their valid date. IFR Low and High Altitude Charts are updated on a 28-day cycle and are available for download typically 5 days prior to their valid date.

- 1) From any page, touch **Home** > ______.
 - From any page, touch **Home** > _____.

 From the **VFR/IFR Enroute Charts** list select the submenu for the desired
- **3)** Touch selected chart type.
- **4)** Touch the outlined area on the Chart Selection Screen for the desired chart(s).
- 5) Touch DOWNLOAD to download the selected chart(s). The download will begin immediately as shown in the Download Queue.

Or: Touch **Select All** > **DOWNLOAD**, to download all available charts.

Downloading Current Cycle Instrument Procedures:

- I) From any page, touch **Home** > 🌉.
- From the VFR/IFR Enroute Charts list select the submenu for the desired US Instrument Procedures.
- 3) Touch Current.
- **4)** Touch the State(s) on the Chart Selection Screen for the desired chart(s).
- **5)** Touch **DOWNLOAD** to download the selected chart(s). The download will begin immediately as shown in the Download Queue.

Or: Touch **Select All** > **DOWNLOAD**, to download all available charts.

Downloading Next Cycle Instrument Procedures:

- 1) From any page, touch **Home** > .
- **2)** From the Procedures & Charts list select the submenu for US Instrument Procedures.
- 3) Touch Current.
- **4)** Touch the State(s) on the Chart Selection Screen for the desired chart(s).
- **5)** Touch **DOWNLOAD** to download the selected chart(s).
 - **Or: Select All** > **DOWNLOAD**, to download all available charts.





NOTE: US Instrument Procedures are updated on a 28-day cycle and are available for download typically 5 days prior to their valid date.

CHART UPDATES



NOTE: Electronic Charts are updated frequently. Always ensure the charts saved to the device are up-to-date prior to each flight. With the availability of electronic charts, it is still advisable to carry another source of charts onboard the aircraft.

Garmin Pilot makes it easy to ensure that charts are always up-to-date by taking advantage of the notification area of the Android device. When Garmin Pilot is started it automatically checks for charts updates. When updates are available the Garmin Pilot Icon is displayed in the notification area the device. The number of available updates is also displayed on the Downloads Page. When updates are available, the button becomes active. The button will update all available charts no matter the chart type.



New Downloads Available

US Navigation Data, Airport Info and SafeTaxi are updated on 28-day cycle and are available for download typically 5 days prior to their valid date.

WAC and Sectional Charts are updated individually on the chart schedule and are available for download typically 5 days prior to their valid date.

US Instrument Procedures are updated on a 28-day cycle and are available for download typically 5 days prior to their valid date.

IFR Low and High Altitude Charts are updated on a 28-day cycle and are available for download typically 5 days prior to their valid date.

Charts that have been downloaded to the device are always available for viewing even after their expiration date. If the next cycle chart is downloaded prior to its activation date the current cycle will be used until it expires. After the expiration date the next cycle chart will be used and the old cycle will automatically be removed.



Updating Sectional, IFR Low, or IFR High Altitude Charts:

- **1)** From any page, touch **Home** > <mark>4</mark>
- 2) Touch **Update All (X)** to update all available charts.

Or:

- 1) Select the desired chart type submenu.
- **2)** From the Chart Selection Screen touch the expired chart(s), shown in red.
- Touch DOWNLOAD to download the selected chart(s). The download will begin immediately as shown in the Download Queue.

Or:

- 1) Select the desired chart type submenu.
- **2)** From the Chart Selection Screen touch **Select All** > **DOWNLOAD**. The download will begin immediately as shown in the Download Queue.






Updating Instrument Procedures:

- 1) From any page, touch **Home** > ...
- 2) From the **Procedures & Charts** list select the submenu for **US Instrument Procedures**.
- **3)** From the Chart Selection Screen touch the expired chart(s), shown in red.
- **4)** Touch **DOWNLOAD** to download the selected chart(s). The download will begin immediately as shown in the Download Queue.

Or: Touch **Select All** > **DOWNLOAD**, to update any expired charts.

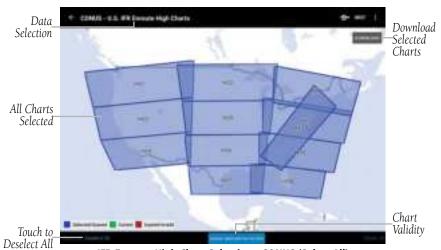

IFR Enroute High Chart Selection - CONUS (Select All)



IFR Enroute High Chart Selection - Caribbean/Mexico (Select All)



CHECKLISTS


Electronic checklists can be viewed in Garmin Pilot to ensure proper flight procedures. Checklists display the item with the preferred state or outcome, along with a green checkmark to confirm the step has been completed. Checklists are fully customizable to meet the pilot's preferences.

Viewing an aircraft checklist:

- 1) From any page, touch **Home** >
- 2) Touch the desired aircraft model from the Garmin library under **Checklist Binders**

Or: Add a new checklist binder by manually entering the information from the aircraft's Pilot Operating Handbook (POH), into Gamin Pilot or flyGarmin.

- **3)** Touch the desired procedure.
- **4)** Touch the appropriate step to indicate that is has been completed. A blue checkmark will indicate the step has been completed.
- 5) Touch the **Clear** button to clear all of the completed checklist items in the selected checklist category.

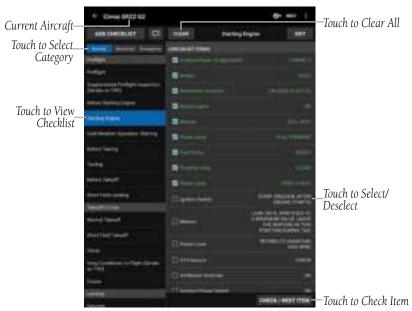

Electronic Checklists




PLAN

Garmin Pilot's powerful capabilities start with pre-flight planning, providing pilots with the most comprehensive aviation weather information to make better-informed flight decisions. Pilots can check weather radar, visible and infrared cloud imagery, METARs, TAFs, AIRMETs, SIGMETs, PIREPs, NOTAMs, winds and temperatures aloft, TFRs and lightning data. With Garmin Pilot, weather data can be overlaid on VFR Sectionals, IFR low altitude en route charts, IFR high altitude en route charts, WAC, or a simple map showing major roads and borders to visualize the weather for upcoming flights. Add text-based weather widgets and use the exclusive NavTrack feature to view weather information along the planned route.

FASTFIND PREDICTIVE WAYPOINT ENTRY

When entering a waypoint into the flight plan, FastFind Predictive Waypoint Entry populates airport identifiers and navigation aids nearest your location or previous point in the flight plan.

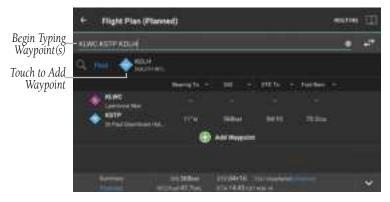


FastFind



FLIGHT PLAN

The Flight Plan page manages the current flight plan. Flight plans can be created, bookmarked (stored), and reversed from the Flight Plan Page. From the Flight Plan Page, flight plans can be entered in one of two ways. First, touch within the route field and use the keyboard to add waypoints separated by spaces. Second, touch the Add Waypoint button in the flight plan list and use the keyboard to enter the waypoint identifier, or graphically edit on the map once a departure point is entered. The Flight Plan Page allows for flight plans to be bookmarked or stored for later use. Bookmarked Flight Plans are synchronized through a Garmin Pilot account and are available on any device with Garmin Pilot.

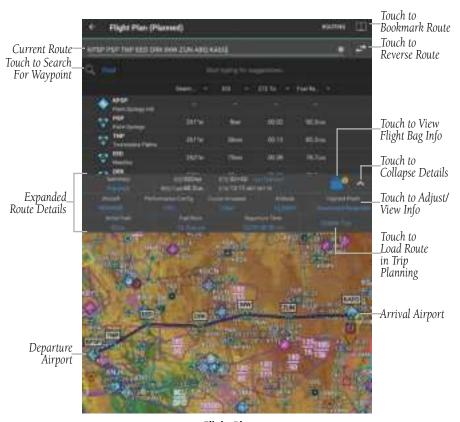

Flight Plan



Creating a Flight Plan:

- 1) From any page, touch **Home** > .
- **2)** Touch within the route field to activate the cursor.
- **3)** Use the keyboard to insert waypoints. Separate each waypoint with a space.

Or:

- 1) Touch the Add Waypoint button.
- 2) Use the keyboard to input the waypoint identifier.
- 3) Touch the 🕟 Add Waypoint button to add additional waypoints.

Or: Enter Lat/Lon information in one of the following formats:

Lat/Lon	Lat/Lon	
####N/####W	N##.#/W##.#	
N####/W####	##.#/-##.#	
####/-####	##.#N/0##.#W	
##.#N/##.#W	##.#/-0##.#	
N##.#/W0##.#		
Spaces are not allowed clack (/) is required. Any Latitude format can be combined.		

Spaces are not allowed, slash (/) is required. Any Latitude format can be combined with any longitude format in the same string.

Lat/Lon Formats

Or: Enter Radial/Distance waypoint in one of the following formats:

Radial/Distance	Descriptions	
MSP/190/035 or MSP/190/35	Identifier/Radial/Distance	
MSP190035	IdentifierRadialDistance	
Spaces are not allowed, when slashes (/) are used the leading zero can be left off the		
radial and/or distance.		

Radial/Distance Formats

Or: Enter a waypoint at the intersection of two VOR radials in the following format:

VOR/Radial	Descriptions
OKB100MZB020	VORRadialVORRadial

Radial Intercept Waypoint





Radial Intercept Waypoint

Or:

- 1) Use one of the above methods to enter a departure point.
- 2) In the Map View area long-press any location or flight plan leg, to display the rubber-band, drag the rubber-band to the desired map location.
- **3)** Once the rubber-band is on or near the desired location release the rubber-band. A list of nearby waypoints is displayed.
- **4)** Select the desired waypoint from the list. Or create a User Waypoint.
- **5)** Repeat steps 2-4 to add additional waypoints.



ACTIONS MENU

The Flight Plan List contains a waypoint-sensitive Actions Menu. For example if the selected waypoint is the departure point, the Actions Menu will include an **Add/Remove SID**. If the selected point is the final destination, the Actions Menu will include an **Add/Remove STAR action** item. Or, if the selected waypoint is a valid Airway entry point, the Actions Menu will include a **Load Airway** action item. The Actions Menu also has Action Items for adding, removing, or changing flight plan waypoints.

Action Menu Options - Airport of Origin		
Action	Description	
Insert Before	Adds a new line item before the selected waypoint. Places the	
	cursor in the empty line and opens the keyboard for waypoint	
	identifier entry.	
Insert After	Adds a new line item after the selected waypoint. Places the	
	cursor in the empty line and opens the keyboard for waypoint	
	identifier entry.	
Remove Waypoint	Removes selected waypoint from the Flight Plan.	
Waypoint Info	Displays Waypoint information dialog box.	
Direct-To	Opens the Direct To dialog box.	
Add Departure	Opens the Select a Departure dialog box. Select the desired SID	
	to open the submenu of available transitions or Select on Map.	
Change Runway	If a Runway had been previously selected, this opens the Select	
	Runway dialog box.	
Change Departure	If a Departure had been previously selected, this opens the	
	Select a Departure dialog box. Select the desired SID to open	
	the submenu of available transitions or Select on Map.	
Remove	If a Departure had been previously selected, this removes the	
Departure	departure from the Flight Plan.	

Action Menu Options - Airport of Origin



Action Menu Options - Enroute			
Action	Description		
Insert Before	Adds a new line item before the selected waypoint. Places the cursor in the empty line and opens the keyboard for waypoint identifier entry.		
Insert After	Adds a new line item after the selected waypoint. Places the cursor in the empty line and opens the keyboard for waypoint identifier entry.		
Remove Waypoint	Removes selected waypoint from the Flight Plan.		
Waypoint Info	Displays Waypoint information.		
Direct-To	Opens the Direct To dialog box.		
Load Airway	Only available if the selected item is valid airway entry point. Opens submenu of available Airways. Once an Airway is selected the Select Exit submenu displays a list of available exit waypoints that can be ordered by distance or alphabetically.		
Remove Airway	Removes Airway and all associated waypoints.		
Change Airway Entry	Opens the Change Entry submenu with a list of entry points. The submenu can be viewed as an ordered list or alphabetically.		
Change Airway Exit	Opens the Change Exit submenu with a list of Airway exit points. The submenu can be viewed as an ordered list or alphabetically.		
Activate Leg	Actives the selected leg for navigation.		

Action Menu Options - Enroute




Action Menu Options - Destination			
Action	Description		
Insert Before	Adds a new line item before the selected waypoint. Places the cursor in the empty line and opens the keyboard for waypoint identifier entry.		
Insert After	Adds a new line item after the selected waypoint. Places the cursor in the empty line and opens the keyboard for waypoint identifier entry.		
Remove Waypoint	Removes selected waypoint from the Flight Plan.		
Waypoint Info	Displays Waypoint information.		
Direct-To	Opens the Direct To dialog box.		
Change Arrival	If an Arrival had been previously selected, this opens the Edit STAR submenu with a list of available STARs. Select the desired STAR to open the submenu of available transitions or Select on Map.		
Remove Arrival	If an Arrival had been previously selected, this removes the STAR and all associated waypoints.		
Add Arrival	Opens the STAR submenu, listing available STARs. Select the desired STAR to open the submenu of available transition or Select on Map		
Activate Leg	Actives the selected leg for navigation.		

Action Menu Options - Destination



Adding a Standard Instrument Departure (SID) to Flight Plan:

- 1) From any page, touch
- **2)** Touch the departure point in the Flight Plan List to open the Actions Menu.
- 3) From the Actions Menu, touch Add Departure.

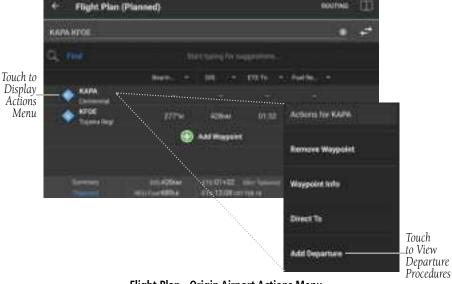


Flight Plan - Origin Airport Actions Menu

- 4) Touch the desired Departure.
- **5)** Touch the desired Runway.
- **6)** Touch the desired Transition.



Or: Touch Select on Map.


7) Touch the desired Departure.

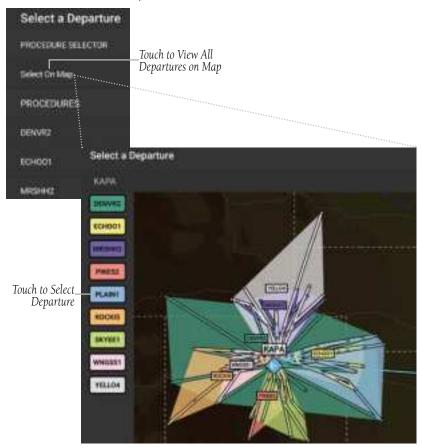

Flight Plan - Selecting Departure on Map



8) Touch the desired Transition.

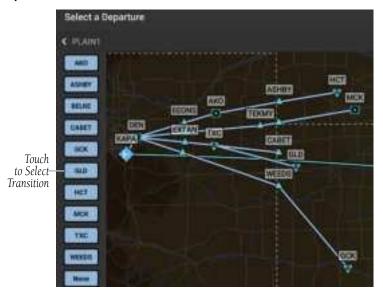

Flight Plan - Selecting Departure Transition on Map

9) Touch the desired Runway. The Departure, Transition, associated waypoints, and Runway are added to the flight plan as a single entry that can be expanded to view all waypoints.



Flight Plan - Selecting Departure Runway on Map






Flight Plan - Viewing Departure Details

Adding a Standard Arrival Route (STAR) to Flight Plan:


- 1) From any page, touch
- 2) Touch the destination in the Flight Plan List to open the Actions Menu.
- 3) From the Actions Menu, touch Add Arrival.

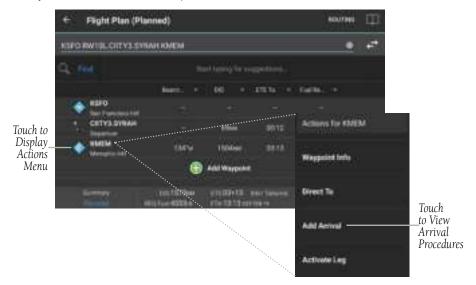

Flight Plan - Destination Airport Actions Menu



- **4)** Touch the desired Arrival.
- **5)** Touch the desired Transition.
- **6)** Touch the desired Runway.
- Or: Touch Select on Map.
- **7)** Touch the desired Arrival.

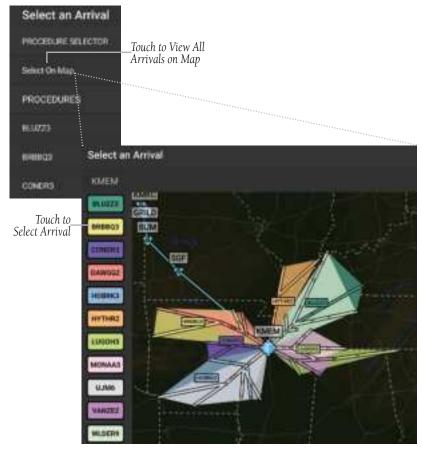

Flight Plan - Selecting Arrival on Map



8) Touch the desired Transition.



Flight Plan - Selecting Arrival Transition on Map

9) Touch the desired Runway. The Arrival, Transition, and associated waypoints are added to the flight plan as a single entry that can be expanded to view all waypoints. Once a STAR has been added to a flight plan, no more waypoints can be added.



Flight Plan - Selecting Arrival Runway on Map



Expanding/Collapsing SID, STAR, or Airways in Flight Plan List:

- **2)** Touch **()** to expand.
- 3) Touch w to collapse any of the expanded fields.




Flight Plan - Viewing Arrival Details



Adding an Airway to Flight Plan:

- 1) From any page, touch Home >
- **2)** Touch a waypoint in the Flight Plan List to open the Actions Menu.
- 3) If the waypoint is a valid Airway entry point, touch Load Airway in the Actions Menu. Only valid Airway entry points will have the Load Airway action in the Actions Menu.
- **4)** Touch the desired Airway.
- 5) Touch the desired Airway exit point from the list. All Airway waypoints from selected entry point to selected exit point will be added to the flight plan list as one entry that can be expanded to show all waypoints.

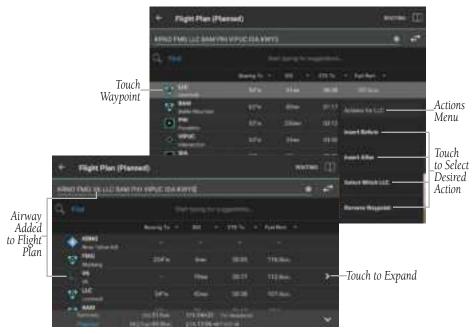

Adding Airway to Flight Plan

Bookmarking Flight Plan:

- 1) From any page, touch Home > > = > = .
- 2) Touch Store current route to bookmark the Flight Plan. The Flight Plan and all associated waypoints are saved.



Renaming a Flight Plan:

- 1) From any page, touch **Home** > > = .
- 2) Touch and hold on any Flight Plan in the list.
- **3)** Touch **Rename**.
- **4)** Use text entry to give the flight plan a familiar name, or edit the existing name.
- 5) Touch Save.

Sorting Stored Flight Plans:

- 2) Choose to order stored flight plans by either selecting the alphabetical button or the custom sort button.

Deleting Bookmarked Flight Plans:

- 2) Touch 🔵 > **Remove** to delete the selected Flight Plan.



NOTE: Flight Plans deleted from the Bookmarked FPLs list will also be deleted from other devices when the next sync is performed.



Deleting Bookmarked Flight Plan



Reversing Flight Plan:

- 1) From any page, touch **Home** > [37].
- 2) Touch 🗗 to reverse the Flight Plan.



Active Flight Plan Page - Reverse Route



HIGHEST POINT ALONG ROUTE

In support of Helicopter Emergency Management Services (HEMS), Garmin Pilot identifies the highest obstacle along the planned route of flight.



NOTE: A current Obstacle Database must be downloaded to view the Highest Point along the route.

Viewing Highest Point Along Flight Plan:

- 1) From any page, touch **Home** > ...
- 2) If necessary, touch to expand the Flight Plan Summary information.
- 3) Touch Highest Point.

Setting Corridor Width for Highest Point Along Flight Plan:

- 1) From any page, touch **Home** > **M**.
- 2) If necessary, touch to expand the Flight Plan Summary information.
- 3) Touch Highest Point.
- **4)** Touch and drag the desired width.



Highest Point Settings



Setting Aircraft Category for Highest Point Along Flight Plan:

- I) From any page, touch **Home** > 📉.
- 2) If necessary, touch to expand the Flight Plan Summary information.
- 3) Touch **Highest Point**.
- 4) Scroll down if necessary.
- **5)** Touch **Airplane** or **Rotorcraft** in the 'Category' field.

Viewing Highest Point Along Flight Plan on Map Page:

- 2) If necessary, touch to expand the Flight Plan Summary information.
- 3) Touch Highest Point.
- **4)** Scroll down if necessary.
- 5) Touch next to **Show on Map/Profile**, as desired.

HAZARD COLORS

Changing the aircraft category as described above will change the color of terrain and obstacle hazard icons on the map.

Aircraft (Terrain and Obstacles)

- Red: Terrain/obstacle is above or within 100 ft below the aircraft altitude.
- Yellow: Terrain/obstacle is between 100 ft and 1000 ft below the aircraft altitude.

Helicopter (Terrain)

- Red: Terrain is more than 250 ft above the aircraft altitude.
- Orange: Terrain is between 250 ft and 0 ft above the aircraft altitude.
- Yellow: Terrain is between 0 ft and 250 ft below the aircraft altitude.


Helicopter (Obstacles)

- Red: Obstacle is at or above current aircraft altitude.
- Yellow: Obstacle is between 0 ft and 250 ft below current aircraft altitude.



ROUTE DATA AND CHART DOWNLOADS

Once a flight plan has been created, Garmin Pilot allows the user to quickly verify the route data and charts required for the active flight plan have been successfully downloaded. A flight bag icon, available from the Flight Plan page, will appear in the Flight Plan Summary and, when selected, display the following information:

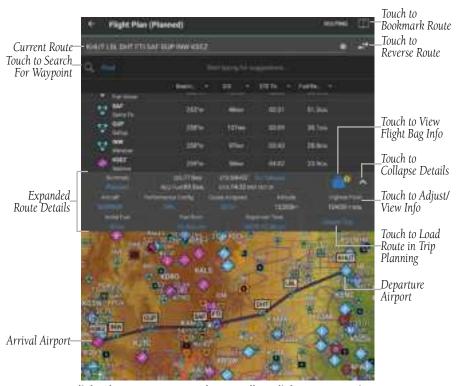

Flight Plan - Route Data & Charts - Yellow Flight Bag Annunciator

- indicates all required route data and/or charts for the flight plan are downloaded to the device.
- indicates route data and/or charts need to be downloaded.



NOTE: Weather, AIRMETs, SIGMETs, NOTAMs, TFRs, and Fuel Prices are downloaded automatically in the background.






NOTE: Route Data fetches downloads for the current cycle. Enabling Auto-Downloads will ensure that future cycles are also downloaded when they become available.

Viewing Route Data and Chart Downloads via Flight Bag:

- 1) From any page, touch **Home** > . Enter desired Flight Plan information. If the necessary route data and/or charts are downloaded, will be displayed.
- 2) Touch to view info and touch to expand desired section and view details
- **3)** Touch **OK** to continue and return to the Flight Plan page.

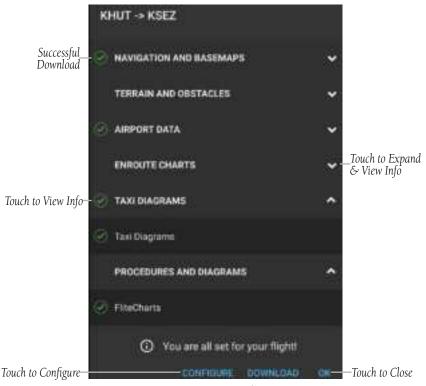


Route Data & Charts - Successful Download(s)



Downloading Route Data and Charts via Flight Bag:

- 1) From any page, touch **Home** > . Enter desired Flight Plan information. If the necessary route data and/or charts are not downloaded, will be displayed.
- 2) Touch to view info and touch to expand desired section and view the necessary download(s).
- **3)** Touch **Download.** A download status bar will be displayed.
- 4) Once the download is complete, will be displayed next to the title of the applicable download, (e.g. Navigation and Basemaps, Terrain and Obstacles, etc.).
- **5)** Touch **OK** to continue and return to the Flight Plan page.

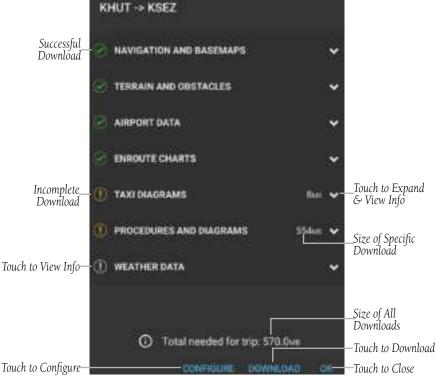


Route Data & Charts - Download(s) Needed



Configuring Route Data and Chart Downloads via Flight Bag:

- 1) From any page, touch **Home** > [87]. Enter desired Flight Plan information.
- 2) Touch the Flight Bag icon, either or
- 3) Touch Configure.
- **4)** Touch **to** enable/disable desired downloads.
- **5)** Touch **OK** to continue and return to the Flight Plan page.

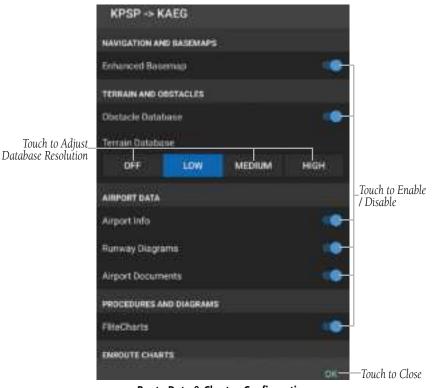

Route Data & Charts - Configuration




ADVANCED AIRCRAFT PERFORMANCE

Garmin Pilot incorporates cruise, climb, and descent performance tables to increase the accuracy of Estimated Time Enroute (ETE) and fuel burn calculations.

Configuring and viewing advanced aircraft performance data:

- 1) From any page, touch Home > 🔣.
- 2) Touch and select the aircraft model data from the Garmin library or manually enter the information from the aircraft's Pilot Operating Handbook (POH). Make sure to enter aircraft data on the **Performance** and **W&B** tabs also.

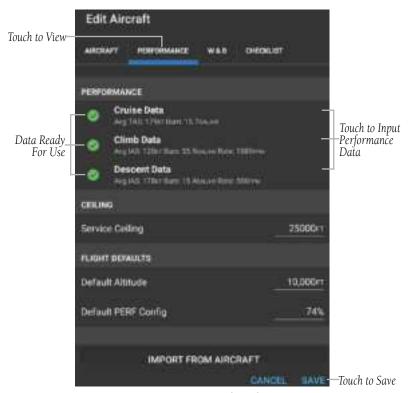

Settings - Advanced Aircraft Performance

3) Touch **Altitude** in the flight plan summary to determine the best altitude based on fuel consumption and winds.





Advanced Aircraft Performance (Flight Plan)

DEMO MODE

Demo Mode simulates flight activity allowing the user to preview a trip before takeoff or review a previous flight. There are three Demo modes available, Manual, Flight Plan, and Logbook Track.



NOTE: When entering a value for Vertical Speed, the aircraft will climb and descend at this rate when altitude changes are made. Setting the vertical speed to zero (0) will override this and cause altitude changes to take effect immediately.




NOTE: In order to autolog Demo Flights, Terrain and Obstacle data must be downloaded. Click **Home** > **Downloads** to verify and/or download the applicable Obstacle Database & Terrain Database.




Entering Demo Mode - Manual:

- If using the Classic Interface style, from any page, touch Home > Demo Mode.
- **Or:** If using the Tab Bar Interface style, from any page, touch **More** > **Demo Mode**.
- **2)** Touch the **Manual** tab.
- **3)** Enter Desired Track, Altitude, Ground Speed, and Vertical Speed.
- **4)** Touch **Tap to Set Starting Point** and enter waypoint information.
- 5) Touch **Playback Speed** to adjust as desired, then touch **2**.
- **6)** Toggle the **Autolog Demo Flight** button, as desired.
- 7) From the Map page with the Demo Mode active, touch top of the screen to adjust settings.

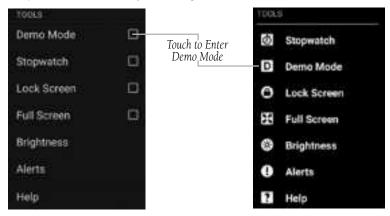

Entering Demo Mode - Classic & Tab Bar



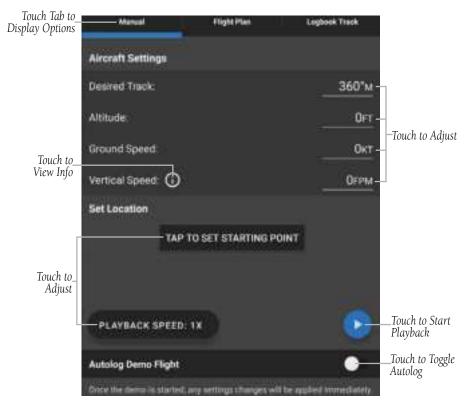

Demo Mode - Manual

Entering Demo Mode - Flight Plan:

- 1) If using the Classic Interface style, from any page, touch **Home > Demo Mode**.
- **Or:** If using the Tab Bar Interface style, from any page, touch **More > Demo Mode**.
- **2)** Touch the **Flight Plan** tab.
- **3)** Enter Desired Altitude, Ground Speed, and Vertical Speed.
- **4)** The active flight plan loads automatically. Touch **Edit Route**, if necessary. and enter waypoint information.
- 5) Touch **Playback Speed** to adjust as desired, then touch **2**.
- **6)** Toggle the **Autolog Demo Flight** button, as desired.
- 7) From the Map page with the Demo Mode active, touch top of the screen to adjust settings.





Demo Mode - Flight Plan

Entering Demo Mode - Logbook Track

- If using the Classic Interface style, from any page, touch Home > Demo Mode.
- **Or:** If using the Tab Bar Interface style, from any page, touch **More** > **Demo Mode**.
- **2)** Touch the **Logbook Track** tab.
- **3)** Slide the blue circle to adjust Playback Settings.
- **4)** Touch the route underneath Logbook Track to view additional route(s) and select desired route.
- 5) Touch **Playback Speed** to adjust as desired, then touch **2**.
- **6)** Toggle the **Autolog Demo Flight** button, as desired.
- 7) From the Map page with the Demo Mode active, touch top of the screen to adjust settings.






Demo Mode - Logbook Track

Exiting Demo Mode:

Touch **Home** > **Demo Mode**.

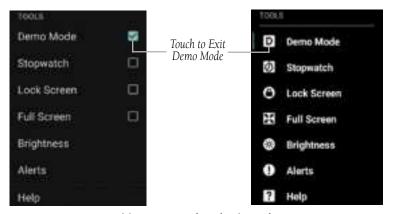


Exiting Demo Mode - Classic & Tab Bar



AIRPORT INFORMATION

Airport information is a downloadable product available free with a Garmin Pilot subscription from the Downloads section of the Settings Menu. Because Garmin Pilot will not automatically remove outdated charts, it is important to always ensure the latest Data Cycle has been downloaded prior to planning a flight. The downloaded cycle number and date range for every map data product is displayed on the Downloads Page and can be viewed by touching **Home > Downloads > U.S. Airport Information**.

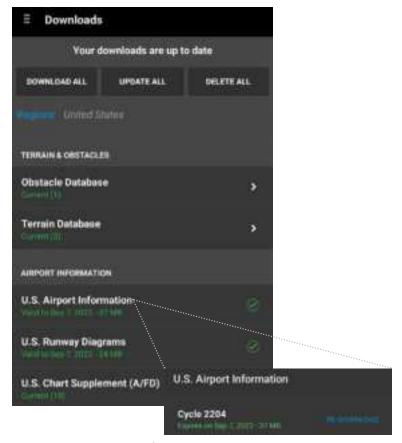

Downloads - Airport Information - Cycle Number & Expiration Date



Finding airport information is easy with Garmin Pilot, simply touch **Home** > to view the Airport Information Page. The Airport Information Page is divided into two sections. The top of the page under the control bar is a banner menu containing airport information, such as;

Public/Private/MilitaryElevation (MSL)	Sunrise/Sunset (Local)Zulu Time Offset	Best Runway for Current Weather
Magnetic Variation	Pattern Altitude (MSL)	ATIS, Clearance,
Longest Runway & Width	Wind Direction, Ceilings, & Visibility	Ground, Tower, etc. Frequencies

Airport Info Banner Menu Items

The banner menu contains seven (7) buttons:

кмсі	Select Airport	Displays the Select Airport sub-menu, where the user can manually Search for an Airport, & view Recents, Relevant, &/or Nearest airports.
11	Airport Diagram	Displays the runway(s) length and I.D.
	SafeTaxi	Displays the SafeTaxi page (Optional), which provides a geo-referenced airport diagram with graphical NOTAMs.
\$	View on Map	Displays the Airport on the Map Page in Garmin Pilot.
*	View in Google Maps	Displays the Airport in the Google Maps program. Select 'Satellite' or 'Hybrid', then '3D' (if available).
Exact Supplement	Chart Supplement	Displays the Airport, General, & Supplemental information.
\$6.65 100LL	Fuel Prices	Displays the Fuel Prices Page, where data can be filted by fuel type (Jet, 100LL, MOGAS), location, and price.

Airport Info Banner Menu Buttons





From the Airport Information Page, touching the ICAO I.D. (e.g. on the left side of the banner menu opens the Select Airport menu, which filters the airport data into three categories; Relevant, Search, and Nearest.

Selecting Relevant Airport(s):

- 2) Touch the desired airport from the Active Flight Plan or Recents list.
- 3) Touch the 'Back' button or Close to exit.




Airport Info Page - Banner Menu - Airport Search - Relevant



Searching for Airport(s):

- 1) Touch Home > 🛜 > 🔭 > Search.
- 2) Manually enter text into the search box, then select the desired airport.
- 3) Touch the 'Back' button or **Close** to exit.

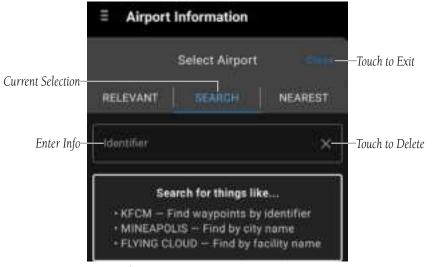


Airport Info Page - Banner Menu - Airport Search - Search



Selecting Nearest Airport(s):

- 1) Touch Home > > | KMCI | > Nearest.
- 2) Touch the 'Arrow' to view airports Nearest the current GPS position
- **Or:** Touch the 'Near XXXX' (e.g. KMCI) to view airports Nearest the current airport selected in Garmin Pilot.
- Towards the bottom of the list, touch Public Airports or All Airports, as desired.
- **4)** Touch the desired airport from the Nearest list.
- 5) Touch the 'Back' button or **Close** to exit.

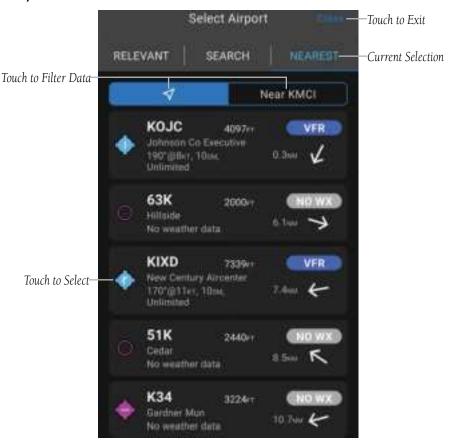

Airport Info Page - Banner Menu - Airport Search - Nearest



Viewing Chart Supplement:

- 1) From any page, touch Home > 🛜 > 🌅
- **2)** Touch the airport I.D., (e.g. KMCI) to view A/FD information.
- **3)** Touch **General** to view the Airport Legend.
- **4)** Touch **Supplemental** to view Special Notices, (e.g. Washington DC FRZ).
- **5)** Touch or the 'Back' button to exit.



Airport Info Page - Banner Menu - Chart Supplement - KMCI



Viewing Fuel Prices:

- 1) From any page, touch Home > > >
- 2) Select Jet, 100LL, or MOGAS, as desired.
- **3)** Touch the '\$' to sort fuel providers by fuel price.
- **4)** Touch the arrow to sort fuel providers by distance from the selected airport.
- 5) Touch Close or the 'Back' button to exit.




Airport Info Page - Banner Menu - Fuel Prices



Viewing SafeTaxi (Subscription Required):

- 1) From any page, touch **Home** > > | |
- **2)** Toggle 'NOTAMs On/Off', as desired, then touch NOTAMs to view information, if necessary.
- **Or:** Touch the graphcial NOTAM to view details.
- 3) Touch the 'Back' button to exit.

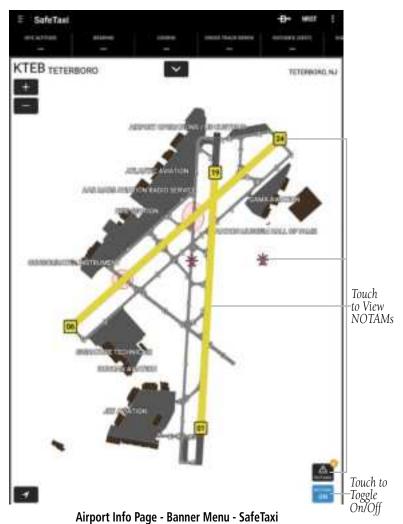



Viewing Airport Using Garmin Pilot Map:

From any page, touch **Home** > > > >.






Viewing Airport Using Google Maps:



NOTE: Google Map functionality requires an active Wi-Fi or cellular connection.

- From any page, touch **Home** > > >> <math>>1)
- Touch Satellite or Hybrid. 2)
- Touch low in the Google Maps program. 3)
- Touch '3D' (if available) or '2D' to toggle display. 4)
- 5) Touch **(11)** to view Map Controls.
- 6) Touch the 'Back' button to exit.

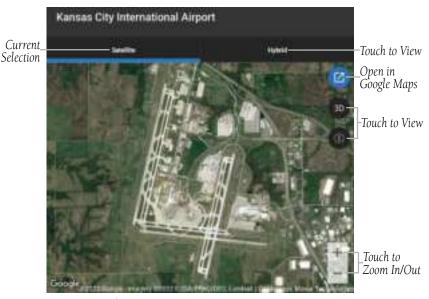

Airport Info Page - Banner Menu - View in Google Maps



Immediately below the banner menu are six (6) main selectable tabs for viewing detailed airport information; Info, Runway, Chart, FBO, Weather, and NOTAM. Many of the main tabs also provide a horizontal naviation bar to view additional information.



Airport Info Page - Info - Frequencies



NOTE: Garmin Pilot references the FAA list of Clearance Delivery phone numbers as an option when receiving a clearance, to help improve communication and efficiency. Not all airports will have a Clearance Delivery phone number listed. The phone numbers will be published as they are listed in the chart supplement



AIRPORT INFO TAB

The Airport Information section has six (6) tabs; Info, Runway, Chart, FBO, Weather, and NOTAM. The first tab is **Info**, which contains the following additional tabs; Frequencies, General, NAVAIDs, Remarks, and Services.

Viewing Airport Info:

FREQUENCIES

Selecting **Frequencies** on the horizontal navigation bar displays the following information:

• ATIS	Tower	Approach
Clearance Delivery	• UNICOM	• Class B
Ground Control	Departure	Other (e.g. FSS)

Airport Information Page - Info Tab - Frequencies

Viewing Frequencies:

- **2)** Touch **Frequencies** on the horizontal navigation bar. Scroll to view additional information, if necessary.

GENERAL

Selecting **General** on the horizontal navigation bar displays the following information:

Elevation	Sectional	Handling Required
Magnetic Variation	Flight Service	Slots Required
• Lat/Lon	• Hours	Phone Numbers
Sunrise/Sunset	• Fees	Other (e.g. website)
Time Offset	Customs Available	

Airport Information Page - Info Tab - General



Viewing General Airport Information:

- **2)** Touch **General** on the horizontal navigation bar. Scroll to view additional information, if necessary.



Airport Info Page - Info Tab - General

NAVAIDs

Selecting **NAVAIDs** on the horizontal navigation bar displays the following information:

• Type (e.g. NDB, VOT, VORTAC)	Radial From
• I.D.	Navigation Frequency
Distance From (nm)	

Airport Information Page - Info Tab - NAVAIDs



Viewing NAVAIDs:

- **2)** Touch **NAVAIDs** on the horizontal navigation bar. Scroll to view additional information, if necessary.

REMARKS

Selecting **Remarks** on the horizontal navigation bar displays some of the following information:

- date inio	- Willastical Alert System Status
Gate Info	Windshear Alert System Status
Taxiway Limits/Recommendations	Pushback Clearance Details
Equipment Requirements	Noise Abatement Procedures

Airport Information Page - Info Tab - Remarks

Viewing Remarks:

- I) From any page, touch **Home** > 📚 > Info
- **2)** Touch **Remarks** on the horizontal navigation bar. Scroll to view additional information, if necessary.

SERVICES

Selecting **Services** on the horizontal navigation bar displays details about Customs (if available).

Viewing Services:

- **2)** Touch **Services** on the horizontal navigation bar. Scroll to view additional information, if necessary.



AIRPORT RUNWAY TAB




NOTE: If Garmin Pilot has not recently connected to weather data services, either over Wi-Fi, cellular, SiriusXM, or using other avionics, weather data my be outdated and unreliable.

The Airport Information section has six (6) tabs; Info, Runway, Chart, FBO, Weather, and NOTAM. The second tab is **Runway**, which displays the runway I.D., length, width, traffic pattern (Left unless stated otherwise), lighting, type of surface (e.g. asphalt) and conditions (e.g. grooved, fair condition).

The Airport Information page recommends runways based on winds and preferences for surface type and runway dimensions. This recommended Best Runway appears in the airport summary section of the Airport Information page.

To set the preferred runway surface type and runway length, touch **Home** > ****** > General.






General - Settings - Runway Preferences

The Runways tab also shows winds on that runway, sourced from current weather reports. This wind information is shown divided into two components: headwind/ tailwind magnitude, and crosswind direction and magnitude.



Viewing Runway Info:

From any page, touch **Home** > **Runway**.

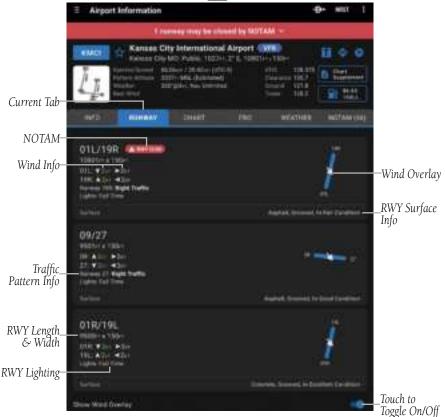

Airport Info Page - Info Tab - Runway



AIRPORT CHART TAB

The Airport Information section has six (6) tabs; Info, Runway, Chart, FBO, Weather, and NOTAM. The third tab is **Chart**, which displays the following information:



NOTE: Terminal procedures (e.g. SIDs, STARs, instrument approach procedures, airport diagrams, Hot Spots, and Take-off Minimums) are available for selection from the Airport Information Page. Any charts that are not geo-referenced will open in the default PDF document viewer.

Airport Diagram	Takeoff Minimums
Climb/Descent Table	Instrument Approaches
Hot Spot	Arrival Procedures
INOP Components	Departure Procedures

Airport Information Page - Chart Tab

Viewing and Organizing Procedures:

- From any page, touch **Home** > 1)
- Touch the Procedures Tab. All available charts and procedures are shown 2) including; (Airport Diagrams, Approach Procedures, Arrival Procedures, and Departures). Chart titles followed by , will need to be downloaded. Charts followed by **a** have already been downloaded to the device.
- Touch the desired chart to view. 3)
- **Or:** To organize charts
- Touch to create a Chart Binder or add to an existing binder. 4)
- Touch and enter a Binder Name or select from the list of available 5) hinders
- Touch for each additional chart to add to a binder. 6)





Airport Info Page - Chart Tab



AIRPORT FBO TAB

The Airport Information section has six (6) tabs; Info, Runway, Chart, FBO, Weather, and NOTAM. The fourth tab is **FBO**, which displays the following information:

Fuel Providers	Amenities (e.g. Courtesy Car, Hangar)
FBO Name & Phone Number	• Fuel Prices
ARINC Frequency	Rental Car Agencies
Unicom Frequency	Ability to Edit/Configure Icons

Airport Information Page - FBO Tab

Viewing FBO:

- 1) From any page, touch **Home** > **> FBO**.
- **2)** Touch the FBO phone number to place a call, if desired.
- **3)** Touch any icon to view additional information.



Airport Info Page - FBO Tab



FBO FEES

A coalition of industry leaders, including AOPA, EAA, GAMA, NATA, NBAA and HAI, have called for Fee Transparency, asking FBOs to publish their pricing. FBO fees are displayed on the FBO tab of the Airport Information Page.

Viewing FBO Fees:

- 1) From any page, touch **Home** > **> > FBO**.
- 2) Touch the desired FBO.
- 3) Scroll down to the 'FEES' section.



Airport Info Page - FBO Tab - Fees



Configure FBO Settings:

- From any page, touch Home > > FBO > Edit Icons.
- **2)** Touch next to **Show Fuel Providers** to toggle display On/Off.
- 3) Touch mext to Show Rental Car Providers to toggle display On/Off.
- **4)** Touch any of the icons to toggle display On/Off. When toggled 'On', the icon will be displayed if the amenity is available at the selected FBO.
- **5)** Touch the 'Back' button to exit.



Airport Info Page - FBO Tab - Configure

AIRPORT WEATHER TAB

The Airport Information section has six (6) tabs; Info, Runway, Chart, FBO, Weather, and NOTAM. The fifth tab is **Weather**, which contains the following additional tabs; METAR, TAF, MOS, Winds Aloft, Forecast Discussion, PIREP, & AIR/SIGMET:

Viewing Weather Info:

From any page, touch **Home** > **Solution** > **Weather.**

METAR

Selecting **METAR** on the horizontal navigation bar displays the following information:

• Wind	• WX	Altimeter
Ceiling	• Temp	Density Altitude
Visibility	Dewpoint	• Clouds

Airport Information Page - Weather Tab - METAR



Viewing METAR:

- From any page, touch Home > S > Weather.
- **2)** Touch **METAR** on the horizontal navigation bar. Scroll to view additional information, if necessary.
- 3) Touch to expand the Clouds section and view additional info.



Airport Info Page - Weather Tab - METAR



TAF

Selecting **TAF** on the horizontal navigation bar displays the following information:

Validity Timestamp	• Clouds
Wind	Expiration Date & Time
Visibility	Raw Data

Airport Information Page - Weather Tab - TAF

Viewing TAF:

- 1) From any page, touch **Home** > > **Weather.**
- **2)** Touch **TAF** on the horizontal navigation bar. Scroll to view additional information, if necessary.



Airport Info Page - Weather Tab - TAF



MOS

Selecting **MOS** on the horizontal navigation bar displays the following information:

Validity Timestamp	• Clouds
Wind	Temperature
Visibility	Dew Point

Airport Information Page - Weather Tab - MOS

Viewing MOS:

- 1) From any page, touch **Home** > > **Weather.**
- **2)** Touch **MOS** on the horizontal navigation bar. Scroll to view additional information, if necessary.



Airport Info Page - Weather Tab - MOS



WINDS ALOFT


Selecting **Winds Aloft** on the horizontal navigation bar displays the following information:

Lat/Lon	Wind Direction & Velocity
Forecast Date Range	Temperature
Altitude	ISA Temperature

Airport Information Page - Weather Tab - Winds Aloft

Viewing Winds Aloft:

- Touch Winds Aloft on the horizontal navigation bar. Touch Previous and/or Next to view additional information. Scroll to view additional information, if necessary.

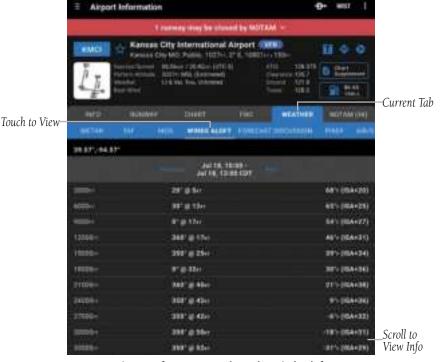

Airport Info Page - Weather Tab - Winds Aloft



FORECAST DISCUSSION

Selecting **Forecast Discussion** on the horizontal navigation bar displays the following information:

Name/Location of Meteorological Support	Aviation Advisories
Textural Discussion	EAX Watches/Warnings/Advisories

Airport Information Page - Weather Tab - Forecast Discussion

Viewing Forecast Discussion:

- 2) Touch **Forecast Discussion** on the horizontal navigation bar. Scroll to view additional information, if necessary.



Airport Info Page - Weather Tab - Forecast Discussion



PIREP

Selecting **PIREP** on the horizontal navigation bar displays the following information:

• Type of PIREP (e.g. Routine)	Aircraft
Location	• Sky
Time	Remark

Airport Information Page - Weather Tab - PIREP

Viewing PIREP:

- 1) From any page, touch **Home** > > **Weather**.
- **2)** Touch **PIREP** on the horizontal navigation bar. Scroll to view additional information, if necessary.



Airport Info Page - Weather Tab - PIREP



AIR/SIGMET


Selecting **AIR/SIGMET** on the horizontal navigation bar displays the following information:

• IFR	Convective Outlook	
IFR Outlook	Icing	
Convective	Turbulence	

Airport Information Page - Weather Tab - AIR/SIGMET

Viewing AIR/SIGMET:

- 1) From any page, touch **Home** > **Solution** > **Weather.**
- **2)** Touch **AIR/SIGMET** on the horizontal navigation bar. Scroll to view additional information, if necessary.

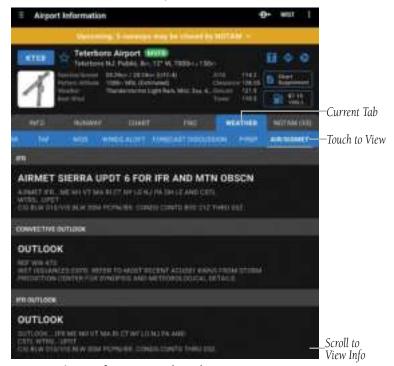

Airport Info Page - Weather Tab - AIR/SIGMET



AIRPORT NOTAM TAB

The Airport Information section has six (6) tabs; Info, Runway, Chart, FBO, Weather, and NOTAM. The sixth tab is **NOTAM**, which contains the following additional tabs; All, Aerodrome, Runway, Taxiway, FDC, Navigation, and Obstacle:

Viewing NOTAM Info:

From any page, touch **Home** > **NOTAM**.

All

Selecting **All** on the horizontal navigation bar displays the following information:

Upcoming	Aerodrome	• FDC
• Today	 Runway 	 Navigation
• Last 30 Days	• Taxiway	Obstacle

Airport Information Page - NOTAM - All

Viewing All NOTAMs:

- 1) From any page, touch **Home** > > NOTAM > All.
- **2)** Touch **ALL** on the horizontal navigation bar.
- **Or:** Touch the NOTAM banner message. Scroll to view additional information, if necessary.




Airport Info Page - NOTAM Tab - All



AIRPORTS WIDGET

Airport information is also accessible via the Map page's split-screen widgets. To access the Airports Widget, touch **Home** > **Solution** > **Widgets**. If necessary, touch **Add Widget**. Touch the widget type in the upper left of a widget, and select **Airports** from the list. The Airports widget has four tabs of airport information. The Summary shows a Best Runway recommendation and brief summaries of multiple types of information. The Freq tab shows ATC, approach and navaid frequencies. The Runways tab shows all runways and details, including runway winds. The Fuel tab shows available fuel vendors and fuel prices. To select a different airport, touch and drag the Navtrack slider to a different point along the flight plan, or touch the airport selector at the upper right corner of the widget. Touch the icon to view the airport in full in the Airport Information page.

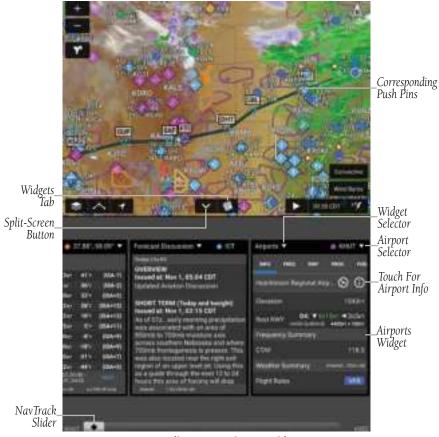

Map - Split Screen - Airports Widget



FILE

With Garmin Pilot, users can easily enter a flight plan and interactively edit it on the map. Pre-loaded forms makes it quick to save and reuse data for frequently flown routes. And when the flight plan is ready, Garmin Pilot makes it simple to file, cancel or close the flight plan via a Filing Service Provider (Leidos Flight Services, etc.). Garmin Pilot helps European users plan routes for IFR flights quickly via the European Autorouting feature.

TRIP PLANNING



NOTE: A data connection (e.g., Wi-Fi or cellular) is required to receive preflight weather briefings, file, amend, cancel or close flight plans from Garmin Pilot.

The Trip Planning Page manages all of the trip planning details for each trip. When a new trip is created and activated on the Trip Planning Page it becomes the active flight plan. Flight plans created on the Flight Plan Page do not become the active trip plan. The Flight Plan must be imported to become the active trip. Trips created on the Trip Planning Page will default to a direct-to route from departure to destination. Add additional waypoints in the route field by entering fixes, NAVAIDs, airway, departures, arrivals or airports. For Long or complex routes use the Flight Plan page to create the flight plan and then import.

Complete the trip plan by entering pilot information, aircraft information, departure/ arrival times, altitude, airspeed, etc.. Some of the data will be auto-filled based on data from the Garmin Pilot account that's currently logged in. Once all mandatory fields have been completed, Garmin Pilot creates a trip summary, and Navlog. If Garmin Pilot has been linked to a Filing Service Provider, Garmin Pilot will retrieve a Standard Weather Briefing for the route of flight for the Estimate Time of Departure (ETD). Garmin Pilot also uses the Filing Service Provider to file, amend, cancel or close flight plans.



Trips can be cloned and/or deleted on the Trip Planning Page. Cloning a trip copies the current trip. Any changes made after the clone is created are not copied. The selected trip can not be deleted. Cloned trips are saved in the Trips List. All trip data is cloned including pilot information, aircraft information, route of flight and all other associated data. Trips that have been cloned are available for use at a future date. Activate a cloned trip, change the date and all applicable data, refresh the briefing, and the trip is ready to be filed.

PREPARING TO FILE



NOTE: Prior to filing the flight plan, ensure that all of the information entered on the Trip Planning Page is correct including the route of flight.

Garmin Pilot provides a quick and easy method to file, close or cancel flight plans. When a flight plan is complete, its route of flight, pilot information, aircraft information, type of flight plan (IFR/VFR), number of persons onboard, fuel onboard, date, estimated time of departure (ETD), altitude, airspeed, and any optional data including alternate, and remarks can be transmitted to the Filing Service Provider. The ETD must be at least 30 minutes in the future or the flight plan will not be transmitted. To file a flight plan with a departure time less than 30 minutes in the future, call the FSS.

Creating an Active Flight Plan:

- 1) From any page, touch Home >
- 2) Touch within the route field to activate the cursor.
- **3)** Use the keyboard to insert waypoints. Separate each waypoint with a space.

Or:

- 1) Touch the Add Waypoint button.
- **2)** Use the keyboard to input the waypoint identifier.
- 3) Touch the Add Waypoint button to add additional waypoints.
- **Or:** Enter Lat/Lon information.
- **Or:** Enter Radial/Distance waypoint in one of the following formats:



Or:

- 1) Use one of the above methods to enter a departure point.
- 2) On the Map Page touch Menu > Graphical Route Edit.
- **3)** Long press on the map area to display the rubber-band. Place the rubber-band on or near the desired location and then release the rubber-band. A list of nearby waypoints is displayed.
- **4)** Select the desired waypoint from the list, or create a User Waypoint.
- **5)** Repeat steps 3 and 4 to add additional waypoints.
- **6)** Touch **Save** to continue or **Cancel** to exit without saving.



Flight Plan - Edit Route



PLANNING A TRIP

CREATING A NEW TRIP:

- From any page, touch Home >
- 2) Touch Add Trip.
- **3)** Enter Departure, Routing, and Destination.
- **Or:** Enter Departure, Destination and Choose a Preferred ATC Route after the trip is created.
- **Or:** Touch **Load Flight Plan** to import the Flight Plan. Importing the Flight Plan will fill the Departure, Routing, and Destination fields. Complete the remaining fields as necessary.



Trip Planning - Load Flight Plan




MINIMUM FLIGHT REQUIREMENT WARNINGS

Garmin Pilot checks the TAFs for the departure and destination airports when a trip is created. If any TAF shows the weather conditions for an airport fall below VFR or IFR minimums, Garmin Pilot displays a Minimum Flight Requirement Warning icon. Minimum Flight Requirement Warning icons appear in the following places to notify of severe weather conditions: Next to the Trip Planning icon in the Home menu; Next to the airport code in the Trip Planning form; and Watermark-style warning in Upcoming trips list

Minimums Warning



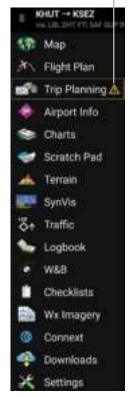



Minimums Warning at Departure Airport

Minimum's Warning at Destination Airport

Trip Planning - VFR/IFR Minimums Warning



Choosing Preferred ATC Route:

- 1) Touch **View Planned ATC Routing** to view Preferred ATC Routes.
- 2) Touch Altitude, Aircraft, Date, or Popular to sort the list.
- **3)** Touch the desired route from the list, to add the route to the trip.



Trip Planning - Preferred ATC Routes

Entering Pilot Information:

- **1)** Touch the Pilot field.
- **2)** Enter pilot's Contact Info, Personal Minimums, and Filing Service Provider.

Or:

- a) Touch New.
- **b)** Enter the Required Contact Information by touching each field. A keyboard will appear to enable typing in each selected field.
- c) Touch Add New.
- d) Touch the desired Pilot from the list.

Entering Aircraft Information:



NOTE: Performance data is used to create the NavLog and to calculate trip parameters.

- **1)** Touch the Aircraft field.
- 2) Select the desired aircraft from the list.



Or:

- a) Touch New.
- **b)** Enter the Required Aircraft Information by touching each field and using the keyboard.
- c) Enter optional performance data.
- d) Touch Add New.
- e) Touch the desired Aircraft from the list.


Enter type of Flight Plan:

Touch **Flight Rules** and select the desired rule set, e.g. IFR, VFR, DC SFRA, etc., from the drop down menu.

Enter Date, ETD, Altitude, and Airspeed:

Touch the applicable field and enter the desired value(s). The Airspeed will be populated with the Cruise TAS (kts) entered for the aircraft. The Altitude selector is auto-populated with fuel, ETE and wind values based on aircraft performance and weather reports.

Selected Trip-

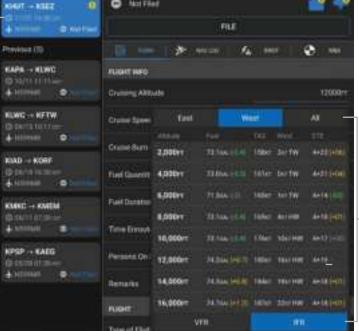

_Touch to Filter Data

Trip Planning - Altitude Selector



Enter Persons Onboard:

Touch the Persons on Board field to enter the number of occupants.

Enter Fuel:


Touch the Fuel field to enter the number of hours:minutes of fuel onboard. The Fuel field is automatically populated with the Default Fuel/Cruise Burn Rate, but should be adjusted to reflect the actual fuel onboard the aircraft.

Enter Optional Data (SIC, Call Sign, Alternate and Remarks):

Touch the applicable field and enter the desired information.

EUROPEAN AUTOROUTING

Garmin Pilot allows European Users to quickly find a suitable route for the particular pilot, aircraft, etc. If not already completed, you need to enable your pilot profile in Garmin Pilot to use the proper filing provider for Trip Planning.

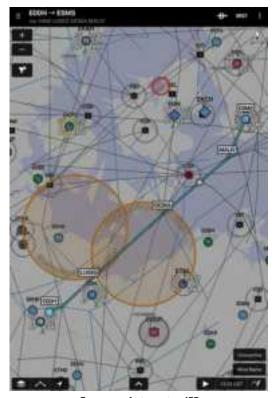


European Autoroute - IFR



Entering/Updating Pilot Information

- Touch the Pilot field (e.g. JILL PILOT). 1)
- Touch the Pencil icon next to the Pilot name. 2)
- Touch the Gear icon towards the bottom of the Edit Pilot window. 3)
- Touch Add New. 4)
- 5) Touch Eurocontrol IFR Filing Service.
- Touch **Add** > **Done** > **Save**. 6)
- 7) With the updated Pilot Info saved, touch the Filing Provider field > **European Provider.**

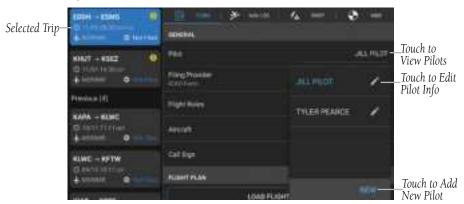

Trip Planning - European Autoroute - Pilot





Touch to Add



Touch to Select

Trip Planning - Edit Pilot - Filing Service Providers




Using European Autorouting:



NOTE: If you already know the route you would like to use, you can manually enter the route by touching **Enter Manual IFR Route**. After entering data, touch **Confirm** to continue, or **Back** to exit without saving.

- **1)** After Entering/Updating Pilot Info, enter required information in Trip Planning (General, Flight Plan, Flight Info & Advanced).
- 2) Touch **Autoroute** to view Autorouting Options.

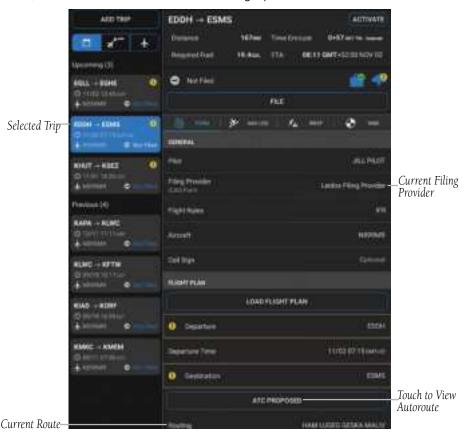


Trip Planning - European Autoroute

- **3)** Verify information in the General Data section.
- **4)** Scroll down and adjust the Advanced section, as needed. If necessary, touch **Manage Fly-By Waypoints** and adjust.
- 5) Touch **Autoroute** to save and continue to Route Proposals



Or:

6) Touch **Cancel** to close without saving.

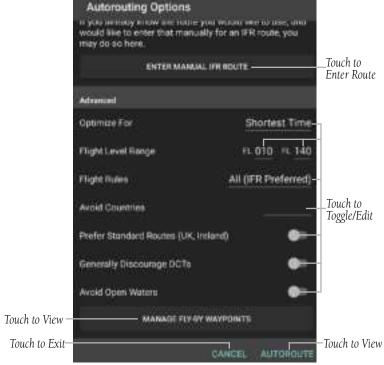


Trip Planning - European Autorouting Options

- 7) Touch ____ to expand/collapse route details, then select the desired route by "checking" the associated box.
- **8)** Touch **Show Map** to view the route on the Map. Touch **Back** to return to Route Proposals.



9) Touch **Next** to view the Route Summary. If necessary, touch anywhere in the route to edit manually.

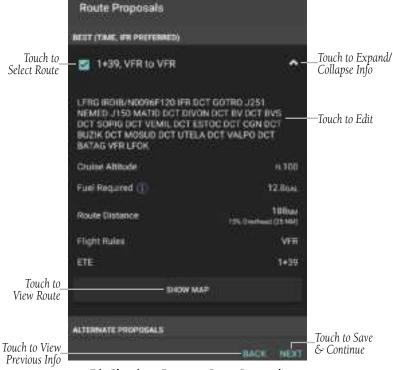

Trip Planning - European Route Proposals

- **10)** Touch **Confirm** to view route in Trip Planning.
- **11)** Verify the information is correct then touch **Validate**.




Using Aircraft Setup Guide:



NOTE: When in Trip Planning, if is visible next to your Aircraft, your aircraft may not be configured correctly (ICAO info, Performance Data, etc.).

- **1)** After Entering/Updating Pilot Info, enter the required information in Trip Planning (General, Flight Plan, Flight Info & Advanced).
- **2)** Touch **Autoroute** to view Route Summary.
- Touch Autoroute to view Autorouting Options > Resolve Issues With Aircraft Setup Guide.

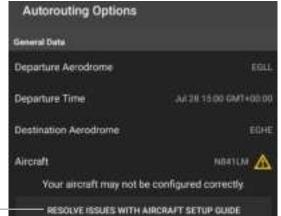

Touch to View-


European Autorouting Options - Aircraft Issues

4) A brief description of the issue(s) will be displayed. Touch **Resolve Issues** With Aircraft Setup Guide.




Or:

5) Touch **Ignore Issues** to continue without fixing issues.

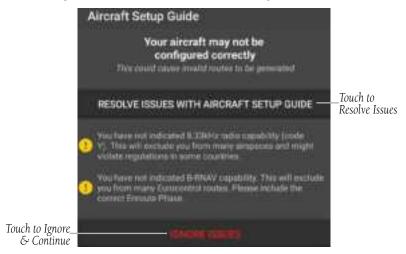

European Autorouting - Aircraft Setup Guide

- **6)** A brief description of the issue(s) will be displayed, e.g. ICAO Euipment. Touch the underlined text across from the issue to view details.
- 7) Touch the necessary item(s) to remedy the issue, e.g. VHF with 8.33 kHz spacing > **Done**. Repeat this process for any additional issues > **Continue**.

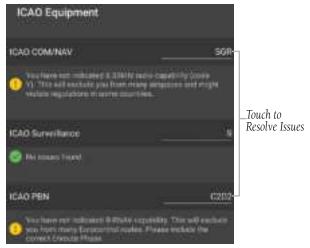

European Autorouting - Aircraft Setup Guide - ICAO

With the issues resolved or ignored, the user is now directed to the Route Proposals window, and can follow steps 5-11 in the Using European Autorouting procedures.



NAVLOG

Garmin Pilot generates a navigation log using the Active Flight Plan waypoints, user-provided Trip Plan information, user-provided aircraft performance data, and DUAT -sourced weather data. The Navlog provides navigation information for each leg of the Active Flight Plan. The column values are user selectable, touch each column header to cycle through the available units, or touch a column header to change the column group.

NAVLOG COLUMN OPTIONS:

- Crosswind
- Distance End (Dist End)
- Distance Leg (Dist Leg)
- Distance Flown (Dist Leg)
- Distance Remaining (Dist Rem)
- ETA
- ETE Leg
- ETE To
- ETE Remaining (ETE Rem)
- Fuel Burned
- Fuel Leg

- Fuel Remaining (Fuel Rem)
- Ground Speed (GS (kts))
- Headwind (kt)
- Magnetic Course (Mag Crs)
- Magnetic Heading (Mag Hdg)
- Temperature (Temp (C°))
- True Air Speed (TAS (kts))
- True Course (True Crs)
- True Heading (True Hdg)
- Wind (kt)
- Wind Correction


Viewing Navlog:

- 1) From any page, touch Home > 🚮.
- **2)** Touch **Navlog**, to view the Garmin Pilot generated Navlog.



Changing Navlog Column Values:

- From any page, touch Home >
- **2)** Touch a column header to view the column header options menu.
- **3)** Touch the desired value.

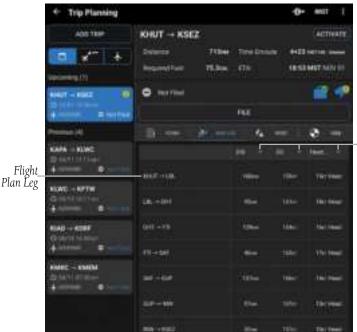

Touch to Change -Navlog Column Headers

Trip Planning - NavLog

Expanding Flight Plan Legs:

- 1) From any page, touch **Home** > [[start = 1]].
- 2) Touch Navlog.
- 3) Touch for flight plan legs containing a Departure, Arrival, or Airway to expand the leg and view all waypoints for that leg. Touch again to collapse the leg.

Cloning Trip:

- 1) From any page, touch **Home** > **1**.
- 2) Touch Menu > Clone Trip.



Viewing Cloned Trip:

- 1) From any page, touch **Home** >
- 2) Touch **History** to view the list of cloned trips
- **3)** Touch **Date**, **Route**, or **Aircraft** to organize the Trips List by date created, route of flight, or aircraft used.

Activating Cloned Trip:

- 1) From any page, touch **Home** > [[start = 1]].
- 2) Touch **History** to view the list of cloned trips
- **3)** Touch **Date**, **Route**, or **Aircraft** to organize the Trips List by date created, route of flight, or aircraft.
- **4)** Touch the desired trip from the Trips List.
- 5) Touch the Date Field to change the date to the current date. Edit other desired Trip Plan Fields.
- **6)** Touch **Menu** > **Activate** to activate the Trip.
- **Or:** Touch **Trip Not Active Touch To File** > **File** to activate and file the Trip.

Deleting Trips:

- 1) From any page, touch **Home** >
- **2)** Long press the desired trip from the Trips List.
- **3)** Touch **Delete Trips**, or **Cancel** to close.



Trip Planning - Delete Trips




BRIEF

When a flight plan is complete, Garmin Pilot will retrieve a preflight weather briefing based on the parameters of the Active Flight Plan and Trip Plan. The Brief Tab contains a standard weather briefing for the route of flight including; Weather Synopsis, Severe Weather, SIGMETs, AIRMETs, Center WX Advisories, METARs, PIREPs, Radar Summaries, Terminal Forecasts, Winds Aloft, TFRs, and NOTAMs.

Accessing Preflight Weather Briefing:

- 1) From any page, touch **Home** > **1**.
- 2) Touch **Brief**, to view the Standard Weather Briefing for the route of flight.
- **3)** Touch **Refresh** if necessary to update the weather information.
- Touch to expand individual fields or Expand All.
- 5) Touch to collapse any of the expanded fields or **Collapse All**.

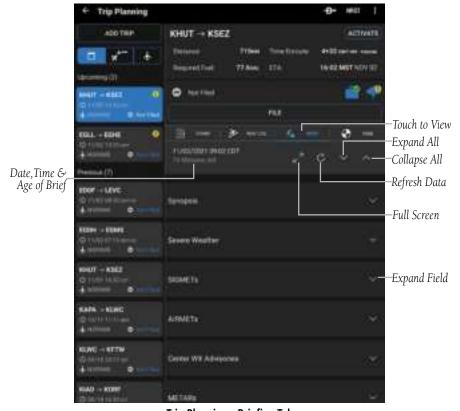

Trip Planning - Briefing Tab



FILE FLIGHT PLAN



NOTE: A data connection (e.g., Wi-Fi or cellular) is required to receive preflight weather briefings and to file flight plans.

Once all required information is entered and after reviewing the weather briefing and supplemental weather information, file the flight plan. A notification appears on the Summary Tab stating the status of the flight plan. The notification on the Summary Tab gives the time the flight plan will be transmitted to the appropriate FSS. A confirmation e-mail is also sent giving the time the flight plan will be transmitted to the appropriate FSS. If the flight plan was not successfully transmitted to the Filing Service Provider, a notification window will provide the reason it was not transmitted.

Filing:

- 1) From any page, touch **Home** > **1**.
- 2) Touch the desired Trip in the Trips List.
- **3)** Touch **File** to file the Trip. The trip status changes from Not Filed to Filed and a notice appears stating the flight plan was successfully filed.



Filed Flight Plan - Email Confirmation



Amending Filed Flight Plan:

- 1) From any page, touch **Home** > [3].
- **2)** Touch the desired Trip in the Trips List that is marked as Filed.
- 3) Touch Amend.
- 4) Make the desired changes on the Trip Planning Page.
- **5)** Touch **File**, or **Revert** to cancel changes and use original flight plan.

Canceling Filed Flight Plan:

- 1) From any page, touch **Home** > **______**.
- 2) Touch the desired Trip in the Trips List that is marked as Filed.
- **3)** Touch **Cancel**. The Trip status displays Not Filed.

Closing Filed Flight Plan:

- 1) From any page, touch **Home** >
- 2) Touch the desired Trip in the Trips List that is marked as Filed.
- 3) Touch Close. The trip status displays Closed.



Trip Planning - Filed Flight Plan




FLY

Garmin Pilot provides full en-route navigation capabilities on its moving map. The ability to view navigation data such as ETE, ETA, crosstrack error, and distance information. Touch and hold any location on the map and the Radial Menu provides quick and easy access to navigation information, including airports, navaids, and METARs. The Radial Menu also provides a ready means of navigating direct-to, creating user waypoints or graphically editing the route of flight. After takeoff, pilots can continue to view updated weather information via a compatible FIS-B device (sold separately), by connecting to SiriusXM Weather with a satellite weather receiver (sold separately, subscription required), or using Garmin Weather Data Services which requires a data connection through Wi-Fi or cellular network.

MAP PAGE

The Map Page is comprised of a highly configurable Map Pane which can be displayed in either full or split-screen. The Split-screen option allows the Map Pane to be divided between the Map Pane and either Widgets, Panel, Charts, or SafeTaxi displays.

The Split-screen feature is available in either portrait or landscape screen orientation. In portrait orientation, the screen is split horizontally with the Map Pane always appearing in the upper portion of the screen. In landscape orientation, the screen is split vertically with the Map Pane always appearing to the left.

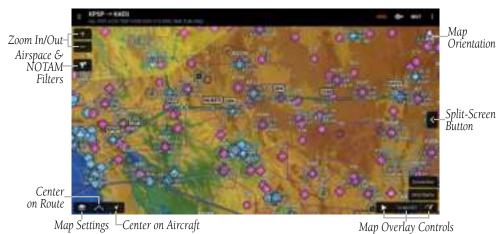

Map Pane



MAP PANE CONTROLS

The Map Pane has a number of buttons that control the Base Map, Map Overlays, and center map and split-screen. The table below shows the Map Pane Controls.

Control	lcon	Description		
Map Settings		Map/Chart Selection/Settings, Map Overlay Selection, Overlay Opacity Settings, and General Map Settings		
Center on Aircraft	7	Centers the Map Pane on the current GPS location.		
	7	Highlighted in blue when selected.		
Center on Route	^	Centers the entire route in Map Pane. Highlighted in		
		blue when selected.		
Zoom In	+	Zooms In on the map		
Zoom Out		Zooms out on the map		
Split-Screen	^ ~	Selects full screen map or partial map with Widgets, Panel, Charts, and SafeTaxi.		
Map Orientation		Toggles map orientation from north up to track up. The Icon is blue when track up is active.		
Filter Settings	T	Displays a list of active and upcoming Airspace & NOTAM filters along with the ability to adjust filter display settings.		

Map Pane Controls



MAP SETTINGS

The Map Settings button shown in the table above and located on the lower left corner of the Map Pane opens the Map Settings Menu. The Map Settings Menu contains seven tabs titled Map / Charts, Overlays, Filters, Radar / IR Color, Opacities, Ownship / Route, and General. Each tab provides access to controls for configuring the various features of the Map Pane display.

MAP / CHARTS SELECTION AND SETTINGS

There are three maps and four charts available by touching the Map Settings button in the lower left corner of the Map Pane and selecting from the Map/Chart Menu. The three available map selections are Roads/Borders, VFR, and IFR. Many of the symbols and other map features including victor airways shown on the VFR and IFR maps may be added directly to a flight plan using the graphical flight plan editing feature.



Map/Chart Menu

The following charts are available for viewing in the map pane: Sectional TAC, IFR Low, and IFR High. These charts are high-resolution color images that resemble the paper version of the National Aeronautical Navigation Products (AeroNav) published charts.

Each of the Maps under the Maps column have an adjacent Map Setup button, which provides access to the Map Setup menu. The Map Setup menu consists of five tabs labeled General, Airports, NAVAIDs, Airspaces, and Cities. Under each tab, there are a number of slider controls enabling the map ranges at which the related map features become visible on the map as well as buttons for toggling the individual features off or selecting the size of the label shown on the map: small, medium, or large



Selecting Map or Chart:

- 1) Touch > Map/Chart.
- 2) Touch the radio button or Map/Chart title to select a Map/Chart.

Map Panning:

- 1) From any page, touch **Home** >
- **2)** Touch and drag within the Map Pane to pan the map to the desired area.
- 3) Touch to center the Map Pane over the route of flight
- **4)** Touch **1** to center the Map Pane over the current location.

Choosing Map Topography:

- 1) From any page, touch **Home** >
- 2) Touch > Map/Chart.
- **3)** Select one of the three available maps under the Maps column.
- 4) Select one of the buttons labeled **Off, Shade,** or **On**.

Choosing Map Color:

- 1) From any page, touch **Home** >
- 2) Touch > Map/Chart.
- **3)** Select one of the three available maps under the Maps column.
- **4)** Touch the **Map Setup** button.
- **5)** Touch one of the buttons labeled **White, Green,** or **Brown**.




Map Setup Menu



Setting Visibility Range and Label Size for Airports

- 1) From the Map Setup, touch the **Airports** Tab.
- 2) Use the slider controls to select the map range at which selected airports appear. At map ranges greater than the selected figure, the airport symbol will not appear on the map.
- **3)** Scroll to bring the Label Size selections into view.
- **4)** Touch the corresponding buttons to the right of the listed items, as desired.
- 5) Touch the **Done** button located in the upper right corner of the Map Setup Menu.

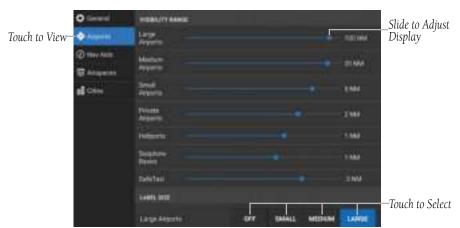

Map Setup - Airports Menu



Setting Visibility Range and Label Size for NAVAIDs

- 1) From the Map Setup, touch the **Nav Aids** Tab.
- 2) Use the slider controls to select the map range at which selected nav aids appear. At map ranges greater than the selected figure, the nav aid symbol will not appear on the map.
- **3)** Scroll to bring the **Label Size** selections into view.
- **4)** Touch the corresponding buttons to the right of the listed items, as desired.
- 5) Touch the **Done** button located in the upper right corner of the Map Setup Menu.



Map Setup - NAVAIDs Menu



Setting Visibility Range for Airspaces

- 1) From the Map Setup, touch the **Airspaces** Tab.
- 2) Use the slider controls to select the map range at which selected airspace boundaries appear. At map ranges greater than the selected figure, the airspace boundaries will not appear on the map.
- **3)** Touch the **Done** button located in the upper right corner of the Map Setup Menu.



Map Setup - Airspaces Menu



Setting Visibility Range and Label Size for Cities

- 1) From the Map Setup, touch the Cities Tab.
- 2) Use the slider controls to select the map range at which selected cities appear. At map ranges greater than the selected figure, the city symbol will not appear on the map.
- 3) Scroll to bring the **Label Size** selections into view.
- **4)** Touch the corresponding buttons to the right of the listed items, as desired.
- **5)** Touch the **Done** button located in the upper right corner of the Map Setup Menu.



Map Setup Cities Menu



Selecting Helicopter Chart Overlay:

NOTE: A chart basemap must be selected to display helicopter overlays.

For information on downloading Helicopter Charts, refer to the **NOTE:** 'Downloads' section.

- 1) After downloading the desired Helicopter Charts, touch > Map/Chart.
- Touch a chart basemap (VFR, IFR Low, or IFR High). 2)
- Touch a Helicopter Overlay (U.S. VFR Helicopter, Gulf VFR Helicopter, or 3) Gulf IFR Helicopter).



VFR Helicopter Chart Overlay

Accessing Advanced Map Settings:

- Touch > Map/Chart > Map Name > ... 1)
- Touch General, Airports, Nav Aids, Airspaces, or Cities. 2)
- 3) Use the sliders and selection buttons to set Visibility Ranges and Label Sizes for map features.
- To give the new settings a name, Touch **General > Map Name**, and use the 4) keyboard to enter a name.
- Touch **Done** to save and exit, or touch **Restore Defaults** to restore the 5) default Map Theme setting.

Touch to Select



Categories	Map Item	Options						
General	Map Type IFR, or VFR							
	Map Name	Large Airports	User Defined Name Med Airports Small Airports Pvt Airports					
Airports	Visibility Range	Off - 200 nm	Of	f - 50 nm	Off - 20 nm		Off - 20 nm	
		Heliports Off - 20 nm		olane Base f - 50 nm	SafeTaxi Off - 2 nm			
	Label Size		Off, Small, Medium, Large					
No. Aida	Visibility Range -	VOR		NDB		Intersection		
		Off - 100 nm	0 nm Off		50 nm		Off - 10 nm	
		VRP	Low Ai		irways		High Airways	
Nav Aids		Off - 10 nm	Off - 10 nm		Off - 100 nm		Off - 100 nm	
	Label Size	VOR, NDB, Intersection, VRP Off, Small, Medium, Large						
	Filter All	Hide All Airs	paces A	bove	9	Smart A	Airspace	
	Airspaces	Numerical Entr				On/Off		
		Class B		Class C		Class D		
	Visibility Range	Off - 200 nm		Off - 200 nm		Off - 100 nm		
		Class E/TRSA		TMA		Control Area CTA		
		Off - 100 nm		Off - 200 nm		Off - 100 nm		
		Control Zone CTR		ATZ/TIZ/MATZ		Euro Airway		
		Off - 100 nm	Off - 1		00 nm		Off - 100 nm	
Airchaeac	SUA Visibility Range	Restricted	Ale	rt/Warning	Parachute A	Area	MOA	
Airspaces		Off - 200 nm	Off	- 200 nm	Off - 100 nm		Off - 200 nm	
		ADIZ		Danger	Other			
		Off - 100 nm	Off - 100 nm		Off - 100	nm		
	Label Style	Airspace Size						
		Off, Small, Medium, Large						
		Airspace Style						
		Standard, Enhanced						
		Airspace Color						
		Standard, Dark						
	Visibility Range	Large City		dium City	Small Ci	•	Small Town	
Cities		Off - 500 nm		- 200 nm	Off - 100		Off - 50 nm	
	Label Size	Large City, Medium City, Small City, Small Town						
		Off, Small, Medium, Large						



OVERLAYS

Map Overlays provide graphical weather products such as graphical TFRs, graphical NOTAMs, graphical Obstacles, Terrain, Live Track Log, Lightning, and Clouds. Multiple Overlays can be selected for display. Some overlays are mutually exclusive such as Radar and FIS-B. Overlays in the right column, (e.g. PIREPs, Winds Aloft, Fuel Prices, and Weather) are also mutually exclusive.



Map - Overlays Menu

RADAR / IR COLOR

The radar and infrared color palettes and the color of the intensity returns can be configured.

Viewing radar and infrared satellite color palettes:

- 1) From any page, touch **Home** >
- 2) Touch > Radar/IR Color.
- 3) Touch no n the top left of the 'Radar Colors' or 'IR Satellite Colors' box to view the color palettes options.
- **4)** Touch **Garmin**, **NOAA**, **Alt**, or **Classic** for the desired 'Radar Colors'.
- **Or:** Touch **Classic**, **Alt 1**, **Alt 2**, or **Alt 3** for the desired 'IR Satellite Colors'.



Map - Radar / IR Color Menu



OPACITIES

The Opacities menu provides sliders to set the opacity for many items, some of which include: Radar, Clouds, Lightning, AIR/SIGMETs, Route, PIREPs, Winds Aloft, Fuel Prices, Weather, TFRs, and Traffic.



Map - Opacities Menu

OWNSHIP/ROUTE

The Ownship / Route tab provides access to controls for activating and configuring the Track Vector and Range Rings as well as for changing the Ownship Symbol. The Aircraft Symbol is displayed on maps, Geo-referenced FliteCharts, and SafeTaxi diagrams when the application senses movement, otherwise the blue system location symbol is used.



Map - Ownship / Route Menu



Changing Ownship Symbol:

- 2) Touch the Ownship / Route Tab.
- 3) Touch Select Ownship Icon.
- 4) Touch the desired Ownship aircraft symbol from the list.



Ownship Aircraft Symbol Example



System Location Symbol





List of Ownship Aircraft Symbols

RANGE RINGS

The Range Rings are rings drawn around and centered on the aircraft's present position and can be configured Off, or as 2/3 Rings. When configured for 2 Rings the range can be set to **AUTO**, **5/10**, **10/20**, or **15/30**. When configured for 3 Rings the range can be set to **AUTO**, **5/10/20**, **10/20/40**, or **15/30/60**. When **AUTO** is selected the Range Rings will dynamically change from as little as 200FT to as much as 1200NM based on the current map range.



EXTENDED CENTERLINES

Extended Centerlines provide a graphical extension of the centerline for each runway for all airports that are part of the Flight Plan. Extended Centerlines can be very helpful when approaching an unfamiliar airport. The Extended Centerlines Visibility slider sets the Map Scale (OFF(default)-5NM) at which the extended centerlines will become visible on the map. Extended Centerlines can be configured as magenta feathers (**Feathered**), or as dashed light and dark green lines (**Dashed Line**)



Extended Runway Centerlines - Feathered



TRACK VECTOR

The Track Vector is a solid blue line segment that extends from the Ownship symbol to a predicted location. The track vector can be configured for a look ahead time (1, 5, 10, or 20 minutes) or a look ahead distance (1, 5, 10, or 20 nautical miles). When a look ahead time is selected the length of the vector varies based on ground speed. The track vector is useful in minimizing track angle error and for avoiding traffic, obstacles and terrain.

Enabling/Disabling and Configuring the Track Vector:

- Touch Home >
- 2) Touch **Solution** > Ownship / Route.
- **3)** Select the Track Vector Mode **Off**, **Time** (min), or **Distance** (NM).
- 4) Select the Track Vector Length 1, 5, 10 or 20.

GLIDE RANGE RING

This feature is an aid to estimate accessible airports and terrain if the aircraft were forced into glide circumstances. The displayed ring updates in real time, derived from the selected aircraft's altitude, speed, and performance details. Since Garmin Pilot supports multiple aircraft, the Glide Range Ring refers to the current active flight plan to determine which aircraft performance details to calculate the ring shape.

The Glide Range Ring requires glide performance details to be specified in Garmin Pilot's settings. This is accessed through **Home** > Aircraft. Touch on an aircraft (not aircraft type) to edit its details, and scroll down to the Glide section to specify the **Glide Ratio** and **Best Glide Speed**. Refer to the aircraft documentation for these values.



The **Glide Range Buffer** setting can be used to shrink the Glide Range Ring in situations where glide performance is expected to be less than ideal, perhaps due to shifting winds. Increasing this setting will decrease the size of the Glide Range Ring. Enabling **Shape Glide Ring for Terrain** will alter the shape of the Glide Range Ring to show intersection with terrain. Enabling **Shift Glide Ring for Wind** will factor in local wind conditions when calculating the Glide Range Ring shape. Note the Glide Range Ring uses the most recent weather data, which may be outdated if Garmin Pilot does not have access to real time weather data over Wi-Fi or with outboard hardware such as a GDL 39.

Enabling/Disabling the Glide Range Ring:

- 1) Touch South > Ownship/Route.
- 2) Touch the **Display Glide Range Ring** switch to **On.**



Touch to Enable & Adjust Glide Range Rings

Map - Ownship/Route - Glide Range Rings

GENERAL MAP SETTINGS

The General tab provides access to controls for activating/deactivating Night Mode, Auto Zoom, GPS Pulse Animation, map centering on current track, and Map Performance Boost. Additionally, there are controls for displaying and configuring the Nav Bar, displaying Route Icons, User Waypoints, Route Labels, Persistent Map Scale, and Stadium TFRs.



NIGHT MODE

Enabling Night Mode presents the map with a high-contrast background for easy viewing in low light. SafeTaxi charts support Night Mode, however, other charts do not. Night Mode can also be set to Auto to automatically change the map based on time of day.

Enabling/Disabling Night Mode for Map and SafeTaxi:

- 2) Touch Seneral.
- 3) Select the desired Night Mode: Off, On, or Auto.



Map - Night Mode

AUTO ZOOM

Auto Zoom begins at the departure airport by showing SafeTaxi (subscription and download required) or the smallest range that clearly shows the departure point, and gradually zooms out to the smallest range clearly showing the active waypoint. When arriving at the destination Auto Zoom gradually zooms in to show SafeTaxi (subscription and download required) or the smallest range that clearly shows the destination. Auto Zoom only works when the map is centered on aircraft and can be enabled/disabled in the General Map Settings Menu.



NAV BAR

The Nav Bar provides user selectable navigation and weather data displayed at the top of the map pane. Touch any field in the Nav Bar to enable/disable any of the available navigation parameters. Touch and slide the Nav Bar left or right to bring the scroll progress bar and selected parameters into view.

NAV BAR FIELD OPTIONS:

- Air/Ground State
- Altitude
- Baro Vertical Rate
- Bearing
- Biometrics
- Corrected Pressure Alt
- Course
- Cross Track Error
- Distance (Dest)
- Distance (Next)
- ETA (Dest)
- ETA (Next)
- ETE (Dest)

- ETE (Next)
- GPS Altitude
- GPS Altitude AGI
- Ground Speed
- Height Above Terrain
- Horizontal Accuracy
- Indicated Airspeed
- Latitude
- Longitude
- Magnetic Heading
- Next Waypoint
- OAT (static)
- Pitch

- Radio Height
- Roll
- Time (Zulu)
- Track
- True Airspeed
- True Heading
- Vert Accuracy
- Vertical Speed
- WX-Ceiling
- WX-Visibility
- WX-Wind
- Wind Direction
- Wind Speed

FLIGHT PLAN REVIEW FROM MAP SCREEN

If the Map is displaying an active flight plan, touch the main header at the top of the screen to review the active flight plan's performance details, add and remove waypoints, and change the flight plan routing. The main header turns gray to show the Map is now reviewing the flight plan. The review primarily shows the active flight plan's airports, waypoints, departures, and arrivals. The review also shows performance statistics for each waypoint, including bearing, distance, ETE and ETA, and fuel statistics. Additionally, the flight plan review shows a Trip Summary with performance information specific to the current aircraft.



While the aircraft is stationary, the main header shows Flight Plan (Planned), and the flight plan details are calculated based on the current aircraft's performance. While the aircraft is in flight, the main header shows Flight Plan (Actual), and uses the current aircraft's actual ground speed in these calculations. The active flight plan can be edited in both Planned and Actual modes.

Reviewing Active Flight Plan From Map Page:

- 1) Touch Home > **{{}**
- 2) While the Map is displaying a flight plan, touch the Main Header bar.
- 3) Touch to exit flight plan review and return to normal Map screen.

Editing Active Flight Plan From Map Page:

- 2) While the Map is displaying a flight plan, touch the Main Header bar.
- **3)** Touch **Routing** to select a suggested ATC route.
 - **Or**: Touch **to** save or recall the flight plan from Stored Flight Plans.
 - **Or**: Touch in the Manual Entry section to use the on-screen keyboard to type in flight plan waypoints.
- **4)** Touch a flight plan waypoint to insert another waypoint before or after it.
- 5) Touch Add Waypoint to add another waypoint at the end of the flight plan.



Flight Plan Review



MAP ZOOM

When a more detailed Chart is available, Garmin Pilot automatically switches to the more detailed chart as the zoom increases. For example, if VFR WAC is the current Base Chart, when the zooming in, the base chart detail will automatically change to VFR Sectional scale and detail. Continuing to zoom in over an area that has a TAC chart, Garmin Pilot will continue to zoom in to TAC scale, or the highest level of detail available for that area. When zooming out, the map scale will return to the selected level. For example, when zooming out on a VFR Sectional Base Map, Garmin Pilot will not change to a VFR WAC scale.

Chart Zooming:

- 1) From any page, touch **Home** > **\$\frac{1}{3}^{2}\$**.
- 2) Pinch fingers together (zoom out), or pull fingers apart or double-touch (zoom in).

Or: Use the Zoom In/Out Buttons or



Map Pane Showing TAC Detail & Scale

Sectional Zooming




RADIAL MENU

Touch and hold any area on the map to access the Radial Menu. The Radial Menu displays context-sensitive buttons for information found within the inner radius of the menu. The context sensitive buttons provide details for airports, airspace, navaids, and weather products. No matter where the Radial Menu appears, it will always provide the option to navigate direct to the location or create a user waypoint. To reposition the Radial Menu, simply touch-drag it to a new location. Tap outside of the Radial Menu to close. The appropriate Navigation Data must be downloaded in order to access all the features provided via the Radial Menu. Information displayed in the Radial Menu is determined by what is set in the Map/Chart Settings. For example if airspace is turned off in the Map Settings, airspace information will not be presented in Radial Menu searches. Traffic in the Radial Menu is displayed in Garmin Pilot when paired with an approved, configured device.

Accessing Radial Menu:

- 1) From any page, touch Home >
- **2)** Touch on the desired area in the Map Pane until the Radial Menu appears.
- 3) Touch anywhere outside of the Radial Menu to exit.

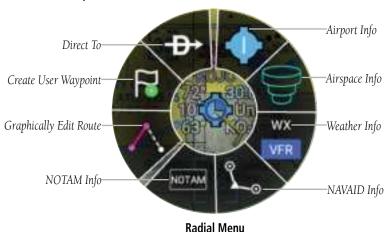

Repositioning Radial Menu:

- 1) From any page, touch Home >
- **2)** Touch and hold on the Map Pane until the Radial Menu appears.
- **3)** Touch and drag the Radial Menu to reposition over a new area.



Radial Menu Symbol	Description	Radial Menu Symbol	Description
	Navigate Direct To	\rightarrow	Public Soft Surface, Serviced Airport
P	Create User Waypoint	®	Private Soft Surface, Serviced Airport
	Graphically Edit Route	0	Heliport
0	Airways	0	Solid Surface Airport, No Services
WX	Weather Observation Condition	•	VOR/DME
*	Obstacle Information	☞	VORTAC
	Airspace	•	VOR
	Towered, Serviced Airport		NDB/DME
®	Towered, Private Airport		NDB
•	Marker/NDB	5	Logbook Tracks
1	Traffic	TFR	Temporary Flight Restriction (TFR)
Δ	PIREP	AIR- MET	AIRMET
SIG- MET	SIGMET	WINDS	Winds Aloft
(1)	Seaplane Base		Fuel Price
NOTAM	NOTAM		

Radial Menu Symbols



Viewing NAVAID, Obstacle, or Weather Information From Radial Menu:


- 1) From any page, touch **Home** >
- 2) Touch the desired area in the Map Pane until the Radial Menu appears.
- **3)** Touch the desired menu icon.
- **4)** Touch outside of the dialog box to close.
- 5) Touch **Done** or outside of the Radial Menu to exit.



Radial Menu - Obstacle & TFR


Viewing Airspace Information From Radial Menu:

- 1) From any page, touch Home > \$\int_{\text{s}}\$.
- 2) Touch the desired area in the Map Pane until the Radial Menu appears.
- 3) Touch to view the 'Airspaces' dialogue box.
- **4)** Touch the desired Airspace from the list to highlight, view.
- 5) Touch Back on the device or anywhere outside of the dialogue box to close.

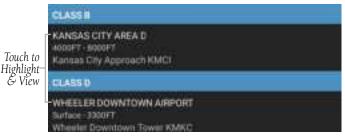

Radial Menu - Airspaces Dialogue Box



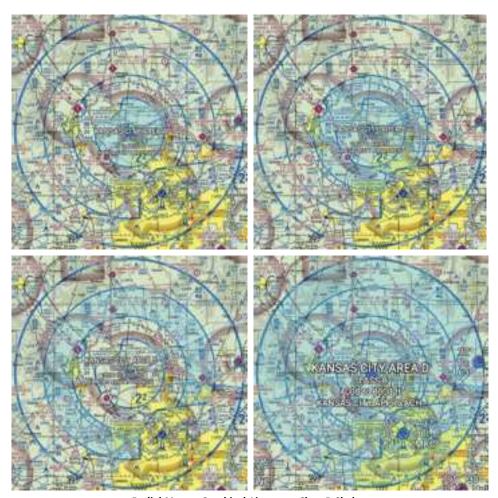

Radial Menu - Graphical Airspace - Class B Shelves

Airspace and Obstacle NOTAMs are now available as a graphical overlay on the Map and a symbol in the Radial Menu. Airspace NOTAMs may be depicted as a circle or shape, and are labled with the NOTAM title along with associated altitude. In addition, airspace NOTAMs that will become active within the next 24 hours are displayed in amber (yellow), with a brighter contrast attributed to restricted items.




NOTE: In an effort to declutter the Map, not all Graphical Airspace NOTAMs will be visible.



Adjusting NOTAM Filters:

- 1) From any page, touch Home > 🚮 > 💷 > 🦷
- 2) Touch the 'Filter NOTAMs Base on Active FPL' switch to enable/disable.
- **3)** Touch the '+' or '-' button to adjust the time frame for 'Upcoming NOTAM Visibility'.
- **4)** Touch the 'Hide Obstacle NOTAMs' and 'Hide UAS NOTAMs' switch to enable/disable.



NOTE: 'Upcoming NOTAM Visibility' is not applied when 'Filter NOTAMs Based on Active FPL' is enabled.




Touch to Enable -& Adjust NOTAM Filters

Map - Overlays - NOTAM Filters


Viewing Airspace NOTAMs From Radial Menu:

- 1) From any page, touch **Home** > **⑤**.
- 2) Touch and hold near the desired Airspace in the Map Pane until the Radial Menu appears > NOTAM to view the 'NOTAMs' dialogue box.
- **3)** Touch the desired NOTAM from the list to highlight and view details.
- **4)** Touch Back on the device or anywhere outside of the dialogue box to close.



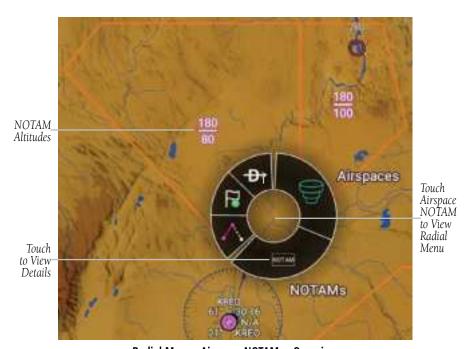

Radial Menu - Airspace NOTAMs - Overview

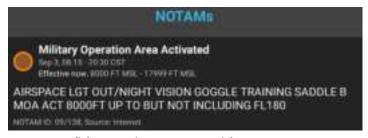

Radial Menu - Airspace NOTAMs Dialogue Box - MOA



NOTE: The User must always read the complete NOTAM and text, not just the title, effective / end time, date, and altitude(s). While a NOTAM may be effective, the User must verify if the airspace / area is active or inactive.



NOTE: "Hidden' NOTAMs can be accessed via Split-Screen by touching **Home** > Split-Screen > Widgets > NOTAMs.



Active Airspace NOTAMs are color-coded based upon the following classification:

Restricted / Danger - Red



NOTE: Red Radial Graphical Airspace NOTAMs are always 'hidden' when their radius is greater than 60nm. Non-Radial shapes will always be displayed.

- Prohibited Area
- Restricted Area
- Danger Area
- Temporary Restricted Area
- Avoid Overflying Area
- Reserved Area



Graphical Airspace NOTAMs - Reserved Area



Upcoming - Yellow



NOTE: 'Upcoming NOTAM Visibility' is not applied when 'Filter NOTAMs Based on Active FPL' is enabled.



Graphical Airspace NOTAMs - Upcoming



Touch Airspace NOTAM to View Radial Menu

NOTAM

Effective

Period &

Altitudes

Alerts / Warnings - Orange



NOTE: Orange Graphical Airspace NOTAMs are 'hidden' when their radius is greater than 40nm. Non-Radial shapes will always be displayed.

Warning Area

Touch to

& Source

View Details

NOTAM I.D.

- Military Operations Area (MOA)
- Scheduled Exercises (Military)




Graphical Airspace NOTAMs - Warning



Flight Data Center (FDC) - Gray



NOTE: FDC Graphical Airspace NOTAMs, in a 'Radial' shape, are 'hidden' when their radius is greater than 100nm. 'Complex' FDC shapes are 'hidden' when their radius is greater than 150nm. Non-Radial shapes will always be displayed.

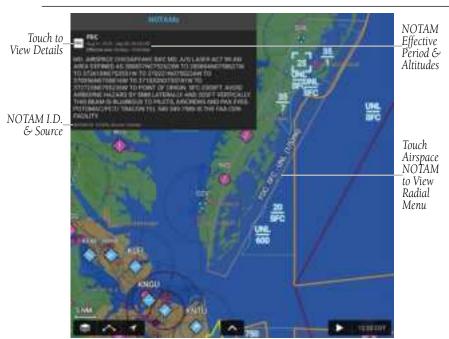

Graphical Airspace NOTAMs - Flight Data Center (FDC)



Other - Purple



NOTE: FDC Graphical Airspace NOTAMs, in a 'Radial' shape, are 'hidden' when their radius is greater than 100nm. 'Complex' FDC shapes are 'hidden' when their radius is greater than 150nm. Non-Radial shapes will always be displayed



NOTE: Purple Graphical Airspace NOTAMs are 'hidden' when their radius is greater than 40nm. Non-Radial shapes will always be displayed.



Graphical Airspace NOTAMs - Other - Parachute

- Parachute Jumping Area
- Alert Area
- Unmanned Aircraft Systems (UAS) Operation Area
- Tethered Balloons / Kits
- Gathering of Aircraft
- Glider Flying Area
- Aerobatics Area
- Banner Towing



Graphical Obstacle NOTAMs are displayed on the Map in pink to differentiate them from permanent obstacles. Graphical Obstacle NOTAMs are displayed whenever the NOTAM or obstacle layer are enabled.

Viewing Graphical Obstacle NOTAMs From Radial Menu:

- 1) From any page, touch **Home** > **\$\frac{1}{3}^{2}\$**.
- 2) Touch and hold on the desired obstacle, e.g. Tower in the Map Pane until the Radial Menu appears > NOTAM to view the 'NOTAMs' dialogue box.
- **3)** Touch the desired NOTAM from the list to highlight and view details.
- **4)** Touch Back on the device or anywhere outside of the dialogue box to close.



Graphical Obstacle NOTAMs - Out of Service

Viewing Airport Information From Radial Menu:

- 1) From any page, touch Home >
- 2) Touch and hold near the desired Airport in the Map Pane until the Radial Menu appears > ...
- **3)** The Airport Info window displays multiple tabs for the User to select. As desired, touch **Info**, **Freq**, **Rwy**, **Proc**, or **Fuel** to view more information.
- 4) Touch to view airport on Google Maps. Touch outside the dialogue box to exit or touch the 'Back' button to return to the Airport Info window.

NOTE: Google Map functionality requires an active Wi-Fi or cellular connection.

- 5) To exit the Airport Info window and return to the Map page, touch outside the dialogue box or touch the 'Back' button.
- Touch to leave the Map page and view the Airport Information page. Touch the 'Back' button to return to the Map page.





Radial Menu - Airport Info Tabs

Touch to Open Airport Info Page

Navigating Direct-to Using Radial Menu:

- 1) From any page, touch **Home** > **\$\frac{1}{2}\$**.
- **2)** Touch and hold on the desired area in the Map Pane until the Radial Menu appears.
- **3)** Touch **Direct-to**.
- **4)** Within the Direct-to... dialog window, select **Map-Touch** to create a temporary waypoint at the selected point, or choose one of the nearby Navigation Database features from the list.
- **Or:** Choose a waypoint from one of the other tabs (e.g., Waypoints, Flight Plan, or Nearest).
- **5)** Touch **Activate** to begin navigation.

Graphically Edit Route:

- 1) From any page, touch Home >
- 2) In the Map Pane, touch and hold any flight plan waypoint or flight plan leg until the Radial Menu appears.
- 3) Touch to graphically edit the flight plan. The Radial Menu disappears and the **Graphical Flight Plan Edit Mode** blue banner appears just below the Control Bar.
- 4) Long press a flight plan leg and drag, the flight plan leg to the desired location. Select a waypoint from the list of nearby navigation database waypoints, or create a User Waypoint.
- **Or:** Touch to start a new route.
- **5)** Repeat step four for each flight plan leg to edit.
- **6)** Touch **t**o undo the most recent action.
- **7)** Touch Save to save or **Cancel** to cancel and exit Graphical Flight Plan Editing Mode.



Graphically Edit Standard Instrument Procedure (SID):

- 1) From any page, touch
- 2) In the Map Pane, touch and hold any flight plan waypoint or flight plan leg until the Radial Menu appears.



Radial Menu - Graphiclally Edit Route - SID

3) Touch to graphically edit the flight plan. The Radial Menu disappears and the **Graphical Flight Plan Edit Mode** blue banner appears just below the Control Bar.



Graphiclally Edit Flight Plan - Map



- **4)** Long press on a SID flight plan leg or waypoint. The **Change Departure** dialog box appears.
- 5) Touch Remove Departure to delete or touch Change Departure to select an alternate SID from the list and then select the desired transition from the submenu. If the selected flight plan leg is the first leg of a SID, the dialog box has the option to delete the departure point. If the departure point is deleted, the departure point and all waypoints associated with the SID are removed from the flight plan. The first waypoint after the SID becomes the departure point.



Graphiclally Edit Route - Change Standard Instrument Departure (SID)

6) Select a Departure Runway.



Graphiclally Edit Route - Change SID - Select Runway



7) Select a SID Transition.



Graphicially Edit Route - Change SID - Select Transition

- **8)** Touch **1** to undo the most recent action.
- **9)** Touch **Save** to accept changes or **Cancel** to exit without saving.

Graphically Edit Standard Arrival Route (STAR):

- 1) From any page, touch
- 2) In the Map Pane, touch and hold any flight plan waypoint or flight plan leg until the Radial Menu appears.
- 3) Touch to graphically edit the flight plan. The Radial Menu disappears and the **Graphical Flight Plan Edit Mode** blue banner appears just below the Control Bar.
- **4)** Long press on a STAR flight plan leg or waypoint. The **Change STAR** dialog box appears.
- 5) Touch **Delete STAR** to delete or select an alternate STAR from the list and then select the desired transition from the submenu. If the selected flight plan leg is the first leg of a STAR, the dialog box has the option to delete the arrival point. If the arrival point is deleted, the arrival point and all waypoints associated with the STAR are removed from the flight plan.





Graphically Edit Route - Change Standard Arrival Route (STAR)

- **6)** Touch **to** undo the most recent action.
- **7)** Touch **Save** to accept changes or **Cancel** to exit without saving.




Graphicially Edit Route - SID & STAR Included



DISTANCE MEASURING TOOL

The Distance Measuring Tool provides a quick and easy way to measure the distance between two points on the map. Simply drop two fingers onto the map display at the same time and hold both fingers on the display, a black line with arrow points on either end will appear. While holding both fingers on the map place one arrow point on a point and the other arrow point on another point and then remove both fingers from the map. The line and arrows show distance and to/from bearing information. Touch and drag the arrows to adjust the start and end position of the tool. Touch anywhere else on the display to remove the Distance Tool.

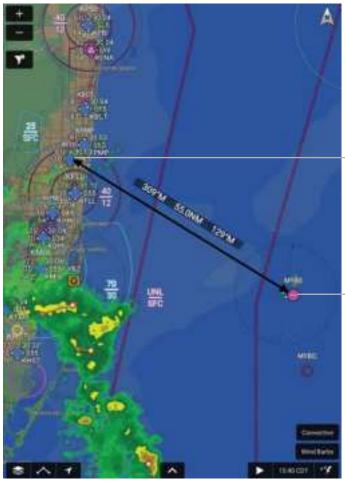

Touch Two Points Simultaneously, Then Adjust

Distance Measuring Tool



SPLIT-SCREEN

The split-screen option allows the Map Page to be divided between the Map Pane and one of ten options including Widgets, Panel, Charts, SafeTaxi, Traffic, VIRB, Terrain, Checklists, SynVis, and Flight Profile. The split-screen feature is available in either portrait or landscape screen orientation. When in split-screen the Map Pane and the split pane function independently essentially providing two independent viewing areas. The Map Pane is always visible and will either be displayed on the top or left side of the display depending on the device orientation.

SPLIT-SCREEN (CHART, TRAFFIC, SAFETAXI)

Charts, SafeTaxi, and Traffic when viewed in split-screen have the same function, navigation, and capabilities as the full screen versions of these products.



Split-Screen - Charts & Checklist



SPLIT-SCREEN (PANEL)

The Panel is only available in split-screen and may be configured to show navigation parameters and virtual instrument gauges in one of four selectable views. Panel configuration selection button/indicators are located at the bottom right of the panel.

Viewing the Panel:

- l) From any page, touch **Home** > **௵**
- 2) Touch Menu > Split-Screen> Panel.

Configuring Navigation Information in the Panel:

- 1) From any page, touch Home > 🌇.
- 2) Touch Menu > Split-Screen > Panel.
- 3) Select one of the three panel options with Navigation Data Fields.
- **4)** Touch any one of the fields and select one of the options from the menu.

Navigation Data	Description		
Air/Ground State	Identifies when the aircraft is either on the ground, or airborne		
Baro Vertical Rate	Uses barometric altitude information from the aircraft's altimeter to compute vertical guidance for the pilot. The specified vertical path is typically computed between two waypoints or an angle from a single way point.		
Bearing	The compass direction from the present position to a destination waypoint.		
Biometrics	The display of body measurements and calculations related to human characteristics.		
Corrected Pressure Alt	The altitude of the aircraft above the standard datum plane.		
Course	The magnetic direction from the last waypoint to the active waypoint.		
Cross Track Error	Track Error The distance and direction, left or right, the aircraft is from the desired course in nautical miles.		
Density Altitude	Pressure altitude corrected for non-standard temperature.		
Distance (Dest)	The distance to the destination waypoint in the Active Flight Plan		
Distance (Next)	The distance to the next waypoint in the Active Flight Plan.		



Description		
The estimated time at which the aircraft should reach the		
destination waypoint, based upon current speed and track.		
The estimated time at which the aircraft should reach the next		
waypoint, based upon current speed and track.		
The estimated time it takes to reach the destination waypoint		
from the present position, based upon current ground speed.		
The estimated time it takes to reach the next waypoint form the		
present position, based upon current ground speed.		
The current GPS altitude or geometric height above Mean Sea		
Level (MSL) in feet.		
The current GPS altitude or geometric height Above Ground Level		
Level (AGL) in feet.		
The velocity the aircraft is traveling relative to the ground.		
The vertical distance of the aircraft above the terrain.		
Displays the accuracy of horizontal guidance.		
The direct instrument reading obtained from the ASI, uncorrected		
for variations in atmospheric density, installation error, or		
instrument error.		
Current latitude.		
Current longitude.		
Direction relative to magnetic North.		
Direction relative to magnetic North.		
Next waypoint on the route of flight		
The ambient temperature of the air around the aircraft.		
Current pitch. (GDL 39 3D only)		
The height of the aircraft above the terrain immediately below		
the aircraft.		
Current roll. (GDL 39 3D only)		
Current time		
The direction of aircraft movement relative to the ground.		
The speed of the aircraft relative to the air mass through which it		
is flying.		



Navigation Data	Description		
True Heading	Direction relative to true North, or the geographic North pole.		
Vert Accuracy	Displays the accuracty of vertical guidance.		
Vertical Speed	The rate of climb or descent (GPS-derived).		
Wx-Altimeter	The altimeter setting at the nearest METAR reporting station.		
Wx-Ceiling	The ceiling at the nearest METAR reporting station		
Wx-Visibility	The visibility at the nearest METAR reporting station		
Wx-Wind The wind speed and direction at the nearest weather reportin station.			
Wind Direction	rection The direction the wind is coming from.		
Wind Speed	The vector difference between the airspeed and the ground speed.		


Navigation Data Field Options



Navdata (Portrait)









Classic Panel (Portrait)

Panel Select Button/ Indicators





HSI/Attitude Indicator - Navdata (Landscape)



HSI/Attitude Indicator - Navdata (Portrait)





HSI/Attitude Indicator - Condensed Navdata (Landscape)



HSI/Attitude Indicator - Condensed Navdata (Portrait)



PANEL (OPTIONAL)



NOTE: The Garmin Pilot attitude functionality is only to be used as an aid and should not be used as a primary attitude indicator.

When connected to a compatible device, Garmin Pilot will display a back-up Attitude Indicator on the Panel. 'Pitch' and 'Roll' become available options for the Nav Bar on the Map Pane, and Navigation Data on the Panel.





Swapping the Attitude Indicator and HSI position:

- 1) From any page, touch **Home** > **⑤**.
- 2) Touch Menu > Split-Screen > Panel.
- 3) Touch to swap the position of the Attitude Indicator and the HSI.

BEFORE SWAP



Touch to Swap Attitude_ Indicator & HSI

AFTER SWAP



Attitude Indicator/HSI Swap



The leveling adjustments for pitch and tilt angles are performed automatically when the unit is powered on. However, if the unit moves, it may be necessary to command the GDL 39 3D to perform the leveling process.

Leveling the GDL 39 3D:

From the Connext page or with the Panel displayed, touch **Menu** > **Reset Pitch/Roll GDL 39 3D.**

SPLIT-SCREEN (SYNTHETIC VISION)

Synthetic Vision can be displayed in split-screen mode for enhanced situational awareness. Split-screen mode can be viewed from either or on the Home Menu

Viewing Split-Screen Synthetic Vision From Map Page:

- 1) From any page, touch **Home** > **1**.
- 2) Touch Menu > Split-Screen.

Or:

- 1) Touch to view the split-screen selector.
- **2)** Touch the **SynVis** tab.

Viewing Split-Screen Features From SynVis Page:

- 1) From any page, touch **Home** > ______.
- 2) Touch Menu > Split-Screen.

Or:

- 1) Touch to view the split-screen selector.
- **2)** Select the desired item to be displayed in the split-screen view.





Split-Screen Synthetic Vision

SPLIT-SCREEN (FLIGHT PROFILE)



NOTE: When not flying, Profile View will always show FPL mode. When flying without an active flight plan, Profile View will always show Track mode.

The aircraft's flight profile can be displayed in split-screen mode for enhanced situational awareness, viewing your flight plan, winds aloft, airspace, TFRs, cloud layers, ceilings, PIREPs, Traffic, highest point along the route of flight, and much more. Split-screen mode can be viewed from either on the Home Menu.



Viewing Split-Screen Flight Profile From Map Page:

- 1) From any page, touch **Home** > **1**.
- 2) Touch Menu > Split-Screen > Flight Profile.

Or:

Touch > Flight Profile.

Viewing Split-Screen Flight Profile From SynVis Page:

- 1) From any page, touch **Home** > _____.
- 2) Touch Menu > Split-Screen > Flight Profile.

Or:

Touch > Flight Profile.



Split-Screen Flight Profile



Adjusting Flight Profile General Settings.

- 1) Touch (to display the Settings window.
- 2) Touch the General tab.
- 3) Scroll to view options and settings for View Mode, Track Mode Vector Length, and Corridor Width.
- **4)** Touch or Slide to adjust settings as desired.



Split-Screen Flight Profile - General Settings

Adjusting Flight Profile Winds Aloft Settings.

- 1) Touch **(** to display the Settings window.
- 2) Touch the Winds Aloft tab.
- 3) Scroll to view options for **Display Style & Source**.
- **4)** Touch to adjust settings as desired.



Split-Screen Flight Profile - Winds Aloft Settings



Adjusting Flight Profile Icing Settings.

- 1) Touch to display the Settings window.
- 2) Touch the **Icing** tab.
- 3) Slide to change **Opacity**.
- **4)** Scroll to view options for **Display Style.**
- **5)** Touch **1** to adjust settings as desired.



Split-Screen Flight Profile - Icing Settings

Adjusting Flight Profile Boundaries Settings.

- 1) Touch to display the Settings window.
- **2)** Touch the **Boundaries** tab.
- **3)** Touch **1** to adjust settings as desired.




Split-Screen Flight Profile - Boundaries Settings



Adjusting Flight Profile Markers Settings.


- 1) Touch to display the Settings window.
- 2) Touch the Markers tab.
- 3) Scroll to view options for Clouds, PIREPs, and Other.
- **4)** Touch or Slide to adjust settings as desired.

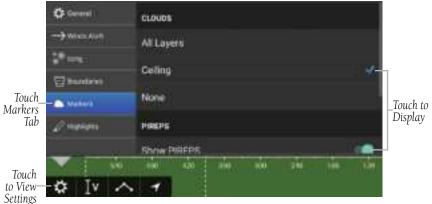

Split-Screen Flight Profile - Markers Settings

Adjusting Flight Profile Highlights Settings.

- 1) Touch to display the Settings window.
- **2)** Touch the **Highlights** tab.
- **3)** Touch or Slide to adjust settings as desired.

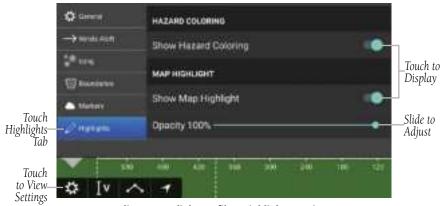

Split-Screen Flight Profile - Highlights Settings



WEATHER DATA

Weather data is presented in Widgets (as text), and map overlays. To receive up-to-date weather information, the Android device must have access to a data connection (Wi-Fi or cellular), or a compatible external device. However, once downloaded, some weather products will remain available for up to 90 minutes after connection to the Internet is lost.

WEATHER SOURCES

Weather data is available from three sources, Garmin Weather Data Services (Internet), FIS-B weather when connected to a compatible FIS-B device via a Connext link, or SiriusXM weather connected to a compatible SiriusXM device via a Connext link. Garmin Weather Data Services (Internet) requires a data connection through Wi-Fi or cellular network. SiriusXM and FIS-B weather, require additional hardware. SiriusXM weather also requires a subscription to SiriusXM Weather.

DATA LINK WEATHER (FIS-B)



WARNING: Do not use the indicated data link weather product age to determine the age of the weather information shown by the data link weather product. Due to time delays inherent in gathering and processing weather data for data link transmission, the weather information shown by the data link weather product may be significantly older than the indicated weather product age.



WARNING: Do not use data link weather information for maneuvering in, near, or around areas of hazardous weather. Information contained with in data link weather products may not accurately depict current weather conditions.

FIS-B is a subscription-free weather service that is broadcast by Ground Based Transceivers (GBTs) over the 978 MHz UAT frequency band as part of the FAA's Next Generation Air Transportation System (NextGen). To receive FIS-B weather information, the compatible FIS-B device must be within range and line-of-sight of an operating GBT. Reception may be affected by factors including altitude or terrain. FIS-B weather products include METARs, TAFs, NEXRAD (Regional and CONUS), AIRMETs, SIGMETs, PIREPs, Winds and Temperatures Aloft, and NOTAMs.



Viewing FIS-B Weather product Status:

-) From any page, touch **Home** > 🚺
- 2) Touch the associated FIS-B device tab.

Viewing Ground Station Status:

- **1)** From any page, touch **Home** > **(((**
- 2) Touch the associated FIS-B device tab.

SIRIUSXM® WEATHER

SiriusXM weather information is shared with Garmin Pilot for installations with a Flight Stream 510, Flight Stream 210, Flight Stream 110, GDL 69/GDL 69A GDL 52/52R, and GDL 51/51R SiriusXM datalink.

WEATHER WIDGETS

Weather Widgets are viewable in the lower portion of the Map Page in Split-Screen. Controls located at the upper left and right corners of each Widget open a menu to select the Widget Type and to choose an airport to which the Widget is applicable.

The NavTrack located at the bottom of the display is used to dynamically change the Widget location to view information related to points on or near the active route. Dragging the slider at the bottom of the widgets pane moves a light blue diamond along the route of flight. As the symbol approaches airports along the active route Colored push-pins correspond to matching colored dots to the left of the airport identifier in the upper right corner of the Widget to indicate the location from which the information contained in the Widget originates.

There are five weather, four navigation, and two pilot utility information products available for selection from the Widget Type flick-list. The weather products available to be displayed as widgets are METAR, TAF, PIREPs, Winds Aloft, and AIRMET/ SIGMETs. The four navigation information products are airports, NOTAMs, airspace, and navigation data fields.

Sliding a finger left or right over the widgets will bring more widgets or the **Add Widget** tool into view. The source, product age and relative location will be displayed at the bottom of each widget.



Adding Weather Widget:

- 1) From any page, touch **Home** > **\bigsimes**.
- 2) Touch Menu > Split-Screen > Widgets.
- **3)** Touch the plus button to add a widget.
- 4) Select a widget from the **Select Widget Type** menu.

Changing Widget Type:

- **1)** Touch the widget type as displayed in the upper left corner of the widget.
- **2)** Select the desired widget type from the **Select Widget Type** menu.

Removing Weather Widget:

- 1) Touch the widget type as displayed in the upper left corner of the widget.
- 2) Scroll to the bottom of the flick list.
- **3)** Select **Delete Widget** from the bottom of the menu.

WIDGET NAVTRACK

At the bottom of the widget pane is the NavTrack. Touch-dragging the slider moves a light blue diamond along the route of flight. Colored push-pins appear on the map to indicate locations near the blue diamond that provide information corresponding to selected widgets. In some cases, there may be more than one location near the blue diamond that provides information corresponding to a widget. To view weather information for nearby locations, it may be necessary to touch the inverted white triangle next to the widget location in the widget header bar. This will open a menu of nearby widget information sources.



Garmin Pilot for Android User's Guide



Change the Location Associated with a Weather Widget:

- 1) Drag the NavTrack at the bottom of the widget pane until the blue diamond corresponds with a colored push-pin on the map display that is near a desired location.
- 2) If the push-pin does not correspond to the desired location, touch the location indicator at the top right corner of the widget to search for nearby locations.
- **3)** Select the desired location from the **Nearby** menu.



Split Screen - Widgets



WEATHER MAP OVERLAYS

Viewing weather map overlays:

- **2)** Touch the desired overlay.



Map Overlays



WEATHER PRODUCT AGE AND SOURCE

When a weather product is active on a map or in a Weather Widget, the age of the data is displayed. The age of the product is based on the time difference between when the data was assembled on the ground and the current GPS time. Garmin Pilot combines the CONUS and Regional Radar into one map overlay, the time shown is for the Regional Radar product only.



Weather Product Source, Age & Relative Location

Weather Product Age and Source

WEATHER PRODUCTS

RADAR

Weather radar data is collected from radar sites across the United States, Canada, and select overseas locations. It is combined into a mosaic for easier display and analysis.

The radar data displayed is not real-time. The lapsed time between collection, processing, and dissemination of radar images can be significant and may not reflect the current radar synopsis. Due to the inherent delays and the relative age of the data, it should be used for long-range planning purposes only. Never use radar data to penetrate hazardous weather. Rather, use it in an early-warning capacity for predeparture evaluation.



Composite data is composed of the maximum reflectivity from the individual radar sweeps at different tilt angles of the radar beam with respect to the ground. The display of the information is color-coded to indicate the weather severity level. Colors are used to identify the different echo intensities (reflectivity) measured in dBZ (decibels or Z). "Reflectivity" (designated by the letter Z) is the amount of transmitted power returned to the radar receiver. The dBZ values increase as returned signal strength increases. Precipitation intensity is displayed using colors corresponding to the dBZ values.

Base Reflectivity (the lowest level radar scan) best represents the precipitation falling from the clouds, while composite reflectivity combines the radar from all altitudes into one view.

RADAR ABNORMALITIES

There are possible abnormalities regarding displayed NEXRAD images. Some, but not all, of those include:


- Ground clutter
- Strobes and spurious radar data
- Sun strobes, when the radar antenna points directly at the sun
- Military aircraft deploy metallic dust (chaff) which can cause alterations in radar scans
- Interference from buildings or mountains, which may cause shadows
- Poor reception from Ground Based Transceivers (GBTs) can cause portions of the received radar imagery to not be displayed



RADAR LIMITATIONS

Certain limitations exist regarding radar displays. Some, but not all, are listed for the user's awareness:

- Surface precipitation type is estimated with shades of blue for snow and shades of pink for indeterminate types. The actual precipitation type aloft could vary.
- Radar base reflectivity is sampled at the minimum antenna elevation angle. An
 individual radar site cannot depict high altitude storms at close ranges, and has no
 information about storms directly over the site.
- Radar coverage in Canada is only available in the southern 1/4 of the country.

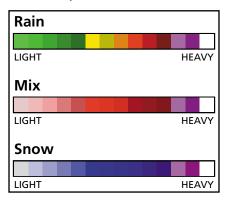

Radar Intensity

Viewing Radar Information:

- 1) From any page, touch **Home** > **(\$\)**
- 2) Touch > Overlays.
- **3)** Touch **Radar** from the Layer Select menu.
- **4)** If necessary, touch , and touch **Base** (Base Refectivity) or **Comp** (Composite Reflectivity.
- 5) Touch to animate the radar loop. Each frame of the radar loop is time stamped. The time stamp is just right of the play button.



STORM CELL MOVEMENT

The radar includes the projected path of a storm cell. A circle and line extends from the storm cell to display the predicted path in 15, 30, 45, and 60 minutes. If hail or tornadic activity is present, the corresponding icon is displayed.

Viewing Storm Cell Movement:

- 1) With radar animated (see procedure above), touch **11**.
- 2) Touch the time stamp to step through the animation.



Touch to _Display Storm Cell Movement

Storm Cell Movement



INFRARED SATELLITE (IR SAT)

IR Sat displays infrared composite satellite images of cloud cover taken by geostationary weather satellites.

Viewing Infrared Satellite Information (IR):

- 1) From any page, touch **Home** >
- 2) Touch Solution > Overlays and select Clouds > IR from the Layer Select menu.
- 3) Touch to animate the satellite loop. Each frame of the satellite loop is time stamped. The time stamp is just right of the play button.



Overlays - Clouds - Infrared (IR)



Viewing Visible Satellite Information (VIS):

- **1)** From any page, touch **Home** > **§**
- 2) Touch > Overlays and select Clouds > VIS from the Layer Select menu.
- 3) Touch to animate the satellite loop. Each frame of the satellite loop is time stamped. The time stamp is just right of the play button.

RADAR AND INFRARED SATELLITE COLOR PALETTES


The radar and infrared color palettes and the color of the intensity returns can be configured on the **Map** page.

Viewing radar and infrared satellite color palettes:

- 1) From any page, touch Home > \$\infty\$.
- 2) Touch > Radar/IR Color.
- 3) Touch ① on the top left of the 'Radar Colors' or 'IR Satellite Colors' box to view the color palettes options.
- 4) Touch Garmin, NOAA, Alt, or Classic for the desired 'Radar Colors'.

Or:

Touch **Classic**, **Alt 1**, **Alt 2**, or **Alt 3** for the desired 'IR Satellite Colors'.

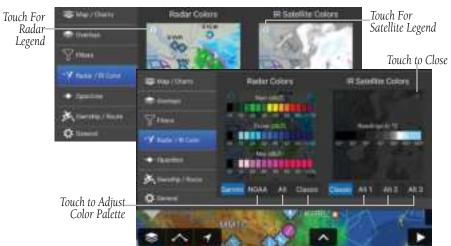

Radar & Infrared Satellite Color Palettes




ICING FORECAST

Icing forecast is a graphical depiction of icing conditions in the United States and Canada. The icing forecast conditions are displayed by Severity+Supercooled Large Drops (SLD) or Probability.

Viewing Icing Forecast data:

- 1) From any page, touch **Home** > **\$\frac{1}{3}^{2}\$**.
- 2) Touch Solution > Overlays > Icing.
- 3) Select between **Severity+SLD** or **Probability**.
- **4)** Use the sliders to adjust the time and altitude.

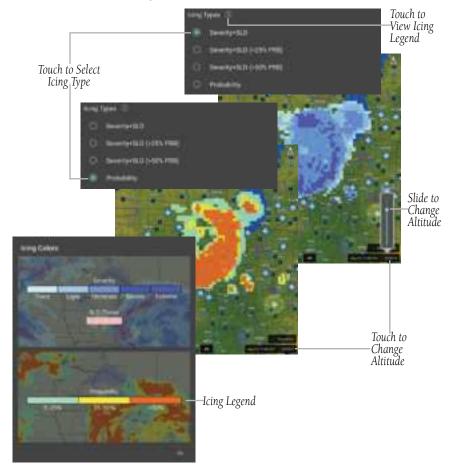

Overlays - Icing Types & Legend



METAR OVERLAY

The METAR Overlay provides weather icons that graphically display one of 14 parameters typically reported in a METAR. Each icon can be tapped to display the current METAR data in both raw and translated formats. Color coded icons provide a quick visual representation of the current weather conditions. Blue icons indicate VFR conditions, Green icons indicate MVFR conditions, Yellow icons indicate IFR conditions and Red icons indicate LIFR conditions. The color coding applies to Station ID, Flight Conditions, Cloud Ceiling, Visibility, and Cloud Cover.

Wind barbs and wind speed icons are slightly different where color represents wind speed. Colored icons are also used to show dew point spread.

Viewing and Configuring METAR Overlay:

- 1) From any page, touch **Home** > **\$\frac{1}{3}^{2}\$**.
- 2) Touch and select **Overlays** > **Weather** from the Layer Select menu.
- 3) Touch the Overlay Control button in the lower left corner.
- **4)** Select the desired option from the list.
- 5) Touch any of the displayed Weather Icons to view the Raw and translated METAR information.

Layer	Icons	Description		
	Wind Barb			
Station Model	Temperature Visibility Dewpoint Cloud Cover			
Altimeter	29.98 30.14	Altimeter setting (in. Hg)		
Ceiling	010 Unl	Reported ceiling in hundreds of feet or 'Unl' if there is not a cloud layer that constitutes a ceiling.		

Weather Icons



Layer	Icons	Description			
Cloud Cover	◎ 0∨C	Overcast			
	BKN	Broken			
	SCT	Scattered			
	FEW	Few			
	CLR	Clear			
	OBS	Fog			
Dewpoint	21°	Dewpoint °C			
Dewpoint Spread	111) 15) 25)	Dewpoint spread in °C. Blue indicates spread of 9° C or greater. Yellow indicates spread of 5° or 8° C. Red indicates spread of 0° to 4° C.			
Flight Conditions		VFR Ceiling	MVFR Ceiling	IFR Ceiling	LIFR Ceiling
	VFR Visibility				
	MVFR Visibility				
	IFR Visibility				
	LIFR Visibility				
		Missing weather information. A split dot with brown indicates partial and/or missing data.			
Observation Age	22	Observation Age in minutes			

Weather Icons



Layer	Icons	Description		
	KSTJ	VFR conditions (Blue)		
	KMBY	MVFR conditions (Green)		
Station ID	KTAZ	IFR conditions (Yellow)		
	KIRK	LIFR conditions (Red)		
	KCDJ	No Weather or Partial Data (Grey)		
Temperature	32°	Temperature °C		
Visibility		Reported Visibility in Statute Miles.		
Wind Barbs		Short Flag = 5 knots	Green = 5-9 knots	
		Long Flag = 10 knots	Yellow = 10-19 knots	
		Solid Triangle = 50 knots Red = 20+ knots		
		Light & Variable		
	0	Calm		
Wind Gust	21	Reported wind gusts (kts).		
Willia Gust	Lt & Var	Light & Variable		
Wind Speed	Lt & Var 10 24	Reported steady wind speed (kts). Green indicates wind speeds less than 10 knots. Yellow indicates wind speeds less than 20 knots. Red indicates wind speeds 20 knots and greater.		
Wx Conditions	BR FZ FG	Dynamic black shaded box that displays two letter weather condition codes and qualifiers.		

Weather Icons



STATIC WEATHER IMAGERY

Garmin Pilot provides access to National Weather Service, as well as some international, static aviation weather maps. These weather products are static maps displaying PIREPs, AIRMETs, SIGMETs, winds aloft, radar, IR satellite, METARs, TAFs, surface analysis, icing, turbulence forecasts, and thunderstorm forecasts.

Garmin Pilot also includes some international weather imagery. Radar imagery is available for some parts of Mexico. Icing, Turbulence Forecast, and Thunderstorm Forecast imagery is available for some parts of Europe. METAR, TAF, and Surface Analysis information is available for Canada.

All available weather images are displayed on the main WX Imagery page and can be sorted by selecting from the 'View by Hazard', 'View by Region', or 'View by Product Type' options.

Viewing Static Weather Products:

- 1) From any page, touch **Home** > [[a]].
- **2)** Touch the desired hazard type, region, or product type from the list.
- **3)** Touch the weather map to enlarge. When enlarged touch the star to save to Favorites.



Wx Imagery - Static Weather Imagery



AIRMETS

An AIRMET (AIRmen's METeorological Information) can be especially helpful for pilots of light aircraft that have limited flight capability or instrumentation. An AIRMET must affect or be forecasted to affect an area of at least 3,000 square miles at any one time. AIRMETs are routinely issued for six-hour periods and are amended as necessary due to changing weather conditions. AIRMETs are displayed as green (IFR/mountain obscuration), orange (turbulence), or blue (icing) shaded areas on the map display.

SIGMETS

A SIGMET (SIGnificant METeorological Information) advises of weather that is potentially hazardous to all aircraft. In the contiguous United States, the following items are covered: severe icing, severe or extreme turbulence, volcanic ash (red), dust storms, and sandstorms that lower visibility to less than three statute miles.

A Convective SIGMET is issued for thunderstorms, isolated severe thunderstorms, embedded thunderstorms, hail at the surface, and tornadoes. A SIGMET is widespread and must affect or be forecast to affect an area of at least 3,000 square miles.

Viewing AIRMETS and SIGMETS:

- 1) From any page, touch **Home** > **\$\frac{1}{3}^{2}\$**.
- 2) Touch Solution > Overlays > AIR / SIGMETs from the Layer Select menu.
- **3)** Touch the desired type of AIRMET/SIGMET on the Map page to display the Radial Menu > **AIR / SIG** to view details.



Overlays - Displaying AIRMETs & SIGMETs



TEMPORARY FLIGHT RESTRICTIONS (TFRS)



NOTE: Do not rely solely upon data link services to provide Temporary Flight Restriction TFR information. Always confirm TFR information through official sources such as Flight Service Stations or Air Traffic Control.

Temporary Flight Restrictions or TFRs temporarily restrict all aircraft from entering the selected airspace unless a waiver has been issued. TFRs are routinely issued for occurrences such as sporting events, dignitary visits, military depots and forest fires. TFRs are represented as an area outlined in dark blue (special events), green (forest fires), or Red (dignitary visits).

Viewing Temporary Flight Restrictions (TFR):

- 1) From any page, touch **Home** > **§**
- 2) Touch > Overlays > TFR from the Layer Select menu.
- Touch the desired TFR on the Map page to display the Radial Menu > TFR
 to view details.
- 4) Touch to expand, and to collapse, as desired.



Maps - Overlays - Graphical TFRs



ENHANCED STADIUM TFR ADVISORIES

Stadium TFRs advisories have been enhanced to display the event, hosting venue, and start time along with color coding to represent the active state of the TFR.

- Blue TFRs event occurs one to seven days in the future.
- Yellow TFRs event occurs within the next 24 hours.
- Red TFRs active TFR, one hour before scheduled start time.

Viewing only active Temporary Flight Restrictions (TFRs) or within 24 hours:

- 1) From any page, touch Home >
- 2) Touch > General.
- 3) Touch the Display Stadium TFRs button Off.



Enhanced Stadium TFR Details



PIREPS

Pilot Weather Reports (PIREPs) provide timely weather information for a particular route of flight. When significant weather conditions are reported or forecast, Air Traffic Control (ATC) facilities are required to solicit PIREPs. A PIREP may contain unforecast adverse weather conditions, such as icing conditions, cloud cover, and turbulence.

PIREPs are represented on the Garmin Pilot map by a small colored icon with a number. The color and style of the icon signify the type and severity of the reported weather conditions. The number shows the altitude of the reported conditions in flight level notation (e.g., hundreds of feet).

While the Map's PIREP layer is active, two secondary controls appear in the lower right corner of the screen. Touching either of these controls shows a slider that can filter out and declutter PIREP icons based on report age and report altitude.

Viewing PIREPs:

- 1) From any page, touch Home > 🌆
- 2) Touch > Overlays > PIREP.
- **3)** Touch a PIREP icon for details.



Overlays - Displaying PIREPs


Filtering PIREPs By Age:

- 1) From any page, touch **Home** > **\$\frac{1}{3}^{2}\$**.
- 2) Touch > Overlays > PIREP.
- 3) Touch the PIREP age indicator to display the age slider.
- **4)** Touch and drag the slider handle to set the PIREP age display range.



Filtering PIREPs By Altitude:

- 1) From any page, touch **Home** > **\$\frac{1}{2}^{2}\$**.
- 2) Touch > Overlays > PIREP.
- 3) Touch the PIREP altitude indicator to display the altitude slider.
- 4) Touch and drag the slider handles to set the PIREP altitude display range.

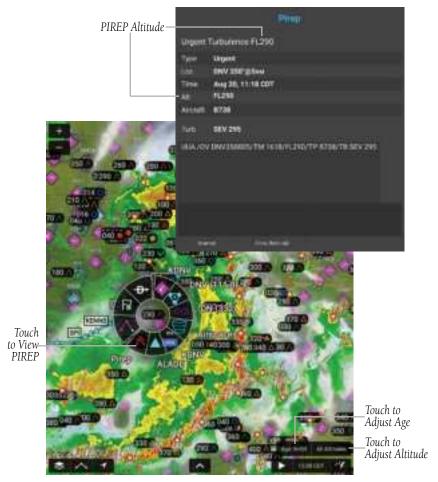

PIREP Layer & Report



Icing PIREPs	Sky Condition PIREPs	Turbulence PIREPs
Negligible Icing	Unknown Sky Condition	Turbulence Negligible or Smooth
Trace Icing	Sky Clear	▲ Light Turbulence
Trace to Light Icing	Few Clouds	Light to Moderate Turbulence
Light Icing	Scattered Clouds	⚠ Moderate Turbulence
Light to Moderate Icing	Broken Clouds	Moderate to Severe Turbulence
Moderate Icing	Overcast	Severe Turbulence
Moderate to Severe Icing	⊗ IMC	Extreme Turbulence
Severe Icing		

PIREP Icons

LIGHTNING

Lightning data shows the approximate location of cloud-to-ground lightning strikes. A strike icon represents a strike that has occurred within a two-kilometer region. The exact location of the lightning strike is not displayed.

Viewing Lightning Information:

- 1) From any page, touch Home >
- 2) Touch **3** > **Overlays** > **Lightning**.
- 3) Touch to animate the Lightning loop. Each frame of the Lightning loop is time stamped. The time stamp is just right of the play button. Lightning information is available in one minute increments for the previous 45 minutes.



WINDS ALOFT

Winds Aloft data shows the forecasted wind speed and direction at the surface and at selected altitudes. Altitudes can be displayed in 3,000-foot increments up to 42,000 feet MSL. Winds Aloft are displayed using wind barbs. The wind barbs indicate wind speed and direction.

The wind speed is depicted using flags at the end of the wind barb. A short wind flag is 5 knots, a long wind flag is 10 knots, and a filled triangle is 50 knots. Wind barbs are also color coded to indicate wind speed. Wind direction is depicted by the flagged end of the barb. The flagged end indicates the direction from which the wind is coming.

Icons	Description		
<u> </u>	White indicates wind speeds of 20 kts or less.		
	Light blue indicates wind speeds of 21-30 kts.		
	Light yellow indicates wind speeds of 31-40 kts.		
	Yellow indicates wind speeds of 41-50 kts.		
<u> </u>	Orange indicates wind speeds of 51-80 kts.		
<u></u>	Red indicates wind speeds of 81 kts or greater.		


Winds Aloft Barbs

Viewing Winds Aloft Information:

- 1) From any page, touch **Home** > **\$\frac{1}{2}\$**.
- 2) Touch > Overlays > Winds Aloft.
- **3)** Touch the **Temps** button above the Time Stamp > **Barbs.**
- **4)** Drag the horizontal slider to the right to view forecast winds aloft.
- **5)** Drag the slider up to the desired altitude. Altitudes are displayed in 3,000-foot increments up to 42,000 feet MSL.



Or: Touch any wind barb to view a winds aloft table. Touch the time to view current/forecasted winds aloft.

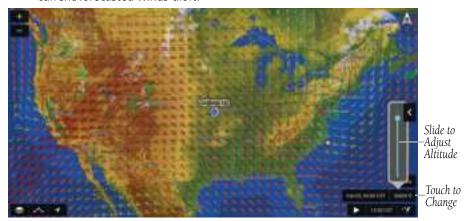

Winds Aloft - CONUS

TEMPS ALOFT

Temps Aloft data shows the forecasted temperature in degrees Celsius (°C) at the surface and at selected altitudes. Altitudes can be displayed in 3,000-foot increments up to 42,000 feet MSL. Temps Aloft are displayed using a color coded icon along with a numerical value.

Icons	Description
(%)-2	Blue indicates temps below freezing in degrees Celsius (-2°C).
()0	White indicates the temperature is at freezing (0°C).
<u>)</u> 2	Orange indicates temps above freezing in degrees Celsius (2°C).

Temps Aloft Icons

Viewing Temps Aloft Information:

- 1) From any page, touch **Home** > **\$\frac{1}{3}^{2}\$**.
- 2) Touch > Overlays > Winds Aloft.
- **3)** Touch the **Barbs** button above the Time Stamp > **Temps**.
- **4)** Drag the horizontal slider to the right to view forecast Temps aloft.
- **5)** Drag the slider up to the desired altitude. Altitudes are displayed in 3,000-foot increments up to 42,000 feet MSL.



Or: Touch any temps aloft icon to view a winds aloft table. Touch the time to view current/forecasted temps aloft.



Temps Aloft - CONUS

METARS AND TAFS

METAR (METeorological Aerodrome Report) is an international code used for reporting weather observations. METARs are updated hourly or as needed. METARs typically contain information about the temperature, dew point, wind, precipitation, cloud cover, cloud heights, visibility, and barometric pressure. They can also contain information on precipitation amounts, lightning, and other critical data.

TAF (Terminal Area Forecast) is the standard format for 24-hour weather forecasts. TAFs may contain some of the same code as METAR data. It typically forecasts significant weather changes, temporary changes, probable changes, and expected changes in weather conditions. METAR and TAF data are displayed as raw and/or decoded text.

Viewing METAR and TAF Information:

- From any page, touch **Home** > ... 1)
- 2) Touch **Weather** > **METAR**.
- 3) Touch the **METAR** or **TAF** tab, as desired.



Or:

- 1) From any page, touch **Home** > **⑤**.
- **2)** Touch the desired airport until the Radial Menu appears > **WX**.
- 3) Touch the **METAR** or **TAF** tab, as desired.

MODEL OUTPUT STATISTICS (MOS)

MOS (Model Output Statistics) provides forecast information similar to a TAF (Terminal Area Forecast), that is updated hourly and is valid for 72 hours. The MOS forecast is available for over 2,000 airports in the United States.



MOS (Model Output Statistics) Widget - Map Page

- 2) Touch MOS from the 'Select Widget Type' Menu.

Or:

- 1) From any page, touch **Home** >
- 2) Touch **Weather** > **MOS** tab.



AREA FORECAST DISCUSSION

AFD (Area Forecast Discussion) is a plain English narrative developed by meteorologists from the National Weather Service. It is designed to provide additional details that go into the preparation of the Terminal Aerodrome Forecast (TAF). The AFD contains both short and long term analysis, with an emphasis on aviation weather.

Viewing ADF Information:

- 1) From any page, touch **Home** >
- 2) Touch Weather.
- **3)** Touch the **Forecast Discussion** Tab.

Or:

- 2) If necessary, touch Add Widget.
- **3)** Touch **Forecast Discussion** from the 'Select Widget Type' Menu.

Touch to View Split-Screen—Touch to Select Widgets

Split-Screen - Widgets - Forecast Discussion

Touch to Select Widget

Type



NOTICE TO AIRMEN (NOTAM)

A Notice to Airmen (NOTAM) is a notice containing information essential to personnel concerned with flight operations but not known far enough in advance to be publicized by other means. It states the abnormal status of a component of the National Airspace System (NAS) — not the normal status. Various NOTAMs can viewed in a decoded summary, including those related to airspace, obstacles, and NAVAIDs.

Viewing NOTAM Information:

- 1) From any page, touch **Home** >
- 2) Touch NOTAMs.

Or:

- 2) If necessary, touch Add Widget.
- **3)** Touch NOTAMs from the 'Select Widget Type' Menu.



Split-Screen - Widgets - NOTAMs



Airspace NOTAMs use the following color classification:


Color	Details		
	Upcoming NOTAM - Valid within the next 24 hours.		
	Restricted/Danger - Prohibited, Restricted, and Danger areas.		
	Alerts/Warnings - Warning, Military Operational Area (MOA), and Scheduled Exercises (Military).		
	Flight Data Center (FDC) and Restricted Area Deactivated		
	Other - Parachute Jumping, Alert, UAS Operation, Tethered Balloon/Kits, Gathering of Aircraft.		
	Airspace NOTAM Color Classifications		



DATA LINK TRAFFIC (OPTIONAL)

The GDL 39 / GDL 39 3D is a Bluetooth® enabled receive-only data link radio with on-board GPS, 978 MHz (Universal Access Transceiver frequency band), and 1090 MHz Extended Squitter (1090 ES) receivers. It is designed to receive, process, and output traffic (ADS-B air-to-air, and TIS-B traffic information), and weather (Flight Information Service-Broadcast (FIS-B)) information to Garmin Pilot through Bluetooth.

ADS-B (Automatic Dependent Surveillance-Broadcast) is a surveillance technology deployed across the United States as the cornerstone of the FAA's Next Generation Air Transportation System (NextGen). ADS-B enables improved surveillance services, both air-to-air and air-to-ground, especially in areas where radar is ineffective due to terrain or where it is impractical or cost prohibitive. Initial applications of air-to-air ADS-B are for "advisory" use only, enhancing a pilot's visual acquisition of other nearby ADS-B equipped aircraft either when airborne or on the airport surface.

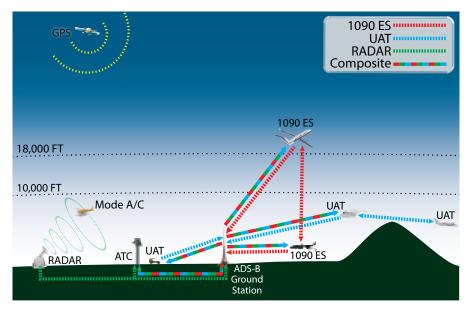

ADS-B System



For the purpose of distinguishing between levels of ADS-B service, there are three classifications of aircraft or system capability; ADS-B In, ADS-B Out, and ADS-B participating. ADS-B In refers to the capability to receive ADS-B information. ADS-B Out refers to the capability to transmit ADS-B information. ADS-B participating refers to the capability to both send and receive ADS-B information. Aircraft lacking either ADS-In, ADS-B Out, or both ADS-B capabilities may also be referred to as ADS-B non-participating aircraft.

Currently, rule-compliant ADS-B Out capability in the United States requires a TSO'ed SBAS-enabled GPS, such as a Garmin GPS 400W or similar, and one of two possible data links: 1090 ES transponder or a 978 MHz UAT. Either data link system is capable of transmitting the aircraft's position, velocity, identification, and other information every second to compatible aircraft and ground stations called Ground Based Transceivers (GBTs).

Because 1090 ES transponders and UATs operate on different frequencies, aircraft not similarly equipped cannot transmit/receive data link information directly to/from each other. Instead, operation within range of a GBT is required to receive data link information on both frequencies. The GDL 39 / GDL 39 3D is unique in its ADS-B In capability since it can receive data link information from both 1090 ES transponders and UATs.

Thus, the GDL 39 / GDL 39 3D receives traffic information directly from any ADS-B Out aircraft within range as well as the rebroadcast of ADS-B information from any nearby GBT. This rebroadcast is called Automatic Dependent Surveillance-Rebroadcast (ADS-R) and is automatically triggered by the detection of an ADS-B participating aircraft within the service volume of the GBT. As a 978 MHz (UAT frequency) receiver, the GDL 39 / GDL 39 3D can receive both the Traffic Information Service-Broadcast (TIS-B) and Flight Information Service-Broadcast (FIS-B) provided in conjunction with ADS-R services when in range of a GBT.

FIS-B service is provided continuously, but ADS-R including TIS-B will only be broadcast by a GBT when an ADS-B participating aircraft is within the GBT's defined service volume. In this case, a GBT will only rebroadcast TIS-B information relative to the ADS-B participating aircraft. **Only traffic that is within 15 nm lateral and 3,500' vertical of the ADS-B participating aircraft is provided in the broadcast.** Non-participating traffic aircraft located farther than 15 nm laterally and 3,500' vertically from the participating aircraft is are excluded from the information transmitted by the GBT.



TIS-B traffic information includes non-participating aircraft detected by ATC surveillance radar. As TIS-B data is derived from ATC surveillance radar data, TIS-B traffic position updates typically occur every three to thirteen seconds. **Therefore, TIS-B traffic may be displayed with degraded positional accuracy.** Aircraft without operating transponders are invisible to TIS-B. Aircraft operating outside of the ATC radar coverage area are also not displayed.

Since the GDL 39 / GDL 39 3D is a receive-only device, even when used onboard an aircraft equipped with a qualifying GPS and 1090 ES transponder, a GBT may not identify it as an ADS-B participating aircraft. The squitter of some 1090 ES transponders, including the Garmin GTX 23ES, must be configured to communicate the aircraft has 978 MHz receive capability in order to be identified as an ADS-B participating aircraft.



WARNING: Do not rely solely upon the display of traffic information for collision avoidance maneuvering. The traffic display does not provide collision avoidance resolution advisories and does not under any circumstances or conditions relieve the pilot's responsibility to see and avoid other aircraft



WARNING: Do not rely solely upon the display of traffic information to accurately depict all of the traffic within range of the aircraft. Due to lack of equipment, poor signal reception, and/or inaccurate information from aircraft or ground stations, traffic may be present that is not represented on the display.



SYSTEM STATUS

The traffic system status is annunciated in the upper left corner of the Map Page, as well as the lower left corner of the dedicated Traffic Page.

System Status	Traffic Icon
Receiving Air-To-Air targets from aircraft transmitting ADS-B out on either UAT or 1090 data link. You are receiving TIS-B traffic information for traffic within 15 nm and 3,500' of a rule compliant participating aircraft.	
Receiving Air-To-Air targets from aircraft transmitting ADS-B out on either UAT or 1090 data link. You will typically receive TIS-B coverage within a minimum of 3 NM (+/- 1,000 ft) of your current position. Other ADS-B participants not compliant with the latest ADS-B software specifications often trigger full TIS-B uplink services. Performance may very between ground stations.	
Receiving Air-To-Air targets from aircraft transmitting ADS-B out on either UAT or 1090 data link. With degraded TIS-B. You may see traffic targets, but the coverage is incomplete and cannot be relied upon.	
Not receiving Air-To-Air targets from aircraft transmitting ADS-B out on either UAT or 1090 data link. You are not receiving TIS-B traffic information.	

Traffic Modes



TRAFFIC DESCRIPTION

ADS-B traffic operation is similar to other traffic systems, but ADS-B adds additional symbology. The symbols used to display ADS-B traffic are shown in the table below. The traffic identifier and altitude are displayed below the traffic symbol. A small up or down arrow next to the traffic symbol indicates the traffic is climbing or descending at a rate of at least 500 feet per minute. The vector line that extends beyond the point of the traffic arrow is just further indication of the intruder aircraft track.

Symbol	Description		
\Diamond	Non-threat, non-directional airborne traffic		
> —	Directional airborne Traffic with track vector. Points in the direction of the aircraft track.		
•	Non-directional airborne Proximity Advisory (PA). Proximity Advisories are issued for any traffic within 6 nautical miles and +/- 1,200'.		
> —	Directional airborne Proximity Advisory (PA) with track vector. Points in the direction of the aircraft track. Proximity Advisories are issued for any traffic within 6 nautical miles and +/- 1,200'.		
	Non-directional airborne Traffic Advisory (TA)		
	Non-directional off-scale airborne Traffic Advisory (TA). Displayed at outer range ring at proper bearing.		
> —	Directional airborne Traffic Advisory (TA) with track vector. Points in the direction of the aircraft track.		
	Directional off-scale airborne Traffic Advisory (TA). Points in the direction of the aircraft track.		

ADS-B Traffic Symbology

Traffic Advisories (TA)

The GDL 39 / GDL 39 3D automatically adjusts its Traffic Advisory (TA) sensitivity level to reduce the likelihood of nuisance TA alerts during various phases of flight. TAs are issued for traffic when they are predicted to be within a specified volume of airspace around the aircraft in a specified amount of time. The protected volume and time interval varies based on the current geodetic altitude and groundspeed. Thus, the protected volume of airspace increases with altitude and ground speed. Refer to the following table for details.



Altitude (Geodetic)	Look Ahead Time (sec.)	Vertical Separation (ft.)	Horizontal Separation (nm.)
Below 5,000	30	+/-850	.35
5,000-10,000	40	+/-850	.55
10,000-20,000	45	+/-850	.80
20,000-42,000	48	+/-850	1.10
Above 42,000	48	+/-1,200	1.10

Traffic Advisories

Configuring GDL 39 / GDL 39 3D for a Pressurized or Non-Pressurized Aircraft:

- 1) From any page, touch Home > ******.
- 2) Touch the GDL 39 Tab.
- 3) Touch Pressurized Cabin to select/deselect.



NOTE: Relative altitude information will only be displayed if Pressurized Cabin is not selected.

Enabling/disabling Traffic Data on Map Page:

- 1) From any page, touch **Home** > **௵**.
- 2) Touch Menu.
- 3) Select Show Traffic.

Viewing the Traffic Page:

- 1) From any page, touch **Home** >
- 2) Touch to change the range for the traffic rings.



Changing the altitude range:

- 1) On the Traffic Page, Touch Altitude Filter.
- **2)** Touch one of the following options:
 - **Unrestricted**: All available traffic is displayed.
 - **Above**: Displays non-threat and proximity traffic from 9000 feet above the aircraft to 2700 feet below the aircraft. Typically used during climb phase of flight.
 - **Normal**: Displays non-threat and proximity traffic from 2700 feet above the aircraft to 2700 feet below the aircraft. Typically used during enroute phase of flight.
 - **Below**: Displays non-threat and proximity traffic from 2700 feet above the aircraft to 9000 feet below the aircraft. Typically used during descent phase of flight.



Traffic Page



FLIGHT ID DISPLAY AND MOTION VECTOR

The Flight IDs of other aircraft (when available) can be displayed on the Traffic Page. When a flight ID or call sign is received, it will appear below the corresponding traffic symbol when enabled. Traffic ground track is indicated on Garmin Pilot by the Motion Vector, a short line, extending in the direction of target movement or relative movement. The track vector has two settings, TargetTrendTM shown as a green vector, or Absolute shown as a white vector. Absolute vectors extend from the traffic symbol showing the traffic's ground track. TargetTrend traffic vectors are displayed relative to the aircraft's position and ground speed. For example if traffic is ahead and traveling in the same direction but at a slower ground speed, the motion vector would point opposite of its direction of flight, indicating the aircraft is overtaking the traffic. Thus, the TargetTrend motion vector is relative to the current position, where absolute motion vectors are based on the traffic's speed and direction. The end of the Motion Vector represents the predicted absolute or relative location of the traffic, based the traffic's reported track, ground speed and the Vector Duration setting (15, 30, 60, or 120 seconds).



Example ADS-B Traffic



NOTE: Traffic Altitude Filters and Motion Vector settings can only be changed on the dedicated Traffic Page. The Altitude Filter and Motion Vector settings from the Traffic Page will be used on the Map Page as well.




Changing Motion Vector:

- **1)** From any page, touch **Home** > **3**.
- 2) Touch the Motion Vector field in the upper left corner of the Traffic Page and select **TargetTrend** or **Absolute**.

Changing Vector Duration:

- 1) From any page, touch **Home** > **.**.
- 2) Touch the Vector Duration field in the upper left corner of the Traffic Page and select **15**, **30**, **60** or **120** seconds.

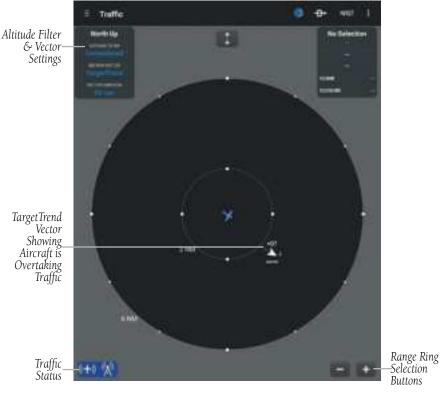

TargetTrend™ Vectors



TERRAIN




WARNING: Do not use Terrain information for primary terrain avoidance. Terrain information is intended only to enhance situational awareness.

The Terrain function displays altitudes of terrain and obstructions relative to the aircraft position and altitude with reference to a database that may contain inaccuracies. Terrain and obstructions are shown only if they are in the database. Terrain and obstacle information should be used as an aid to situational awareness. They should never be used to navigate or maneuver around terrain. Note that all obstructions may not be available in the terrain and obstacle database. No terrain and obstacle information is shown without a valid 3-D GPS position.

The device or external GPS receiver provides the horizontal position and altitude of the aircraft. Aircraft GPS altitude is derived from satellite position. GPS altitude is then converted to a mean sea level (MSL)-based altitude (GPS-MSL altitude) and is used to determine terrain and obstacle proximity. GPS-MSL altitude accuracy is affected by satellite geometry, but is not subject to variations in pressure and temperature that normally affect pressure altitude sensors. GPS-MSL altitude does not require local altimeter settings to determine MSL altitude. It is a widely-used MSL altitude source.


Terrain and obstacle databases are referenced to MSL. Using the GPS position and altitude, the Terrain feature portrays a 2D picture of the surrounding terrain and obstacles relative to the position and altitude of the aircraft. GPS position and GPSMSL altitude are used to calculate and predict the aircraft's flight path in relation to the surrounding terrain and obstacles. In this way, the pilot can view predicted dangerous terrain and obstacle conditions. Alert windows appear to inform the pilot of proximity to the terrain and obstacles.

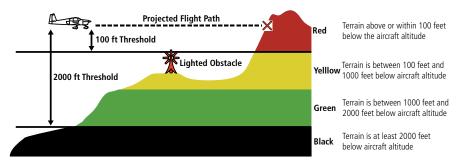




TERRAIN INFORMATION

Two views modes are available on the Terrain Page: the 360° view and the Arc view, which provides a 120° arc outline. The areas of the terrain shaded red are predicted to be within 100 feet below or above the aircraft. The areas in yellow are between 1,000 feet and 100 feet below the aircraft and the areas in green are between 1,000 and 2,000 feet below the aircraft. The black areas are more than 2,000 feet below the aircraft. A projected point of impact is marked with an "X" symbol. The Altitude Selector in the upper right corner can be configured to show, GPS derived AGL or GSL, or SFC ELEV (Surface Elevation) from the Terrain Database.

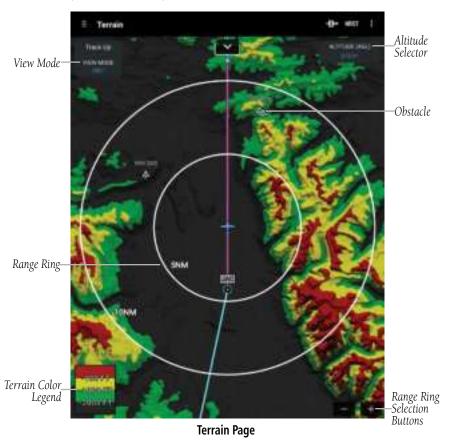

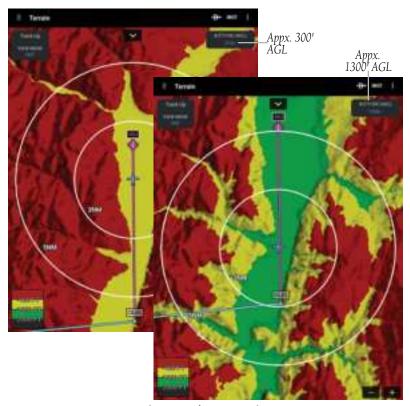

Terrain Page Colors - 360° View


TERRAIN COLOR TRANSITION

During the takeoff or landing transition only terrain that is 400ft above the current location is shown in red. This is to prevent from displaying a "sea of red" during takeoffs and landings.

During the takeoff transition, the terrain colors will "fade in" once the aircraft is airborne and flies through 400' AGL, the aircraft descends more than 25' after takeoff, or more than 60 seconds have passed since the aircraft was on the ground.

During the landing transition, the terrain colors will "fade out" when the aircraft is within 0.5nm of an airport, the distance is decreasing, and the height above the runway is less than 200'.



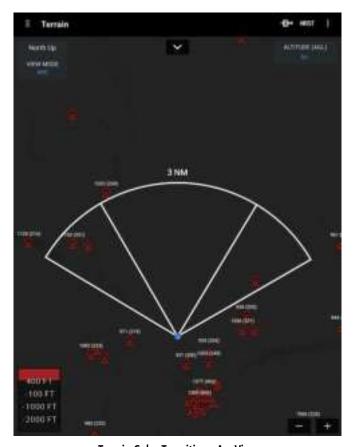

Terrain Color Transition - Arc View



OBSTACLE INFORMATION

Obstacles are shown on the Terrain Map View, at or below the map range of 12 nm. Obstacles are also shown on the Navigation Map from a range of 200 feet to 5 nm.

Standard aeronautical chart symbols are used for lighted or unlighted obstacles taller than 200 feet Above Ground Level (AGL). Refer to the Obstacle Icons legend below.

When selecting an obstacle with the Map Pointer, each obstacle displays the altitude at the top of the obstacle, or Mean Sea Level (MSL). Each obstacle also lists the actual height of the obstacle, or Above Ground Level (AGL).

Unlighted	Unlighted Obstacle		Lighted Obstacle		
< 1000′	> 1000′	< 1000′	> 1000′	Impact Points	Obstacle Location
AGL	AGL	AGL	AGL	Points	
		*	*	×	WARNING: Red obstacle is above or within 100' below current aircraft altitude
		**	***	×	CAUTION: Yellow obstacle is between 100' and 1000' below current aircraft altitude


Terrain Obstacle Colors and Symbology

TERRAIN AND OBSTACLE ALERTS (PREMIUM SUBSCRIPTION)

Terrain, Obstacle, and Descent Rate pop-up and voice alerts are issued when flight conditions meet parameters that are set within the software algorithms. Terrain alerts typically employ a CAUTION or a WARNING alert severity level, or both. When an alert is issued, visual annunciations are displayed and when enabled voice alerts are heard.

If the Terrain Page is not displayed, a pop-up alert appears. Touch **Dismiss** to acknowledge and clear the alert, or touch **Show Terrain** to view the Terrain Page.



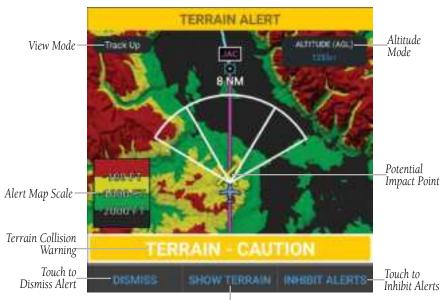

Touch to Switch to Terrain Page
Terrain Alert Pop-up

Alert Type	Voice Message		
Terrain Caution	"Caution Terrain"		
Obstacle Caution	"Caution Obstacle"		
Terrain Ahead Caution	"Caution; Terrain Ahead"		
Obstacle Ahead Caution	"Caution; Obstacle Ahead"		
Terrain Warning	"Terrain, Terrain, Pull Up, Pull Up"; *"Pull Up"		
Obstacle Warning	"Obstacle, Obstacle, Pull Up, Pull Up"; *"Pull Up"		
Sink Rate Caution	"Caution; Sink Rate"		
Sink Rate Warning	"Sink Rate, Pull up"; *"Pull Up"		

^{*&}quot;Pull Up" is repeated every 5 seconds after the initial alert until alert conditions no longer exists

Terrain and Obstacle Voice Alerts



Viewing Terrain Page:

- **1)** From any page touch **Home** > M.
- **2)** Touch **9** or pinch-zoom to change the range of the terrain rings.

Configuring Terrain Page:

- **2)** Touch **VIEW MODE**.
- **3)** Touch **360**° to view a 360° representation of terrain.
- **Or:** Touch **Arc** to view a forward looking 120° arc of terrain.
- **4)** Touch **Altitude** > **AGL**, **GSL**, or **SFC ELEV** to format the Altitude display.



Enabling/Disabling Terrain Shading on Map Page:

- 1) From any page touch **Home** > **\$\frac{1}{2}\$**.
- 2) Touch > Overlays > Terrain.

Enabling/Disabling Obstacles on Map Page:

- 1) From any page touch **Home** > **\$\frac{1}{3}^{2}\$**.
- 2) Touch **3** > **0verlays** > **0bstacles**.



CHARTS



NOTE: Geo-referenced FliteCharts and Chart Overlays are available with the 'Premium' add-on subscription.

FliteCharts resemble the paper version of AeroNav Services terminal procedures charts. The charts are displayed with high resolution and in color for applicable charts. Basic FliteCharts are included in the Garmin Pilot subscription, Geo-referenced FliteCharts are also available for an additional paid subscription. Once downloaded, charts can be viewed offline. The geo-referenced portion of the chart is outlined in blue. Refer to the Downloads section for more information on downloading charts. Available data includes:



Garmin Pilot makes it easy to organize all of the terminal procedures for the route of flight by creating a Binder for the departure and destination airports. Additional binders can also be created and customized by adding individual charts for any airport. Refer to the Downloads Page to ensure the desired charts are onboard the device. Terminal Procedure charts can be viewed and downloaded from the Airport Info Page, under the Procedures tab as well.



NOTE: A data connection (e.g., Wi-Fi or cellular) is required to download and update charts.

Viewing Charts in a Binder:

- 1)
- 2) Touch the desired **Binder**
- 3) Select the desired chart.




NOTE: Any charts that are not geo-referenced will open in the default PDF document viewer.

- **4)** Touch the system back button to return to binder contents.
- Touch the system back button again to return to the Chart Binders Page.



While viewing a chart, use the **and** buttons to navigate to previous and next charts without returning to the binder view.

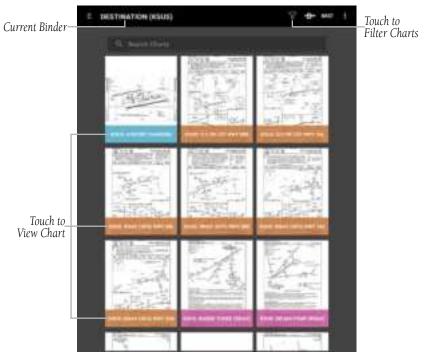

Automatically Generated Chart Binders


Annotating Charts:

- 1) From any page, touch **Home** > _____.
- 2) Touch any Binder > Chart.
- 3) Touch the Menu Button 🚦 > Annotate Chart.
- **4)** Touch **1** to display the Tools Palette.
- **5)** Touch the desired tool (Draw, Highlight, or Erase).
- **6)** Touch the desired color and stroke weight.
- **7)** Annotate Chart as desired.
- 8) Touch Clear to clear annotations.
- **9)** Touch **Close** to save annotations and exit Annotate Chart mode.






NOTE: While annotating a chart, the chart can be zoomed or panned by pinching two fingers together or by pulling two fingers apart. Any other touch or tap will result in annotation.

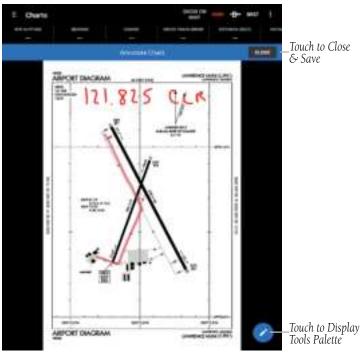

Annotate Chart

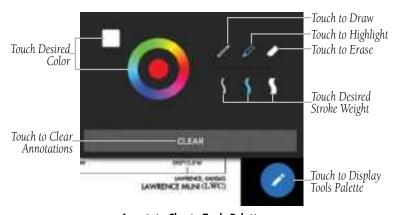

Annotate Chart - Tools Palette



Creating a Custom Binder:

- 1) From any page, touch **Home** >
- 2) Touch New Binder.
- **3)** Using the keyboard enter a name.
- 4) Touch the new Binder.
- **5)** Touch **Search Charts** and enter an airport identifier using the keyboard.
- **6)** Touch the chart name to view the it or touch **11** to add the chart to the binder.

Or:

- 1) From any page, touch **Home** >
- 2) Touch the Procedures Tab. All available charts and procedures are shown including; (Airport Diagrams, Approach Procedures, Arrival Procedures, and Departures). Chart titles followed by , will need to be downloaded. Charts followed by have already been downloaded to the device.
- **3)** Touch **1** to create a Chart Binder or add to an existing binder.
- 4) Touch and enter a Binder Name or select from the list of available binders.
- **5)** Touch for each additional chart to add to a binder.

Searching for Charts:

- 1) From any page, touch Home >
- 2) Touch **Search Charts** and enter an airport identifier using the keyboard.
- **3)** Touch **III** to create a Chart Binder or add to an existing binder.
- 4) Touch and enter a Binder Name or select from the list of available binders.
- **5)** Touch **III** for each additional chart to add to a binder.



Organizing Custom Binders:

- From any page, touch Home >
- 2) Touch the Menu Button 🚦 and touch Edit / Arrange
- **3)** Drag the Custom Binder and release at the desired location.
- 4) Touch the blue Edit / Arrange bar when finished to exit.

Filtering Charts Displayed in Binder:

- 1) From any page, touch Home >
- **2)** Touch the desired **Binder**.
- 3) Touch **T** to filter charts displayed in the **Binder**.



Chart Binder Filter

Deleting Custom Binders:

- I) From any page, touch **Home** > 🌉
- 2) Touch Menu > Edit / Arrange.
- 3) Touch for the associated binder to delete the binder.
- 4) Touch the blue Edit Mode bar when finished to exit.



Deleting Charts from a Custom Binders:

- From any page, touch Home >
- 2) Touch Menu > Edit / Arrange.
- 3) Touch for the associated chart to delete the chart.
- 4) Touch the blue Edit Mode bar when finished to exit.

Printing a Chart:

- I) From any page, touch Home > 🤝
- 2) Touch the desired **Binder**.
- **3)** Touch the desired chart.
- 4) Touch the Menu Button 🚦 and touch Print.



NOTE: Chart printing requires an Android compatible print facility to be installed. This may involve installing a custom app for a Wi-Fi enabled printer or setting up Google Cloud Print.

Viewing and Organizing Procedures from the Airport Info Page:

- 1) From any page, touch **Home** >
- 2) Touch the Procedures Tab. All available charts and procedures are shown including; (Airport Diagrams, Approach Procedures, Arrival Procedures, and Departures). Chart titles followed by , will need to be downloaded. Charts followed by have already been downloaded to the device.
- **3)** Touch the desired chart to view.
- **4)** Touch **III** to create a Chart Binder or add to an existing binder.
- 5) Touch and enter a Binder Name or select from the list of available binders
- **6)** Touch **IIII** for each additional chart to add to a binder.



NOTE: Terminal procedures (e.g. SIDs, STARs, instrument approach procedures, airport diagrams, Hot Spots, and Take-off Minimums) are available for selection from the Airport Information Page. Any charts that are not geo-referenced will open in the default PDF document viewer.



AUTOMATICALLY GENERATED BINDERS

Garmin Pilot will automatically create three binders for the active flight plan. When the app has an active flight plan, a binder will appear for the departure and destination airports. When the current Direct-to destination is an airport, a binder for that airport will appear. Garmin Pilot will download the charts and procedures for an automatically-generated binder the first time the binder is opened.



Automatically Generated Chart Binders

CHART OVERLAYS (PREMIUM SUBSCRIPTION)

Garmin Pilot integrates instrument approach procedure charts within the moving map. Garmin Pilot overlays approach charts at the proper position, orientation and scale on the moving map, making approach procedures available alongside moving map features such as flight paths, weather, navaids, airspaces, obstacles, and terrain.

The Chart Overlay will automatically rotate to match the Map page, accommodating both North Up and Track Up map modes.

Chart Overlays are available for any Geo-Referenced instrument approach procedure chart, including most FliteCharts charts.



Displaying Approach Chart Overlays from Charts Page:

- From any page, touch Home >
- **2)** Search for the desired approach chart (orange labels).
- **Or:** Touch the Destination binder, or a custom binder, to locate the desired chart.
- **3)** Touch **Show on Map**. Garmin Pilot switches to the Map page and displays the selected chart, overlaid over the moving map.



Selecting Chart Overlay




Displaying Approach Chart Overlay From Map Page:



NOTE: When selecting a Procedure, ensure the sign is present, indicating the chart is current, downloaded successfully, and ready for use.

- 1) From any page, touch **Home** >
- 2) Touch and hold the desired Airport in the Map Pane until the Radial Menu appears > ...
- 3) Touch the **Proc** tab.
- **4)** Touch the desired approach.

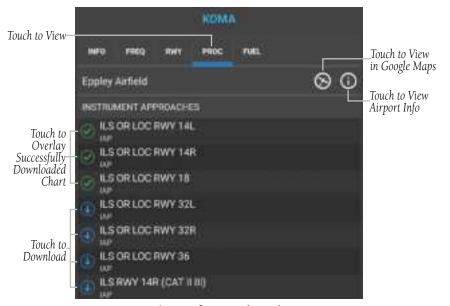

Airport Info - Procedure Tab



Displaying Approach Chart Overlay From Airport Information Page:

- I) From any page, touch Home > 鹬.
- **2)** Touch the Airport Identifier Button to search for the desired airport.
- **3)** Touch the **Procedures** tab.
- **4)** Touch **Map** for the desired approach chart. Garmin Pilot switches to the Map page and displays the selected chart, overlaid over the moving map.

While using an active instrument approach procedure overlay, Garmin Pilot will display a settings icon on the upper-left corner of the chart. These settings provide options to change to another chart for the current airport, change the opacity of the overlay (revealing more or less of the moving map below it) and removing the overlay entirely.

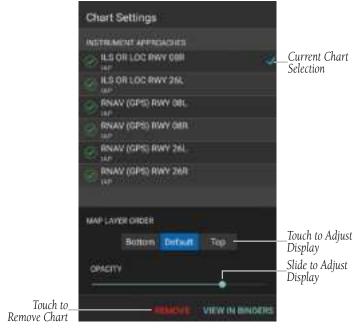


Chart Overlay Settings



SCRATCH PAD

The Scratch Pad, allows the pilot to quickly draw or write down information on the device screen. The Scratch Pad also provides five different tabs with different templates. The first two tabs are blank for general purpose notes. The other three tabs provide templates for ATIS, CRAFT, and PIREP forms.

Using the Scratch Pad:

- From any page, touch Home >
- **2)** Touch one of the five tabs to select a template.
- **3)** Touch **1** to view the Tool Palette.
- **4)** Touch the desired tool (Pen, or Highlighter).
- **5)** Touch the desired color and Line Width.

Clearing the Scratch Pad:

- 1) From any page, touch Home > 🥌.
- **2)** Touch one of the five tabs to select a template.
- **3)** Touch **1** to erase small areas.
- **Or:** Touch = > Yes to clear the entire scratch pad.


Inverting colors on the Scratch Pad:

- 1) From any page, touch **Home** >
- 2) Touch one of the five tabs to select a template.
- 3) Touch Menu > Invert Colors.





Blank Scratch Pad Tab

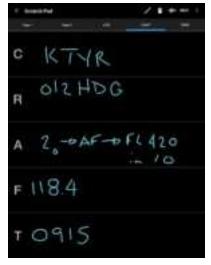

CRAFT Scratch Pad Tab



ATIS Scratch Pad Tab



PIREP Scratch Pad Tab



CONNEXT

Connext allows the wireless sharing of data between devices via Bluetooth™.

Touch **Home** > **((()** to access the Connext Page or touch the Quick Access Connext Icon (if connected to a Connext device) to display the Connext Window. The Connext Page displays Connext status, features, and devices that integrate with Garmin Pilot.



Connext Page & Connext Window

STATUS

SITUATIONAL DATA STATUS

When paired with a compatible navigator, Garmin Pilot has access to the same GPS information utilized by the navigator. In addition, the navigator shares attitude information to the Garmin Pilot's Synthetic vision and panel displays.

Viewing the compatible navigator situational data:




NOTE: Ensure the compatible navigator is paired to an Android device.

From Garmin Pilot, touch **Menu** > 1)



Touch the **Situational Data** Tab 2)



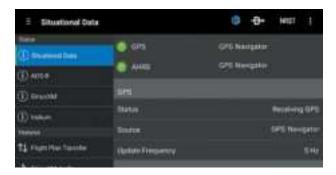

Situational Data Tab (Connext Page)

AHRS AND ALTITUDE INFORMATION

When connected to a compatible navigator, Garmin Pilot will display GPS derived back-up Attitude Indicator, Altimeter, VSI, HSI, and Ground Speed on the Panel. 'Pitch' and 'Roll' become available Nav Bar options on the Map Pane.



Panel (With Compatible Navigator Connected)



ADS-B STATUS

Traffic and weather information are available by pairing an Android device directly to a compatible ADS-B device. ADS-B data does not travel from the compatible navigator to Garmin Pilot.

Viewing ADS-B traffic and weather data:




NOTE: Ensure the compatible navigator and the compatible ADS-B device are paired to an Android device. The compatible navigator will not pass ADS-B data to the Garmin Pilot even if the ADS-B device is wired to it.

From anywhere in Garmin Pilot, touch **Home** > [[6]]



2) Touch the **ADS-B** Tab.

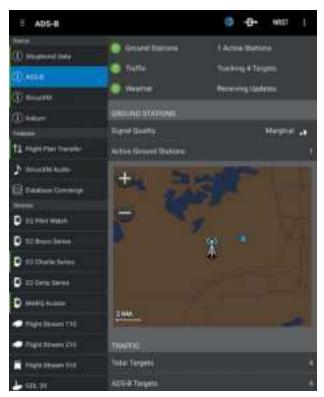

ADS-B Tab (Connext Page)



ADS-B TRAFFIC ALERTS

When Garmin Pilot is paired with a compatible ADS-B unit, the app automatically displays a pop-up window and plays an audible alert to notify users of nearby ADS-B traffic. Traffic alerts can be disabled and configured in **Home** >

Configuring Traffic Alerts:

- 1) From any page, touch Home > 4 > General.
- 2) Touch next to Traffic Alerts to disable the Traffic Alerter service. Touch again to re-enable it.
- 3) Touch the Audio option to change the Traffic Alert voice that Garmin Pilot emits. Change to **Off** to receive no audio cue when a Traffic Alert appears.



ADS-B Traffic Alert Pop-up

When a Traffic Alert Pop-up appears, three options are provided to respond to the prompt. **Dismiss** will clear the pop-up and return to the previous Garmin Pilot screen. **Show Traffic** will clear the pop-up, and bring Garmin Pilot to the Traffic screen. **Inhibit Alerts** will clear the pop-up and prevent further Traffic Alert Pop-ups from appearing.



SIRIUSXM STATUS

SiriusXM weather information is shared with Garmin Pilot for installations with a compatible SiriusXM device. In addition, remote control of SiriusXM satellite radio from Garmin Pilot is available.

Refer to the Weather Data Section for information on accessing SiriusXM weather.



SiriusXM Tab (Connext Page)



FEATURES

FLIGHT PLAN TRANSFER


Bluetooth is used to transfer flight plan information between Garmin Pilot and a compatible navigator.

Sending a flight plan from Garmin Pilot to a Navigator:



NOTE: Ensure the Garmin Navigator is paired to an Android device.

- 1) From anywhere in Garmin Pilot, touch **Home** > **(**
- 2) Touch the Flight Plan Transfer Tab.
- 3) Touch Send.

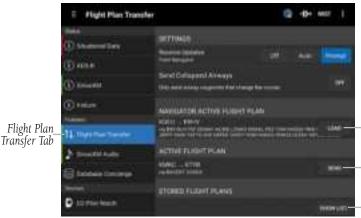

Touch to Load
-Flight Plan
From Navigator
Touch to Send
-Flight Plan to
Navigator
Touch to
-Show List of
Stored Plans

Connext - Flight Plan Transfer Tab



Flight Plan Transfer Tab

Flight Plan Transfer - Stored Flight Plans



Or:

- 1) From anywhere in Garmin Pilot, touch (10) to display the Connext Window.
- Touch **Send To** . 2)
- **Sent** is displayed. 3)



Connext Window - Sending Flight Plan to Navigator

Loading a flight plan from the Navigator to Garmin Pilot:



NOTE: Ensure the Garmin Navigator is paired to an Android device.

- From anywhere in Garmin Pilot, touch **Home** > 1)
- 2) Touch the **Flight Plan Transfer** Tab.
- Touch Load. 3)



Connext - Flight Plan Transfer Tab

Flight Plan

Transfer Tab

Touch to Load Flight

Plan From



Or:


- 1) From anywhere in Garmin Pilot, touch **(()** to display the Connext Window.
- 2) Touch Load From ...
- **3)** Loaded **((a)** is displayed.



Flight Plan Loaded From Navigator

Receiving flight plan updates from a Navigator:

- 1) From anywhere in Garmin Pilot, touch **Home** > 100.
- 2) Touch the Flight Plan Transfer Tab.
- 3) Touch Off, Auto, or Prompt.

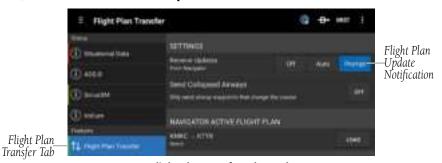

Connext - Flight Plan Transfer Tab - Update Prompt



Activating/Ignoring Flight Plan Updates From Navigator:

Touch **Ignore** or **Activate** when the Flight Plan Update Window appears.



Flight Plan Update Window

SIRIUSXM AUDIO

SIRIUSXM AUDIO REMOTE CONTROL



NOTE: Ensure a compatible SiriusXM device is paired to the Android device.

Adjusting SiriusXM Volume Using Garmin Pilot:

- 1) From anywhere in Garmin Pilot, touch **Home** > **(**
- 2) Touch the SiriusXM Audio Tab.
- **3)** Touch the volume slider to adjust volume.

Or:

- 1) From anywhere in Garmin Pilot, touch **(()** to display the Connext Window.
- **2)** Touch the volume slider to adjust the volume.




Connext Window - SiriusXM Audio Volume - Airport Info Page



Selecting SiriusXM Category Using Garmin Pilot:

- 1) From anywhere in Garmin Pilot, touch **Home** > **(**(6).
- 2) Touch the SiriusXM Audio Tab.
- 3) Touch the Categories Button.
- **4)** Touch the desired category from the list.

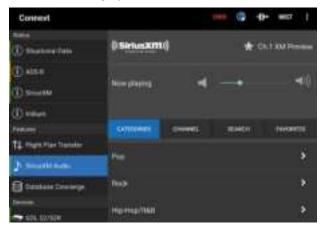


SiriusXM Audio Tab - Categories



Searching SiriusXM Satellite Radio Using Garmin Pilot:

- 1) From anywhere in Garmin Pilot, touch **Home** > **((6)**.
- 2) Touch the SiriusXM Audio Tab.
- 3) Touch the **Search** Button.
- **4)** Enter the artist or song using the keypad.
- **5)** Touch **Search** on the keypad.

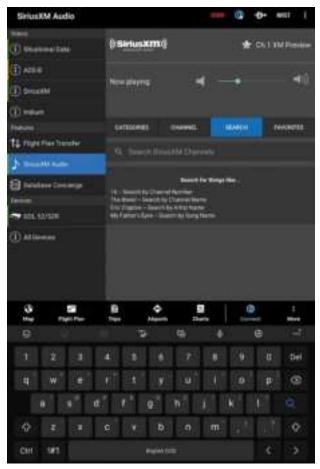

SiriusXM Audio Tab - Search




Adding a Channel to Favorites using Garmin Pilot:

- **I)** From anywhere in Garmin Pilot, touch **Home** > \bigcirc
- **2)** Touch the **SiriusXM Audio** Tab.
- 3) Touch the Channels Button.
- **4)** Touch the blue star next to the channel to add to Favorites.

Viewing Favorites using Garmin Pilot:

- 1) From anywhere in Garmin Pilot, touch **Home** > **((6)**.
- 2) Touch the SiriusXM Audio Tab.
- **3)** Touch the **Favorites** Button.

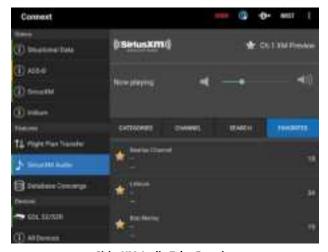

SiriusXM Audio Tab - Favorites



DATABASE CONCIERGE



NOTE: Database Concierge requires a Flight Stream 510 and a compatible navigator.

Database Concierge is a tool for updating databases for compatible Garmin navigators. Updating databases should be accomplished with the aircraft on the ground. Database Concierge aims to make this task as easy as possible by using the Wi-Fi capabilities of your Android device, as well as integration with a personalized flyGarmin account.

By default, Database Concierge is disabled. This accommodates pilots who wish to use Garmin Pilot without Database Concierge. This is also useful to pilots who use multiple Garmin Pilot devices in the cockpit. Pilots can enable Database Concierge on only one of their Garmin Pilot devices, nominating that device to download and transmit updates to their avionics.

Once set up, the ideal usage of Database Concierge is to allow Garmin Pilot to download updates while connected to the internet. Once Garmin Pilot has downloaded all of its updates, take the Android device to the aircraft. The Android device will connect to the compatible system using the Wi-Fi provided by the Flight Stream 510, and navigator updates will commence.

Adding aircraft to your flyGarmin account:

- 1) Visit https://fly.garmin.com
- **2)** Enter the email address and password for your Garmin Account. This is the same information used for Garmin Pilot subscriptions.
- 3) Click the Aircraft tab.
- 4) Click Add a new aircraft.
- **5)** Enter the information for the aircraft and click **Add Aircraft**.
- 6) Click Add a new aircraft device.
- **7)** Select the Garmin compatible system in the combo box.
- **8)** Enter the System ID for the navigator. Click **Where is my System ID?** for assistance locating the system ID. Click **Add Device** when complete.



Garmin GTN series navigators use different databases than Garmin Pilot. In other words, subscriptions for Garmin Pilot do not provide databases for GTN navigators. As such, it may be necessary to purchase database subscriptions through the flyGarmin website, if not already done.



NOTE: Ensure the Flight Stream 510 is paired to the Android device. Refer to the 'Flight Stream' section for information on pairing the Flight Stream 510 via Bluetooth or WiFi.

Enabling Database Concierge and Selecting an Aircraft:

- 2) Touch Enable Database Concierge.
- **3)** Verify that Garmin Pilot is showing the correct aircraft and aircraft device.
- 4) Touch Continue.
- 5) If desired, touch to disable Auto-Download Database Updates or Delete Downloads After Installation. Touch **Continue**.
- **6)** Touch **Accept** on the database license agreement.

Once Database Concierge has at least one aircraft with a compatible Garmin navigator, it automatically downloads database information. Database Concierge will automatically check for updates when the Garmin Pilot device is connected to the internet.



Managing database downloads:

From any screen, touch **Home** > **(()** > **Database Concierge** > **Manage Downloads**.

Or:

From any screen, touch **Home** > •



Database Concierge

Installing Downloaded Updates on a GTN Navigator:

- 1) Power on aircraft avionics.
- **2)** The GTN navigator detects Flight Stream 510. The Flight Stream's Wi-Fi network is shown on the navigator screen.
- **3)** On the Android device, connect to the indicated Wi-Fi network.
- 5) The GTN navigator shows detected updates. Touch the Start button to begin updating.





Tap to View —Wi-Fi Network & Password

Database Concierge Updates Available on GTN 750



Flight Stream 510 Wi-Fi Network as Shown On GTN 750



Installing Downloaded Updates on G1000 NXi:



NOTE: NXi will only provide a WiFi connection if new databases have been detected for download on Garmin Pilot via a valid Bluetooth connection. If there are no database updates required NXi will not provide a WiFi signal.



NOTE: If the Android device has previously connected to the FS510, and is not connected to another WiFi source, the Android device should connect automatically to the FS510. If the Android device is connected to another WiFi source (e.g. hangar wifi), then the FS510 will not connect automatically.

1) On the Android device, start Garmin Pilot and tap **Home** > ((0) > **Database Concierge**.



- Power on aircraft avionics. 2)
- On the Android device, connect via Bluetooth to the Flight Stream 510. 3)
- Navigate to **AUX** page on the **MFD**. 4)
- 5) Turn the **FMS** knob to display the **Connext Setup** page. Verify the Android device is connected via Bluetooth.
- Ensure that **WiFi Database Import** is **Enabled** on the **Connext Setup** page. 6)
- On the Android device, connect to the indicated SSID Wi-Fi network on the 7) Aux > Connext Setup page.
- 8) The G1000 NXi shows detected updates on a pop up box on the lower right corner of the **MFD** screen. Press the **Update** softkey to begin updating.
- 9) Database update status can be monitored on the Database page on the **MFD** by selecting the small **MFD** knob.
- **10)** Once the database transfers are complete the system will display a prompt to restart the avionics to finish the database transfer process.



NOTE: The Restart soft key is only enabled when the aircraft is on the ground with engines not running.

11) Press the **Restart** softkey.

Or:

Cycle the avionics power.

12) Verify the databases are current on the systems start-up screen or via the Auxiliary Group Databases page.





Database Concierge Updates Available as shown on G1000 NXi

Installing Downloaded Updates on to G3000/5000 with GDU Software 20.60 or later:



NOTE: G3000/5000 will only provide a WiFi connection if new databases have been detected for download on Garmin Pilot via a valid Bluetooth connection. If there are no database updates required, the G3000/5000 will not provide a WiFi signal.



NOTE: If the Android device has previously connected to the FS510, and is not connected to another WiFi source, the Android device should connect automatically to the FS510. If the Android device is connected to another WiFi source (e.g. hangar wifi), then the FS510 will not connect automatically.

- **1)** Power on aircraft avionics.
- From Home on the Touchscreen Controller, touch Utilities > Setup > Connext Setup.




Touch the Functions tab to ensure the WiFi Database Import is Enabled 3) on the **Connext Setup** screen.



Connext Setup Page as Shown on G3000/5000

On the Android device, connect via Bluetooth to the Flight Stream 510. 4)

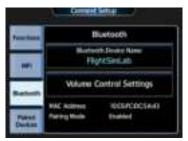

Bluetooth Setup Page as Shown on G3000/5000

On the Android device, start Garmin Pilot and tap **Home** > **((()** > 5) **Database Concierge**.



- a) With a Garmin Pilot database ready to be uploaded, the G3000/5000 Connext message icon will flash.
- **b)** Tap the Connext message icon.
- c) Tap the Connext database message, which should read that database(s) are ready to upload.
- d) The 'Start Transfer' button will now be highlighted. Touch the Start Transfer button on the Database Status screen

Or:

- From the **Home** screen, touch **Utilities** > **Setup** > **Database Status** > 6) **Device Database(s)** until Active Databases is displayed.
- The 'Start Transfer' button will now be highlighted. Touch the **Start Transfer** 7) button on the **Database Status** screen.



8) On the Android device, connect to the indicated SSID Wi-Fi network on the **Connext Setup** screen.



WiFi Setup Page as Shown on G3000/5000

9) The database update status will appear in the status window at the top of the page. The load is complete when 'Databases Ready' is displayed.



Database Concierge Updates Available as Shown on G3000/5000

10) A cyan double arrow will appear between the Standby and Active columns to show which standby databases will be transferred to Active at the next power cycle.



Databases Transfer Complete Status as Shown on G3000/5000

11) Database update status can be monitored on the **Database Status** screen or on **Database Concierge** within the Garmin Pilot app.



- **12)** Once the database transfers are complete, the system will display a prompt to restart the avionics on the ground to finish the database transfer process.
- **13)** Verify the databases are current on the **Database Status** screen or on the **Detailed Database Information** screen.

DEVICES

PAIRING A DEVICE

- I) Touch **Home** > **((**()
- **2)** Touch the desired device tab.
- 3) Touch **VIEW INSTRUCTIONS**.
- **4)** Follow the instructions to pair the device to the Android.

TROUBLESHOOTING A DEVICE

If a Bluetooth connection cannot be established, it may be necessary to remove the device from the list of available devices on the Android and repeat the pairing instructions.

Removing Device From List of Available Devices:

- 1) On the Android device, go to **Settings** > **Bluetooth**. Ensure Bluetooth is **On**.
- 2) In the list of devices, touch the 💿 next to the device to be removed.
- 3) Touch Forget this Device.
- **4)** Repeat the pairing instructions.

GARMIN PILOT COMPATIBLE WATCH

Garmin Pilot can share Flight Plans with a Garmin Pilot compatible watch via Bluetooth connection. When a Garmin Pilot compatible Watch is in 'Share Mode' it will automatically pair with an Android device.



NOTE: Route sharing can be displayed on a Garmin Pilot compatible watch with Android devices that support Bluetooth 4.0 +.



Sending User Waypoints to a Garmin Pilot Compatible Watch:

- 1) From any page touch **Home** > M > All Devices.
- 2) Scroll down to the Other Devices section, if necessary, and select the desired watch.
- 3) Ensure the Garmin Pilot compatible watch is in 'Share Mode'. Touch **Send** next to the desired waypoint to send. Waypoints that have been shared with the watch will momentarily display a green check mark.

Sending Flight Plans to Garmin Pilot Compatible Watch:

From any page touch **Home** > **Menu** > **Share Flight Plan**. Ensure the watch is in 'Share Mode' to receive flight plan data.

Or:

- 1) From any page touch **Home** $> \bigcirc \bigcirc >$ All **Devices**.
- 2) Scroll down to the Other Devices section, if necessary, and select the desired Watch
- **3)** Touch **Send** next to the desired flight plan to send.



Connext Page (D2 Pilot Watch Tab)



FLIGHT STREAM

Flight Stream is a wireless Bluetooth gateway that integrates pre-flight and inflight activities by enabling bi-directional communication between Garmin avionics and Garmin Pilot. When Garmin Pilot is paired with a Flight Stream 110/210/510 connected to a compatible ADS-B device, the app will display a pop-up window and play an audible alert to notify users of nearby ADS-B traffic.

Flight Stream & Remote Capabilities	Flight Stream 110	Flight Stream 210	Flight Stream 510
GPS (Position, Velocity, and Time)	✓	✓	✓
ADS-B Weather and Traffic	✓	✓	✓
SXM Weather	✓	✓	✓
SXM Audio Remote Control	✓	✓	✓
Attitude Information		✓	✓
Two-way Flight Plan Transfer		✓	✓
GDL 88 and GDL 69/69A Compatible	✓	✓	
GTN Series, GNS 430W/530W, G1000 NXi, and G3000/5000 Compatible		✓	✓
Database Concierge			√

Flight Stream 110/210/510 Capabilities



NOTE: Up to four mobile devices can be simultaneously connected to a Flight Stream.

Flight Stream 110 enables the following communication between Garmin avionics and Garmin Pilot:

- The GDL 88 shares weather and traffic with Garmin Pilot.
- The GDL 69 shares SXM weather with Garmin Pilot.
- A compatible GPS Navigator shares GPS information with Garmin Pilot.
- Remotely control SiriusXM satellite radio from Garmin Pilot.



Flight Stream 210 enables all of the previous communications including:

- Flight plan transfer to and from a compatible GPS Navigator.
- Adding of victor airways into flight plans from Garmin Pilot to a compatible GPS Navigator.
- Shares attitude information to the Garmin Pilot's Synthetic Vision and panel displays.

Flight Steam 510 enables all of the above communications including:

 Database Concierge functionality that updates databases for compatible systems, in addition to loading upcoming database cycles for automatic transition as the cycle becomes active.



NOTE: It will be necessary to disconnect from previous Wi-Fi hotspots to connect to a Flight Stream 510 over Wi-Fi.



NOTE: When connected to a Flight Stream 510 over Bluetooth, if new database downloads are available and Garmin Pilot has previously connected to the Flight Stream 510, Garmin Pilot will automatically and temporarily connect over Wi-Fi to download the new databases, then switch back to Bluetooth.

GDL 39

The GDL 39 is a Bluetooth® enabled receive-only data link radio with on-board GPS, 978 MHz (Universal Access Transceiver frequency band), and 1090 MHz Extended Squitter (1090 ES) receivers. It is designed to receive, process, and output traffic (ADS-B air-to-air, and Traffic Information Service-Broadcast (TIS-B) traffic information), and weather (Flight Information Service-Broadcast (FIS-B)) information to Garmin Pilot wirelessly through Bluetooth®. The GDL 39 Tab displays the GDL 39 Bluetooth connection status, GDL 39 firmware version, Pressure and Geometric Altitude. The Traffic information includes the number and source (e.g., ADS-B air-to-air, or TIS-B) of traffic the GDL 39 is currently tracking. The Weather information provides the age of weather products received through (FIS-B). The GDL 39 also has a pressure altitude sensor to aide in displaying the relative altitude of received traffic information.






NOTE: Update the GDL 39 firmware in order to take advantage of the Bluetooth connectivity improvements in Garmin Pilot.

Updating GDL 39 / GDL 39 3D Firmware:

- 1) Ensure the tablet and the GDL 39 / GDL 39 3D are connected to a reliable external power source.
- 2) From any page, touch **Home** >
- 3) Touch the GDL 39 Tab.
- **4)** Touch **Update Firmware**. (The 'Update Firmware' button is only displayed when an update is available.) The **Release Notes** Window is displayed.
- **5)** After reading the release notes touch **Continue**.

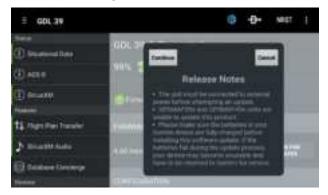



GDL 39 Release Notes

GDL 39 Firmware Warning



CAUTION: Never remove power from the GDL 39 or power off the Android device during a GDL 39 firmware update. If power is removed from the GDL 39 during a firmware update it will be rendered inoperable and service will be required.



Configuring the GDL 39 / GDL 39 3D for a Pressurized or Non-Pressurized Aircraft:

- 1) From any page, touch **Home** >
- 2) Touch the GDL 39 Tab.
- 3) Touch Pressurized Cabin to select/deselect.



Connext Page (GDL 39 Tab)



NOTE: When connected to a GDL 39, the device GPS information is replaced with GDL 39 GPS information. The GDL 39 GPS receiver is capable of updating position information at a much higher frequency, thus providing more accurate GPS position information.



GDL 51/51R

The GDL 51 is a Bluetooth® enabled portable receiver that receives internal WAAS enabled GPS, SiriusXM weather/audio, attitude and pressure information to compatible displays and audio devices via Bluetooth® wireless technology. The GDL 51/51R tab displays the GDL 51 Bluetooth connection status and GDL 51 firmware version. The rechargeable lithium-ion battery in the GDL 51 allows the unit to receive SiriusXM data for up to 7 hours on a single charge.

The GDL 51R remote mount version can be hard wired or be wirelessly connected to G3X Touch, and aera 660/760/795/796, while also wirelessly connecting to Garmin Pilot. These products will request this information over a Connext data connection.

GDL 52/52R

The GDL 52 is a Bluetooth® enabled portable receiver receives internal WAAS-enabled GPS, SiriusXM weather/audio, ADS-B traffic and weather, attitude and pressure information to compatible displays and audio devices via Bluetooth® wireless technology and/or over wired connections. The GDL 52 receives traffic (ADS-B/ADS-R, air-to-air, or TIS-B) on both Universal Access Transceiver (UAT) frequency band, and 1090 MHz Extended Squitter (1090 ES) receivers. It is designed to receive, process, and output traffic (ADS-B air-to-air, and Traffic Information Service-Broadcast (TIS-B) traffic information), and weather (Flight Information Service-Broadcast (FIS-B)) information to Garmin Pilot wirelessly through Bluetooth®. The GDL 52/52R tab displays the GDL 52 Bluetooth connection status and GDL 52 firmware version. The Traffic information includes the number and source (e.g., ADS-B/ADS-R, air-to-air, or TIS-B) of traffic the GDL 52 is currently tracking. The rechargeable lithium-ion battery in the GDL 52 allows the unit to operate for up to 5 hours on a single charge.

The GDL 52R remote mount version can be hard wired or be wirelessly connected to G3X Touch, and aera 660/760/795/796, while also wirelessly connecting to Garmin Pilot. These products will request this information over a Connext data connection.

GLO

GLO receives position information from both GPS and GLONASS satellite constellations. This allows GLO to connect to up to 24 more satellites and updates its position information up to 10 times more often than devices that rely on GPS alone. As such, when connected to GLO, the Android GPS information is replaced with GLO GPS information.



AERA 660/760

The aera 660/760 is a handheld touchscreen GPS navigator. Pairing an Android device with an aera 660/760 enables wireless transfer of flight plans to/from an Android device (using Garmin Pilot).

G3X TOUCH



NOTE: Interfacing with Android devices requires a Connext configuration module for proper Bluetooth operation. Without this configuration module the G3X Touch/Garmin Pilot authentication will not complete. Refer to the G3X Touch Installation Manual for more information.



NOTE: In a multiple display G3X Touch system, Connext Bluetooth connections to Garmin Pilot devices should only be made to the PFD1.

The G3X Touch is a large-format flight display with a wireless Bluetooth gateway that can be used to enable bi-directional communication between the G3X Touch and Garmin Pilot.

Pairing an Android device with G3X Touch enables the following communication between G3X Touch and Garmin Pilot:

- Wireless transfer of flight plans to/from an Android device (using Garmin Pilot) to the G3X Touch.
- An Android device (with Garmin Pilot) paired with both a G3X Touch and compatible ADS-B device, shares GPS, attitude, traffic, and weather data.

Connext Bluetooth pairing recommendations:

- Only use the Bluetooth interface on PFD1 for Connext data sharing with Android devices using Garmin Pilot.
- Do not attempt to pair the G3X Touch displays to each other in a multiple display installation.
- Turn off any display's Bluetooth transceiver which is not in use.





NOTE: In general, one or two devices running Garmin Pilot may be connected as shown below. Due to the wide variability of these devices, the best user experience may, in some cases, be limited to a single mobile device connected to the system components.



^{*}iOS Garmin Pilot 7.2+ with location data disabled



GTX 345/45R

The GTX 345/45R is a Bluetooth® enabled receive-only data link radio with on-board GPS, Universal Access Transceiver, and Extended Squitter (1090 ES) receivers. It is designed to receive, process, and output traffic (ADS-B air-to-air and Traffic Information Service-Broadcast (TIS-B) traffic information) and weather (Flight Information Service-Broadcast (FIS-B)) information to Garmin Pilot wirelessly through Bluetooth®. The GTX 345/45R Tab displays the Bluetooth connection status, GTX 345/45R firmware version, pressure and geometric altitude. The Traffic information includes the number and source (e.g., ADS-B air-to-air, or TIS-B) of traffic the GTX 345/45R is currently tracking. The Weather information provides the age of weather products received through (FIS-B). The GTX 345/45R also has a pressure altitude sensor to aid in displaying the relative altitude of received traffic information.



NOTE: When connected to a GTX 345/45R, the device GPS information is replaced with GTX 345/45R GPS information. The GTX 345/45R GPS receiver is capable of updating position information at a much higher frequency, thus providing more accurate GPS position information.

GPS 175/GNC 355/GNX 375

The GPS 175, GNC 355, & the GNX 375 are 2" by 6.25" panel mount navigators with full color capacitive touchscreen technology.

The GPS 175 is a GPS/WAAS navigator with en route, terminal, and precision/non-precision approach capabilities. The GNC 355 combines the functionality of the GPS 175 with a built-in10-watt Comm radio. The GNX 375 combines the functionality of the GPS 175 with a mode S transponder.

Each unit is Bluetooth compatible, providing flight plan, traffic, weather, and position data to an available portable device.



GI 275

The GI 275 is an electronic flight instrument that directly replaces legacy primary flight instruments in the cockpit. The GI 275 is suitable as a direct replacement for a variety of instruments, including an attitude indicator, attitude directional indicator (ADI), course deviation indicator (CDI), horizontal situation indicator (HSI), multifunction display (MFD) and engine indication system (EIS). Capable of serving as a 4-in-1 flight instrument with attitude, airspeed, altitude, and heading information, the GI 275 can also be installed as a standby to a number of glass flight displays and is available with a 60-minute back-up battery.

The GI 275 boasts a standard 3.125" form factor and rear-mount design that minimizes panel modification. Several variants of the GI 275 are available to meet the needs of many business and general aviation aicraft models. Units can be configured in many different ways to display flight plan, traffic, terrain, weather, and position data to an available portable device thanks to Bluetooth connectivity. For additional information, please refer to the GI 275 Pilot's Guide.

VIRB® ACTION CAMERAS

Garmin Pilot allows the user to remotely control any VIRB® action camera to start and stop video recording as well as take still photos. Videos and photos taken with VIRB® action cameras are stored on the VIRB® device itself, not on the phone or tablet running Garmin Pilot. VIRB® videos and photos can be accessed using the Garmin VIRB app.



Connecting a VIRB® Action Camera:

- 1) On the VIRB® camera, select **MODE** > **SETUP** > **WiFi**.
- **2)** Change WiFi to **On**. The camera's SSID and password will appear on the camera display.
- 3) On the Android device, go to **Settings** > **Wi-Fi**. Ensure Wi-Fi is **On** and select the camera's SSID from the list.
- **4)** On the Android device, enter the password as shown on the camera's display.
- 5) In Garmin Pilot, touch **Home** > **Connext** > **VIRB**.
- **6)** Touch **Connect**.



Connecting To VIRB Over Wi-Fi




The Camera Settings provided by Garmin Pilot match the settings available in the Garmin VIRB app, allowing full control of recording without switching apps.

Configuring Camera Settings:

- 1) From any page touch **Home** > (() > VIRB.
- 2) Touch Configure Camera Settings.

Configuring Auto-Attach VIRB photos to logbook entry:

- 1) From any page, touch **Home** > **(()** > **VIRB** Tab.
- 2) Touch Configure Camera Settings.
- 3) Touch Auto-Attach VIRB Photos to Logbook Entry switch On.

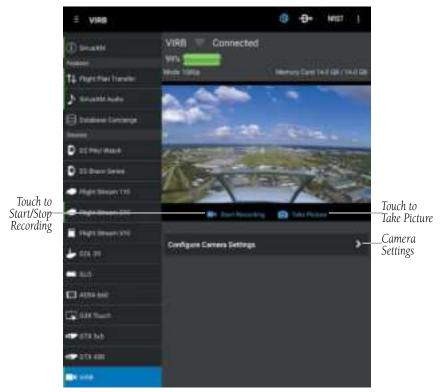

Connext Page - VIRB Elite Tab



Recording using a VIRB® Action Camera:

- 1) From any page touch **Home** > ((i) > VIRB.
- 2) Touch Start Recording/Stop Recording.

Taking a photo with a VIRB® Action Camera:

- 1) From any page touch **Home** > **(()** > **VIRB**.
- 2) Touch Take Picture.

Using the VIRB® Widget in Split-Screen Mode:

- 1) From any page, touch **Home** > **\$\frac{1}{3}\text{}**.
- 2) Touch Menu > .
- **3)** Touch the **VIRB** tab to access the VIRB Widget.



VIRB Widget (Split-Screen)



SUBSCRIPTIONS

Garmin Pilot offers the ability to purchase two additional subscriptions. First, Georeferenced FliteCharts show aircraft position on over 11,000 approach plates. Second, Garmin's SafeTaxi shows runways, taxiways, FBOs and hangers, geo-referenced with the current location.

GEO-REFERENCED FLITECHARTS

If a FliteCharts subscription has been purchased, ensure that Garmin Pilot log-in information has been entered in the subscriptions tab of the Settings Page. Georeferenced FliteCharts will be active on all available approach charts.



Geo-Referenced FliteCharts

SAFETAXI


SafeTaxi is an enhanced feature that gives an airport diagram with greater map detail. SafeTaxi diagrams showing taxiways with identifying letters, runway numbers, airport Hot Spots, and airport landmarks including ramps, buildings, control towers, and other prominent features. Resolution is greater at lower map ranges.



Designated Hot Spots are recognized at airports with many intersecting taxiways and runways, and/or complex ramp areas. Airport Hot Spots are outlined to caution pilots of areas on an airport surface where positional awareness confusion or runway incursions happen most often. Hot Spots are defined with a red circle or outline around the region of possible confusion.

Viewing SafeTaxi (Subscription Required):

- 1) From any page, touch Home > 🥏
- **2)** Touch **SafeTaxi** to view the SafeTaxi airport diagram.
- **3)** Touch the system back button to return Airport Info Page.

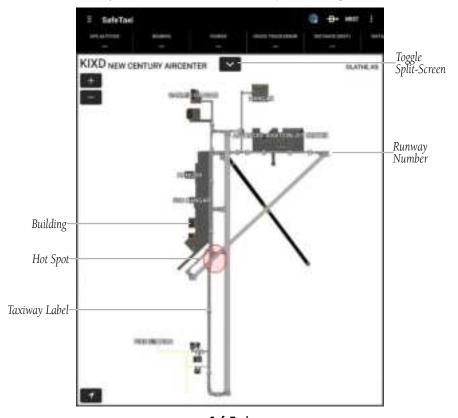

SafeTaxi



APPENDIX A: LICENSE AGREEMENT AND WARRANTY

CONTACT GARMIN

Contact Garmin Product Support at flygarmin.com if you have any questions while using Garmin Pilot.

END-USER LICENSE AGREEMENT

Garmin Pilot™ by Garmin application and data (the "Application") are licensed, not sold. The Application is provided under the following license and is subject to the following terms and conditions, which are agreed to by End User ("you" or "your"), on the one hand, and Garmin, International, Inc. and its affiliates (collectively, "Garmin") on the other hand.

IMPORTANT: CAREFULLY READ THIS LICENSE BEFORE USING THIS APPLICATION. USING THIS APPLICATION INDICATES YOUR ACKNOWLEDGMENT THAT YOU HAVE READ THIS LICENSE AND AGREE TO ITS TERMS. IF YOU DO NOT AGREE, THEN YOU MUST NOT USE THE APPLICATION.

LICENSE TERMS AND CONDITIONS

Garmin grants you a limited, non-exclusive license to use the Application in accordance with the terms of this Agreement. You agree not to reproduce, copy, modify, decompile, disassemble, reverse engineer or create derivative works of any portion of the Application, and you may not transfer or distribute it in any form, for any purpose. Garmin reserves the right to anonymously collect and report non-personally identifiable information related to your use of the Application, such as the frequency with which you use the Application.

Restrictions. You are prohibited from selling, renting or leasing the Application to any other person or third party. You acknowledge the Application should be used only for general information purposes and you should not rely on the Application for any life or death situation. The Application should not be relied upon as a sole source of navigation.

No Warranty. This Application is provided to you "as is," and you agree to use it at your own risk. Garmin makes no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, merchantability, fitness for a particular purpose, usefulness, use or results to be obtained from the Application, or the Application will be uninterrupted or error-free.

Appendix A



Advertisements. If the Application is partially or fully supported by advertisements you will receive advertisements on your mobile device when you use the Application. Garmin might also share on an anonymous basis the location of your mobile device with the third party supplier of advertisements so the supplier can provide you with advertisements that are relevant to the location of your device.

Meteo France Weather Data. Weather data provided and/or displayed by Meteo France in connection with the Application, hereafter called "Meteo France Weather Data", only indicates the measurement or the most probable evolution of a set of elements. You therefore acknowledge that Meteo France shall not be liable for the accuracy of Meteo France Weather Data made available to you, whether such data are produced by Meteo France or by third-parties. Meteo France, moreover, cannot be held responsible for events that may result from the interpretation and/or utilization by you, directly or indirectly, of the Meteo France Weather Data made available. Meteo France cannot be held liable for the absence of observation data in the set of Meteo France Weather Data provided to you in the case of absence or delay in availability to Meteo France of data produced and owned by national meteorological services (NMS), via ECOMET or EUMETSAT, or via the Global Transmission System (GTS). Consequently, you refrain from pursuing either Meteo France or Meteo France's own providers for events relating to any interpretation of the information contained in the Meteo France Weather Data made available to you, or for missing data. You acknowledge that you have been fully informed of the restrictions of use of such Meteo France Weather Data, of the exclusions and/or of the limitations of liability regarding such Meteo France Weather Data and of the date of validity of Meteo France Weather Data provided and/or displayed by Meteo France, if any. The Meteo France Weather Data is provided on an "as is" basis, without any warranties or conditions, express or implied, including, but not limited to, any implied warranty arising by law, statute, usage of trade, or course of dealing. You assume all responsibility and risk for the use of the Meteo France Weather Data and Meteo France disclaims all liability for any loss, injury or damage, resulting from the use of the Meteo France Weather Data, whether direct or indirect, and whether or not Meteo France has been advised of or has knowledge of the possibility of such loss, injury or damage. In no event shall Meteo France have any liability to you or any other person or entity for any compensatory, indirect, incidental, special, consequential or exemplary damages whatsoever, including, but not limited to, loss of revenue or profit, or other commercial or economic loss, even if Meteo France has been advised of the possibility of such damages, or they are foreseeable.

Disclaimer of Warranty. GARMIN AND ITS AFFILIATES DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NONINFRINGEMENT. NO ORAL OR WRITTEN ADVICE OR INFORMATION PROVIDED BY GARMIN SHALL CREATE A WARRANTY, AND YOU ARE NOT ENTITLED TO RELY ON ANY SUCH ADVICE OR INFORMATION. THIS DISCLAIMER OF WARRANTIES IS AN ESSENTIAL CONDITION OF THIS AGREEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.



Disclaimer of Liability. GARMIN AND ITS AFFILIATES SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THE APPLICATION, ANY DEFECT IN THE APPLICATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF GARMIN HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. GARMIN'S AND ITS AFFILIATES' TOTAL AGGREGATE LIABILITY WITH RESPECT TO ITS OBLIGATIONS UNDER THIS AGREEMENT OR OTHERWISE WITH RESPECT. TO THE APPLICATION SHALL NOT EXCEED \$1.00. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Export Control. You agree not to export from anywhere any part of the Application provided to you or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations.

Indemnity. You agree to indemnify, defend and hold Garmin and its affiliates free and harmless from and against any liability, loss, injury (including injuries resulting in death), demand, action, cost, expense, or claim of any kind or character, including but not limited to attorney's fees, arising out of or in connection with any use or possession by you of the Application.

Entire Agreement. These terms and conditions constitute the entire agreement between Garmin and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

GOVERNING LAW. THE ABOVE TERMS AND CONDITIONS SHALL BE GOVERNED BY THE LAWS OF KANSAS, WITHOUT GIVING EFFECT TO ITS CONFLICT OF LAWS PROVISIONS. YOU AGREE TO SUBMIT TO THE JURISDICTION OF KANSAS FOR ANY AND ALL DISPUTES, CLAIMS AND ACTIONS ARISING FROM OR IN CONNECTION WITH THE APPLICATION PROVIDED TO YOU HEREUNDER.



WARNING: For VFR use only as an aid to prudent navigation. All information is presented for reference only. You assume total responsibility and risk associated with using the AOPA Airport Directory.



AOPA AIRPORT DIRECTORY NOTICE

AOPA MEMBERSHIP PUBLICATIONS, INC. AND ITS RELATED ORGANIZATIONS (HEREINAFTER COLLECTIVELY "AOPA") EXPRESSLY DISCLAIM ALL WARRANTIES, WITH RESPECT TO THE AOPA INFORMATION INCLUDED IN THIS DATA, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE INFORMATION IS PROVIDED "AS IS" AND AOPA DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING ITS ACCURACY, RELIABILITY, OR OTHERWISE. UNDER NO CIRCUMSTANCES INCLUDING NEGLIGENCE, SHALL AOPA BE LIABLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES THAT RESULT FROM THE USE OR INABILITY TO USE THE SOFTWARE OR RELATED DOCUMENTATION, EVEN IF AOPA OR AN AOPA AUTHORIZED REPRESENTATIVE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. USER AGREES NOT TO SUE AOPA AND, TO THE MAXIMUM EXTENT ALLOWED BY LAW, TO RELEASE AND HOLD HARMLESS AOPA FROM ANY CAUSES OF ACTION, CLAIMS OR LOSSES RELATED TO ANY ACTUAL OR ALLEGED INACCURACIES IN THE INFORMATION ARISING OUT OF GARMIN'S USE OF THE INFORMATION IN THE DATASETS. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OR EXCLUSION OF IMPLIED WARRANTIES OR LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

SIRIUSXM SATELLITE RADIO SERVICE AGREEMENT

SiriusXM Satellite Radio Inc.

Hardware and required monthly subscription sold separately. Subscription fee is consumer only. Other fees and taxes, including a one-time activation fee may apply. All programming fees and weather data subject to change. SiriusXM WX weather data displays and individual product availability vary by hardware equipment. Reception of the SiriusXM signal may vary depending on location. Subscriptions subject to Customer Agreement included with the SiriusXM Welcome Kit and available at siriusxm.com. Available only in the 48 contiguous United States. SiriusXM WX is a trademark of SiriusXM Satellite Radio Inc.

Contact SiriusXM Satellite Radio by phone at 800.985.9200 to subscribe to SiriusXM Weather and/or SiriusXM Radio.



WEATHER DATA WARRANTY

THE WEATHER DATA SOFTWARE PRODUCT IS PROVIDED "AS IS." ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR OF NON-INFRINGEMENT ARE HEREBY EXCLUDED.

USER SAFETY

If you use SiriusXM Services it is your responsibility to exercise prudent discretion and observe all safety measures required by law and your own common sense. You assume the entire risk related to your use of the Services. SiriusXM and Garmin assume no responsibility for accidents resulting from or associated with use of the Services. Your Radio Service includes traffic and weather information, and you acknowledge that such information is not for "safety for life", but is merely supplemental and advisory in nature, and therefore cannot be relied upon as safety-critical in connection with any aircraft, sea craft or automobile usage. This information is provided "as is" and SiriusXM and Garmin disclaim any and all warranties, express and implied, with respect thereto or the transmission or reception thereof. SiriusXM and Garmin further do not warrant the accuracy, reliability, completeness or timeliness of the traffic and weather information disclosed on the Radio Service. In no event will SiriusXM and Garmin, their data suppliers, service providers, marketing/distribution, software or Internet partners or hardware manufacturers be liable to you or to any third party for any direct, indirect, incidental, consequential, special, exemplary or punitive damages or lost profits resulting from use of or interruptions in the transmission or reception of the Services.

LIMITS ON OUR RESPONSIBILITY

a) DISCLAIMERS.

EXCEPT AS EXPRESSLY PROVIDED HEREIN, WE MAKE NO WARRANTY OR REPRESENTATION, EITHER EXPRESS OR IMPLIED, REGARDING THE RADIO SERVICE. YOUR USE OF THE SERVICE IS AT YOUR SOLE RISK. THE CONTENT AND FUNCTIONALITY OF THE SERVICE IS PROVIDED "AS IS" WITHOUT ANY WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. ALL SUCH WARRANTIES OR REPRESENTATIONS (INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND NON-INFRINGEMENT) ARE HEREBY DISCLAIMED.

b) LIMITATIONS OF LIABILITY.

WE ARE NOT RESPONSIBLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OR LOSSES RELATING TO THE USE OF THE RADIO SERVICE, WHETHER BASED ON NEGLIGENCE OR OTHERWISE. OUR TOTAL LIABILITY TO YOU AND ANY OTHER PERSONS RECEIVING OUR SERVICES, REGARDLESS OF THE CAUSE, WILL IN NO EVENT EXCEED THE AMOUNTS THAT YOU HAVE PAID TO US FOR THE SERVICE THAT YOU RECEIVED DURING THE SIX (6) MONTH PERIOD IMMEDIATELY PRIOR TO THE SPECIFIC EVENT THAT GAVE RISE TO THE APPLICABLE DAMAGE OR LOSS. THIS ALLOCATION OF RISK IS REFLECTED IN OUR PRICES. YOU MAY HAVE GREATER RIGHTS THAN DESCRIBED ABOVE UNDER YOUR STATE'S LAWS

Appendix A



This product was developed using DAFIFTM, a product of the National Geospatial-Intelligence Agency. This product has not been endorsed or otherwise approved by the National Geospatial-Intelligence Agency, or the United States Department of Defense (10 U.S.C. 425)

a. Under 10 U.S.C. 456, no civil action may be brought against the United States on the basis of the content of a navigational aid prepared or disseminated by either the former Defense Mapping Agency (DMA), National Imagery and Mapping Agency (NIMA), or the National Geospatial-Intelligence Agency (NGA).

b. The DAFIFTM product is provided "as is," and no warranty, express or implied, including, but not limited to the implied warranties of merchantability and fitness for particular purpose or arising by statute or otherwise in law or from a course of dealing or usage in trade, is made by NGA as to the accuracy and functioning of the product.

c. Neither NGA nor its personnel will be liable for any claims, losses, or damages arising from or connected with the use of this product. The user agrees to hold harmless the United States National Geospatial-Intelligence Agency. The user's sole and exclusive remedy is to stop using the DAFIF product.



INDEX

Α

Accelerometers 3 ADS-B 2 49 57 Advanced Map Settings 27 178 aera 306 307 AHRS 281 Aircraft Information 7 9 41 43 44 61 77 150 151 AIRMFT 191 224 239 Airway 25 97 150 303 Alert 16 17 28 30 38 133 179 200 251 261 266 283 Altimeter 23 46 140 211 235 281 Altitude 23 55 63 81 84 86 87 88 89 115 116 117 118 122 140 144 155 156 187 209 210 212 215 234 243 246 247 257 258 259 260 261 262 266 267 281 303 Amend 150 Attitude Indicator 215 216 281 310 Autoroute 157 158 159 162

В

Base Map 24 171 189
Bearing 23 187 207 209 256
Binder 136 268 269 271 272
273 274
Brightness 3 15

C

Cancel 17 64 70 71 78 150 151 169 202 Chart Overlay 26 178 274 275 276 277 Clone 77 78 165 Cloud Cover 232 242 247 Cross Track Error 23 187 209



D

D2 301

Database Concierge 52 54 292 293 294 295 296 297 298 299 302 303 Dewpoint 140 235

Ε

Eurocontrol 158
European 39 150 157 158 159 160 161 162 163

F

FBO 12 33 130 131 134 136 138 139 140 148
Flight Conditions 236
Flight Plan Transfer 285 286 287 302
Flight Stream 55 57 224 292 293 294 295 296 298 302 303
FSS 151
Fuel Prices 1 111 122 123 127 138 180 181

G

G3X Touch 55 306 307 308
Garmin Pilot Compatible Watch 300 301
Garmin Weather Data Services 47 170 223
GI 275 310
Glide Range Ring 20 22 185
GLO 2 49
Google Maps 45 122 123 129 201 202 276
Ground Speed 23 117 118 164 187 210 212 281

Н

Hot Spot 136 315

ı

Icing 52 147 221 234 238 239 242 244 IFR 92 147 150 151 154 156 158 159 Infrared 1 232 233

J

Jet 122 127



Κ

Keyboard 4 27 41 43 93 94 96 97 98 151 155 156 178 188 271

L

Latitude 23 46 94 187 210 Lightning 92 244 247 Logbook Auto-Logging 67 Logbook Photos 66 Logbook Tracks 68 69 191 Longitude 23 94 210

M

METAR 23 140 141 211 224 235 238 247 248 MVFR 235 236 237

N

Nav Aids
Navaids 12 27 28 33 175 178 179
NavTrack 92 149 224 225 226
NOTAM 12 24 25 29 33 47 128 130 131 134 135 136 137 138 140
148 170 171 190 191 193 194 195 196 197 198 199 200 201
250 251

0

Observation Age 236 Obstacle 180 184 191 250 261 265 267 274 Ownship 22 172 181 182 184 185

P

Panel Mode 5
Performance Data 82 115 156 164
Pinch Zoom 4
Pre-flight Planning 92
Push-Pin 226



R

Radar 167 172 180 181 228 230 233 238
Radial Menu 170 190 191 192 193 194 201 202 203 205 239 240 248 276
Recent 34
Rotation lock 3
Rotation Lock 3
Rubber-Band 95 152

S

SafeTaxi 5 24 27 30 37 84 85 88 122 123 128 170 171 179 181 186 208 314 315

Scratch Pad 12 31 33 278 279

Split-Screen 5 20 24 25 69 149 170 171 195 208 209 216 217 218 219 220 221 222 224 225 249 250 313 315

Stadium TFR 241

STAR 205 268 273

Station ID 235 237

Stopwatch 13 14

T

Terrain 12 20 21 22 33 55 56 58 59 60 62 80 81 110 184 185 210 223 252 261 262 263 267 274 310

Traffic Alerts 38 283

Traffic Pattern 134

U

Units 13 34 46 310 Universal Access Transceiver 252 303 306 309 User Waypoint 18 44 45 95 152 190 191 202 US Instrument Procedures 87 88 90 US Navigation Data 84 85 88



V

Velocity 23 210 253

Vertical Speed 5 23 55 63 81 116 117 118 187 211

VFR 1 7 25 26 27 42 84 86 87 89 92 151 154 156 172 178 179

189 235 236 237 318

VIRB 5 66 208 310 311 312 313

Visibility 23 27 28 29 42 46 122 140 142 143 174 175 176 177 178

179 183 187 194 197 211 235 236 237 239 247

Visited Airports 71 72 73

W

Waypoint Identifier 93 94 96 97 98 151

Weather Briefing 1 167 168

Weather Synopsis 167

Widget 5 29 37 69 149 194 224 225 226 228 248 249 250 313

Wind Barb 245 246

Wind Gust 237

Winds Aloft 1 5 47 140 144 167 180 181 191 219 220 221 224 245

246

Wind Speed 23 42 211 235 237 245



Garmin International, Inc. 1200 East 151st Street Olathe, Kansas 66062, U.S.A.

> Garmin AT, Inc 2345 Turner Road SE Salem, OR 97302, U.S.A

Garmin (Europe) Ltd. Liberty House, Hounsdown Business Park, Southampton, Hampshire SO40 9LR U.K.

> Garmin Corporation No. 68, Zhangshu 2nd Road Xizhi District, New Taipei City, Taiwan

> > flygarmin.com