



[Home](#) » [MAGNUS SIMBIO](#) » **MAGNUS SIMBIO RSRRSRB11 Above Ground Pool Round**
Installation Guide 

Contents [[hide](#)]

- [1 MAGNUS SIMBIO RSRRSRB11 Above Ground Pool Round](#)
- [2 GENERAL INSTRUCTIONS](#)
- [3 INSTRUCTIONS](#)
- [4 ASSEMBLING](#)
- [5 SETTING UP THE POOL WALL](#)
- [6 INSTALLATION OF THE UPRIGHTS](#)
- [7 INSTALLATION OF THE STABILIZERS AND TOP PLATES](#)
- [8 POOL INSPECTION](#)
- [9 CLOSING YOUR POOL FOR WINTER](#)
- [10 PREPARING YOUR POOL IN SPRING](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)

MAGNUS SIMBIO

MAGNUS SIMBIO RSRRSRB11 Above Ground Pool Round



IMPORTANT INFORMATION ABOUT YOUR LINER


- We do not make or supply liners for our pools.
- Please contact your liner's manufacturer with questions or if instructions are not included with the liner.
- Liner must be installed per the liner manufacturer's instructions.
- Incorrect liner installation may void the warranty.

GENERAL INSTRUCTIONS

GENERAL INSTRUCTIONS – ROUND POOLS GROUND PREPARATION

PARTS LISTING

Magnus RTR PMAG-54RSRSRSB11 Round

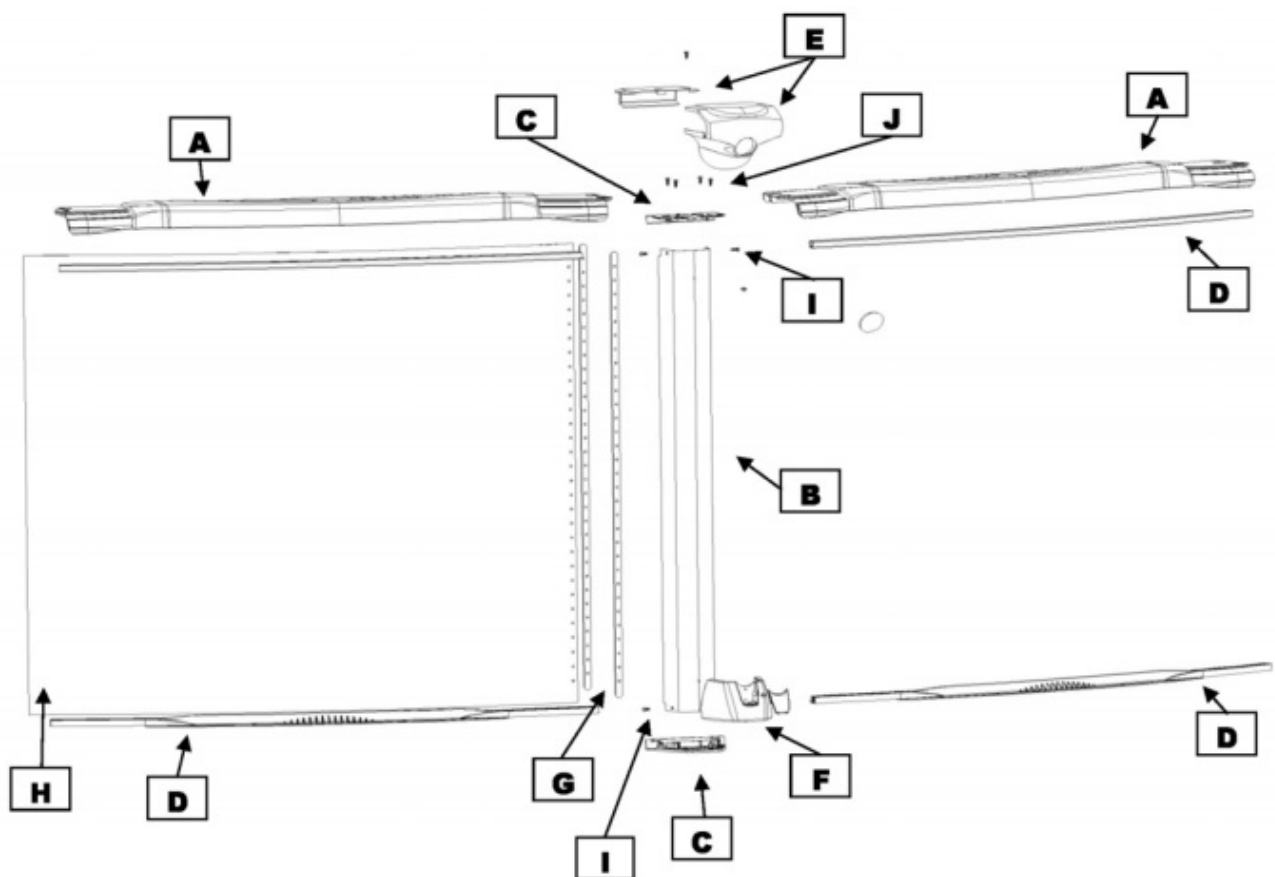

IMPORTANT NOTE:


Make sure you have all the parts necessary before you start installation.

Product Description : Magnus Round			Revised Sept 2022							
Product Code : PMAG-54RSRSRB11										
			Quantity required for installation (by pool size)							
Index#	Description	Parts #	12	15	18	21	24	27	30	33
A	Top ledge	AR744-001-R	8	10	12	14	16	18	20	22
B	Upright	ART811-R12954M	8	10	12	14	16	18	20	22
C	Top plate	21120A	8	10	12	14	16	18	20	22
C	Bottom plate	CG21120B	8	10	12	14	16	18	20	22
D	Stabilizer	LA1255612	8							
D	Stabilizer	LA1255615		10						
D	Stabilizer	LA1255618			12					
D	Stabilizer	LA1255621				14				
D	Stabilizer	LA1255624					16			
D	Stabilizer	LA1255627						18		
D	Stabilizer	LA1255630							20	22
D	Bottom rail	1525515	8	10						
D	Bottom rail	1525524			12	14	16	18		
D	Bottom rail	1525530							20	22
E	Ledge cover	AR211-23120ABC	8	10	12	14	16	18	20	22
F	Foot cover	AR711-23300AC	8	10	12	14	16	18	20	22
G	Steel bars	11825	2	2	2	2	2	2	2	2
H	Wall		1	1	1	1	1	1	1	1
I	Screw 12x3/4	V12x34	58	66	74	86	98	113	129	147
J	Screw 12x1-1/4S	VHL12x114S	35	42	53	63	74	74	84	95
*	Hardware bag/pool	SACV12X34-58	1							
*	Hardware bag/pool	SACV12X34-66		1						
*	Hardware bag/pool	SACV12X34-74			1					
*	Hardware bag/pool	SACV12X34-86				1				
*	Hardware bag/pool	SACV12X34-98					1			
*	Hardware bag/pool	SACV12X34-113						1		
*	Hardware bag/pool	SACV12X34-129							1	
*	Hardware bag/pool	SACV12X34-147								1
**	Hardware bag/wall	1050000054	1	1	1	1	1	1	1	1
***	Hardware bag/pool	SACVHL12114-35	1							
***	Hardware bag/pool	SACVHL12114-42		1						
***	Hardware bag/pool	SACVHL12114-53			1					
***	Hardware bag/pool	SACVHL12114-63				1				
***	Hardware bag/pool	SACVHL12114-74					1	1		
***	Hardware bag/pool	SACVHL12114-84							1	
***	Hardware bag/pool	SACVHL12114-95								1
	Thru-Phill 18-8 bolts 18-8 1/4-0x3/4	99-0023	31	31	31	31	31	31	31	31
	Flange nuts 1/4-20 Serrated	2FGS422	31	31	31	31	31	31	31	31
	Instruction DVD	SACWBI36876	1	1	1	1	1	1	1	1

* In the hardware bag/pool you will find parts: #V12x34

** In the hardware bag/wall you will find parts: #99-0023 & 2FGS422

*** In the hardware bag/pool you will find parts: #VHL12114S

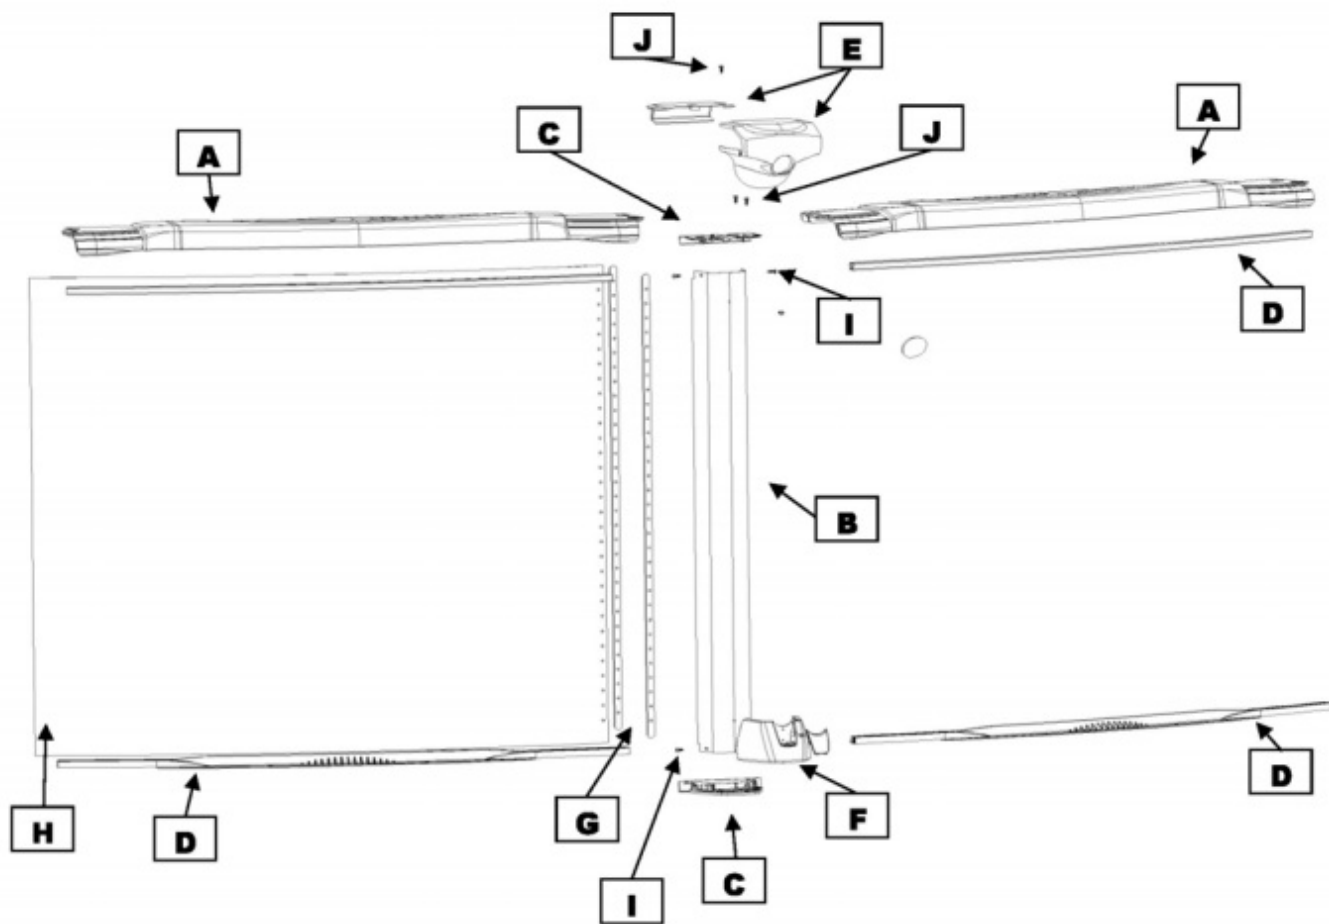

Product Description :			Simbio Round								Revised Sept 2022
Product Code :			PZEN-54RSRSRSB11								
			Quantity required for installation (by pool size)								
Index#	Description	Part #	12	15	18	21	24	27	30	33	
A	Top ledge	AR744-001-R	8	10	12	14	16	18	20	22	
B	Upright	ART811-R12954M	8	10	12	14	16	18	20	22	
C	Top plate	21120A	8	10	12	14	16	18	20	22	
C	Bottom plate	CG21120B	8	10	12	14	16	18	20	22	
D	Stabilizer	LA1255612	8								
D	Stabilizer	LA1255615		10							
D	Stabilizer	LA1255618			12						
D	Stabilizer	LA1255621				14					
D	Stabilizer	LA1255624					16				
D	Stabilizer	LA1255627						18			
D	Stabilizer	LA1255630							20	22	
D	Bottom rail	1525515	8	10	12						
D	Bottom rail	1525524				14	16	18			
D	Bottom rail	1525530							20	22	
E	Ledge cover	AR211-23120ABC	8	10	12	14	16	18	20	22	
F	Foot cover	AR711-23300AC	8	10	12	14	16	18	20	22	
G	Steel bars	11825	2	2	2	2	2	2	2	2	
H	Wall		1	1	1	1	1	1	1	1	
I	Screw 12x3/4	V12x34	58	74	86	98	113	129	140	156	
J	Screw 12x1-1/4S	V12X114	35	42	53	63	70	74	84	88	
*	Hardware bag/pool	SACV12X34-58	1							1	
*	Hardware bag/pool	SACV12X34-66							1		
*	Hardware bag/pool	SACV12X34-74		1					1		
*	Hardware bag/pool	SACV12X34-86			1						
*	Hardware bag/pool	SACV12X34-98				1				1	
*	Hardware bag/pool	SACV12X34-113					1				
*	Hardware bag/pool	SACV12X34-129						1			
**	Hardware bag/wall	1050000054	1	1	1	1	1	1	1	1	
***	Hardware bag/pool	SACV12114-35	1				2			1	
***	Hardware bag/pool	SACV12114-42		1							
***	Hardware bag/pool	SACV12114-53			1					1	
***	Hardware bag/pool	SACV12114-63				1					
***	Hardware bag/pool	SACV12114-74						1			
***	Hardware bag/pool	SACV12114-84							1		
	Truss phill 18-8 bolts 18-8 1/4-0x3/4	99-0023	31	31	31	31	31	31	31	31	
	Flange nuts S/S 1/4-20 Serrated	2FGS422	31	31	31	31	31	31	31	31	
	Instruction DVD	SACWBI36876	1	1	1	1	1	1	1	1	

* In the hardware bag/pool you will find parts: #V12x34

** In the hardware bag/wall you will find parts: #99-0023 - #2FGS422

*** In the hardware bag/pool you will find parts: #V12X114S

INSTRUCTIONS

READ ALL INSTRUCTIONS CAREFULLY


The approximate time it takes for installation, excluding earthworks and filling is about 1/2 da . You will need at least 3 people to help with installation.

A. DETERMINE THE LOCATION OF YOUR POOL

1. The Terrain

Pay special attention to choosing the right location for your pool:

- Choose a large area, as flat and level as possible and well drained. (Image 1)
- Choose a spot on dry, firm earth (stabilizer or other)—do not install the pool on asphalt, tar or oil based surfaces, gravel, peat moss, wood or chemically treated soil.
- Check with your pool dealer to see if Nut Grass grows in your area. This type of grass may grow up through your pool liner. Your dealer will be able to advise how best to treat the site.
- Sloped areas will need to be made level by digging away high spots, not by filling low spots—be prepared to hire earth-moving equipment if necessary.
(Images 2)
- Ensure the earth is well compacted and a wall is placed to prevent the earth from seeping out.
(Image 3)
- If you need to install partly in the ground, you must contact your dealer to see if this is an option for you and that you meet law requirements in your jurisdiction.
(Image 4)

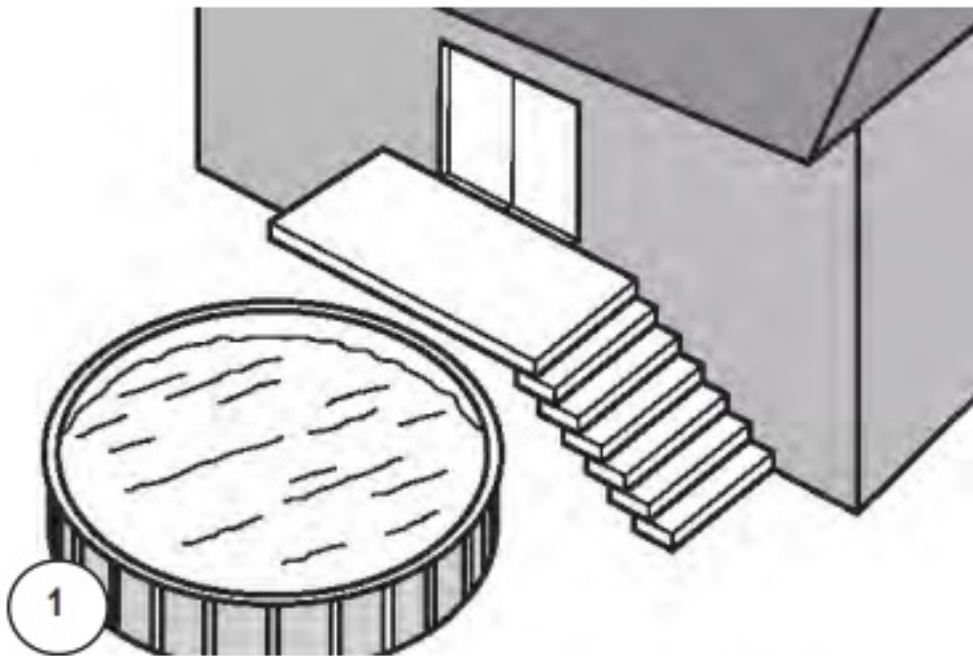

Important Note:

Ground preparation is one of the most important steps in the installation process. A proper foundation will ensure the rest of the pool assembly goes smoothly and that no problems will occur when the pool is filled with water.

Things to Avoid

Do not locate your pool near or on any of the following (Images 5 to 7):

- Overhanging tree branches.
- Overhead wires and clotheslines.
- Buried pipes and wires. Contact your gas, electric and tele-phone utilities to find buried pipes and wires before you dig.
- Areas with poor drainage.
- Grass, stones and roots. Grass will rot underneath the pool liner, and stones and roots will damage the pool liner.
- Areas recently treated with oil-based weed killers, chemi-cals or fertilizers.



Plan Ahead

- Will you be adding an adjacent deck later?
Be sure to leave room.
- Will you be using pool accessories or other appliances that need electricity or gas?
Locate your pool near these services or plan to have them installed later by a licensed contractor.

Important Note:

When locating the centre of the pool, be sure to take into consideration any structures (deck, patio, house) or relevant items (change rooms, gazebo, etc.) that the pool may need to line up with and ensure that the pool is in the most visual pleasing location for your property.



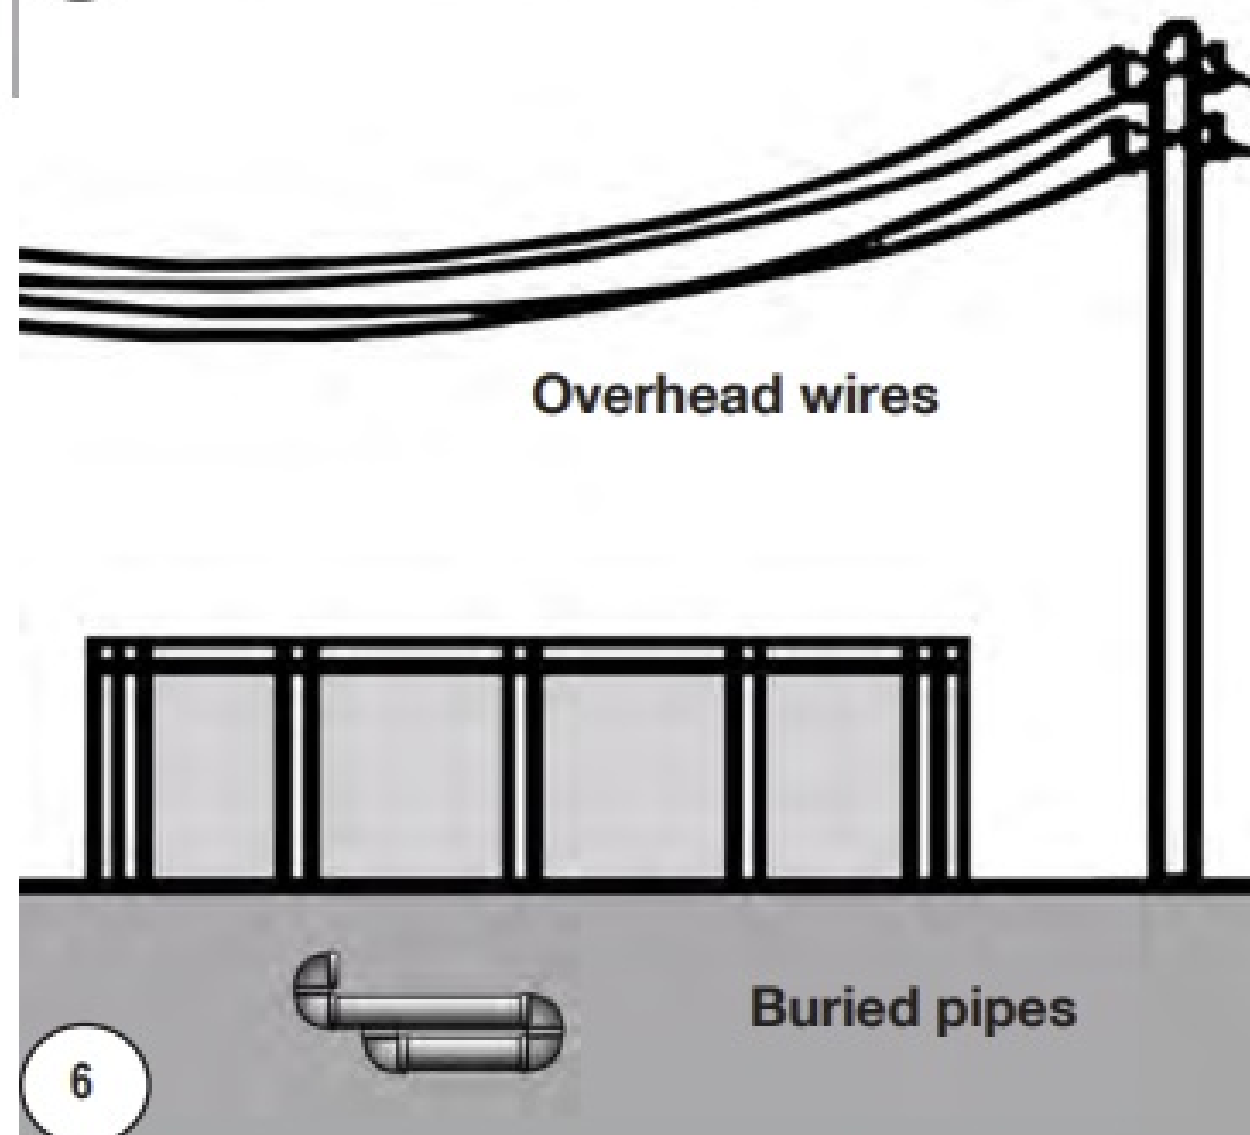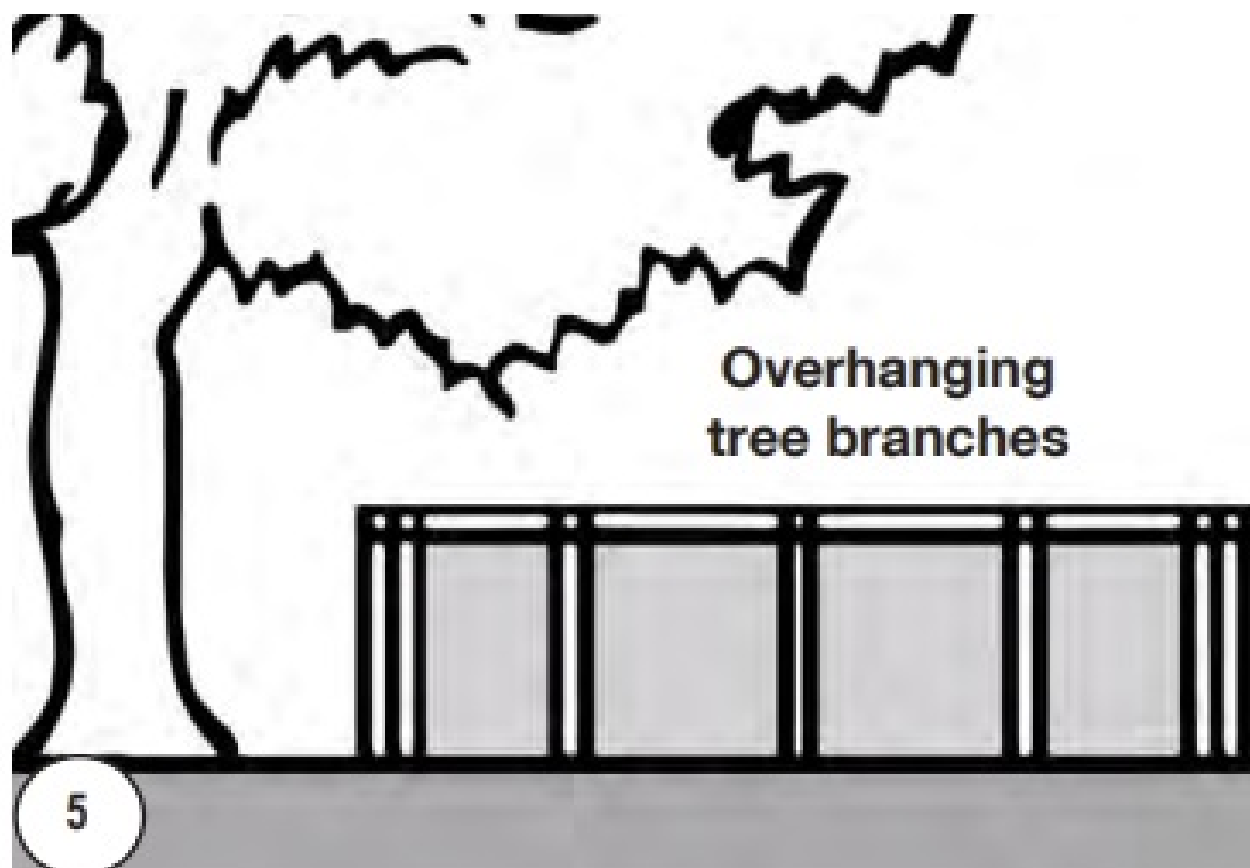



Tools Needed



Compactor



Hammer



Water hose



Level



File



Vacuum cleaner



Pliers



Rake



Lawn roller



Metal snips



Screwdriver



Wheelbarrow



Shovel



Spraypaint



Mallet



Measuring tape



Duct tape



Trowel



Wrench



 Gloves

List of required materials

Important Note:

Wall edges, skimmer and water return holes may be sharp, it is important to wear gloves when installing.

- Straight wood plank

- Material that provides a permanent base (ex. Crushed stone)
- Fine sand (void of debris)
- Cement blocks (5cm x 20cm x 40cm / 2"x 8"x16") (optional)
- 2x Plywood (60cm x 120cm / 2ft x 4ft)
- Wood board (30cm x 20cm / 1ft x 1ft)
- Vinyl covered hooks (to hold wall steady)
- String and stakes & wooden pegs
- Prefabricated cove sections (optional)
- Pool carpeting (optional)
- Rope
- Polyethylene Plastic Sheeting
- Optical Level

Can be useful for precise measurements



B. PREPARE THE FOUNDATION OF YOUR POOL

1. Mark out the Area

- a. Drive a peg into the ground at the centre of the area where you want your pool.
(Image 1)
- b. Use a length of string tied between the peg and a can of spray paint, and mark a circle on the ground (a tape measure can also be used). The circle will be 12" (30 cm) bigger all round than the pool.


(Image 2)


2. Remove the sod

- a. Remove all sod and plants from the circle. (Image 3)
- b. Remove any sticks, stones and roots from the circle using a rake.
- c. To make sure your pool is stable, compact the ground well, use the compactor, before adding the sand.

Important Note:

Your pool must be perfectly level. Take the time you need to be sure your foundation is perfectly level.

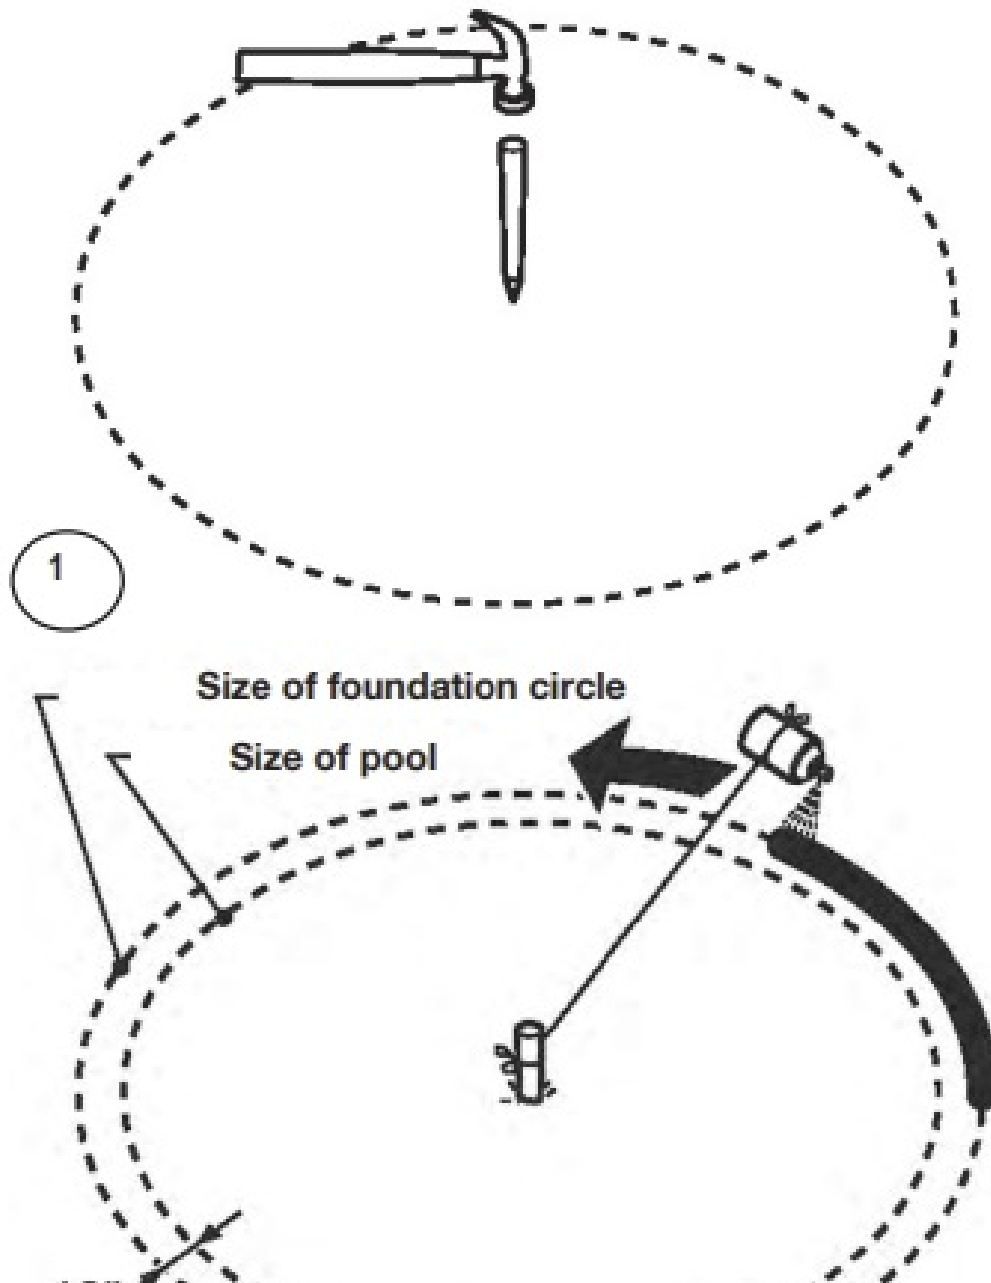



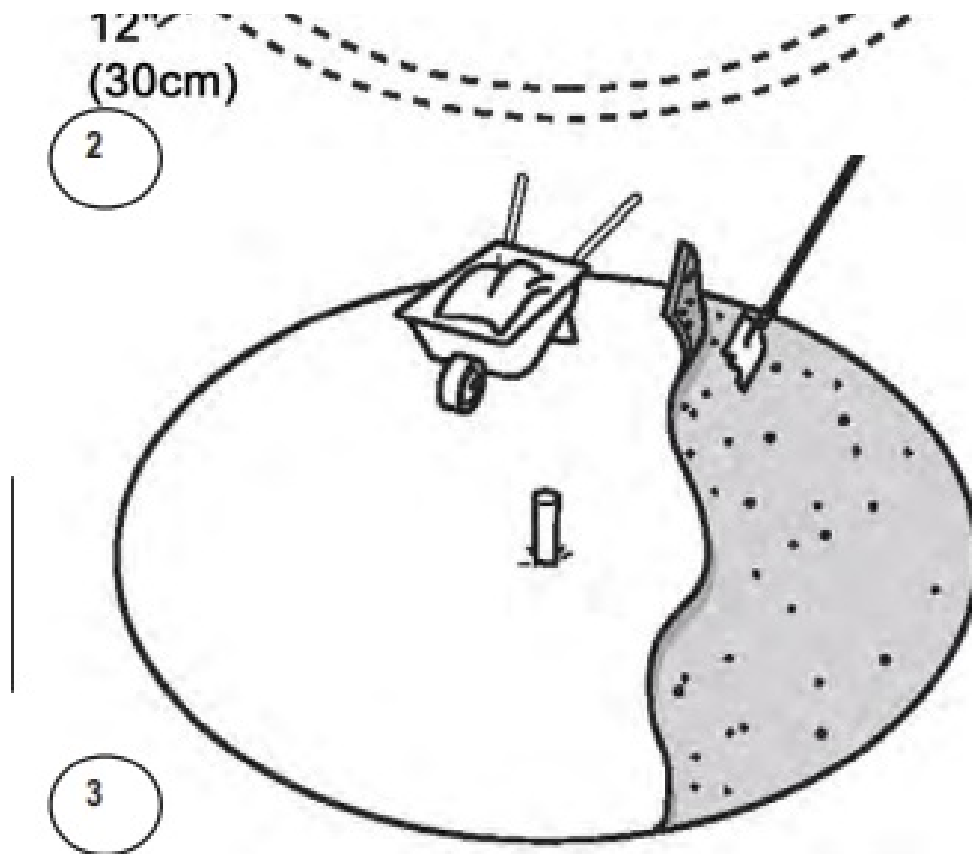


Make the area flat and level

- a. Replace the centre peg with a flat-topped stake, at least 1" (25 mm) square and 6" (15 cm) long. Drive it down flush with the ground surface.
- b. Nail one end of a straight 2-by-4 (5cm x 10cm) wood plank to the top of the stake. Use a nail long enough to hold the end of the 2-by-4 (5cm x 10cm) wood plank to the stake while you rotate it in a circle. (Image 4)
- c. Put a carpenter's level on the wood plank and swing the board in a circle to find the high and low spots. (Image 5)
- d. Remove all the high spots with a shovel, hoe or rake. **(Image 6)**

Important Note:

Use the optical level to ensure that the ground is perfectly flat and level.

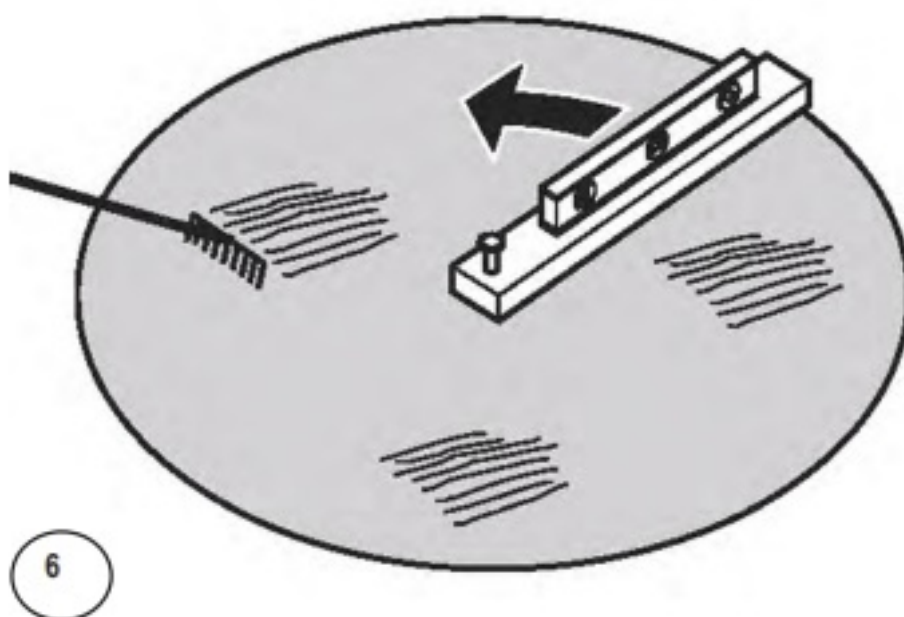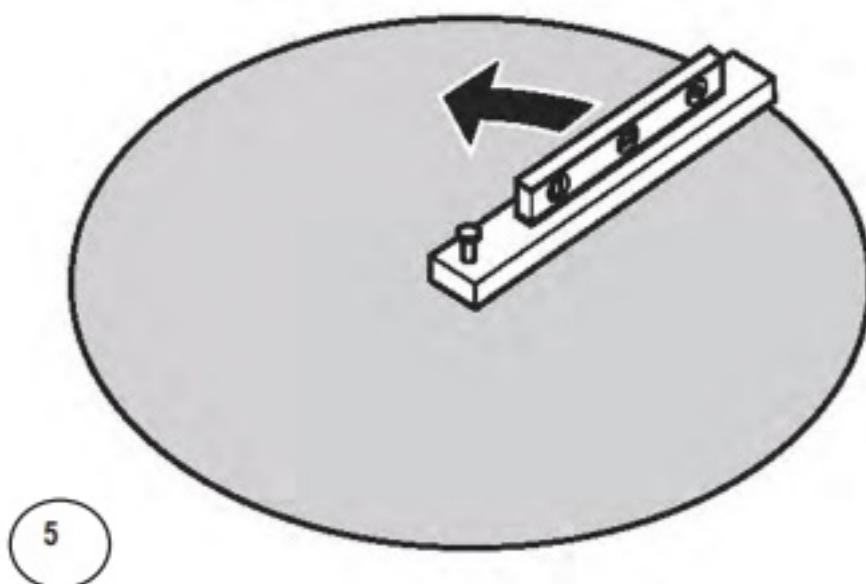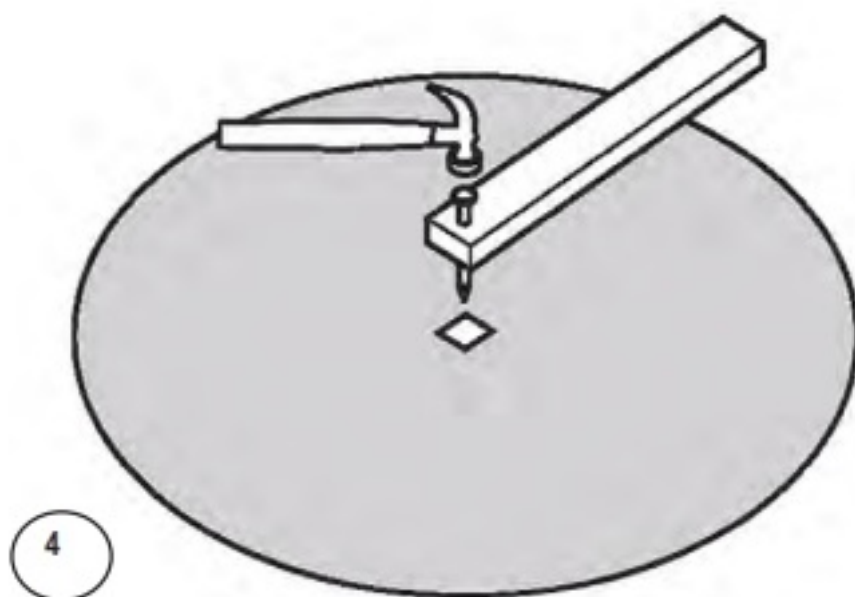

- e. Be prepared to hire earth moving equipment if you need to level a large area.

Remember, your pool must be level across the diameter of the pool.




(Image 7)

- f. Small dips and hollows may be filled in, but the soil must be hard-packed and well compacted with a tamping tool.
- g. Take material such as rock dust or fine mortar that can conform a solid, permanent base and deposit this material around the rim of the basin. The material used should be spread around the perimeter of the pool to a width of 24" (60cm) and a thickness of 2" (5cm).

(Image 8)


Note: Bottom rails will be placed in the center of the perimeter of the pool see the dashed line. (Image 8)

- h. Recheck the outer perimeter of the circle, where the pool wall will be. Compact the ground and make sure there are no high or low spots. The bottom edge of the pool wall must rest flat on the ground and have no gaps under it. (Image 9)

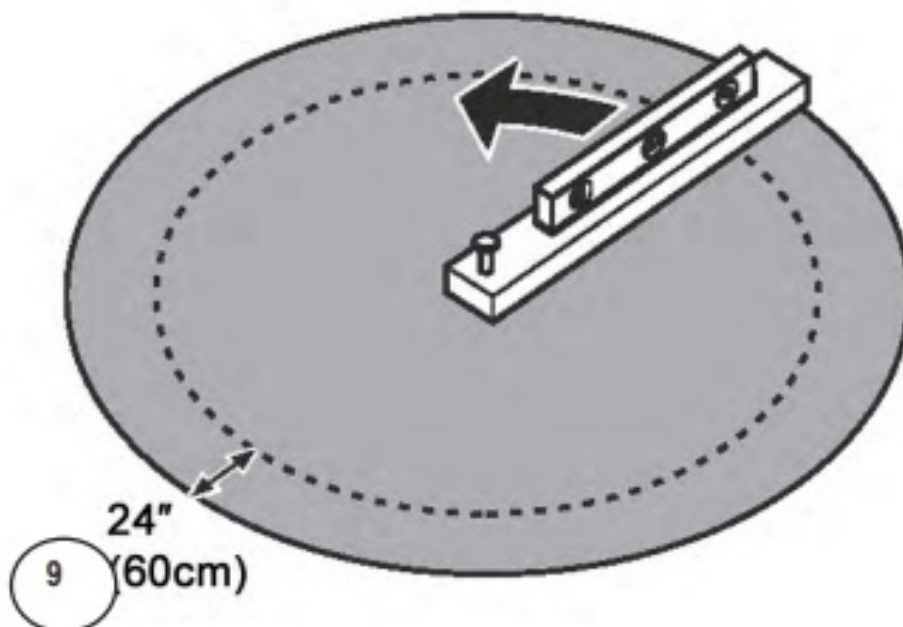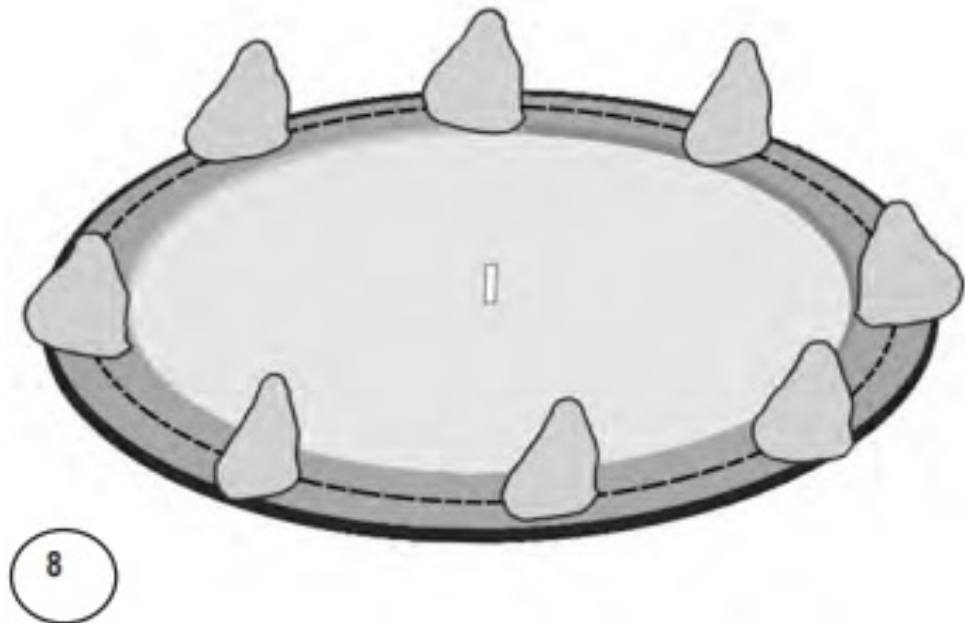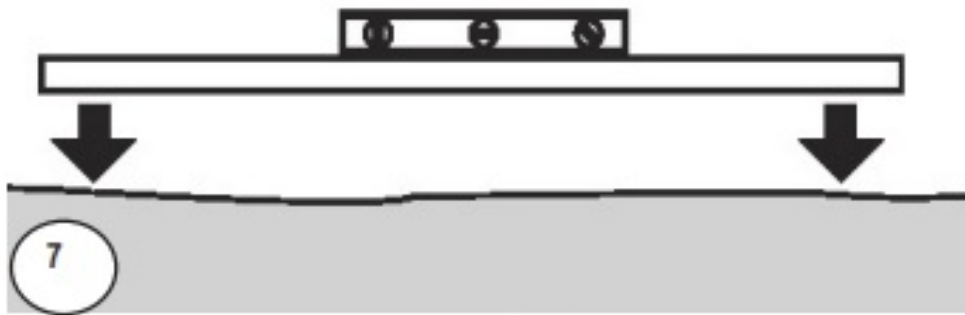


Important Note:

The outer 24" (60cm) of the circle must be perfectly flat. The bottom edge of the pool must rest flat on the ground and have no gaps under it. Take the time you need to be sure this area is perfectly flat and level.

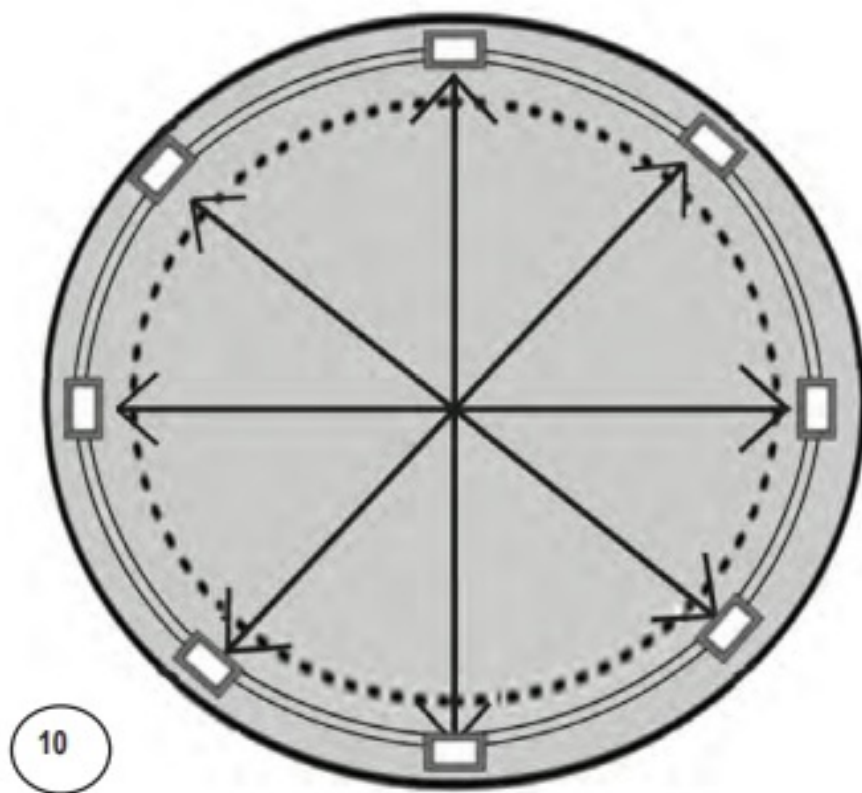

- i. Go over the entire perimeter of the pool to ensure that at every 3" the surface is completely level.
- j. Lay out the bottom rails and bottom plates around the circle.
- k. Check the roundness of your circle, by measuring the diameter across in several locations. Since the bottom rails do not automatically form a true circle, **DO NOT SKIP THIS STEP!** Otherwise you might end up with a slightly oval shape, which can cause problems later on.(Image 10)

- I. Verify the height of each bottom plate with an optical level. They have to be at the same height. Adjust height if necessary. (Image 11)

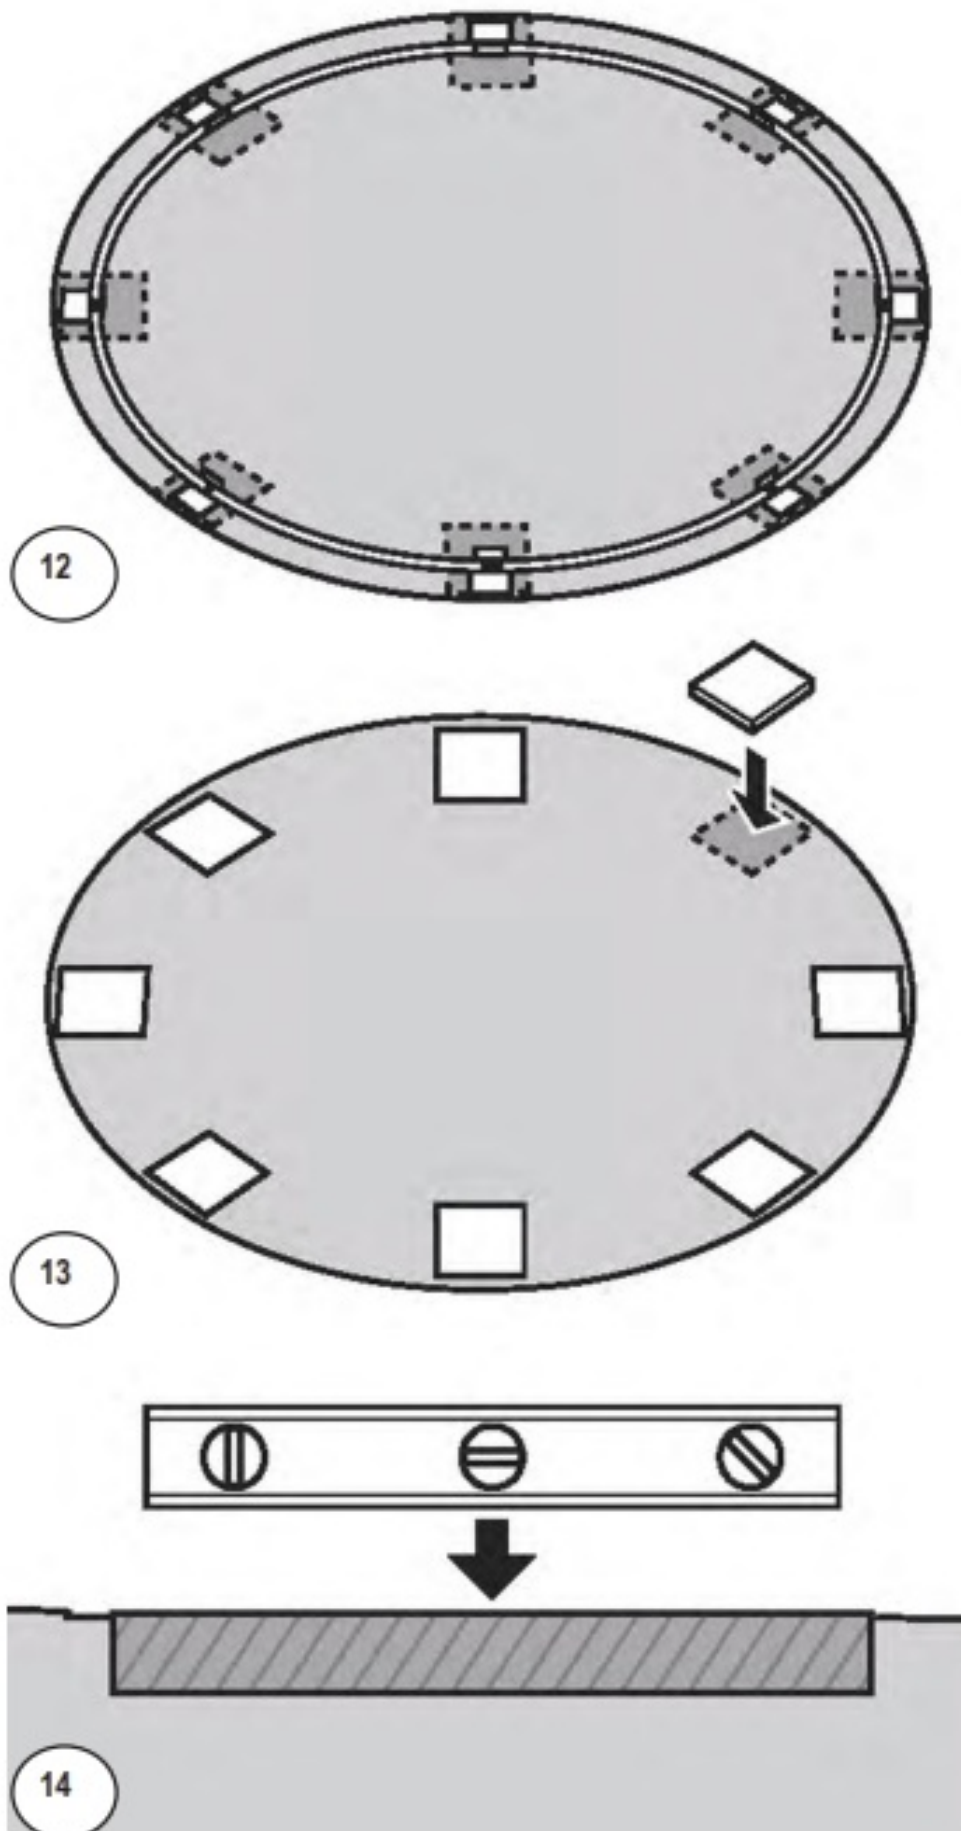

Patio Stones (Optional)

- a. Concrete patio stones may be placed at the base of each upright of your pool.
- b. Each bottom plate will show the location for a patio stone. Make a mark in the ground at each base plate. (Image 12)
- c. Remove the bottom rails and bottom plates and lay out the patio stones around the circle where the bottom plates were. (Image 13)
- d. The patio stones must be sunk into the ground so the tops are flush with the soil around them. Use the carpenter's level to make sure the patio stones are perfectly level and flush with the ground. Use either the carpenter's level and a 2-by-4 (5cm x 10cm) wood plank, or the optical level between patio stones to make sure the stones are level with each other. (Image 14)
- e. Do not install blocks or rails on loose sifted soil or sand. There must be no space between the ground and the bottom of the rails. All patio blocks must be flush with the ground, solid and level with each other in all directions.


NOTE: Installing patio blocks is optional and the blocks may shift due to temperature changes.

Important Note:

Make sure the patio stones are perfectly level and flush with the ground. All patio blocks must be flush with the ground, solid and level with each other in all directions.

Proceed to Section 2 Assembling the Pool Base

ROUND FOOTPRINT ALL SIZES (RESIN BOTTOM PLATES & RAILS)

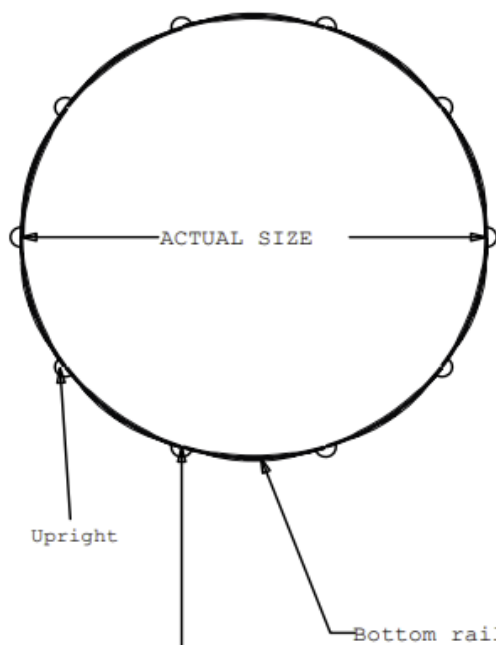

Space between bottom rails

N.B.:

1. All dimensions are in inches.
2. All dimensions are referenced from the wall location.
3. Manufacturers tolerances and field conditions may result in dimensional variations.

ROUND RESIN POOL CHART								
SIZE	12'	15'	18'	21'	24'	27'	30'	33'
UPRIGHTS	8	10	12	14	16	18	20	22
RADIUS OF RAILS	7.5'	7.5'	12'	12'	12'	12'	15'	15'
GAP BETWEEN RAILS	1-9/16"	1-5/16"	1-1/4"	1-1/4"	1-1/4"	1-1/4"	1-5/16"	1-5/16"
WALL PERIMETER	454	565	679	792	905	1018	1131	1244
WALL LENGTH	455	566	680	793	906	1019	1132	1245
GAP BETWEEN RAILS EXCEPTION		1-5/8" Impact Atxium Dialov						
WALL PERIMETER EXCEPTION		568						
WALL LENGTH EXCEPTIONS		569						

ASSEMBLING

GENERAL INSTRUCTIONS – ROUND POOLS ASSEMBLING THE POOL BASE

A. LAY OUT THE BOTTOM PLATES AND BOTTOM RAILS

1. Lay out bottom plates

- a. Place the bottom plates equally spaced around the perimeter of your foundation. If you are using the optional patio stones, depending on your model place one bottom plate on each stone. (Image 1)

2. Assemble bottom plates and bottom rails

NOTE: Depending on your pool model you may have steel or resin bottom plates.

- a. Insert the end of each bottom rail into a bottom plate.

Leave a gap between the ends of the bottom rails.(Image 2)

See Diagram:

Please refer to your pool's footprint (Section 1, last page) for gap measurement.

- b. Measure the diameter of your pool all around the circle and make sure it is correct.



Note: this measurement should be taken from centre to centre of the bottom

plate. When the circumference is perfectly round, hammer nails into the ground to keep the bottom rails into place.

These nails are to be removed only at the last step-when filling up the pool.

Important Note:

Use a soft measuring tape to measure around the perimeter of the pool. Measure from the inside of the bottom rail, the measurement should equal the wall length.

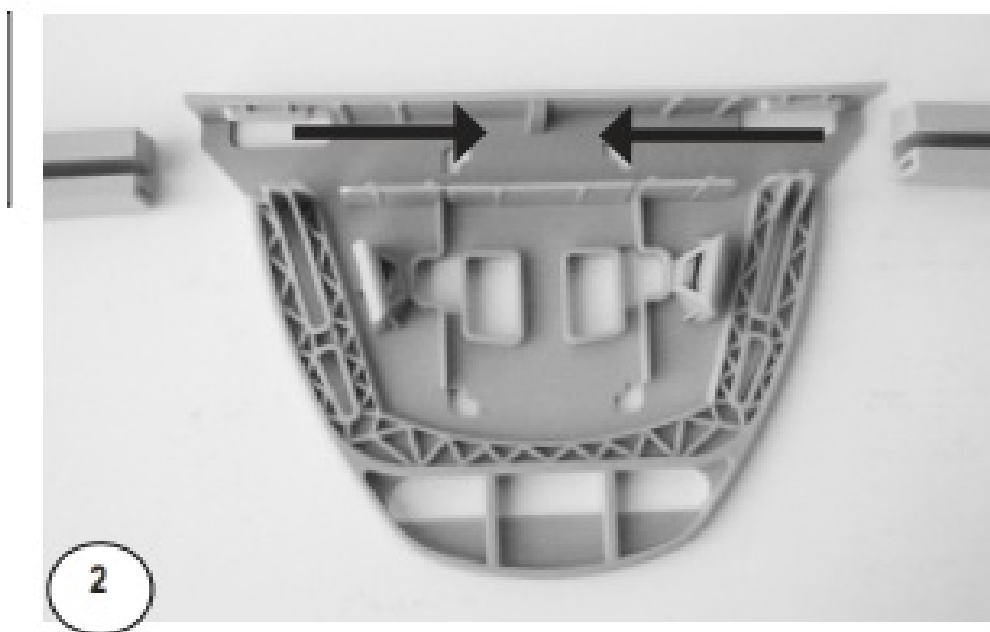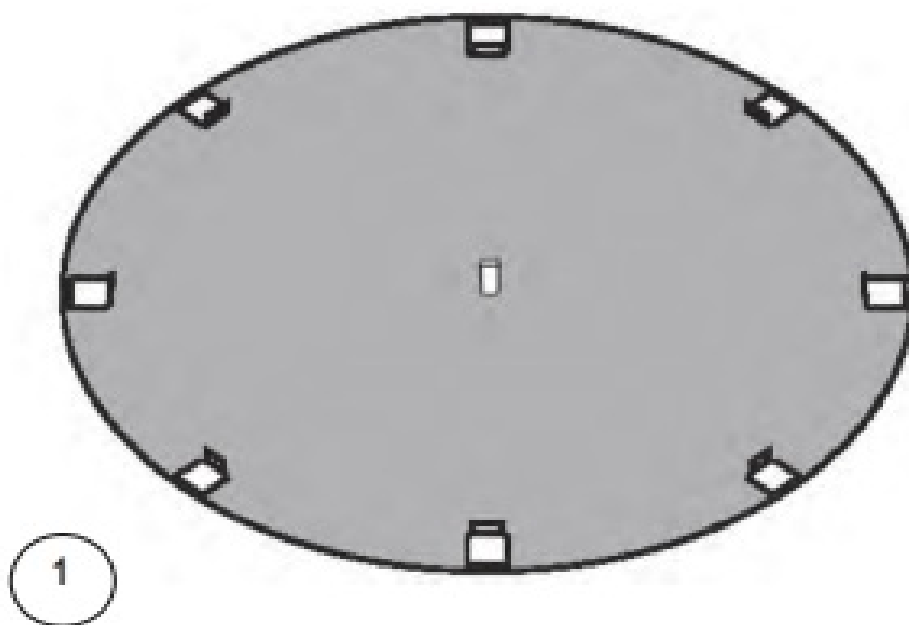

SETTING UP THE POOL WALL

GENERAL INSTRUCTIONS – ROUND POOLS ASSEMBLING THE POOL WALL

A. SETTING UP THE POOL WALL

Do not attempt to install the pool wall in the wind, wait for a calm day. It takes at least 3 people to install the pool wall.

1. Preparing for the wall installation

- a. Bring the following items into the middle of the pool foundation before you start uncoiling the pool wall: plywood, some extra sand or fine dirt to make the cove and a ladder to climb out after the wall is assembled.
- b. Make sure the skimmer and water return holes are located where you need them to be. The skimmer and water return holes are positioned towards the end of the wall, (the section before where the wall started).

Important Note:



Wall edges, skimmer and water return holes may be sharp, it is important to wear gloves when installing.

2. Set the pool wall in place

- a. Unpackage the coiled pool wall and stand it on the plywood at the place close to where you need to install the skimmer. (Image 1)
(Remember the skimmer and water return holes will be placed at the section just before where you started the wall installation).
- b. Start uncoiling the wall, guiding the bottom edge into the curved bottom rail. The starting end of the wall must be positioned in the centre of a bottom plate, and the skimmer and return holes should be positioned where the pump and filter will be. (Image 1)
- c. Set lengths of stabilizer onto the top edge of the wall as you uncoil it. (Image 1)
- d. We also suggest installing vinyl-covered hooks and rope to hold the wall steady. Ideally the help of several people should be solicited to hold the wall in place. Work around the foundation until the entire pool wall is uncoiled into the bottom rails. (Image 2)
- e. When uncoiling the wall, the skimmer and return holes are positioned toward the end of the wall. (Image 3)

Important Note:

It is preferable to use very fine sand that is easily compacted. Be careful not to spill sand on the bottom rails.

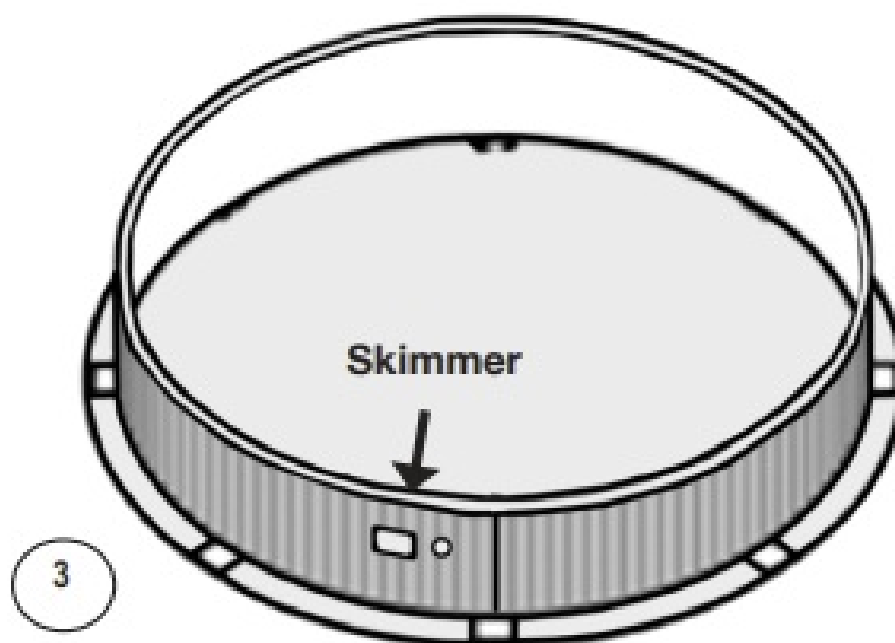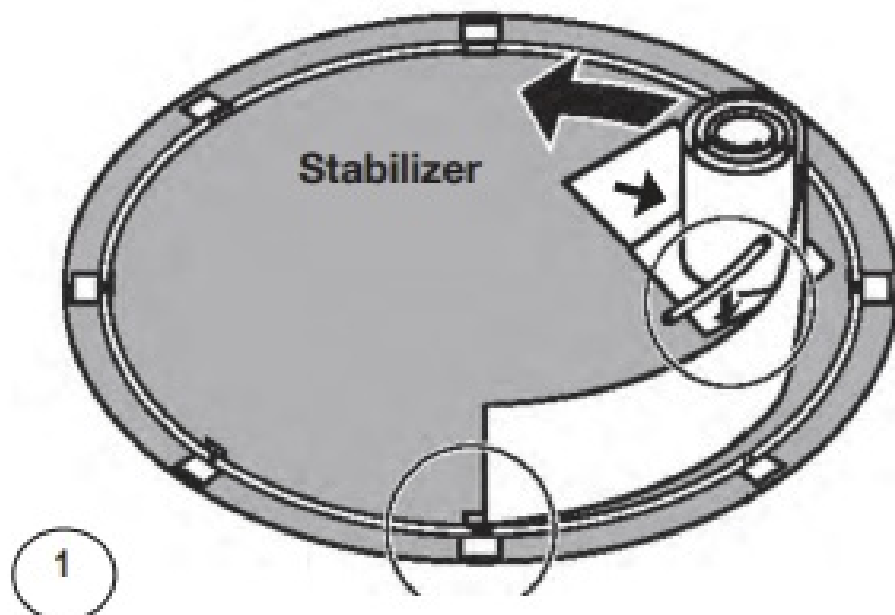

Join the ends of the pool wall

- a. Line up the holes in the two ends of the pool wall. (Image 4)
- b. Now that you have installed the wall you can be faced with three scenarios.

1. The wall joints align perfectly, if so, move on to the next step (c).
2. Your wall appears to be too short. It is not. However the space between the bottom rails must be decreased by lightly tapping the bottom plates towards the inside of the pool. You can also tap the wall lightly with both hands in the desired direction. (Image 5)
You MUST recheck the gaps at each and every one of the bottom rails so that they are all equal in gap size.
3. Your wall appears too long. It is not. However the space between the bottom rails must be increased by tapping the bottom plates lightly towards the outside of the pool or by tapping the wall with both hands in the desired direction. (Image 6)

You UST recheck the gaps at each and every one of the bottom rails so that they are all equal in gap size.


Important Note:

Bottom rails must always be held in place in the bottom plate.



Important Note:

You MUST recheck the gaps at each and every one of the bottom rails so that they are all equal in gap size.


-

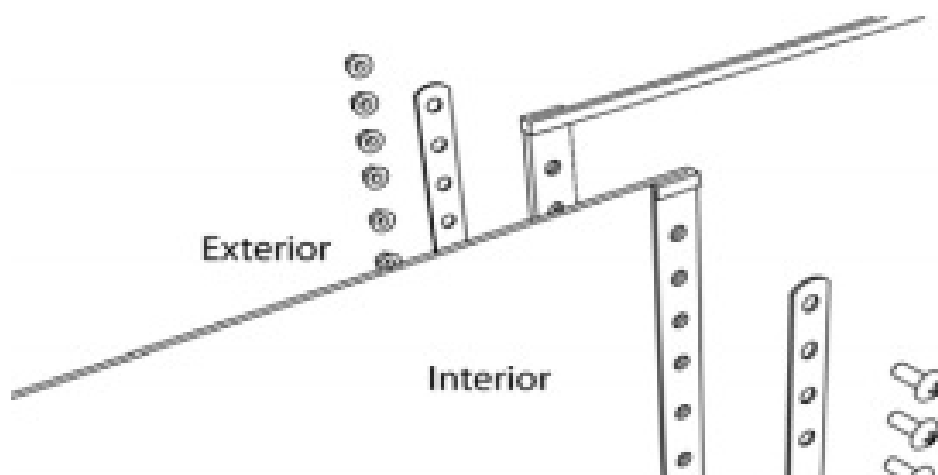

4

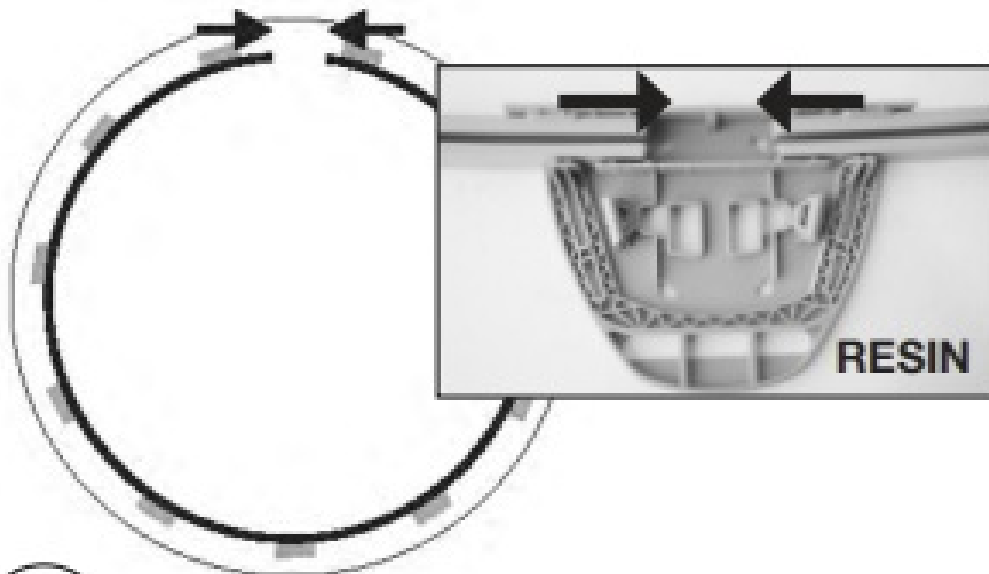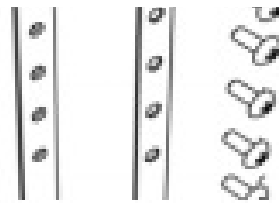

5

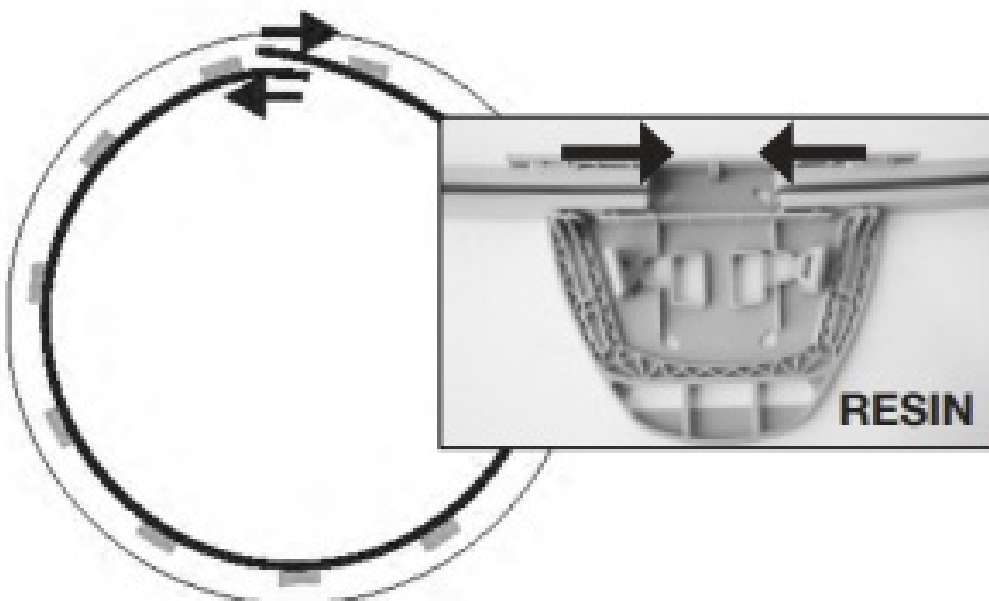

6

c. To fasten the wall joint, overlap the two steel bars, one on the inside and the other on the outside. Tighten the mechanical screws on the inside and the nuts on the outside. Ensure that all bolts and all the holes are used.(Image 7)

Important Note:

Stick a screwdriver through two of the holes to help line up the ends of the wall.

When tightening the screws start from either the top and go down or vice versa. Do not start a few screws from top and a few from the bottom to meet in the middle, this can cause problems later on.




- d. Adjusting the pool to the proper shape may cause the bottom rails and bottom plates to slip out of alignment a little. Recheck all of the bottom plates to make sure each one is centred where the bottom rails meet.
- e. Cover the seam and bolt heads on the inside/interior of the pool wall completely with 2" (50mm) duct tape. (Image 8)

Make sure the pool wall is round

- a. Using a tape measure, measure across the circle at each bottom plate. The pool wall must be round. Adjust the circle by nudging the base plates in or out with your foot.(Image 9)

Important Note:

The pool must be level across the perimeter. A pool that is not level is dangerous and may collapse.

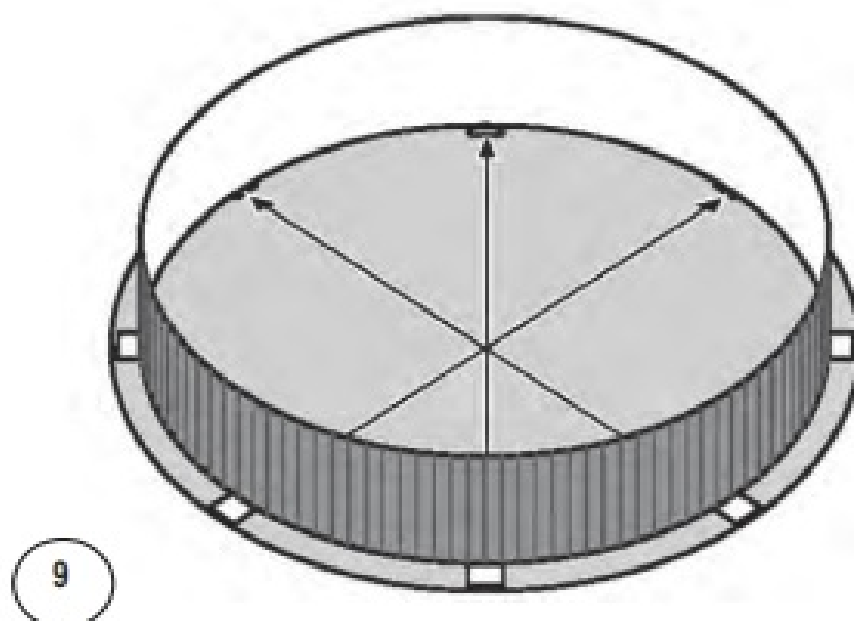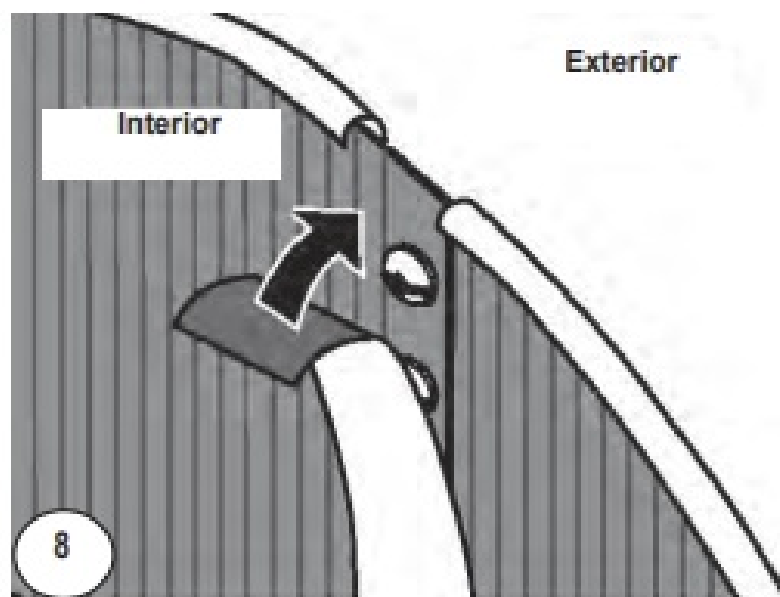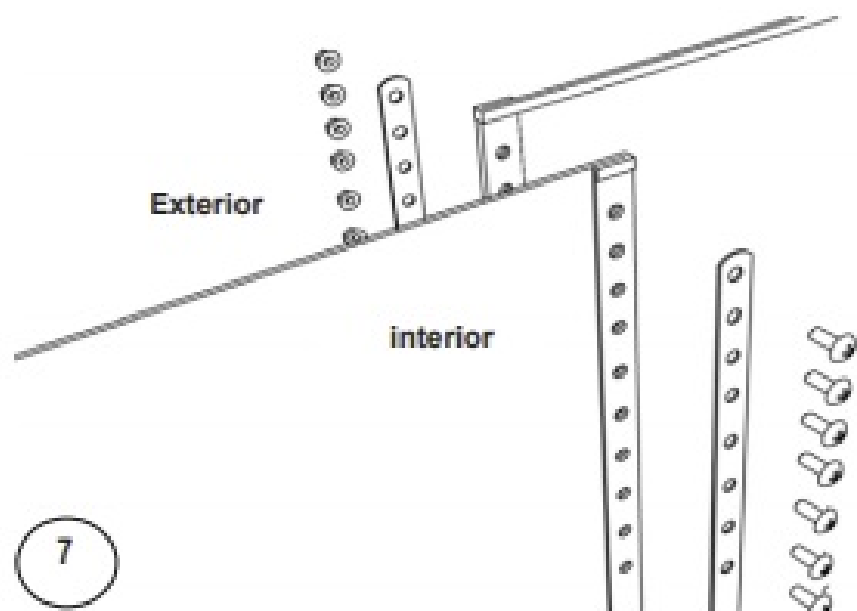

B. ASSEMBLING THE COVE



1. Make the cove

- a. If you are using sand, bank the sand against the wall to form a cove of 3" to 6" (7.5cm to 15cm) high and 8" to 12" (20cm to 30cm) wide at ground level. This will prevent the liner from creeping under the wall, and it will also protect the liner from any metal edges of the pool framework. THIS STEP IS NOT OPTIONAL, IT MUST BE DONE. (Image 10)
- **NOTE:** If a smaller cove (less than 3" (7.5cm)) is made along with using a very tight liner, this will buckle the wall.
- b. Water the sand to compact it and use a trowel to spread it evenly. (Image 11)
- c. Since earth containing chemicals can cause discoloration or corrosion, it is suggested that you place polyethylene plastic sheeting under the cove around the perimeter of the wall, so no earth comes in contact with the metal. Since the presence of such chemicals is beyond the control of the manufacturer, such damage is not covered under warranty. (Image 12)
- d. If you are using styrofoam cove pieces instead of sand, insert them in the bottom rail and refer to the installation instructions that are provided with them.
- e. Proceed to your liner instructions and after liner installation proceed to Section 4-Installing the pool frame.

Important Note:

The cove is an important part of the pool structure. Take your time to make a complete, full-size cove.

Proceed to Section 4-Assembling the Pool Frame

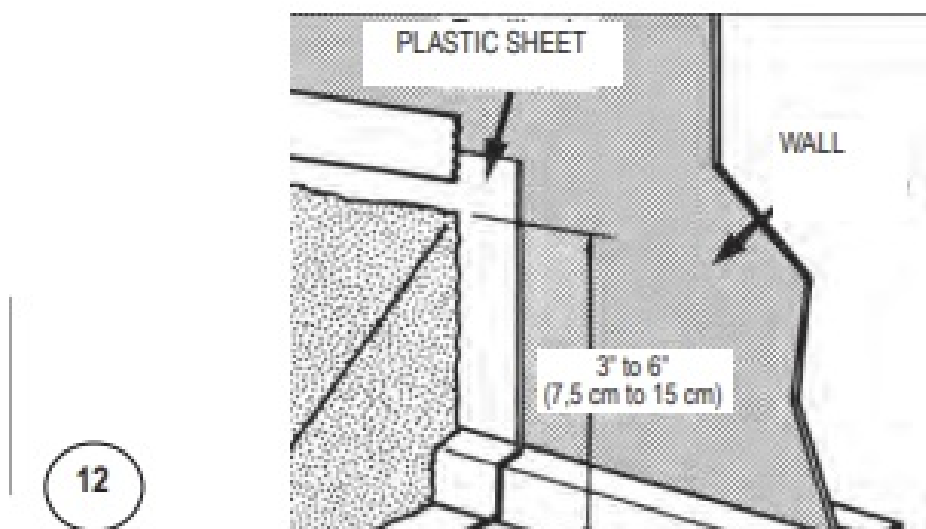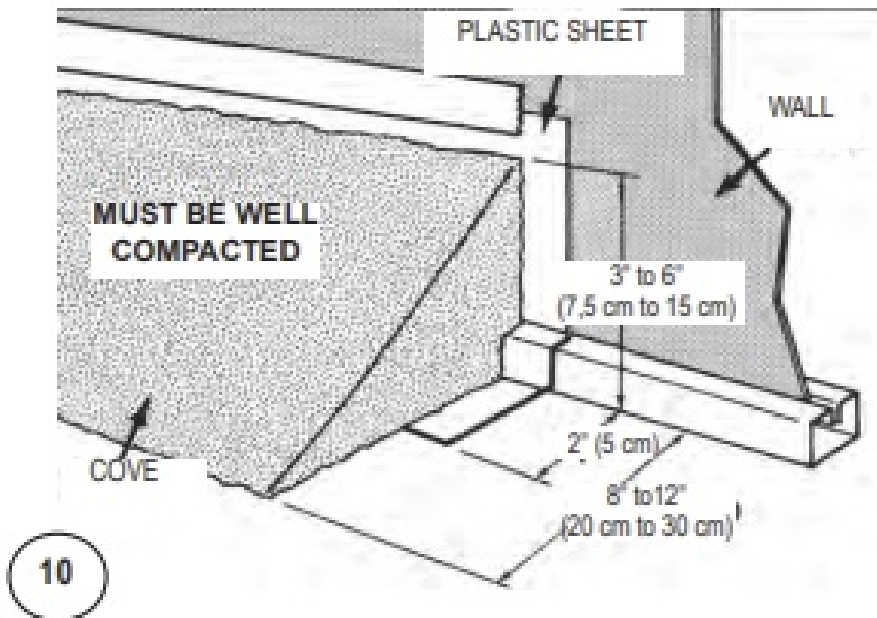

IMPORTANT INFORMATION ABOUT YOUR LINER

- We do not make or supply liners for our pools.
- Please contact your liner's manufacturer with questions or if instructions are not included with the liner.
- Liner must be installed per the liner manufacturer's instructions.
- Incorrect liner installation may void the warranty.

INSTALLATION OF THE UPRIGHTS

1. Install the uprights

- a. The wall joint is hidden behind the upright on most pools. This assures that the skimmer and skimmer return holes are not obstructed.
- b. Insert an upright into the bottom plate. Squeeze each side of the upright at the bottom into the bottom plate. Push firmly on the upright while ensuring that it is completely inserted into the bottom plate. (Image 1)
- c. Attach the bottom of the uprights to the bottom plates using a screw (V12x34). (Image 2)

Important Note:

Use a level to make sure the upright column is straight up and down.



Important Note:

Ensure to leave a gap between the two bottom rails.

See Diagram:

Please refer to your pool's footprint (Section 1, last page) for gap measurement.

Install the footcovers

- a. If your model contains the optional footcover, attach with screw (V12x34). (Image 3)
- b. Install the finishing plug. (Image 4) Proceed with the installation of the uprights.

**INSTALLATION OF THE STABILIZERS AND TOP PLATES**

1. Install stabilizers and top plates
 - a. Install the stabilizer on the wall while ensuring to leave a gap between each end. Insert the stabilizer into either side of the top plate. (Image 5)
 - b. Position stabilizers and top plates just assembled on top of wall by slightly tapping them with a mallet. Make sure the recessed portion of the top plates lie to the inside of the uprights.
 - c. Ensure that the upright is level.
 - d. Attach the upright to the top plate using screws (V12x34). Repeat until you have installed all the stabilizers and top plates.

Important Note:

Ensure to leave a gap between the two stabilizers.



C. INSTALLATION OF TOP LEDGE AND LEDGE COVERS

1. Install top ledge

- a. Place top ledges on the wall. Align the holes on the top ledges with those on the top plates. Make sure the space left between each top ledge is uniform all around and that the space in question can be covered by a ledge cover. Attach the top ledges to the top plates using screws.

(Image 7)

Important Note:

We suggest that you install all the top ledges on the wall before attaching them.

2. Install ledge covers

- a. Place interior ledge cover onto the top plate and attach with a self-tapping

screw. (Image 8)

- b. Slide the exterior ledge cover into the interior ledge cover guide. (Image 9)

Note: The plug is often located inside the ledge cover. Make sure you remove it before installing the ledge cover. Note: During assembly, the inner and outer components of the ledge cover may have been slipped into each other for packaging purposes.

- c. Attach the exterior ledge cover to the upright using a screw (V12x34). (Image 10)
- d. Install the finishing plug on the ledge cover. (Image 11)







D. FILL YOUR POOL WITH WATER

1. Finish filling the pool

- a. Fill the pool with water to 2" (5cm) below the lowest opening. Make sure you remove any creases from the liner in the bottom of the pool before the water level gets too high.
- b. While the pool is filling, remove the nails that were hold-ing the bottom rails in place.
- c. Your pool is now installed. You must now install the filter and pump, the skimmer and water return inlet. Please follow the installation instructions that come with these products.



Important Note:


Before making any openings in the liner, fill the pool with 60cm (24") of water to stretch the liner fully. When filling your pool, begin with a garden hose until there is about 30cm (12") of water in the pool. This will allow the liner to stretch gradually. You can then use a heavier flow to finish filling it up.

IMPORTANT:

Make sure that your pool is round, do not assume that by filling up the pool that this will help the pool to place itself into a perfect round circle. Ensure that it is round before filling up the pool with water.

IMPORTANT SAFETY INFORMATION:

Please refer to the safety page at the beginning of this instruction manual. You must follow the rules and information regarding placement of safety stickers on your pool.

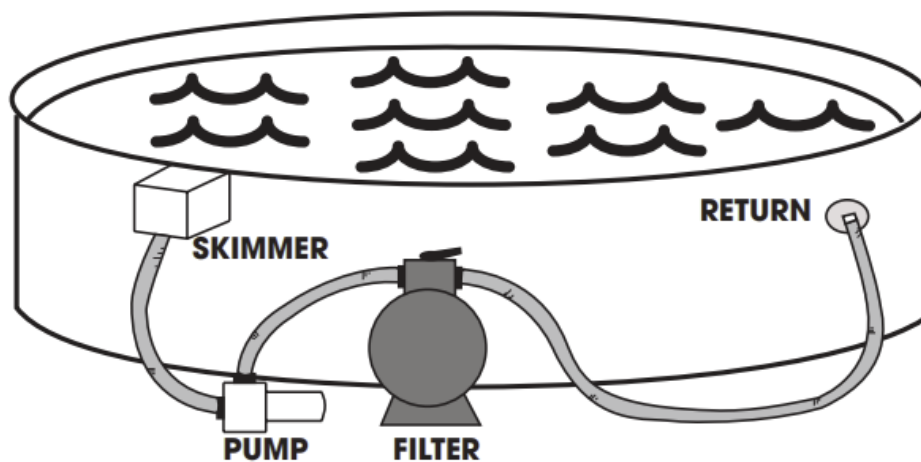

1. How the system flow should look like

- a. When assembled your pool should have a basic flow system as in this image, PLEASE CONTACT YOUR DEALER for more specific instructions.

POOL INSPECTION

READ AND FOLLOW ALL INSTRUCTIONS

Keep your pool wall and frame clean. Always wash away any deposits of pool chemicals that land on the frame of your pool. Wash periodically with a mild soap solution (no abrasives). At least once a year use a clear non-yellowing household wax on all metal components.

Your pool and liner must be inspected regularly for leaks, corrosion, scratches, and punctures. If any problem is found IMMEDIATE CORRECTIVE ACTION MUST BE TAKEN. Small repairs and punctures in your liner may be easily repaired using repair

kits available at your local dealer. Scratches on your pool wall & frame must be touched up with anti-rust enamel. Wire brush all rust and add a coat of enamel primer followed by a coat of color-matching paint. Pool water is full of various caustic chemicals, which will corrode metal parts. If any corrosion is allowed to continue, failure of the pool structure may occur which could result in excessive property damage as well as bodily harm.

The skimmer, return area and below them, are particular areas that must be carefully and regularly inspected. If these areas are wet, and remain wet for any length of time, it usually means there is a small leak. Skimmer/skimmer return gaskets must be replaced when they become defective. Water must not be permitted to continually run down the wall, if neglected the pool will break. If proper skimmer/skimmer return gasket care is not maintained, your warranty will be void!

IMPORTANT

Be sure to follow all local and state safety regulations when installing any accessory to your pool. Any decks, and all entries must be carefully monitored for safety and access to pool. Installing any other manufacturer's deck or slide is strictly forbidden!

WINTERIZING YOUR POOL

Along with the cool nights of autumn comes the end of the swimming season. During the winter your pool is subject to more stress than in the summer, and any breakage that is caused by incorrect winter procedures is not subject to any warranty with this company. All of our pools are designed to be left up all winter, but nonetheless are subject to the warranty that was purchased. Continue to chlorinate and filter until the pool is closed down. If you follow our recommendations, you will be able to winterize your pool properly in a few hours.

Properly winterizing your pool will protect it from damage and make it easier for you to reopen it when spring arrives.

The key to fast and easy winterization lies in regular treatment of the water until the start of the cold season, even if you haven't been using the pool.

Routine maintenance becomes easier and less frequent as the water gets cooler. In order to keep the water clean and clear and to prevent the liner from staining, we recommend closing your pool as late as possible, i.e. toward the end of September

when the water temperature is about 10°C (50°F).

Waiting until you have finished closing the pool before shutting off the filtration system will prevent hoses still connected from freezing.

Follow the instructions on the following pages or contact your retailer for further information to ensure that you are protecting and closing your pool properly.

CLOSING YOUR POOL FOR WINTER

At the end of the season, you must follow these directions to make your pool ready for the winter. For areas where water freezes make sure to follow these instructions before the water is frozen, otherwise do not touch the frozen water, this may damage the pool.

STEP 1

PRIOR TO CLOSING

Several days prior to closing your pool, test the water for the pH level, total alkalinity, and chlorine. The water balance is important to protect the pool from corrosion or scale build-up during winter shut down.

STEP 2

PERFORM A COMPLETE INSPECTION

FINDING LEAKS

Towards the end of the summer season or around mid-August, check for leaks by verifying if the pool's water level is stable. Draw a line on the liner marking the water level and wait 10 days. If after 10 days the level has dropped, then there is a leak. It is important to seal off any leaks you find. Leaks left unsealed when freezing begins can seriously damage your pool and even cause it to collapse.

Vacuum carefully to remove all leaves and debris.

CHECK THE LINER

Make sure the top of the liner is still attached to the pool wall. Make sure there are no leaks. Repair any liner holes with a vinyl patch: any small punctures in the liner can be easily repaired with underwater repair kits available at your local retailer. Do not remove the liner from the pool, as removal of the liner will void the existing warranty.

CHECK ALL JOINTS AND SCREWS

Make sure all the frame joints are fitting together properly and make sure the pool wall has not shifted from the bottom rail. Ensure all screws and bolts are tight.

CHECK FOR RUST

Periodically inspect the metal parts for any corrosion especially around the skimmer area. If corrosion is found, immediate corrective action must be taken. Wire brush any rust and add a coat of enamel primer followed by a coat of color matching anti-rust enamel paint. Pool structure failure could result in major property damage and bodily harm. Paint any scratches with anti-rust paint.

STEP 3

ADD CLOSING CHEMICALS

To maintain water quality, use a winter kit which contains an algicide and chlorine especially designed for this purpose. When it's time for spring cleaning, this will save you hours of work and reduce the cost of chemicals needed to restore your water quality.

If your pool has a bottom drain, you will have to use pool antifreeze to prevent it from freezing during the winter. Unscrew the hose from the base of the skimmer and attach an extension. Pass the extension over the wall of the pool, making sure it remains well attached. Pour antifreeze into the extension. Leave the valve open so that water can drain from the skimmer.

STEP 4

LOWER THE WATER LEVEL

Lower the water level, and leave it between 6 to 20 inches (15cm to 50cm) below the water return. You may plug the return jet hole at this time.

****IMPORTANT**DO NOT PLUG THE SKIMMER DRAIN HOLE** (located at the base of the skimmer). Remove all hoses attached to the skimmer and return fittings. Do not let water freeze in the skimmer. Leave the skimmer attached to the pool wall and ensure that the skimmer lid is installed. **DO NOT DRAIN ALL THE WATER OUT OF THE POOL.**

Depending on your area and if the freezing point is more aggressive, for example 50% is frozen into ice, we strongly suggest to lowering the water to lowest point. Depending on

how great the deep freeze in your area we suggest you consult with your local dealer about procedures on lowering the water level throughout the winter. We also suggest throughout the autumn season to continually check this level before freezing season starts, as it must not reach the skimmer holes at any time during the winter. Remove any snow which may accumulate on the top ledge.

STEP 5

FILTRATION PREPARATION

Disconnect the hoses from the filter. Remove and store the filter, ladder and all other removable parts from around the pool. The filter should be clear of any foreign objects and water should be removed from the filter and pump. See the manufacturer's instructions. Store the pump in a temperature-controlled environment (so that it is not damaged by changes in temperature).

STEP 6

WINTER COVER

For the winter cover we suggest to lower the water level to 1 inch (2.5cm) below the water return. In some areas your dealer may ask you to install it differently in order to protect the pool and the cover. Contact your local dealer to verify the correct procedure for your pool.

If using a winter cover, make sure to place a ball underneath so that rainwater falls into the pool. An accumulation of too much water on the cover could place pressure on the pool, causing damage and invalidating the warranty. Depending on how great the deep freeze is in your area we suggest you consult with your local dealer about procedures on leaving the pool cover throughout the winter.

IMPORTANT

Never let more than 30 cm (1') of snow accumulate on the pool wall; the wall is designed to support the lateral pressure of the pool water, not vertical pressure. With spring thaw, if water leaks from the skimmer or return outlet opening, place a tube at the opening so that the water will run off as far away from the basin of the pool as possible.

PLEASE NOTE: Do not strike or hit a frozen pool. This would damage it. Do not disturb the pool till spring. If you have left the winter cover on the pool, make sure to remove accumulated snow after heavy snowfalls.

IMPORTANT

Whatever the type of valve or extension hose used, you must follow the technique described in this document to close your pool, otherwise your warranty may be cancelled. Make sure to use antifreeze designed for pools.

An unsealed leak may comprise or cancel the warranty on your pool. Never leave water in any of the filtration system components due to the risk of damage during freezing.

PREPARING YOUR POOL IN SPRING

READ ALL INSTRUCTIONS CAREFULLY

At the end of winter, allow the ice in the pool to thaw completely. When the temperature reaches approximately 10 °C (50 °F), you have to restart your filtration system, since algae and bacteria form more quickly as it gets warmer. Here is how to prepare your pool in a few simple easy steps.

• STEP 1

If your pool is equipped with a pool cover, remove the cover and cushion. Carefully remove with a hose any rainwater that has accumulated on the cover so it does not fall into your pool. Clean your cover and cushion and let them dry. Store them in a dry clean place.

• STEP 2

Attach the return inlet and skimmer to the filter. Bring the water level up to the middle of the skimmer. Get your filter working. Clean the bottom of the pool with the vacuum, taking care to place the filter in the “waste/drain” position. This way you will eliminate particles of dirt without disturbing the sand in the filter, and will considerably reduce the need for “backwash rinsing” of the filter.

• STEP 3

Now that you have purified the water, you have to test it. It is very important that the pH level of your pool be between 7.6 and 7.8 and the pool’s alkaline content be between 80 ppm and 130 ppm. If you are unable to attain these levels, please contact your retailer who will gladly do these tests for you.

• STEP 4

When the pH and alkaline levels are ideal, apply a shock treatment or chlorinate your water.

Let it filter for 24 hours and again verify both the pH and free chlorine levels. NOTE: Add chemical products to your pool after sunset, as sunlight rapidly destroys chlorine.

- **STEP 5**

Let it filter for several days until the water is clear and the pH and free chlorine levels have stabilized. Add a conditioner/stabilizer by carefully following the manufacturer's instructions. This will stop the chlorine from evaporating quickly in sunlight. Add the quantity of algicide required to prevent algae.

- **STEP 6**

You may now begin regular maintenance of your pool.
Don't forget to obtain a new set of solutions for your water analysis kit every spring. The old solutions may give false results.

- **STEP 7**


Make sure that the skimmer (screws and adapter) is properly in place and tighten the water return fittings to prevent leakage and premature rusting of the pool wall or the lower part of the bottom rail.

IMPORTANT

Do not drain your pool to clean the water unless absolutely necessary (the water is recyclable). If you do empty your pool, don't leave it empty for too long or expose it to direct sunlight, as the liner may shrink.

IF YOU FOLLOW THESE TIPS AND ASK YOUR DEALER FOR ANY OTHER ADVICE YOU MAY NEED, YOU WILL HAVE ALL THE INFORMATION NECESSARY TO GET YOUR POOL OPERATING AGAIN.

Documents / Resources

	<p>MAGNUS SIMBIO RSRSRSB11 Above Ground Pool Round [pdf]</p> <p>Installation Guide</p> <p>PMAG-RD-RSRSRSB11, RSRSRSB11 Above Ground Pool Round, Above Ground Pool Round, Ground Pool Round, Pool Round</p>
---	--

References

- [User Manual](#)

■ MAGNUS

SIMBIO

🔍 Above Ground Pool Round, Ground Pool Round, MAGNUS SIMBIO, PMAG-RD-RSRSRSB11, pool round, RSRSRSB11
Above Ground Pool Round

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of

these marks on this website does not imply any affiliation with or endorsement.