



netvox RA0715 Wireless CO₂/Temperature/Humidity Sensor User Manual

[Home](#) » [netvox](#) » netvox RA0715 Wireless CO₂/Temperature/Humidity Sensor User Manual 

netvox RA0715 Wireless CO₂/Temperature/Humidity
Sensor User Manual



Model: RA0715_R72615_RA0715Y

Wireless CO₂/Temperature/Humidity Sensor

Wireless CO₂ / Temperature / Humidity Sensor User Manual

Copyright©Netvox Technology Co., Ltd.

This document contains proprietary technical information which is the property of NETVOX Technology. It shall be

maintained in strict confidence and shall not be disclosed to other parties, in whole or in part, without written permission of NETVOX Technology. The specifications are subject to change without prior notice.

Contents

1 Introduction

2 Appearance

3 Main Feature

4 Set up Instruction

5 Data Report

After power on, the device will immediately send a version packet report and two data reports including CO₂, temperature, humidity and voltage.

6 Installation

7 Important Maintenance Instruction

8 Documents / Resources

9 Related Posts

Introduction

RA0715_R72615_RA0715Y is a Class A device based on the LoRaWANTM protocol of Netvox and is compatible with the LoRaWAN protocol.

RA0715_R72615_RA0715Y can be connected with the sensor of the temperature and humidity, and CO₂. The values collected by the sensor are reported to the corresponding gateway

LoRa Wireless Technology:

LoRa is a wireless communication technology dedicated to long distance and low power consumption. Compared with other communication methods, LoRa spread spectrum modulation method greatly increases to expand the communication distance. Widely used in long-distance, low-data wireless communications. For example, automatic meter reading, building automation equipment, wireless security systems, industrial monitoring. Main features include small size, low power consumption, transmission distance, anti-interference ability and so on.

LoRaWAN:

LoRaWAN uses LoRa technology to define end-to-end standard specifications to ensure interoperability between devices and gateways from different manufacturers.

Appearance



Figure 1 RA0715

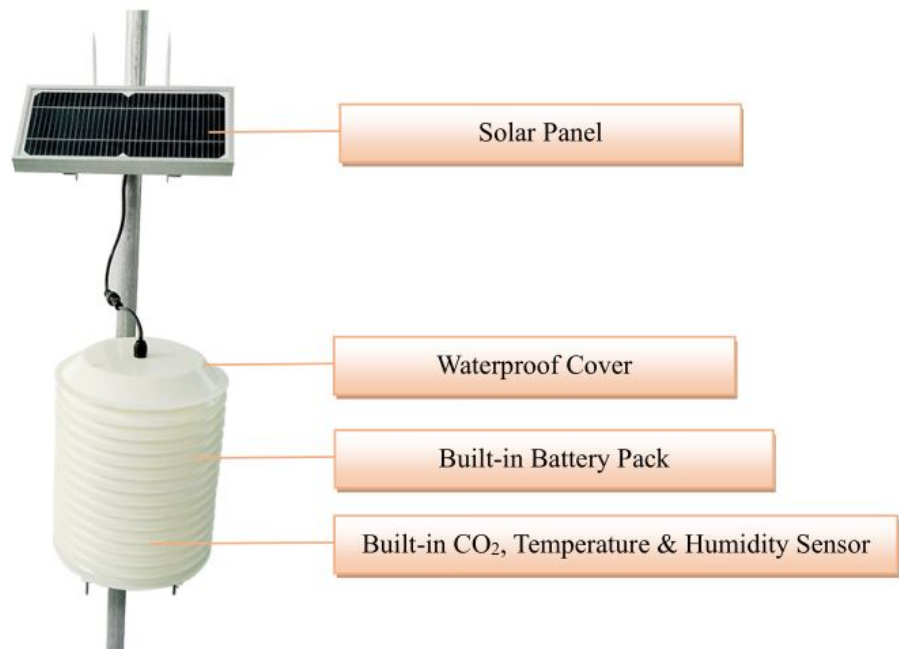


Figure 2 R72615



Figure 3 RA0715Y

Main Feature

- Compatible with LoRaWAN
- RA0715 and RA0715Y applies DC 12V adapters
- R72615 applies solar and rechargeable lithium batteries
- Simple operation and setting
- CO₂, temperature and humidity detection
- Adopt SX1276 wireless communication module

Set up Instruction

On/Off

Power On	RA0715 and RA0715Y are connected to DC 12V adapter for power on. R72615 applies solar power and rechargeable lithium batteries.
Turn On	Connect with power on to turn on
Restore to Factory Setting	Press and hold the function key for 5 seconds, and the green indicator flashes 20 times.
Power Off	Disconnect from the power supply
Note	<ol style="list-style-type: none">1. The engineering test requires to write the engineering testing software separately.2. The interval between on and off is suggested to be about 10 seconds to avoid the interference of capacitor inductance and other energy storage components.

Network Joining

Never Join the Network	Turn on the device to search the network. The green indicator keeps on for 5 seconds: success. The green indicator remains off: fail
Had joined the network (Not in the original setting)	Turn on the device to search the previous network. The green indicator keeps on for 5 seconds: success. The green indicator remains off: fail.
Fail to Join the Network	Suggest checking the device registration information on the gateway or consulting your platform server provider if the device fails to join the network.

Function Key

Press and Hold for 5 Seconds	Restore to the original setting / Turn off The green indicator flashes 20 times: success The green indicator remains off: fail
Press once	The device is in the network: the green indicator flashes once and the device sends a data report The device is not in the network: the green indicator remains off

Low Voltage Threshold

Low Voltage Threshold	10.5 V
-----------------------	--------

Threshold Restore to Factory Setting

Description	RA0715_R72615_RA0715Y has the function of the power-down saving the memory of network-joining information. This function acquiesces in turn off, that is, it will rejoin every time when it is power on. If the device is turned on by the ResumeNetOnOff command, the last network-joining information will be recorded when every time it is power on. (including saving the network address information that it is assigned, etc.) If users want to join a new network, the device needs to perform the original setting, and it will not rejoin the last network.
Operation Method	<ol style="list-style-type: none">1. Press and hold the binding button for 5 seconds and then release (release the binding button when the LED flashes), and the LED flashes 20 times.2. The device automatically restarts to rejoin the network.

Data ReportAfter power on, the device will immediately send a version packet report and two data reports including CO2, temperature, humidity and voltage.

The device sends data according to the default configuration before any other configuring.

ReportMaxTime :

RA0715 and RA0715Y is 900s,

R72615 is 1800s (subject to original setting)

* MaxTime **cannot** be set less than 15 min

* The value of the ReportMaxTime should be **greater than ReportType count *ReportMinTime+10**

ReportMinTime :

30s (US915, AU915, KR920, AS923, IN865)

ReportType count : 2

Note:

1. The cycle of the device sending the data report is according to the default.
2. The interval between two reports must be the MaxTime.
3. ReportChange is not supported by RA0715_R72615_RA0715Y (Invalid configuration).
The data report is sent according to ReportMaxTime as a cycle (the first data report is the start to the end of a cycle).
4. Data pocket: CO2, temperature, and humidity.
5. The CO2 sensor operates stably. It takes about 180 seconds after power-on to send the data report.
6. The device also supports the TxPeriod cycle configuration instructions of Cayenne. Therefore, the device can perform the report according to the TxPeriod cycle. The particular report cycle is ReportMaxTime or TxPeriod depending on which report cycle was configured last time.
7. It would take 180 seconds for the sensor to sample and process the collected value after pressing the button, please be patient.

The device reported data parsing please refer to Netvox LoraWAN Application Command document and Netvox Lora Command Resolver <http://loraresolver.netvoxcloud.com:8888/page/index>

Report Configuration

Description	Device	CmdID	DeviceType	NetvoxPayloadData		
ConfigReportReq	RA0715 R72615 RA0715Y	0x01	0x05 0x09 0x0D	MinTime (2bytes Unit:s)	MaxTime (2bytes Unit: s)	Reserved (5Bytes, Fixed 0x00)
ConfigReportRsp		0x81		Status (0x00_success)	Reserved (8Bytes, Fixed 0x00)	
ReadConfigReportReq		0x02		Reserved (9Bytes, Fixed 0x00)		
ReadConfigReportRsp		0x82		MinTime (2bytes Unit: s)	MaxTime (2bytes Unit: s)	Reserved (5Bytes, Fixed 0x00)

1. Configure RA0715 device parameter MinTime = 30s, MaxTime = 900s

Downlink: 0105001E03840000000000

Device Return:

810500000000000000000000 (configuration success)

810501000000000000000000 (configuration failure)

*Note:

The value of MinTime should be $\geq 30s$ (US915, AU915, KR920, AS923, IN865)

The value of MinTime should be $\geq 120s$ (EU868)

The value of MaxTime should be $\geq 900s$

2. Read RA0715 device parameter

Downlink: 0205000000000000000000

Device Return:

8205001E0384000000000000 (device current parameter)

Installation


1. **RA0715** does not have the waterproof function. After the device completes joining the network, please place it indoor.
2. **R72615** has a waterproof function. After the device completes joining the network, please place it outdoors.
 - (1) In the installed position, loosen the U-shaped screw, the mating washer and the nut at the bottom of R72617, and then make the U-shaped screw pass through the appropriate size cylinder and fix it on the fixing strut flap of R72615.

Install the washer and the nut in order and lock the nut till R72615 body is stable and does not shake.

(2)At the upper side of the fixed position of R72615, loosen the two U-shaped screws, the mating washer and nut on the side of the solar panel. Make the U-shaped screw pass through the appropriate size cylinder and fix them on the main bracket of the solar panel and install the washer and the nut in sequence. Lock nut till the solar panel is stable and does not shake.

(3) After adjusting the angle of the solar panel completely, lock the nut.

(4) Connect the top waterproof cable of R72617 with the wiring of the solar panel and lock it tight.

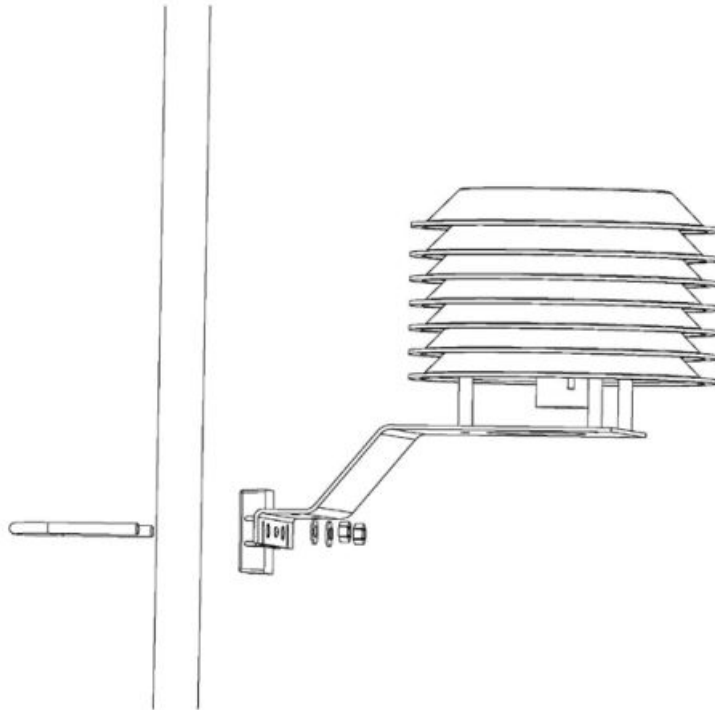

5 Rechargeable lithium battery

R72615 has a battery pack inside. Users can buy and install rechargeable 18650 lithium battery, a total of 3 sections, voltage 3.7V/ every single rechargeable lithium battery, recommended capacity 5000mah. The installation of rechargeable lithium battery steps are as follows:

1: Remove the four screws around battery cover.

2: Insert three 18650 lithium batteries. (Please make sure the positive and negative level of the battery)

3: Press the activation button on the battery pack for the first time.

4: After activation, close the battery cover and lock the screws around battery cover.




3. **RA0715Y** is waterproof and can be placed outdoors after the device completes joining the network..

(1) In the installed position, loosen the U-shaped screw, the mating washer and the nut at the bottom of RA0715Y, and then make the U-shaped screw pass through the appropriate size cylinder and fix it on the fixing

strut flap of RA0715Y. Install the washer and the nut in order and lock the nut till RA0715Y body is stable and does not shake.

(2) Loosen the M5 nut at the bottom of the RA0715Y matte and take the matte together with the screw.

(3) Make the DC adaptor pass through the central hole of the bottom cover of RA0715Y and insert it into the RA0715Y DC socket, and then put the mating screw to the original position and lock the M5 nut tight.

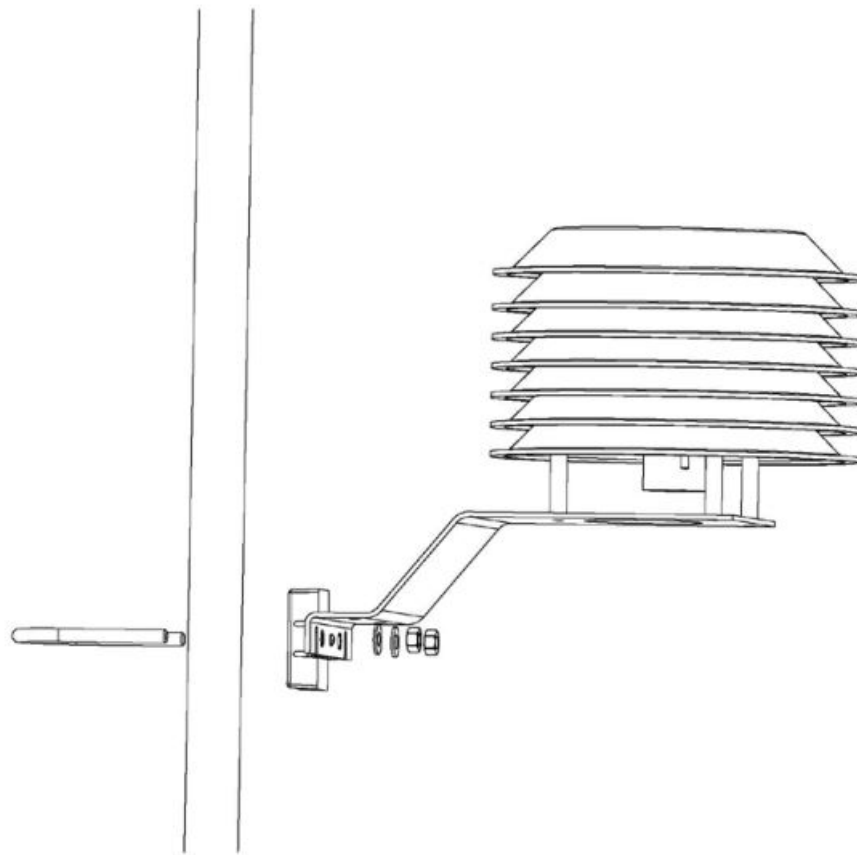


Important Maintenance Instruction

The device is a product with superior design and craftsmanship and should be used with care. The following suggestions will help you use the warranty service effectively.

- Keep the equipment dry. Rain, moisture and various liquids or water may contain minerals that can corrode electronic circuits. In case the device is wet, please dry it completely.
- Do not use or store in dusty or dirty areas. This way can damage its detachable parts and electronic components.
- Do not store in excessive heat place. High temperatures can shorten the life of electronic devices, destroy batteries, and deform or melt some plastic parts.
- Do not store in excessive cold place. Otherwise, when the temperature rises to normal temperature, moisture will form inside which will destroy the board.
- Do not throw, knock or shake the device. Treating equipment roughly can destroy internal circuit boards and delicate structures.
- Do not wash with strong chemicals, detergents or strong detergents.
- Do not paint the device. Smudges can make debris block detachable parts up and affect normal operation.
- Do not throw the battery into the fire to prevent the battery from exploding. Damaged batteries may also explode.

Please take it to the nearest authorized service facility for repairing

Documents / Resources

<div data-bbox="135 336 277 349">  <div> <div>netvox</div> <div> <div>RA0715</div> <div>RA0715Y</div> <div>RA0715Y</div> </div> </div> </div> <div data-bbox="146 389 268 425"> <div>Wireless CO₂ / Temperature / Humidity Sensor</div> <div>User Manual</div> </div> <div data-bbox="135 519 277 555"> <div>Copyright © 2015 Netvox Inc. All Rights Reserved.</div> <div> <div>Netvox and the Netvox logo are registered trademarks of Netvox Inc. in the United States and other countries.</div> <div> <div>RA0715, RA0715Y, RA0715Y, RA0715Y</div> <div>RA0715, RA0715Y, RA0715Y, RA0715Y</div> </div> </div> </div>	<div data-bbox="320 418 1326 465"> <div> netvox RA0715 Wireless CO2/Temperature/Humidity Sensor [pdf] User Manual </div> <div>RA0715, R72615, RA0715Y, RA0715 Wireless CO2, Temperature, Humidity Sensor</div> </div>
--	---

Manuals+,