



Oster BLSTET-B/BLSTET-C Series Ice Shaving Blender User Manual

[Home](#) » [Oster](#) » Oster BLSTET-B/BLSTET-C Series Ice Shaving Blender User Manual

Contents [[hide](#)]

- 1 User Manual
 - 1.1 Oster BLSTET-B/BLSTET-C Series Ice Shaving Blender
- 2 IMPORTANT SAFEGUARDS
- 3 Features of Your Ice Shaving Blender
- 4 Control Panel
- 5 Making Frozen Drinks
- 6 Automatic Frozen Drink Making
- 7 Blending Operation
- 8 Customizing Your Drink
- 9 Manual Drink Making
- 10 Cleaning and Maintenance
- 11 1-Year Limited Warranty
- 12 Related Posts

User Manual





Oster BLSTET-B/BLSTET-C Series Ice Shaving Blender

For product questions contact:
Sunbeam Consumer Service
USA : 1.800.334.0759

www.oster.com

© 2010 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions.
All rights reserved. Distributed by Sunbeam Products, Inc. doing business as
Jarden Consumer Solutions, Boca Raton, Florida 33431.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed, including the following:
READ ALL INSTRUCTIONS BEFORE USE

1. To protect against electric shock, do not immerse appliance, cord or plug in water or other liquids.
2. Close supervision is necessary when any appliance is used near children. This appliance should not be used by children.
3. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
4. Avoid contact with moving parts.
5. Do not operate any appliance with damaged cord or plug, after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
6. Do not use outdoors.
7. Do not let cord hang over the edge of a table or counter or touch hot surfaces, including the stove.
8. Keep hands and utensils out of container while blending and/or ice shaving to reduce risk of severe injury to persons or damage to the unit. A rubber spatula may be used but must be used only when the appliance is not running.

9. Blades are sharp; handle carefully.
10. Always operate appliance with Jar Lid and Ice Reservoir Lid securely locked in place.
11. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
12. Do not use broken, chipped, or cracked Blending Jar or Ice Reservoir.
13. To reduce risk of injury to persons, never place Blending Blade Assembly on base without the Blending Jar properly attached.
14. Do not leave appliance unattended while it is operating.
15. To disconnect, ensure appliance is off, then remove plug from wall outlet.
16. Do not use appliance for other than intended use.
17. Never place fingers or other utensils into feed or discharge areas.
18. Check Ice Reservoir for presence of foreign objects before using.
19. Do not blend hot liquids or run the appliance empty.
20. Do not let cord hang over edge of table or counter.

NOTE: Never shake or remove blender jar during operation as jar blade assembly can get damaged.

This Product Is for Household Use Only


Power Cord Instructions

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SAVE THESE INSTRUCTIONS

Welcome


Congratulations on your purchase of the OSTER® Ice Shaving Blender! To learn more about OSTER® products, please visit us at www.oster.com.

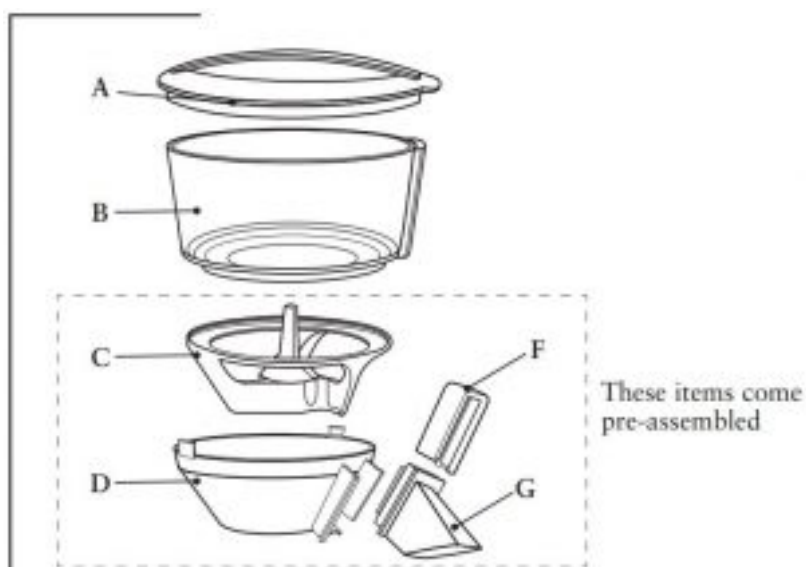




Features of Your Ice Shaving Blender

- A. Ice Reservoir Lid – Covers the Ice Reservoir.
- B. Ice Reservoir – Holds the ice for making frozen drinks.
- C. Shaving Paddle – Moves ice across the Shaving Blade.
- D. Inner Ice Bowl
- E. Ice Shaver Main Body
- F. Shaving Blade Assembly Clip – Holds Shaving Blade in place.
- G. Ice Shaving Blade – Shaves ice.
- H. Ice Chute – Directs ice from Ice Bowl into Blending Jar.
- I. Ice Melt Reservoir – Catches water from melted ice.
- J. Motor Base – Holds Blending Jar and Ice Shaver assembly securely in place.
- K. Control Panel – Contains all necessary controls to operate your unit.
- L. Jar Lid – Seals the blending jar.
- M. Blending Jar – Maximum capacity of 40 oz.
- N. Blending Blade Sealing Ring – Seals the Blending Jar and Jar Base.
- O. Blending Blade
- P. Jar Base

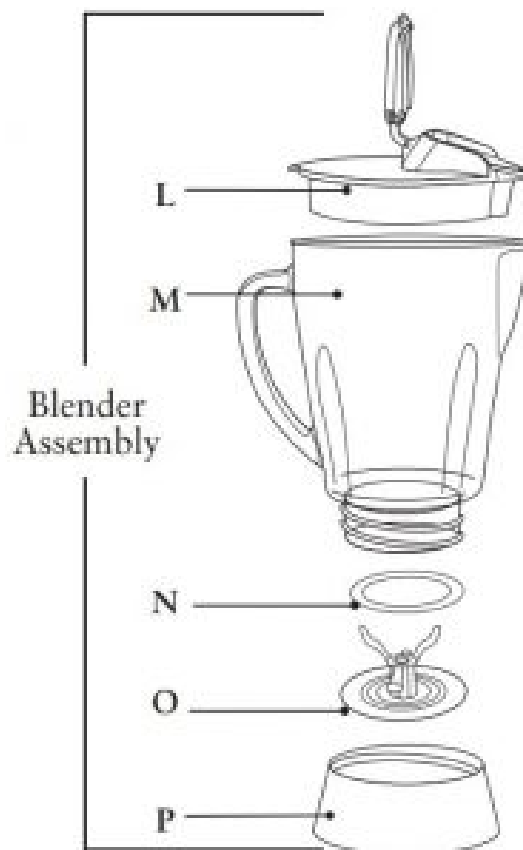

Control Panel

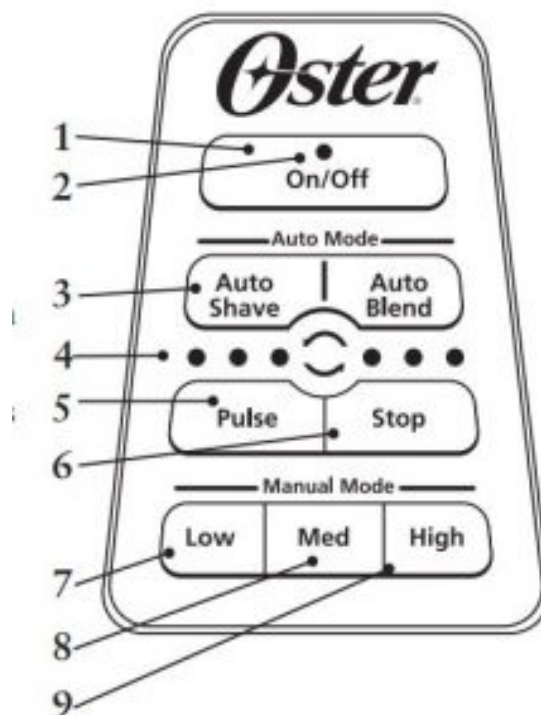

1. ON/OFF Button – Press this button to turn the unit “On” or “Off”.
2. Power Indicator Light – Turns on and blinks rapidly indicating unit has power.
3. Auto Shave/Auto Blend – Activates auto shaving and blending cycles.
4. Status Indicator Lights
 - Blue Lights – Pulse slowly to indicate which button to press during auto cycle OR remain illuminated during auto cycle.

- Red Lights – shows product safety interlocks are not engaged.
5. Pulse Button
 6. Stop Button
 7. Low Button – Blender low speed
 8. Med Button – Blender medium speed
 9. High Button – Blender high speed

Making Frozen Drinks

NOTE: NEVER PUT ANYTHING BUT ICE IN THE ICE RESERVOIR.

1. Place the motor base on a clean dry flat surface with control panel facing you.
2. With handle on the LEFT, place the Ice Shaver Main Body on top of Motor Base and lock into position by turning counter-clockwise (use aligning arrows).
3. Install the Ice Reservoir to Ice Shaver Main Body by first removing the Ice Reservoir Lid (turning it clockwise to the Unlock position). Then place the Ice Reservoir on top of the unit and lock into position by turning counterclockwise (use aligning arrows)
4. Plug the unit into a standard 120 Volt wall socket. For best results, use store-bought ice that has been out of the freezer between 20-30 minutes.
5. Fill the Ice Reservoir with ice cubes.
6. Replace the Ice Reservoir Lid and rotate counterclockwise to the locked position.
7. Remove Blending Jar Lid.
8. Add appropriate amount of liquid ingredients to the Blending Jar.
9. Replace Blending Jar Lid and position Blending Jar under the Ice Chute by aligning the chute with the Blending Jar Lid.
10. Push the ON/OFF button to turn the unit on. Power Indicator Light will blink slowly until the ice shaver or blender is placed on Motor Base.

NOTE: In order to properly install the Ice Reservoir to the unit, make sure to first remove the Ice Reservoir Lid from the Ice Reservoir.




The Best Margarita Recipe (Makes 3-4 Drinks)

Ingredients	fl oz	ml
Tequila	4	120
Triple Sec	3	90
Lime Juice	1-2 squirts	
Margarita Mix	7	210

Strawberry Daiquiri Recipe (Makes 3-4 Drinks)

Ingredients	fl oz	ml
Light Rum	4	120
Cranberry Juice	8	240
Sugar	3 Tbsp	45
Frozen Strawberries - sliced	1.5 cups	360

Automatic Frozen Drink Making

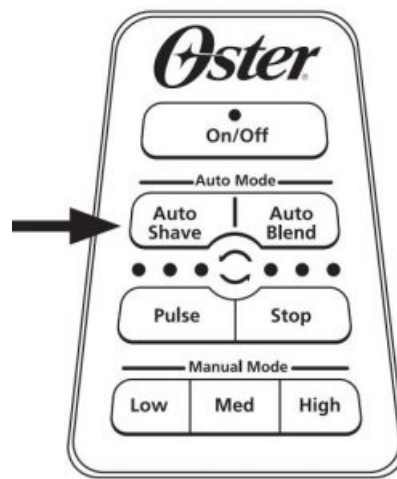

- If you want to use the automatic frozen drink cycle, start by pushing the “Auto Shave/Auto Blend” button.
- The unit will shave ice for the appropriate time. The unit will stop at the completion of the cycle.
- When ice shaving is complete, the lights under Auto Blend will flash slowly.
- Remove ice shaver assembly from Motor Base.
- Place Blending Jar assembly on Motor Base.
- Restart frozen drink cycle by pushing the “Auto Shave/Auto Blend” button again.


NOTE: To customize your drink, after either the auto shave or auto blend cycle, you can pulse manually. Add more shaved ice or blend longer by pushing the “Pulse” button. (See page 9)

- Status Indicator Lights will be illuminated during auto cycle.
- To serve:
 - A. Turn the unit off.
 - B. Open Lid Cap (make sure Blender Jar Lid is secure).
 - C. Lift and remove Blending Jar.
 - D. Pour and serve.

NOTE: To remove excess ice from the Ice Reservoir, remove Ice Shaver Lid from Ice Shaver Reservoir. Remove Ice Shaver Assembly from Motor Base. Tilt unit enough to allow excess ice to pour out of the unit. **WARNING: DO NOT PLACE FINGERS IN THE ICE HOPPER. THE SHAVING BLADE IS SHARP AND COULD CAUSE INJURY.**

- Periodically check the Ice Melt Reservoir and empty as needed.


Blending Operation

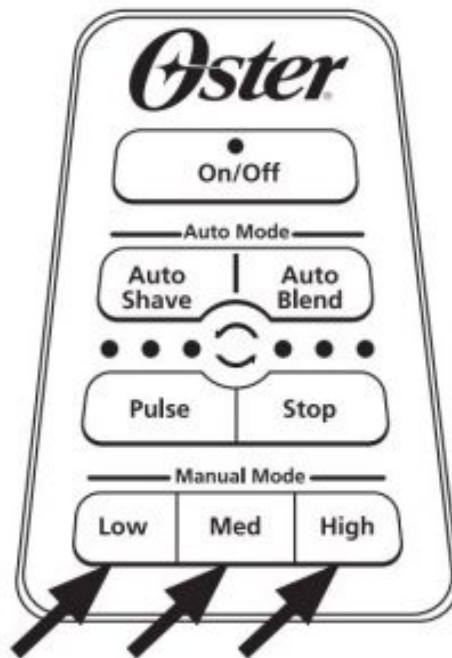

1. Place Blending Jar assembly on Motor base.
2. To start blending, press “Low”, “Med”, or “High”.
3. To stop blending, press the “Stop” button.

Customizing Your Drink

To make a thicker drink:

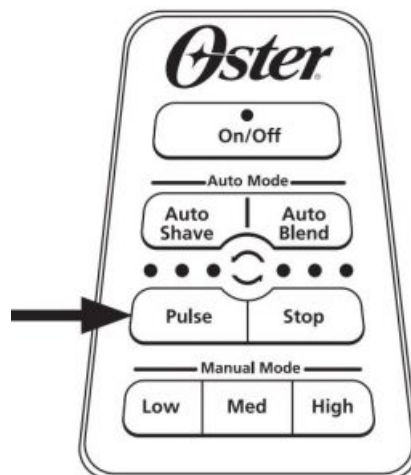

NOTE: Use LESS liquid when adding ingredients to blending jar.

1. Press and hold the “Pulse” button to add more ice to the blending jar.
2. To stop adding shaved ice, release the “Pulse” button.
3. To blend the added shaved ice, remove the Ice Shaver assembly from the Motor Base and place the Blender assembly on the Motor Base.
4. Hold the “Pulse” button until the desired consistency is achieved.

To make a thinner drink:

Note: Use MORE liquid when adding ingredients to blending jar.

1. If you have already made your drink using the Auto mode, make sure your drink is blended to the desired consistency.
2. Add more liquid ingredients to the Blending Jar assembly.
3. Press and hold the “Pulse” button until the desired consistency is achieved (you may also use the Low, Med, or High buttons to blend your drink).

Manual Drink Making

Fill the Blending Jar with desired contents, use less ice for thinner drink, use more ice for thicker drink.

1. With Ice Shaver assembly on Motor Base, position Blending Jar under Ice Chute.
2. Press and hold the “Pulse” button until the desired amount of shaved ice is added to the Blending Jar.
3. Remove Ice Shaver assembly from Motor Base.
4. Place Blending Jar assembly on Motor Base.
5. To start blending, press “Low”, “Med”, or “High”.
6. To stop blending, press the “Stop” button.

Cleaning and Maintenance

IMPORTANT: Your Blending Jar, Shaving and Blending Blades are subject to wear during normal use. Always inspect for nicks, chips, or cracks. Always inspect for broken, cracked, or loose blades. If the Jar or Shaving and/or Blending Blades are damaged, do not use.

1. Make sure unit is unplugged. Place on a clean dry surface. Turn the unit so the back is facing you. Remove the Ice Reservoir Lid by turning clockwise to the unlock position.
2. To remove the Ice Reservoir, grasp the Reservoir Handle with your hand, turn clockwise, and lift to remove.

Note the location of the Shaving Blade inside the Ice Hopper.

WARNING: Do not place fingers inside the Ice Hopper near the Shaving Blade. Blade is sharp – handle carefully.

NOTE: To reassemble, install Ice Reservoir to the unit first, then attach Ice Reservoir Lid.

3. Rinse the Shaving Paddle assembly with water and dry thoroughly before storing.
4. Turn the Blending Jar upside down and unscrew the Jar Base. Carefully remove the Blending Blade and Blending Blade Sealing Ring.

WARNING: The Blending Blade is sharp. Handle with care.

5. To remove the Ice Melt Reservoir, hold the unit still and pull straight out on the handle.
6. Blending Jar Lid, Blending Jar, Blending Blade, Blending Blade Sealing Ring, Jar Base and Ice Melt Reservoir can be safely washed in the top rack of your dishwasher. Use only top rack. Failure to do so will result in damage. The Ice Reservoir Lid, Ice Reservoir, Shaving Paddle, Ice Bowl, Ice Deflector Blade Assembly,

Shaving Blade and Ice Melt Reservoir are only exposed to ice and water and they should be rinsed with soap and warm water and allowed to air dry.

7. Use a damp cloth to clean the outside of the unit.

Warning : Unplug unit before cleaning. Do not use solvents. Never immerse the unit in water.

1-Year Limited Warranty

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on Sunbeam's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How To Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1 800-334-0759 and a convenient service center address will be provided to you.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1 800-667-8623 and a convenient service center address will be provided to you. In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

Read More About This Manual & Download PDF:

Oster BLSTET-B/BLSTET-C Series Ice Shaving Blender User Manual – [Optimized PDF](#)

Oster BLSTET-B/BLSTET-C Series Ice Shaving Blender User Manual – [Original PDF](#)

Questions about your Manual? Post in the comments!