



## PAC LPA-1.2 2 Channel Line-Output Converter User Guide

[Home](#) » [PAC](#) » PAC LPA-1.2 2 Channel Line-Output Converter User Guide

### Contents [ [hide](#) ]

- [1 PAC LPA-1.2 2 Channel Line-Output Converter](#)
- [2 Quick Start Guide](#)
- [3 Features & Wiring Information](#)
- [4 Example Installation](#)
- [5 Specifications](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)




### PAC LPA-1.2 2 Channel Line-Output Converter



## Quick Start Guide


The L.O.C.PRO ADVANCED™ can be used to add amplifiers to an audio system that does not have RCA outputs or when replacing an OEM radio and retaining the factory amplified system. Variable Gain Controls with Clipping Indicators, Selectable Ground Isolation and Load Select features ensure a pure, noise-free signal for any type of audio system. This Quick Start Guide will get you going, but if you need additional help or information, please visit our website or contact Technical Support.

## Features & Wiring Information

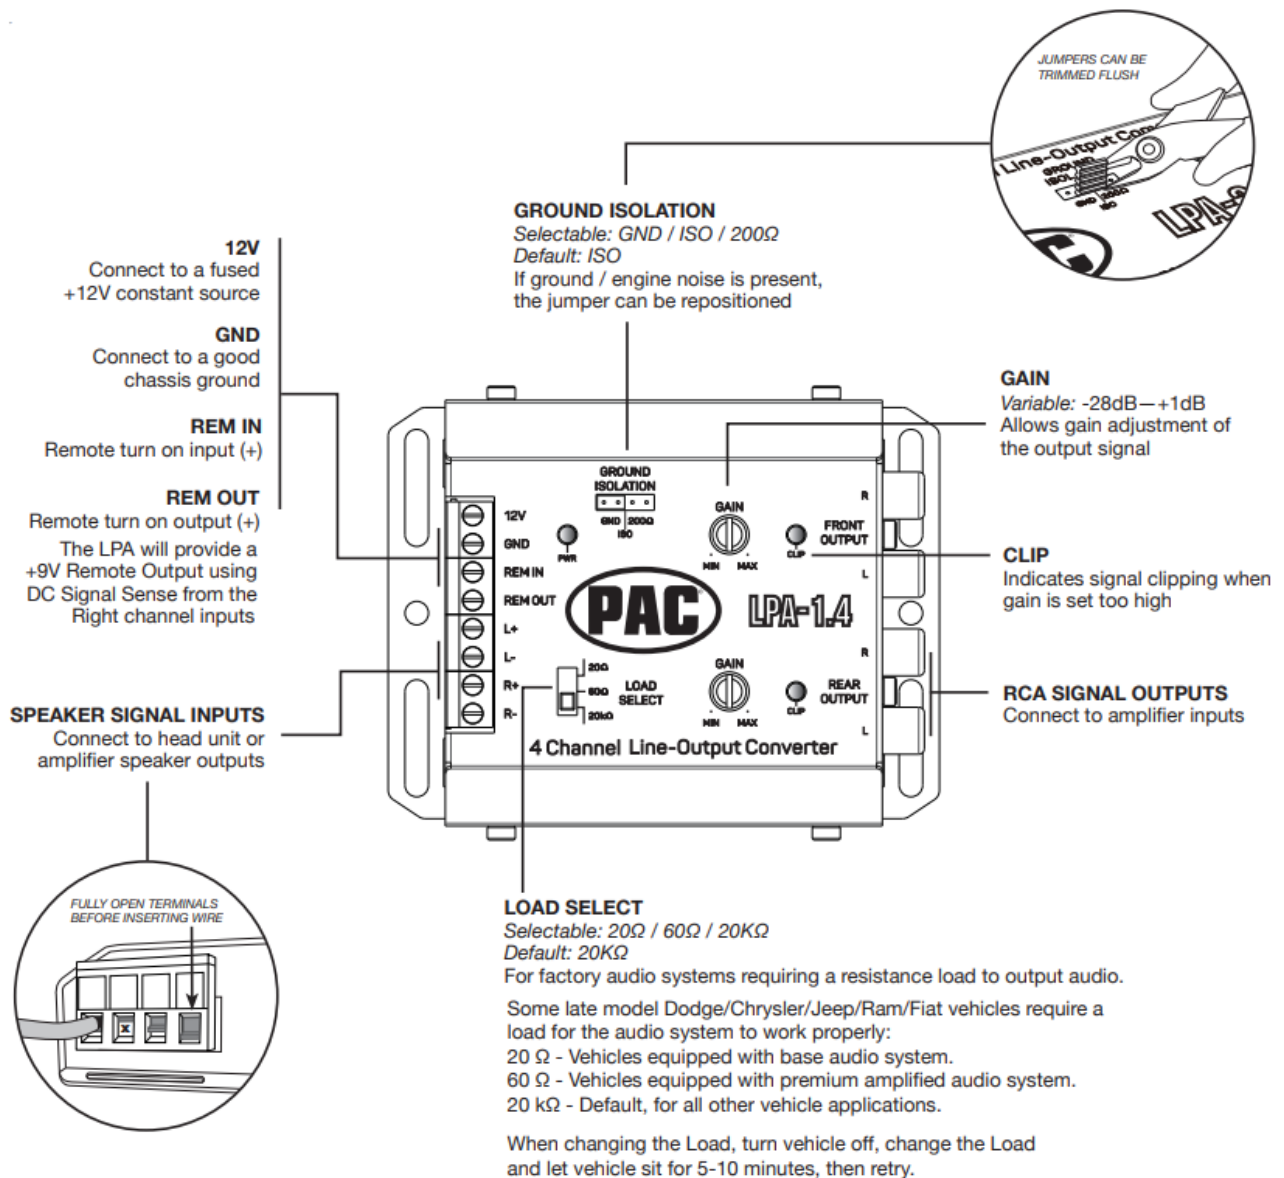

## Example Installation

Speaker level input from a radio to RCA level output for an aftermarket amplifier is the most commonly used configuration for the L.O.C.PRO ADVANCED. This will create RCA level outputs from a radio that only has speaker level outputs. In the example below, the Positive(+) and Negative(-) wires of two speakers are “tapped” and connected to the SPEAKER SIGNAL INPUTS of the LPA. The speakers will continue to play as normal. The REM OUT is connected to the amplifiers turn-on. When the radio is turned on the LPA will automatically turn on the amplifier. Lastly, the RCA SIGNAL OUTPUTS from the LPA are connected to the aftermarket amplifiers inputs.

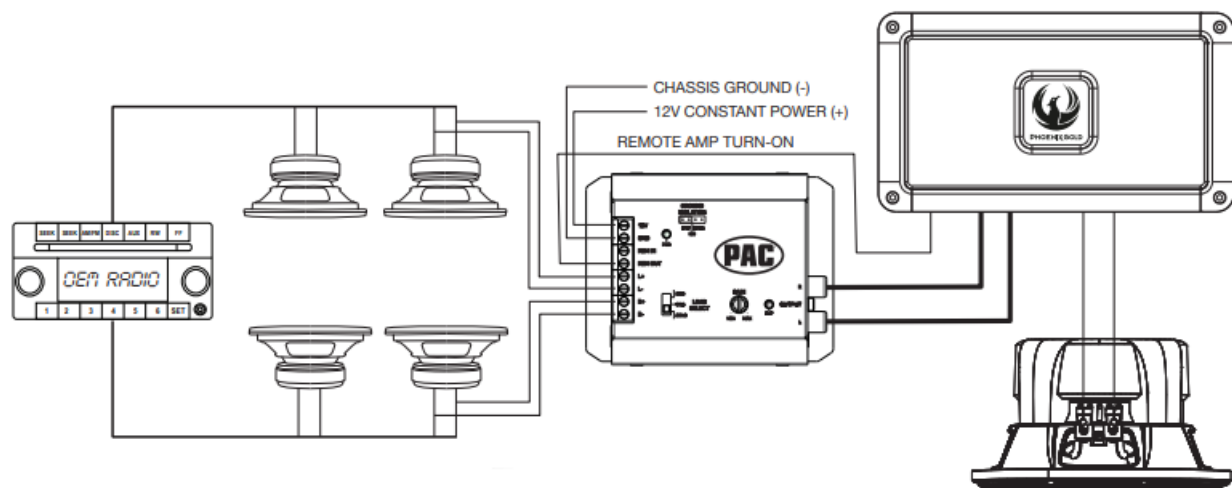

For more installation examples, tech tips and updates, visit the L.O.C.PRO ADVANCED product pages on [PAC-Audio.com](https://www.pac-audio.com)




## Specifications

Model Number	LPA-1.2	LPA-1.4
Channels	2 IN — 2 OUT	2 IN — 4 OUT
Operating Voltage	9V—16V	9V-16V
Max Input Level (20kH $\Omega$ Load Setting)	20V / 100W	20V / 100W
Auto Turn On	DC Offset / Remote	DC Offset / Remote
Output Voltage MAX @ 13.8V	9.5V RMS	9.5V RMS
Turn On Trigger (DC-Offset)	3V—7V	3V—7V
Load Input Impedance	20 $\Omega$ , 60 $\Omega$ , 20K $\Omega$	20 $\Omega$ , 60 $\Omega$ , 20K $\Omega$
Output Impedance	<120 $\Omega$	<120 $\Omega$
Variable Gain Adjustment	-28dB—+1dB	-28dB—+1dB
Signal To Noise	>110dBA @ 6.4V Output	>110dBA @ 6.4V Output
THD+N	< 0.01%	< 0.01%
Input Sensitivity	0.5V—20V	0.5V—20V
Frequency Response	10Hz—20kHz	10Hz—20kHz
Current Draw (Max)	40mA	40mA
Low Pass Filter	NO	NO
Bass Boost	NO	NO
Clip Indicator	YES	YES
Remote Level Control	NO	NO
Chassis Type	Stamped Steel	Stamped Steel
Terminal Gauge	18AWG / Screw Type	18AWG / Screw Type

Technical Support | **Phone:** 727-592-5991 | **Email:** [support@aampglobal.com](mailto:support@aampglobal.com) | **Chat:** [PAC-Audio.com](https://www.pac-audio.com) | IM-LPA1X REV. 062422

## Documents / Resources

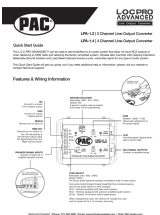	<p><a href="#">PAC LPA-1.2 2 Channel Line-Output Converter</a> [pdf] User Guide</p> <p>LPA-1.2, LPA-1.4, 2 Channel Line-Output Converter, 4 Channel Line-Output Converter, Line-Output Converter, 2 Channel Converter, Converter, LPA-1.2</p>
---	---

## References

- [PAC – Connecting cars and technology. Your total installation solution.](#)

