

PHASE
TECH
BY MSE AUDIO

**PremierLux
Series Bookshelf
Speaker**



PHASE TECH PremierLux Series Bookshelf Speaker Instruction Manual

[Home](#) » [PHASE TECH](#) » PHASE TECH PremierLux Series Bookshelf Speaker Instruction Manual 

Contents

- 1 PHASE TECH PremierLux Series Bookshelf Speaker
- 2 SPECIFICATIONS
- 3 PRODUCT USAGE INSTRUCTIONS
- 4 FAQ
- 5 PREMIER LUX FEATURES
- 6 Safety Instruction
- 7 GETTING STARTED AND PRECAUTIONARY NOTES
- 8 SUBWOOFER PLACEMENT
- 9 SPEAKER CONNECTIONS
- 10 FLOOR SPIKES
- 11 SPECIAL PRODUCT FEATURES
- 12 MAINTENANCE AND SERVICE
- 13 TROUBLESHOOTING
- 14 SPECIFICATIONS
- 15 Documents / Resources
 - 15.1 References

PHASE
TECH
BY MSE AUDIO

PHASE TECH PremierLux Series Bookshelf Speaker



SPECIFICATIONS

- Model: PL150
- Manufacturer: Phase Technology Corporation
- Address: 13720 W 109th St. Lenexa, KS 66215
- Phone: 855.663.5600 (DOMESTIC) / +1.913.663.5600 (INTERNATIONAL)

PRODUCT USAGE INSTRUCTIONS

Getting Started and Precautionary Notes Before using the Premier Lux PL150 speakers, carefully read the manual for setup and operation instructions. Ensure that all safety precautions are followed to avoid any risks.

Home Theater Speaker Placement Place the speakers in your home theater setup according to the guidelines provided in the manual for optimal audio performance.

Subwoofer Placement Proper placement of the subwoofer is crucial for balanced sound reproduction. Follow the placement recommendations in the manual.

Speaker Connections Connect the speakers to your audio source following the instructions outlined in the manual. Ensure secure connections for optimal sound quality.

PL150s Placement and Mounting For PL150 speakers, follow the placement and mounting instructions provided to achieve the best sound experience in your listening environment.

Maintenance and Service Regular maintenance is essential to keep your speakers in top condition. Refer to the manual for cleaning and servicing instructions.

Troubleshooting If you encounter any issues with setup or operation, refer to the troubleshooting section of the manual for guidance. Contact authorized dealers or the manufacturer if needed.

FAQ

- **What should I do if my speakers are not producing sound?**

- If your speakers are not producing sound, first check the connections and ensure they are properly set up. You can also refer to the troubleshooting section of the manual for further assistance.

- **How often should I clean my speakers?**

- Cleaning your speakers regularly is recommended to maintain their performance. Follow the cleaning instructions provided by the manufacturer in the manual.

- **Can I mount the PL150 speakers on the wall?**

- Yes, you can mount the PL150 speakers on the wall following the mounting instructions provided in the manual for proper installation.

PREMIER LUX FEATURES


- Patented Flat Piston Woofers that utilize a Tri-Laminate of Kevlar, RPF®, and Glass Fiber (US Patent #4566178) which generate a widely dispersed sound from a rigid cone moving as one piece
- Patented Soft Dome Tweeter (US Patent #3328537)
- Absolute Phase® Crossovers ensure a smooth, well-designed soundstage in the horizontal and vertical plane of the speakers while producing a seamless transition from one speaker to the next in home theater applications.

Thank you for choosing Phase Technology® speakers. We know there are a wide variety of choices available today, and we sincerely appreciate your purchase of our product. Phase Technology speakers are built to exacting standards and will provide many years of listening enjoyment.

Our speakers are the result of over six decades of designing and manufacturing. We hold many key patents in loudspeaker technology including the soft-dome tweeter. Our mission, our passion is to constantly advance the art and science of accurate audio reproduction. Our dedication insures your new speakers will accurately reproduce all the impact, detail and delicacy of today's digital technology. Regardless of application, serious audiophile listening or home theater, we recommend that you take the time to read this manual. In the highly unlikely event that you should experience a problem with set-up or operation, please contact one of our authorized dealers for assistance, or contact us directly.

- Phase Technology Corporation
- 13720 W 109th St.
- Lenexa, KS 66215
- 855.663.5600 (DOMESTIC)
- +1.913.663.5600 (INTERNATIONAL)

Safety Instruction

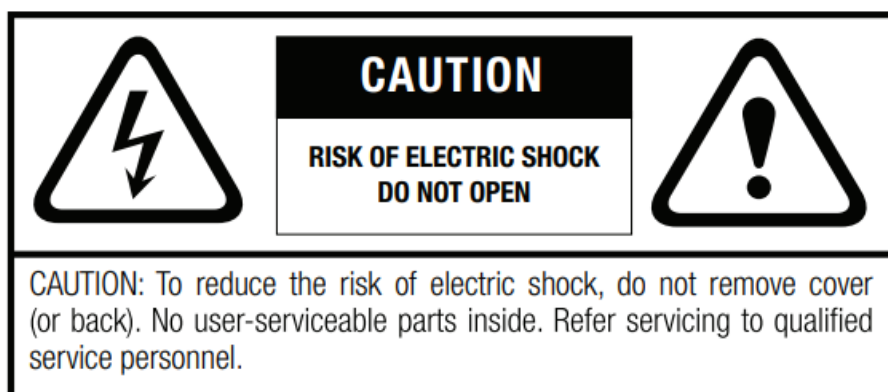

Explanation of Graphical Symbols

- The light flash with the around head symbol within an equilateral triangle is intended to alert you to the presence of un-insulated “dangerous voltage: within the product’s a risk of electric shock to persons.
- The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1. Read Instructions – All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions – The safety and operating instructions should be retained for future reference.
3. Heed Warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions – All operating and other instructions should be followed.
5. Water and Moisture – The appliance should not be used near water – for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
6. Carts and Stands – The appliance should be used only with a cart or stand that is recommended by the manufacturer. PORTABLE CART WARNING
7. Wall or Ceiling Mounting – The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. Ventilation – The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. Heat – The appliance should be situated away from heat sources such as radiators, stoves, or other appliances that produce heat.
10. Power Source – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
11. Power Cord Protection – Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed up or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
12. Cleaning – The appliance should be cleaned only as recommended by the manufacturer.
13. Nonuse Periods – The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
14. Object and Liquid Entry – Care should be taken so that neither objects fall nor liquids spill into the inside of the appliance.
15. Damage Requiring Service – The application should be serviced by qualified service personnel when:
 - a. the power supply cord or the plug has been damaged,
 - b. objects have fallen onto or liquid has been spilled into the appliance,
 - c. the appliance has been exposed to rain,
 - d. the appliance does not appear to operate normally or exhibits a marked change in performance, or
 - e. the appliance has been dropped or the cabinet damaged.
16. Servicing – The user should not attempt to service the appliance beyond those means described in the operating service personnel.
17. Grounding or Polarization – Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.

APPLICABLE FOR USA, CANADA OR WHERE APPROVED FOR USAGE

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE PLUG TO WIDE SLOT, INSERT FULLY.


GETTING STARTED AND PRECAUTIONARY NOTES

For proper connection and therefore full enjoyment of your new Phase Technology speakers, we encourage you to read this owners' manual thoroughly, even if you are very familiar with installing speakers and home entertainment equipment.

Speaker placement is very subjective. Placement follows the guidelines for the developers of multi-channel home entertainment systems, yet is also guided by personal preferences. The proper spacing, location and adjustment of front, rear and center-channel speakers as well as subwoofers are critical for complete enjoyment of your new speakers. This manual covers these topics thoroughly. possibility of damage from power surges or unbalanced loads before the system is properly connected. negative (-) polarities. For ideal system performance, always connect the positive side of the cable (marked with a stripe, color and /or other indicator) to the positive terminals on your speakers and amplifier and the negative side of the cable to the negative terminals. Amplifier selection is critical to your enjoyment of your new speakers. If you are considering upgrading your current component amplifier or multi-function receiver, we suggest purchasing as much power as your budget can afford. It will always be preferable to have an affordable high-powered model with fewer "bells and whistles" than a lower-powered model straining to operate near its power limits. High volume settings that produce audible distortion – indicating an under-powered amplifier – could eventually damage your speakers and your amplifier. Begin and end listening sessions at low volume levels so you will not power up your system the next time with possibly harmful high voltages. A damaging surge also could result if you change the input source (from FM tuner to CD player, for example) at high volume levels. If you suspect that one channel of your amplifier has failed, have it repaired immediately by your dealer. Damage to your speakers could occur if you switch between the good and defective channels.


[HOME THEATER SPEAKER PLACEMENT]

Today's digital multi-channel home theater technology has elevated the art of "surround sound" to reproduce the movie theater experience in your own home. Speaker requirements and placement are vitally important in reproducing these multi-media effects. Two front speakers (left and right), two surround speakers (left and right), a center-channel speaker, and a subwoofer define the minimum arrangement for modern multi-channel systems. Placement of speakers in your room will impact the final listening experience. To position your speakers, there are some general guidelines that take room size, shape, and fixtures and furnishings into account. Use the following illustrations as a general guide for speaker placement in a typical home theater system.

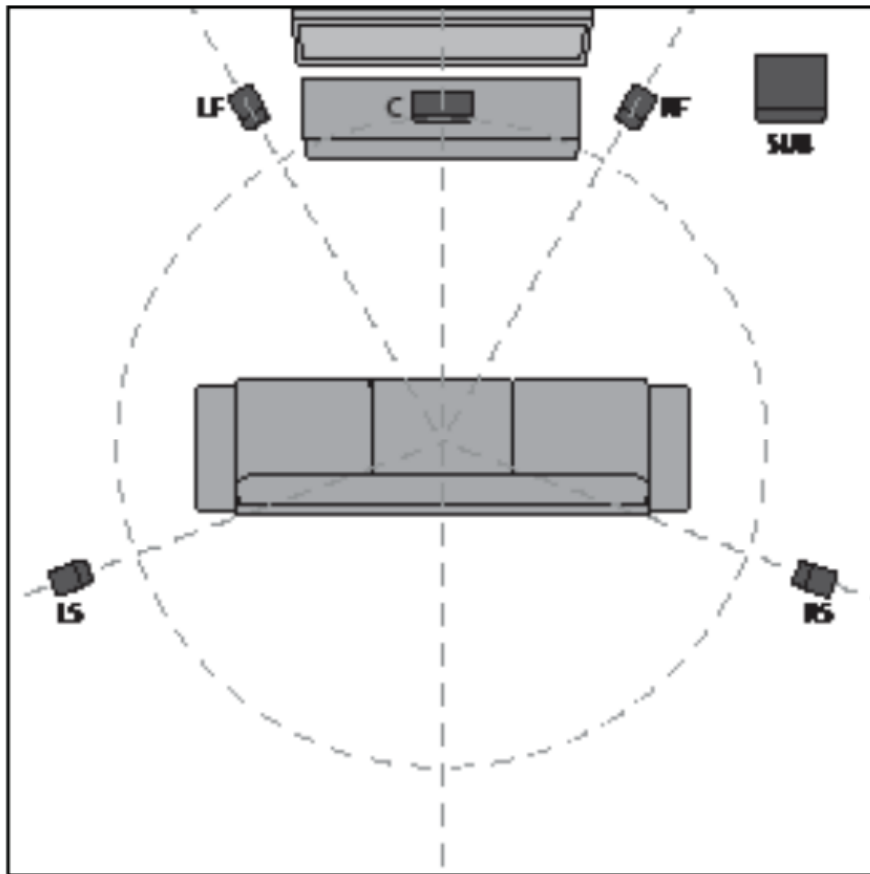

HOME THEATER SYSTEM

In a 5.1 home theater system, the center channel (C) should be placed at 0° directly below or above the video screen, the left front (LF) and right front (RF) speakers should be placed at 30° from the listening area, and the left should be placed at or near ear level.

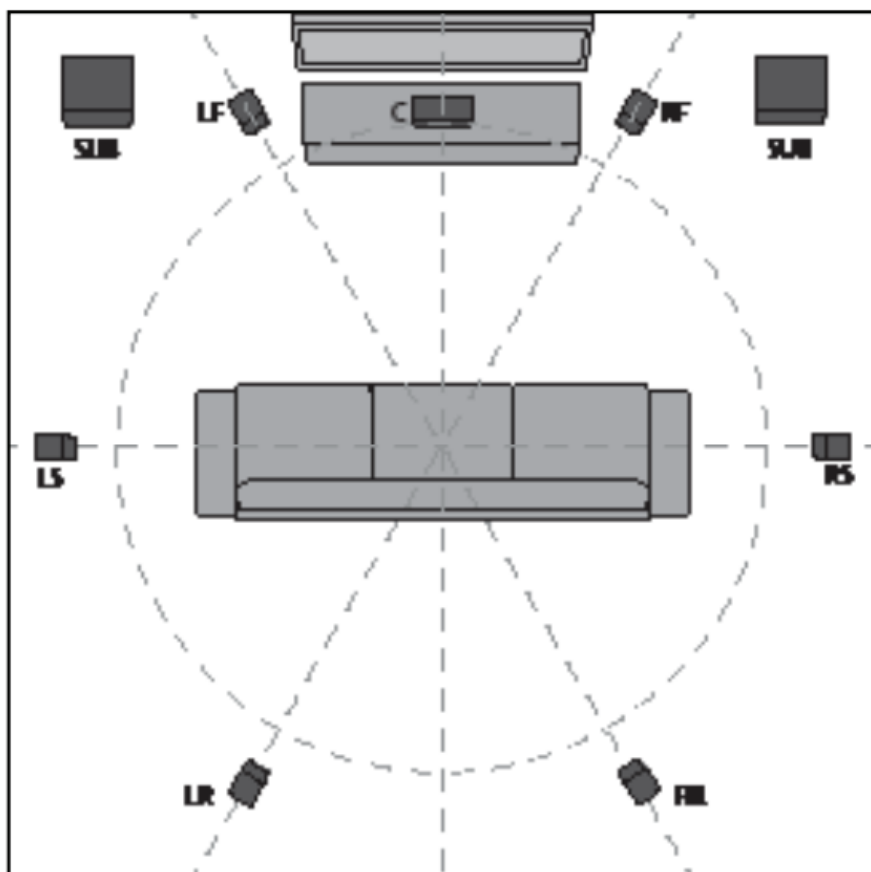

HOME THEATER SYSTEM

In a 7.2 home theater system, the center channel (C) should be placed at 0° directly below or above the video screen, the left front (LF) and right front (RF) speakers should be placed at 30° from the listening area, and the left and right surrounds (LS and RS) should be placed at 90°. The left rear (LR) and right rear (RR) speakers should be placed at 150°. All seven speakers should be placed at or near ear level.

SUBWOOFER PLACEMENT

Subwoofer placement is less critical, because the frequencies they reproduce are omnidirectional. This means the human ear doesn't room. It's best, however, to keep a subwoofer within the sound field of the other speakers. The closer the subwoofer is to a wall, the louder and more intense its bass output will be: this effect is even stronger when the sub is placed in or near a room's corner. If using two subwoofers, start by placing them next to the front left and right speakers, in both front corners or one in the corner and one 1/3 of the way along the front wall from the corner. Each room is different. Experiment with these options or try other locations until you get the best results. If you must choose a less-than-ideal position, the output level of Phase Technology-powered subwoofers is adjustable to compensate for your listening environment.

SPEAKER CONNECTIONS

Please refer to the diagram on for speaker connections. The following instructions apply whether you are using a separate amplifier or Home Theater receiver. For simplicity we will use the term "amplifier" throughout this manual to mean both.

Special note: Turn off and unplug your amplifier before connecting speakers.

Special Note: Observe Speaker Polarity Carefully!

Every cable, speaker and amplifier is clearly marked to show their positive (+) and negative (-) terminals. Amps and speakers may use some combination of these symbols and/or colors to indicate positive (usually red) and negative (usually black or white) connections. One strand of your cable will also be ridged and/or marked with a colored line or other indicator on the positive side. For proper polarity and, thus, ideal system performance, always connect the positive side of the cable to the positive terminals on your speakers and amplifier and the negative side of the cable to the negative terminals.


- **FRONT SPEAKERS:** The pair of front speaker connections (left and right) on your amplifier will be labeled "Front" or "Main." Connect the speaker cables for your left and right front speakers using these terminals and then connect the cables to the front satellites. Observe positive and negative polarities.
- **PL950 BI-WIRING:** The PL950 speaker is equipped with bi-wiring, with four speaker terminals instead of two. This may enhance speaker performance by using an additional pair of speaker cables. In order to bi-wire this speaker, remove the gold-plated strips between the speaker terminals and connect two cables between your amplifier's positive output terminal and the two positive (red) terminals on the speaker. Then connect the other two cables between the amp's negative output terminal and the two negative (black) terminals on the speakers. If you choose not to bi-wire your speakers, do not remove the metal strips between the speaker terminals. Connect each cable in the standard manner, with one cable each between the positive and negative speaker terminals and your amplifier.
- **CENTER SPEAKER:** The center speaker connections on your amplifier will be labeled "Center" or "Center Channel." Connect the speaker cables for your center channel speaker using these terminals and then connect the cables to the center speaker. Observe positive and negative polarities.
- **SURROUND SPEAKERS:** The pair of surround connections (left and right) on your amplifier will be labeled "Surround." Connect the speaker cables for your left and right surround speakers using these terminals and

then connect the cables to surround satellite speakers. Observe positive and negative polarities.

- **REAR SPEAKERS (USED IN A 7.1 OR 7.2 SYSTEM):** The pair of rear connections (left and right) on your amplifier will be labeled “Rear.” Connect the speaker cables for your left and right rear speakers using these terminals and then connect the cables to the rear\ satellite speakers. Observe positive and negative polarities.

[PL150s PLACEMENT AND MOUNTING]

The PL150s rear-effects home-theater speaker offers you wide latitude of acoustic performance, system options and speaker placement (including wall, shelf and stand mounting.) The convenient “Key-hole” style mounting bracket on the rear of the speaker can be used for surface mounting with the appropriate mounting anchor. Please be sure that the anchor has a #8 or #10 screw head on it to properly fit the hanger. Other types of standard speaker mounts may be used with the speakers as well. Please check with your Phase Tech dealer for recommendations. Note: It is very important whichever method you use to be certain the mounting screws or anchors will support the weight of the speaker. Self-stick rubber bumpers are provided with the PL150s. A bumper should be attached to each rear corner of the cabinet. These bumpers space the speaker away from the wall to allow clearance for your speaker wires.

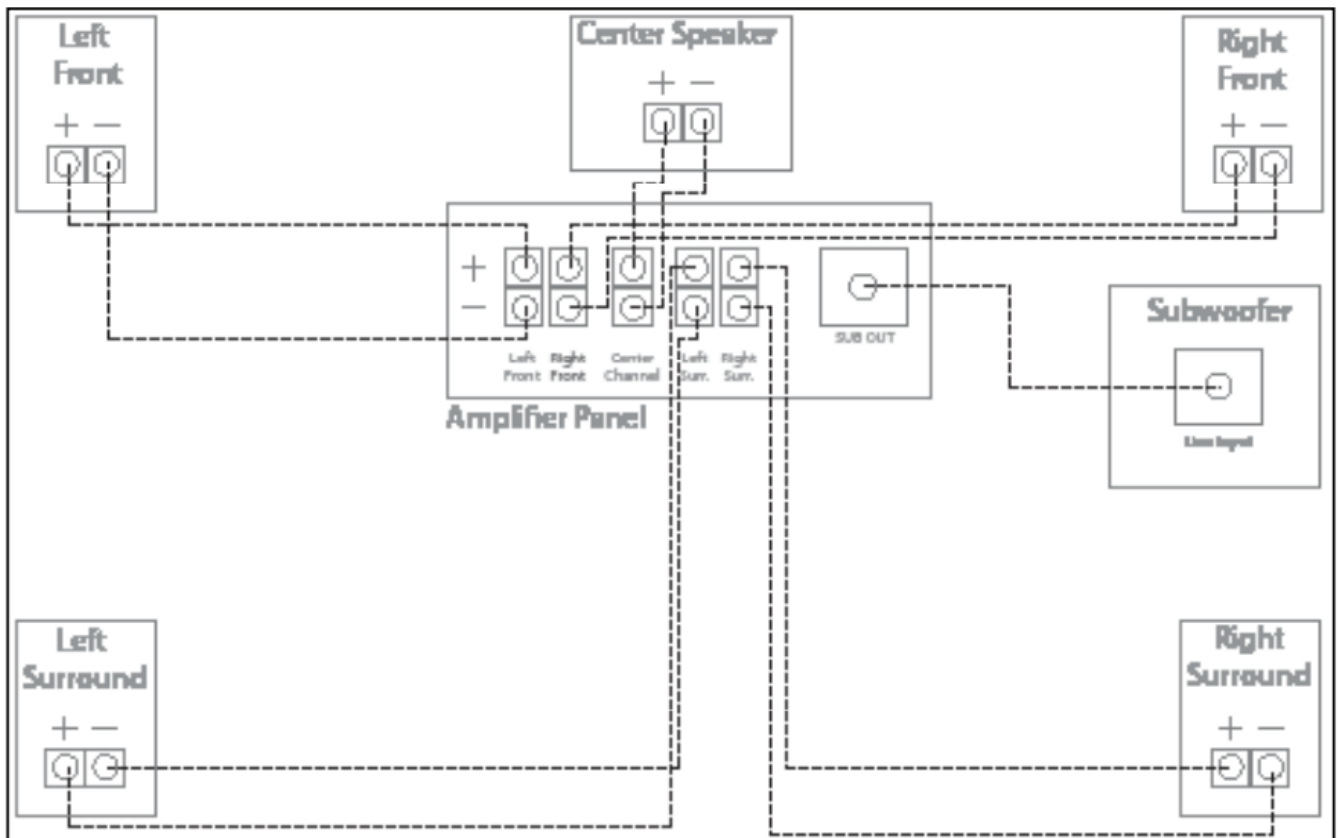

TWO-CHANNEL SPEAKER PLACEMENT

Phase Technology speakers utilize our Absolute Phase® crossover network. This design permits a much wider vertical output pattern than conventional speakers, allowing you to achieve the best quality musical experience regardless of speaker placement. For example, your speakers can be placed either vertically or horizontally on a bookshelf and will provide seamless transition of sound from one speaker to another even if the speakers cannot be placed at the traditional “ear level” height recommended by most manufacturers. In most rectangular rooms speakers sound best when placed along one of the short walls. Begin by placing the speakers 1 – 3 feet away from the wall and approximately 6 – 8 feet apart. The exact final placement will be determined by how far away you are sitting from the speakers and other interior environmental factors. We suggest playing a familiar piece of music and adjusting the placement of the speakers until the desired sound is achieved. Sometimes larger bookshelf speakers will sound better when placed upon stands designed expressly for the purpose of supporting them above floor level (not included). By “de-coupling” the speaker cabinet from the floor, bass frequencies are

tighter and high frequencies more distinct. Smaller speakers can be placed in bookshelves or cabinets; however, some loss of imaging may be experienced.

FLOOR SPIKES

Floor spikes may have been provided with your new Phase Technology speakers to steady the speaker cabinets, especially on carpeting and uneven floor surfaces. Because most speakers tend to rock back and forth in small increments due to the force of the in/out motions of speaker drivers, these movements can affect the speakers' performance. Attach the floor spikes by screwing them into the pre-drilled holes in the base of the speaker and tighten the nuts securely. The sharp points will penetrate the carpet to make a more solid contact with the underlying floor surface. If your floor is not rigid, the spikes may actually add to the rocking motion, so we recommend you audition the speakers with and without the spikes inserted to see if you discover a personal preference in the sound quality. Be especially careful when moving speaker cabinets with the spikes attached, as the points could damage carpeting or scratch floors.

SPECIAL PRODUCT FEATURES

Bi-Wired Connections

Some Phase Technology premium audiophile speakers are equipped for bi-wiring, with four speaker terminals instead of two. This may enhance speaker performance by using an additional pair of speaker cables. In order to bi-wire these speakers, remove the gold-plated strips between the speaker terminals and connect two cables between your amplifier's positive output terminal and the two positive (red) terminals on the speaker. Then connect the other two cables between the amp's negative output terminal and the two negative (black) terminals on the speakers. If you chose not to bi-wire your speakers, do not remove the metal strips between the speaker terminals. Connect each cable in the standard manner, with one cable each between the positive and negative speaker terminals and your amplifier.

CARING FOR YOUR SPEAKERS

All Phase Technology speakers are finished with a high degree of craftsmanship in either hand polished paint or vinyl laminates. We recommend using a lint-free rag with a small amount of glass cleaner to maintain the long-lasting beauty of the finish. Avoid products containing silicones, oils, oil derivatives, or solvents. Enclosures finished in vinyl laminates may be cleaned with a damp cloth as necessary.

MAINTENANCE AND SERVICE

Because of Phase Technology's uncompromising quality control programs, it's unlikely that your speakers will ever need service if connected and used as outlined in this Owners' Manual. In the unlikely event that a problem does occur, please contact your Phase Technology dealer. Your dealer has the necessary factory-authorized parts and trained technicians to quickly restore your speaker to its original performance specifications.

TROUBLESHOOTING

NO SOUND

1. Verify that all components are plugged in and turned on.
2. Check all speaker wires and cables for loose connections.
3. Check to see if you have selected the proper source on your amplifier.

VOICES DO NOT APPEAR TO COME FROM BETWEEN THE SPEAKERS / BASS RESPONSE IS WEAK

1. Verify that all speaker connections from the amplifier to the speakers are running PLUS+ to PLUS+ and MINUS- to MINUS-.
2. Check to see if there are any furnishings or plants that may be blocking the output of a speaker.

SOUND, BUT NO BASS (MOST LIKELY IN SYSTEMS WITH A SUBWOOFER)

1. Verify that the subwoofer is plugged into an AC outlet and power is turned on.
2. Check that the speaker wire/cable going from the amplifier/receiver to the subwoofer is securely fastened.
3. Check the volume control of the subwoofer.
4. Refer to your amplifier/receiver manual to make sure you have adjusted its bass output properly.

MUDDY OR BOOMY BASS

1. Check the volume control for the subwoofer. Excess volume can cause speakers to sound distorted and unnatural.
2. Try adjusting the crossover control on the subwoofer or the subwoofer setup on your receiver to a slightly lower frequency.

If the subwoofer or full-size speaker is close to a corner, side or back wall, try moving it away from the wall. This may reduce the “boomy” bass considerably. Bookshelf speakers placed in a semi-enclosed space or cabinet can artificially emphasize bass output. Reduce the bass control on your amplifier or move the speakers to the front of the cabinet. Alternatively, reposition the speakers to a more open location.

DISTORTED SOUND FROM THE SPEAKERS

This problem is usually caused by setting the volume control too high. Reduce the amplifier/receiver volume to a lower level. If noise and distortion are audible at higher volume levels, your amplifier may not be powerful enough. Consider upgrading to a unit with higher power.

NOTE: Remember, even though your Phase Technology speakers can handle considerable power levels, ANY speaker if used improperly can be damaged. Consult your Phase Technology dealer for assistance in choosing a new amplifier or receiver.

[WARRANTY]

LIMITED WARRANTY: Phase Technology warrants its loudspeakers to be free from defects in material and workmanship for a period of ten (10) years for speaker product, and three (3) years for the electronic components to the original purchaser. Purchase must be made from an authorized Phase Technology dealer. This warranty does not cover service or parts to repair damage caused by misuse, abuse, damage while in transit, alterations, unauthorized repairs, failure to follow instructions, fire, flood or any other cause beyond the reasonable control of Phase Technology. Defects in speaker cabinets or grilles must be brought to the attention of your dealer immediately after purchase. This warranty will be void if the products' serial number has been altered or removed. Should your Phase Technology product require service, please call the MSE Audio customer service department for a return authorization. All merchandise returned to Phase Technology without prior authorization will be refused. For your return authorization number, please call 855.663.5600 or email sales@mseaudio.com.

SPECIFICATIONS

PL150	PL150s
Description: 6.5" 2-Way Bookshelf	6.5" 2-Way On-Wall Surround
Impedance: 4Ω	4Ω
Sensitivity (2.83V/1M): 87 dB	87 dB
Frequency Response: 38 Hz - 22 kHz	80 Hz - 22 kHz
Tweeter: 1.125" (28mm) Patented Synthetic Soft Dome	1.125" (28mm) Patented Synthetic Soft Dome
Woofer: 6.5" (165.1mm) RPF Flat-Piston Fiberglass & Kevlar Composite w/ NBR Surround	6.5" (165.1mm) RPF Flat-Piston Fiberglass & Kevlar Composite w/ NBR Surround
Enclosure Type: Ported	Sealed
Inputs: Gold Plated 5-Way Binding Posts	Gold Plated 5-Way Binding Posts
Grille: Magnetic Black Cloth	Magnetic Black Cloth
Dimensions: 13.5" H x 9" W (at front) 5.75" W (at back) x 10.5" D (base) 8.25" D (top)	13.25" H x 8" W (at front) 9.5" W (at back) x 4.5" D
Weight: 18 lbs.	14 lbs.

PL350	PL950
Description: 6.5" 2.5-Way LCR	6.5" 2.5-Way Tower
Impedance: 4Ω	4Ω
Sensitivity (2.83V/1M): 89 dB	89 dB
Frequency Response: 32 Hz - 22 kHz	28 Hz - 22 kHz
Tweeter: 1.125" (28mm) Patented Synthetic Soft Dome	1.125" (28mm) Patented Synthetic Soft Dome
Woofer: 6.5" (165.1mm) RPF Flat-Piston Fiberglass & Kevlar Composite w/ NBR Surround	6.5" (165.1mm) RPF Flat-Piston Fiberglass & Kevlar Composite w/ NBR Surround
Enclosure Type: Ported	Ported
Inputs: Gold Plated 5-Way Binding Posts	Gold Plated 5-Way Binding Posts
Grille: Magnetic Black Cloth	Magnetic Black Cloth
Dimensions: 7.75" H (at front) 6" (at back) x 18.8" W x 12" D	15.25" H x 14.5" W x 5.25" D
Weight: 32 lbs.	66 lbs.


Copyright © 2024 MS Electronics, LLC. All rights reserved. MSE Audio, Phase Technology and PhaseTech are registered trademarks and “Speakers for your Life” is a trademark of MSE Audio, Lenexa, Kansas USA. Phase Technology is part of MSE Audio®. www.phasetech.com.





- rockustics.com
- soundtube.com
- phasetech.com

www.mseaudio.com
13720 W 109th St. Lenexa, KS 66215
p: 913.663.5600

Documents / Resources

	PHASE TECH PremierLux Series Bookshelf Speaker [pdf] Instruction Manual PremierLux Series Bookshelf Speaker, PremierLux Series, Bookshelf Speaker, Speaker
---	---

References

-  [The Manufacturer of High-Quality Speaker Systems | MSE Audio International](#)
-  [Ceiling Speaker & Home Audio Systems | Phase Technology](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.