




Pro-Ject VC-E Turntable User Manual

[Home](#) » [Pro-Ject](#) » **Pro-Ject VC-E Turntable User Manual** 



INSTRUCTIONS FOR USE
Pro-Ject VC-E

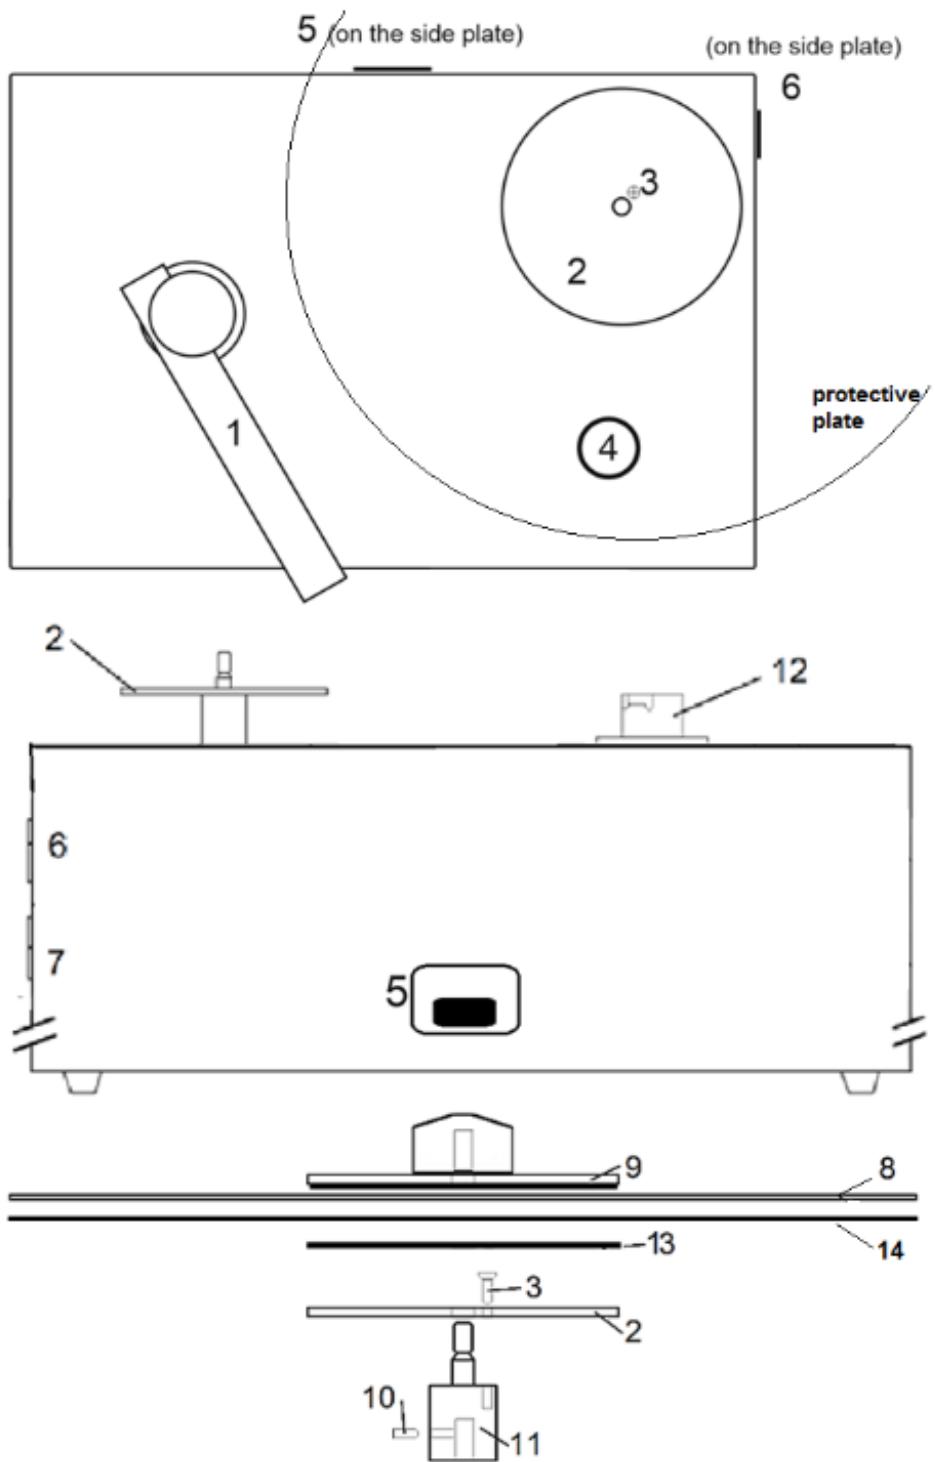

Contents

- [1 Pro-Ject VC-E](#)
- [2 Optional accessories \(available on request\)](#)
- [3 Safety instructions](#)
- [4 Setting up the unit](#)
- [5 Using the unit](#)
- [6 Maintenance and cleaning](#)
- [7 Potential incorrect use and fault conditions](#)
- [8 Service](#)
- [9 Warranty](#)
- [10 Declaration of Conformity](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

Pro-Ject VC-E

Controls, features and connections

1. Vacuum arm* (adhesive velvet strips attached)
2. Clamp* (base plate)
3. Fixing screw for base part of clamp*
4. Ventilation outlet and drain hole
5. Main switch with mains power cord socket
6. Vacuum on/off switch
7. Motor on/off direction switch
8. Vinyl record (not included)
9. Screwable clamp – top plate* with self-adhesive record label seal* with rubber for sealing record label
10. Hexagon screw for motor flange height adjustment (see page 6)
11. Spindle with motor flange
12. Vacuum arm flange
13. Self-adhesive record label seal*
14. Protective plate (not shown on 2nd picture)

Accessories (included, but not shown above)

1. Wash it vinyl cleaning concentrate (100ml bottle, mixing ratio 1:10 – 1:20)*
2. Goat hair brush*
3. Replacement adhesive strips for vacuum arm*
4. AC power cord*

Optional accessories (available on request)

- Wash it cleaning concentrate, mixing ratio 1:10 – 1:20 bottle sizes: 100ml/250ml/500ml/1l (100ml ≈ 135 records / both sides, this average quantity depends on dilution ratio and the amount of ready-to-use cleaning fluid used per application)
- Goat hairbrush

- Adhesive strips for vacuum arm

Dear music lover,

Thank you for purchasing a Pro-Ject Audio Systems record cleaning machine.

In order to achieve maximum performance and reliability, please study these instructions carefully.

 Warning of a hazard for the user, the unit or possible misuse.

 Important notice.

During assembly and adjustment, small parts can be easily lost if they are not carefully placed in a suitable receptacle. Before beginning assembly, please familiarize yourself with the parts listed above which are correspondingly numbered in the technical diagram. Separately packed items are marked with an asterisk*.

Safety instructions

This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction.

 AC outlet voltages vary from country to country. Before connecting to your wall outlet, make sure that the voltage in your area meets the voltage requirements printed on the device. Hold the end of the plug when unplugging the power cord. Never handle the power cord while your hands are wet or damp.

Never place any open flame sources, like burning candles, on or near the device. Do not operate in damp or wet locations, such as near to a bathtub, sink, swimming pool, or any other similar locations. Keep plastic bags away from children to prevent any risk of suffocation. Do not cover any ventilation holes (one is located on the left side and the others are on the bottom). During operation this unit will generate loud noises, so we recommend the use of hearing protectors during longer cleaning sessions. Check the unit after transportation for signs of damage, if the damage is found, do not operate the unit and contact your dealer!

The unit is capable of the long time running however in such case platter spindle may get hot and the whole platter/clamp area, as well as air coming out from the unit, may get warm. The temperature of the platter can't damage vinyl records. In order to keep the temperature as low as possible do not expose the unit to direct sunlight.

The motor should not be turned on when not cleaning your records. Extended running time outside of the guideline process can cause over-heating.

Setting up the unit

The unit is supplied assembled with the exception of the platter and vacuum arm which are packed separately. Remove all parts from the transport packaging carefully. Please see the diagram above for assembly instructions. The base part of the clamp (2) should be attached by using the screw (3), a Phillips head screwdriver is required but not included. Then apply the self-adhesive label seal (13) on top.

In regular cleaning scenarios, it is not necessary to use the protective plate (14). However, when cleaning many records in a row (8-10 in a row), and under certain air conditions (warm temperature and/or high humidity) steam from the ventilation outlet can become an issue. If this is the case, place the protective plate (14) on top of the base plate of the clamp (2). This way the bottom of the vinyl record is protected from the steam/moisture of the ventilation outlet and the vinyl record will stay dry.

 This product is only for non-commercial use.

Using the unit

Please ensure that all assembly and setup steps have been followed as outlined in this manual. All 3 rocker switches ("main switch", "motor" and "vacuum" should be in position "0"). Connect the power cord to the socket on the rear side of VC-E and turn the main switch to the "I" position.

Place a record on the bottom plate. Using moderate force, thread the top clamp plate on the threaded tip of the centre spindle. Do not over-tighten. If the top plate and screw clamp are too loose, the record will not turn even if the motor is running.

While the record is turning apply a generous amount of ready-to-use cleaning fluid (6 – 8ml) to the record while holding the brush horizontally and gently pressing against the record, spread the fluid across the surface of the record. Use only the necessary amount of fluid (6 – 8ml), enough to cover the record, not the machine!

 Do not apply Wash it in less than a 1:10 mix of fluid and water directly to the record! Do not use cleaning fluids from other suppliers. Use only so little fluid that it is not regularly getting on the surface of the machine. If this happens remove the excess fluid with a tissue.

 Cleaning efficiency can be significantly improved by applying appropriate force to the cleaning brush. Even more cleaning improvement can be achieved by using warmed-up Wash It cleaning fluid. Wash It can be warmed in a microwave oven up to 40 degrees Celsius, please check temperature to avoid record damage. The dilution ratio of warmed-up Wash should be 1:20. Wash It is non-flammable and non-toxic. Please note that you are doing all this at your own risk.

The motor can turn in both directions or can be stopped during the application of the fluid, depending on your personal preference. To change direction, choose the “I” position for clockwise rotation or the “II” position for counter-clockwise rotation.

It is recommended that you use the brush to clean the record in both directions before vacuuming. For better dissolving of impurities, wait a few seconds (longer in the case of heavily soiled records) before starting the vacuuming process.

Once the record has been thoroughly cleaned in both directions, place the vacuum arm above the record pointing at the spindle until it reaches its lock position. Turn the Vacuum motor to the “I” position. After the cleaning fluid has been thoroughly vacuumed, switch off the vacuum, followed by the motor. Return the vacuum arm into its rest position and wait a few seconds for the record to dry thoroughly. Unscrew the top clamp plate, turn the record over and repeat steps for the opposite side of the record.

 The VC-E is equipped with automatic overheating protection, which switches the motor off in case of excessive usage. After a cool-down period, the VC-E will return to its fully operational status.

 **After use tip:** We highly recommend removing the vacuum arm from its position on the flange and switch the vacuum motor on for 15-30s in order to blow away all the remaining liquid from the motor and the whole system. This will help to keep all internal parts of the unit dry and significantly lower the possibility to be affected with rust. For the same reason, it is also not recommended to pack the VC-E back into its plastic bag from its original packaging.

Preparation of Wash it concentrates to get ready-to-use cleaning fluid

The cleaning concentrate is usable for vinyl and shellac records and should be diluted before application:

 Mix 1 part of Wash it concentrates with 10-20 parts of distilled/demineralized water 1:10 is better for old and dirty records. For common cleaning or cleaning with warmed-up cleaning fluid, a dilution ratio of 1:20 is sufficient.


Maintenance and cleaning

Your record cleaning machine requires little to no regular maintenance.

The internal tank has a substantial capacity and subsequently takes a very long time to reach full capacity.

Common home use of the unit does not require emptying the tank. In a rare case the tank should be emptied:

1. disconnect the mains cable
2. Turn the VC-E up to drain the unit reservoir into a big container.
3. Clean the liquid on the body of the unit using a cloth

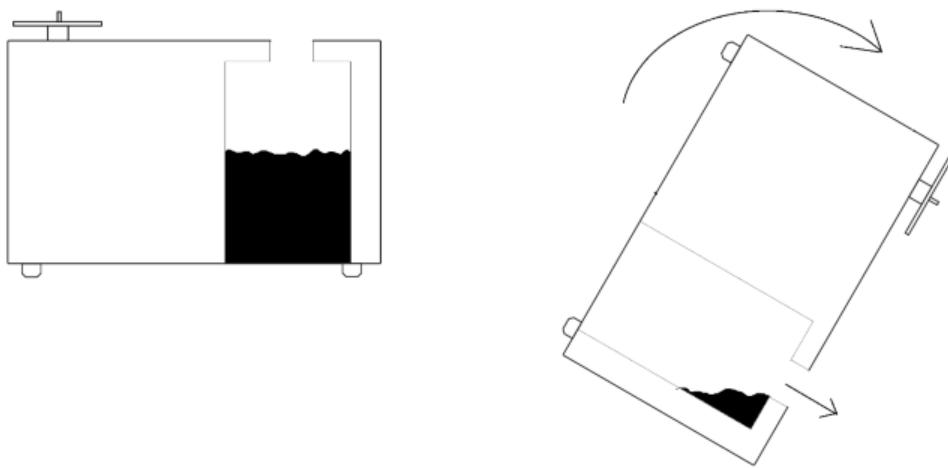

Regularly check the velvet strips on the arm. Make sure they are clean, no dirt or debris is present.

⚠ Prior to maintenance, always disconnect the record cleaning machine from the power outlet!

Technical specifications Vinyl Cleaner VC-E

Nominal speed – 30 r.p.m.

Power consumption – 230V/800W, 120V/360W, 100V/250W

Dimensions (W x D x H) – 310 x 210 x 266 mm (fully assembled)

Weight – 6,5kg (netto)

Fuse – T6,3A

Potential incorrect use and fault conditions

Pro-Ject products are manufactured to the highest standards and undergo strict quality controls before leaving the factory. Faults that may possibly occur are not necessarily due to material or production faults but can sometimes be caused by incorrect use. Some of these faults are as follows:

The platter doesn't turn although the unit is switched on:

- The power cord is not connected to the unit.
- The power cord is not plugged into the AC wall outlet.
- Broken fuse in the main switch.
- Overheating protection is active.
- Top clamp plate is not tightened properly.

How to adjust the height of VC-E's record clamp

The VC-S is pre-adjusted to spec for normal standard 80 – 180 g records. There is enough headroom so that the arm is optimally pressed against the record and the cleaning fluid can be completely removed. The vacuum arm works best when it is parallel to the record when operating and the adhesive strips are pressed gently on the surface of the record. If the vacuum suction arm is not at the correct distance from the record it may not be able to completely vacuum the cleaning fluid. In this case, it may be necessary to adjust the height of the clamp. Especially 180 g pressing need a different set up of the distance. You will need a Phillips screwdriver (to unscrew the set screw of the clamp base part) and a 2.5mm hexagon key (to loosen motor spindle):

1. Disassemble the clamp (2) by unscrewing the set screw (3) from the motor flange spindle (11)
2. Insert the 2.5mm hexagon key into the hole on the side of the motor flange (11)
3. Loosen the hexagon screw, until the flange can be moved up or down
4. When the correct height position is found, fasten the hexagon screw and mount the clamp (2)



You do not need to fully disassemble the flange from the motor!

Service

Should you encounter a problem which the above information is not able to alleviate or identify, please contact your dealer for assistance.

Guarantee repairs will only be affected if the unit is returned correctly packaged. For this reason, we recommend keeping the original packaging.

Never return a record cleaning machine without making sure that it is safely disassembled and correctly packaged in the original packaging.

Warranty

The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use and/or by transportation without the original packaging. Modification or change to any part of the product by unauthorized persons will void the manufacturer's warranty. Most Pro-Ject products – unless expressly advertised otherwise – are intended for domestic use only. Using them for business applications is done so at your own risk.

Pro-Ject Audio Systems is a Registered Trademark of H. Lichtenegger.

This guide was produced by: Pro-Ject Audio Systems Copyright © 2019. All rights reserved.

The information was correct at the time of printing. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.

Declaration of Conformity

We, declare under our responsibility that the product is in conformity with the provisions of Directives:
2014/35/EU including amendments
2014/30/EU including amendments

The following harmonized standards were applied:

EN 60335-1:02+A1:04+A11:04+A2:06+A12:06+A13:08+A14:10+A15:11

EN 60335-2-2:10+A11:12+A1:13

EN 55014-1:06+A1:09+A2:11

EN61000-3-2:14

EN61000-3-3:13

EN55014-2:97+A1:01+A2:08

Pro-Ject Audio Systems a division of Audio Tuning GmbH

1050 Vienna, Austria, Margaretenstrasse 98

info@project-audio.com

© Pro-Ject Audio Systems · VC-E · Revision 2020.09.30

Documents / Resources



INSTRUCTIONS FOR USE
Pro-Ject VC-E

[**Pro-Ject VC-E Turntable**](#) [pdf] User Manual
VC-E, Turntable

[Manuals+](#)