



PYLE PAS18WD Wireless Carplay & Android System AI Box User Guide

[Home](#) » [Pyle](#) » PYLE PAS18WD Wireless Carplay & Android System AI Box User Guide 

Contents

- [1 PYLE PAS18WD Wireless Car play & Android System AI Box](#)
- [2 PRODUCT FEATURE](#)
- [3 User Interface](#)
- [4 Interface](#)
- [5 How to Use Wireless Apple Car Play/Android Auto](#)
- [6 Wireless BT Streaming Dual BT Module:](#)
- [7 Features](#)
- [8 Technical Specs](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

PYLE


PYLE PAS18WD Wireless Car play & Android System AI Box



PRODUCT FEATURE

- 4GB RAM 64GB ROM, 2.4GHz/5GHz
- Dual-Band WiFi BT Quad-Core 6<1Bits 0/4K
- Full HD/H.265/USB3.0 Android Box, Screen Mirroring,
- Install Android Apps [Wood Finish]


User Interface

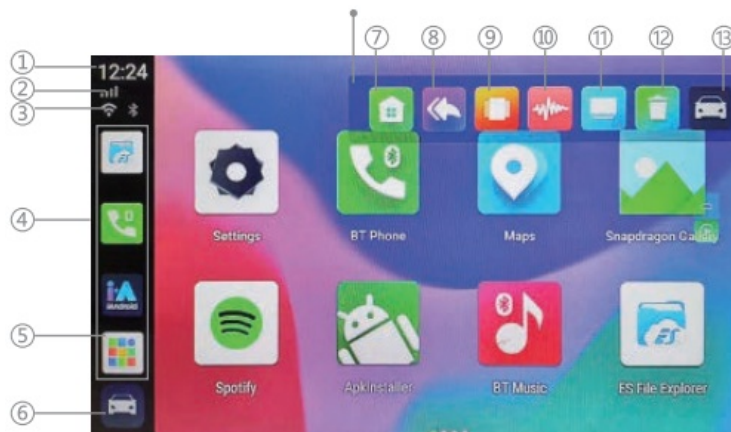

1. Clock
2. SIM card status
3. WiFi & BT status
4. Recent apps
5. All apps
6. 13. Back to factory head unit system
7. Home
8. Back
9. Recents
10. Voice assistant

11. Split screen
12. Clear


Interface

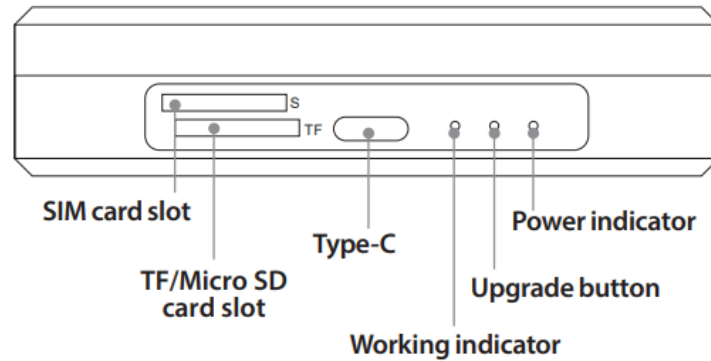

NOTE!

Follow the instruction below if your car is equipped with a Type-C port for CarPlay.

What's in the Box:

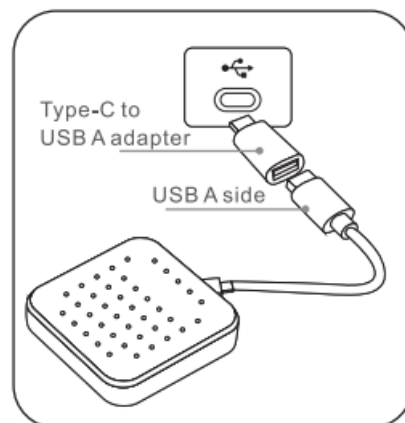

- iA Box
- USB Cable
- USB Adaptor

How to Use Wireless Apple Car Play/Android Auto

• Wireless Apple Car play:






After connecting your iPhone to the BT, open the "Speed Play" app in the iA box interface. Next, tap "Use Car Play" on your iPhone notification. It will connect to wireless Car Play after a few seconds.


• Wireless Android Auto:

- Before using Android Auto, please make sure the latest Android Auto app is installed on your smart-phone. First, make sure you have enabled wireless projection on Android Auto app settings.
- Open "Speed Play" app on iA box interface after your Android phone has connected to the BT, next confirm the notifications on your phone to use wireless Android Auto.

Wireless BT Streaming Dual BT Module:

- Primary BT4.2 (for external BT mouse, remote controller, HID, OBD devices)
 - Secondary BT 5.0 (for iPhone/Android smart- phone hands-free calling & audio streaming)
 - BT app allows BT pairing with compatible devices for making calls and music playback. To pair your phone, ensure BT is enabled in your phone's system settings and that you are disconnected from all other devices.
 - Open your phone BT, search and find the device named "PYLEUSA", then pair and connect.
- Note:** Once your phone is paired, you can use the other functions within the radio's BT app.

- Select the  icon to connect or disconnect BT.
- Select the  icon to dial out using the radio's number pad
- Select the  icon to display your phone's contact list. You will need to import your contact list using the "download" icon.
- Select the  icon to see a log of incoming and outgoing calls
- Select the  icon for music playback controls

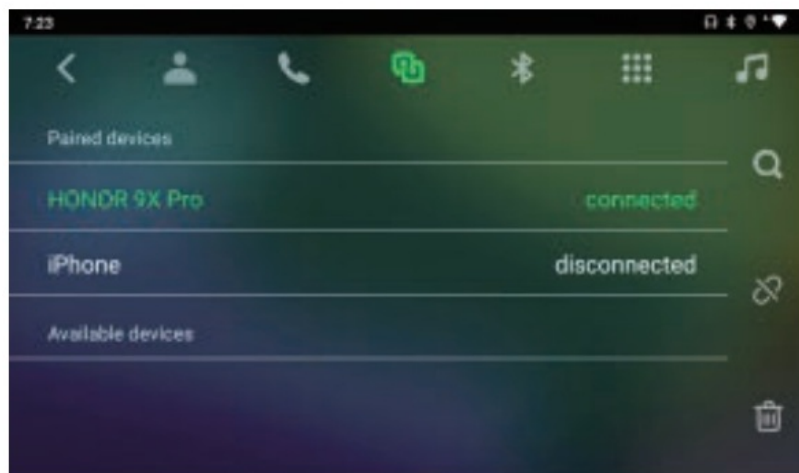

Tips:

1. In order to adapt to the factory display, the iA box Android system will automatically restart once at the first time connecting to the car.
2. **Software Update:** It is not recommended to upgrade software when the iA box works well.
 - Prepare a TF/MicroSD card and format it into FAT32.
 - Copy firmware named update. zip to the root directory of TF/MicroSD card.
 - Insert the TF/MicroSD card into the iA box and power on.
 - Wait for 2 minutes, when the red indicator starts to flash, take out the TF/MicroSD card.
 - Now the box will start to upgrade automatically and the whole process takes about 7 minutes.
 - After the upgrade complete, the red light will be always on, and the blue light will flash.
3. **How to save log file:**
 - After inserting the TF/MicroSD card into the iA box, it will automatically copy the log file to the card, and display "Log copy complete".
 - If "Log copy complete" does not display after inserting the TF/MicroSD card, go to Settings of iA box, tap

“Copy log file to SD Card” to copy the log file manually. Any issue while using this iA box, you can save the log file and email to us.

Features

- +i Android Smart Link iA box
- Designed for the Cars Equipped with Original Car play
- Dual Wireless BT module
- Navigation System Supports GPS/GLONASS/Beidou System
- 8-core, 2.0Ghz, 14nm, FinFET
- **GPS/WiFi:** Built-in GPS Antenna, Built-in WiFi Antenna, Built-in 5G, Completely Hidden
- **Wireless Car play:** Built-in Wireless Car play
- **Wireless Android Auto:** Built-in Wireless Android Auto
- **Screen Mirroring:** AOA Protocol Screen Mirror
- Low Power Consumption, High Performance
- External Storage, Micro SD Card Supports up to 128GB
- SIM card (standard version and customized version)
- Comes with 2G/3G/4G Network Support, Insert Local Operator SIM Card, Support Local Phone, and 4G Mobile Network
- Flash Built-in Storage
- Android System, Compatible with GMS Service Framework
- High-specification Configuration with Large Memory and Large Storage Space
- Provides Google Play Store, Download and Install Software for Free
- Provides Wired Car Play to Wireless Car Play
- Automatic Wireless Car Play to Android Functions


Technical Specs

- **CPU:** Qualcomm Snapdragon SDM450
- **RAM/ROM:** 4GB DDR; 64G eMMC
- **WiFi:** 2.4G/5G
- **SIM Card:** 4G/3G/2G
- **Band of Cellular Data:**
- **4G:** LTE-FDD B1/B3/B5/B7/B8/B20/B28; LTE-TDD B38/B40/B41
- **3G:** UMTS B1/B2/B5/B8
- **2G:** GSM/EDGE 850/900/1800/1900MHz
- **Sockets:** Type-C Female
- **TF/Micro SD Card Slot:** Max 128GB
- **Language:** More than 100 Kinds
- **Operating Voltage:** DC 5V
- **Working Temperature:** -20 ~ +75°C (-4°F ~ 167°F)
- **Memory (Default):** 4GB LPDDR3 RAM +64GB eMMC
- **Product Dimensions (L x W x H):** 3.54” x 3.35” x 0.71” -inches

Questions? Comments?

- We are here to help!
- **Phone:** (1) 718-535-1800
- **Email:** support@pyleusa.com

Documents / Resources

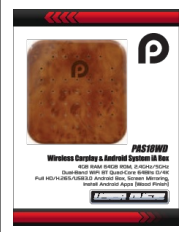	<p>PYLE PAS18WD Wireless Carplay & Android System AI Box [pdf] User Guide PAS18WD, AI Box, Wireless Carplay, Carplay</p>
---	--

References

- [P Pyle USA Electronics | Home Audio | Car Audio & More](#)

[Manuals+](#)