

SEADA SDC-TR03 Control Keyboard



SEADA SDC-TR03 Control Keyboard User Manual

[Home](#) » [SEADA](#) » SEADA SDC-TR03 Control Keyboard User Manual 

Contents

- [1 SEADA SDC-TR03 Control Keyboard](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Overview](#)
- [6 Key Features](#)
- [7 Specification](#)
- [8 Panel Layout](#)
- [9 Login Interface](#)
- [10 Main functions](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)



SEADA SDC-TR03 Control Keyboard



Product Information

Specifications

- Screen Size: 7-inch capacitive touchscreen
- Screen Resolution: 1024×600
- HDMI Output: 1x HDMI
- HDMI Output Resolution: 4K@30 H.265: 1x, 4K@60 H.264: 4x, 1080P@30
- Decoding: Network: RJ45, Serial Port: RS422, RS485
- Communication Method: Network, Serial Port
- Communication Protocols: Network – Onvif, Visca over IP, NDI; Serial Port – Visca, Pelco-D, Pelco-P
- Joystick: 4 Dimension (Control up, down, left, right, zoom, click joystick)
- On-board Storage: 64GB
- External Storage: USB Stick or MicroSD
- Power: PoE or DC12V/2A

Product Usage Instructions

Connecting the Control Keyboard

1. Ensure the Control Keyboard is powered off before connecting any cables.
2. Connect the HDMI cable to the HDMI output of the Control Keyboard and the corresponding display device.
3. If using external storage, insert a USB Stick or MicroSD card into the designated slot.
4. Power on the Control Keyboard using either PoE or DC12V/2A power source.

Operating the Control Keyboard

- Use the touchscreen to navigate through menus and settings.
- The joystick can be used for precise control of movements and actions.
- Utilize the communication protocols for connecting to compatible devices over the network or serial port.

FAQ

- **Q: How do I reset the Control Keyboard to factory settings?**
 - A: To reset the Control Keyboard to factory settings, locate the reset button on the device and press it for 10 seconds.
- **Q: Can I use both PoE and DC power sources simultaneously?**
 - A: No, it is recommended to use either PoE or DC power source at a time to avoid any potential damage to the device.

Overview

SDC-TR03 control keyboard is a new generation of Android-based PoE-enabled touchscreen keyboard for controlling up to 2048 network cameras. Featuring a 7-inch capacitive touch screen and user-friendly UI, SDC-TR03 can provide a real-time preview on the keyboard and project the image onto an external display through its HDMI interface. This control keyboard supports advanced video decoding capabilities, including H.265 single-channel 4K@60 and H.264 four-way 1080P@60. With its 4D joystick and function keys, SDC-TR03 can quickly locate targets and perform various control operations on the selected PTZ camera. With the support of ONVIF, VISCA and NDI communication over LAN, SDC-TR03 is ideal for environments where multiple network units are installed, such as streets, schools, hospitals, hotels, and workshops that require a large amount of control for network cameras.

Key Features

- 7-inch capacitive touch screen
- Support on-screen real-time preview
- Support one 4K@30 HDMI output for preview
- Support IP control via RJ45 and serial port control via RS232 and RS422/485
- Support H.265/H.264 decoding up to 4 split windows
- Support touchscreen, 4D joystick and function keys for PTZ control and setting
- Support layout switch
- Support on-screen access of PTZ camera WebUI
- Support up to 2048 network cameras
- Support camera looping
- Support PoE
- Support VISCA, ONVIF, NDI, PELCO-P, PELCO-D, VISCA over IP protocol
- Support photo capture and video recording of the network cameras
- Support 64GB on-board storage and external storage via USB stick or MicroSD

Specification

Screen Size	7-inch capacitive touchscreen
Screen Resolution	1024×600
HDMI Output	1x HDMI
HDMI Output Resolution	4K@30
Decoding	H.265: 1x 4K@60 H.264: 4x 1080P@30
Communication Method	Network: RJ45 Serial Port: RS422, RS485
Communication Protocols	Network: Onvif, Visca over IP, NDI Serial Port: Visca, Pelco-D, Pelco-P
Joystick	4 Dimension (Control up, down, left, right, zoom, click joystick)
On-board Storage	64GB
External Storage	USB Stick or MicroSD
Power	PoE or DC12V/2A
Power Consumption	<1.5W
Operation Temperature Range	-10°C-50°C
Operating Humidity Range	10%-90% non-condensing
Storage Temperature Range	-40°C-60°C
Dimension	365mm (L) X 245mm (W) X 155mm (H)
Net Weight	1781g
Warranty	2 years

Accessory

1	Download Card	1 piece download card where user can find related manuals on our website.
2	Power adaptor	International plug inter-changeable power adapter, of which the plugs include Europe, US and UK standard.

Panel Layout

Back Panel



1	MicroSD port
2	USB 3.0 port
3	RS232 and RS422/485 port
4	HDMI output
5	RJ45 port (Support PoE)
6	DC 12V/2A power port
7	Power Switch


Front Panel



P/T SPEED	Adjust moving speed of the PTZ camera
IRIS	Adjust IRIS of the PTZ camera
AUTO EXPOSURE	Automatically adjust exposure of the PTZ camera
R/B GAIN	Adjust gain of the PTZ camera
AUTO WB	Automatically adjust WB of the PTZ camera
BRIGHT +/-	Adjust Brightness of the PTZ camera
PATROL	Enable patrol on the PTZ camera (if support)
AUTO FOCUS	Automatically adjust focus of the PTZ camera
BACKLIGHT ON/OFF	Turn ON/OFF backlight of the PTZ camera
SCENE1-6	To call saved scene, click SCENE1-6 and then click SET SCENE or CALL SCENE
SET SCENE	Save scene for the PTZ camera
CALL SCENE	Call scene for the PTZ camera
SET PRESET	Set preset position for the PTZ camera
CALL PRESET	Call preset position for the PTZ camera
FOCUS (NEAR/FAR)	Adjust focus of the PTZ camera
Number keys	To call preset position, enter a number between 0-9 and then click SET PRESET or CALL PRESET
CLEAR	Return
SETUP	Enter the setup page
MENU ON/OFF	Turn ON/OFF OSD menu of the PTZ camera
MENU ENTER/BACK	Enter/Return in the OSD menu of the PTZ camera
LOCK	Lock the keyboard to sleep mode
HOME	Return to home spot
HELP	Open the user manual
Joystick Button	Screenshot


Login Interface

After the unit is switched on, the login interface will be shown as below. The default username is admin and the default password is admin. After entering the username and password, user can login to the keyboard.

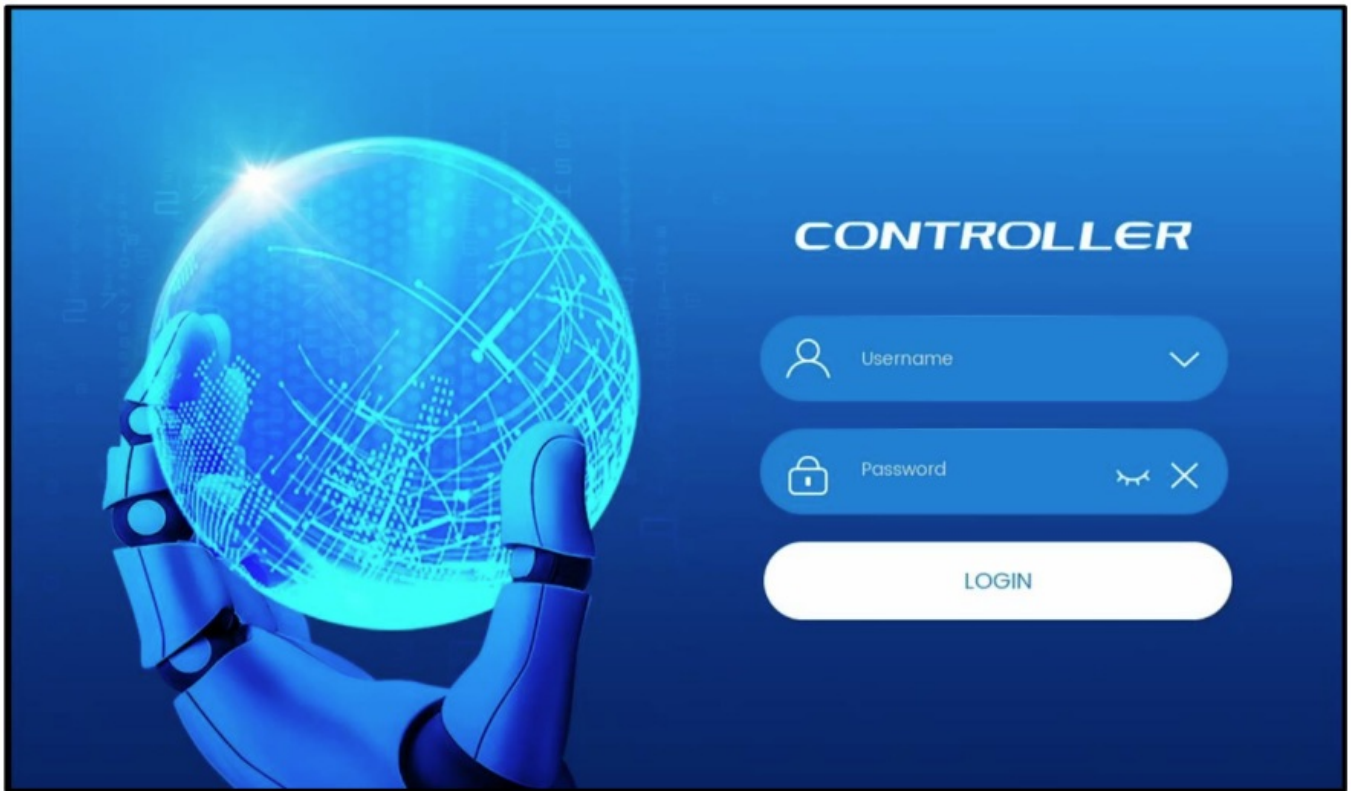

Home interface

The time is displayed on the top-left of the home interface. There are three main functions on the home interface including, PTZ, TV Wall and Setting. User can use each button to enter the corresponding function.

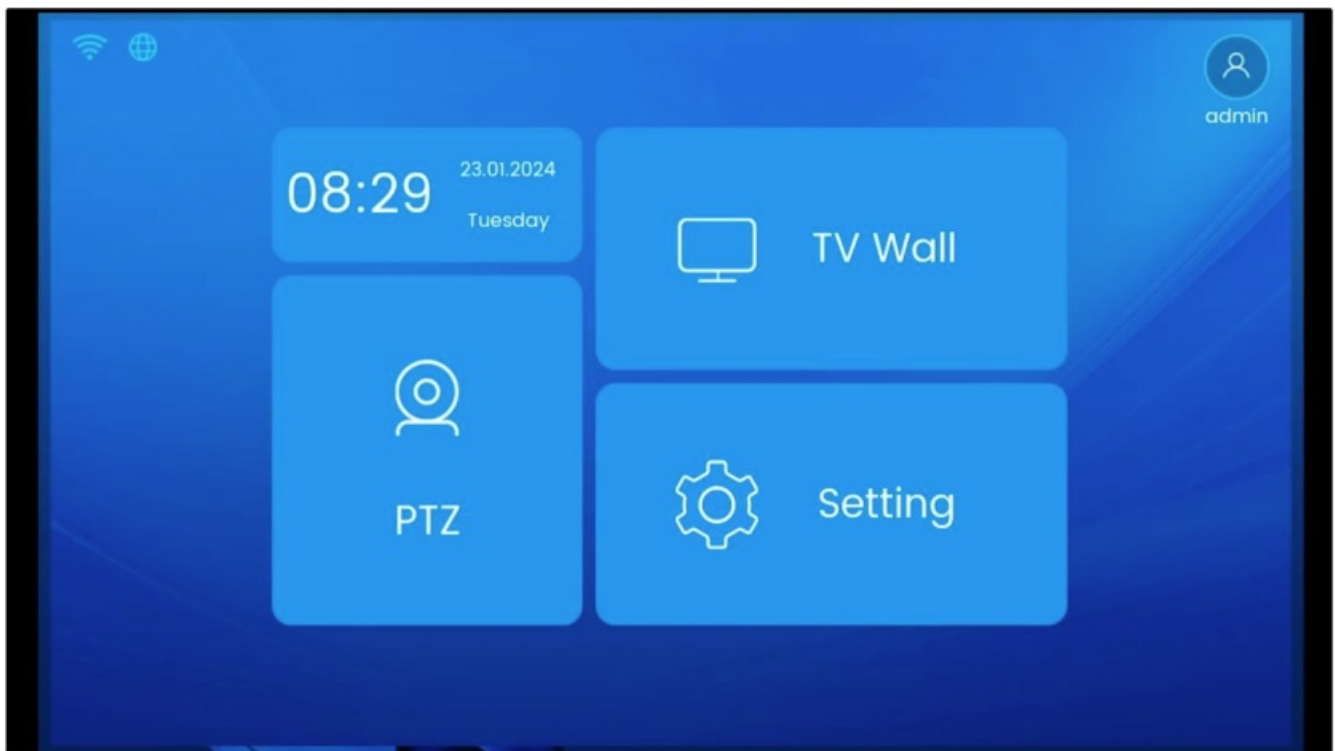

Main functions

PTZ

PTZ is mainly used for preview and control of network PTZ cameras. On the left of the PTZ interface, the added cameras are listed. To bind cameras to the windows on the right, simply drag the camera from the list on the left

and drop it in the windows on the right.

Note: If there are no cameras added yet, please refer to section 7.4.1 to add cameras




PTZ interface contains the following functions to control each camera including:

1. Play: Play the RTSP streaming of the selected camera.
 - a. Pause: Pause the RTSP streaming of the selected camera.
2. Stop: Stop the RTSP streaming of the selected camera.
3. Traction: Display the selected camera in full screen.
 - a. Restore: Restore the display of the selected camera




4. Screenshot: Screenshot the selected camera and save it locally. This function will only be available when the camera is playing or paused.
5. Record: Record the selected camera.
 - a. Stop recording: Stop the recording and save the record locally. This function will only be available when the camera is playing or paused.
6. Clarity: Switch the selected camera between main-stream and sub-stream.
7. Preset: Add, save, delete, and recall preset positions for the selected camera.

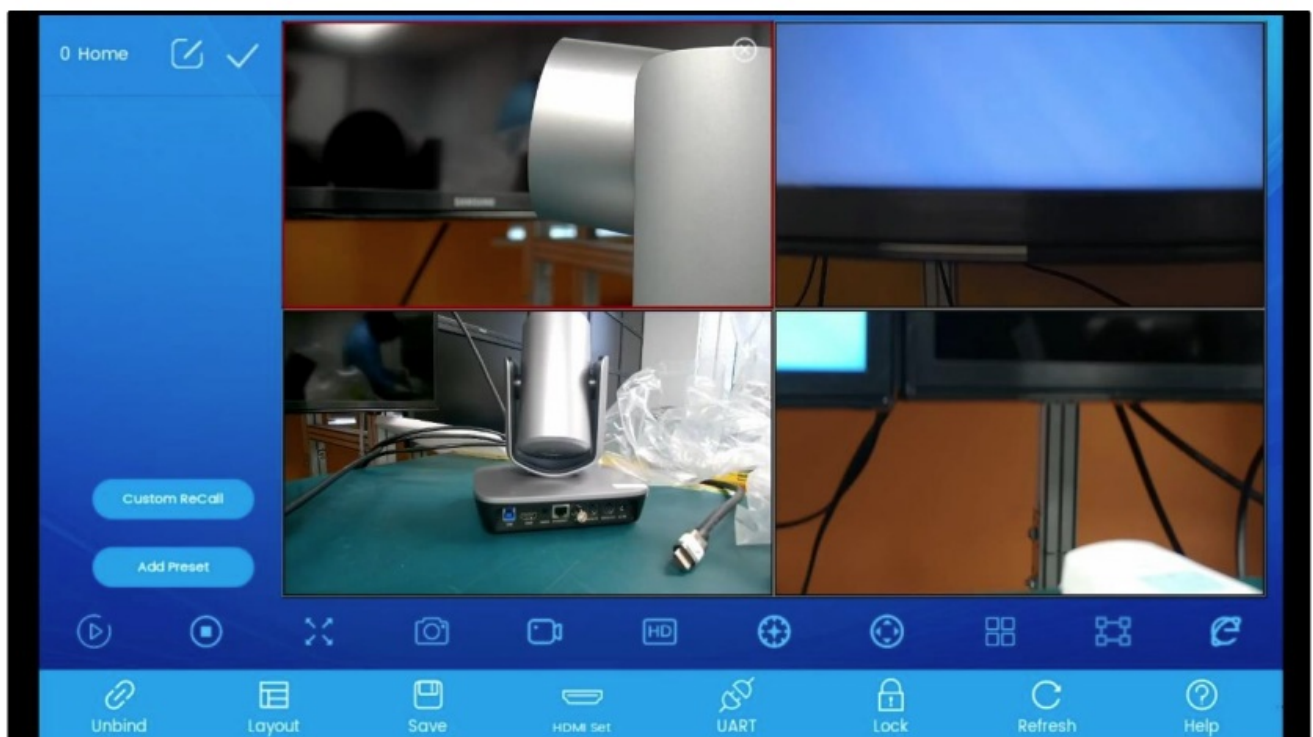

8. PTZ: On-screen PTZ control of the selected camera, including direction, zoom, focus, exposure, etc.



9. Colour: Change parameters of the selected camera including brightness, gain, exposure, AWB and AE.
10. Channel: Obtain and switch the channel of the selected camera. Note that only multi-channel cameras or NVR devices are supported. After changing channels, click 'Save' to bind the channel to the window.

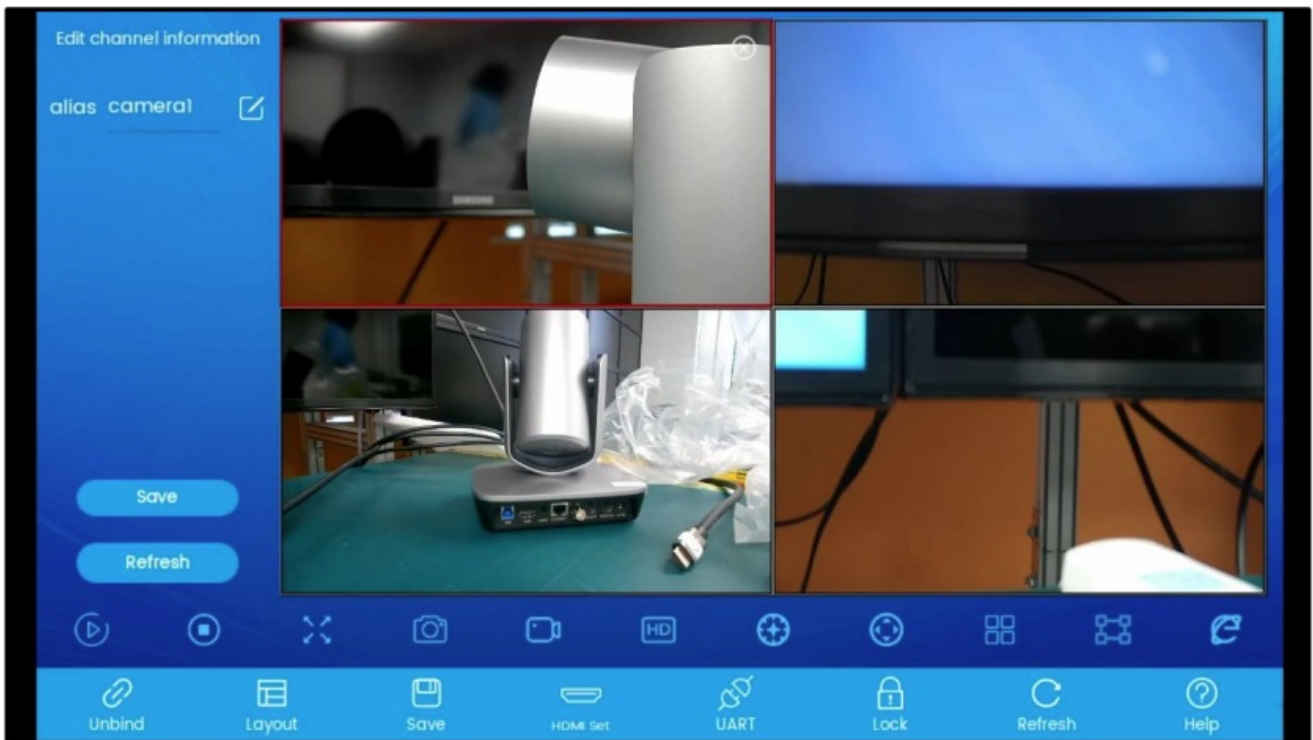

11. WebUI: Enter the WebUI management platform of the selected camera.

PTZ Setting




On the bottom of the PTZ interface, more functions are available.

1. Unbind: Unbind the selected camera from the window.

2. Layout: Switch the windows between 1×1 and 2×2. (The default will be 2×2)
3. Save: Save the bound cameras with the windows as a preset. The layout will then be saved. When the unit is rebooted, the PTZ mode will automatically recall the saved layout and enable preview on the keyboard for the cameras.
Note that if not saving, the cameras will be unbound with the windows after leaving the PTZ interface or after the keyboard is rebooted.
4. HDMI Set: Set the projected source through the HDMI interface between a real-time preview of the keyboard interface or a 1×1/2×2 preview of the cameras.
5. UART: Expand the serial port editing. The serial protocol can be changed between Pelco-D, Pelco-P and VISCA and parameters can also be changed.
6. Lock: Enter the sleep mode. This mode can be exited after user long presses the touchscreen. Note that HDMI output will not be affected under this mode.
7. Refresh: Refresh the screen if any camera is frozen.
8. Help: Display the SDC-TR03 User Manual.

TV Wall

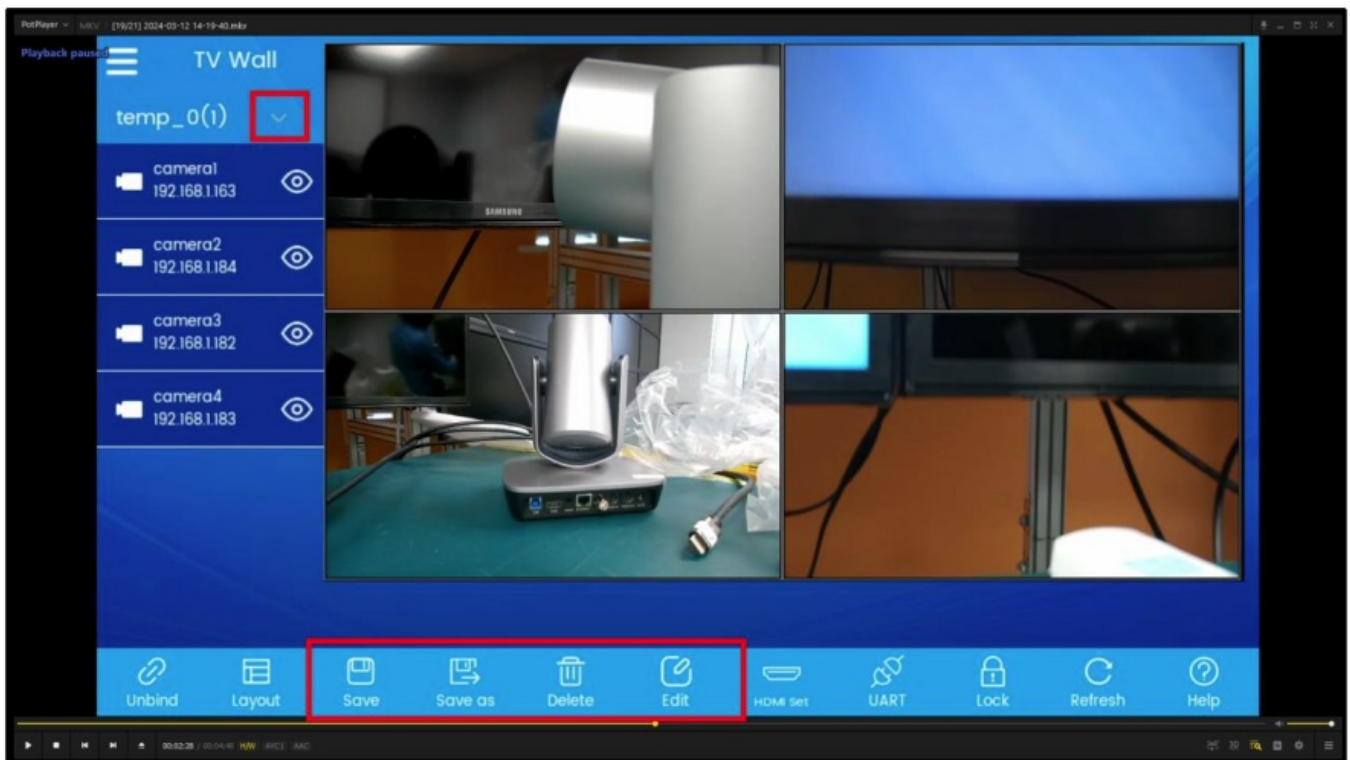


TV Wall mode is mainly used for management of a large number of cameras. In addition to basic functions in PTZ mode, TV wall mode contains the following extra functions:

- Saving/Saving as: Save the current bound cameras with the windows as a TV wall preset.
- Editing: Edit the current preset, such as changing its name.
- Delete: Delete the TV wall preset.
- Switch (top-left): Switch between different TV wall presets.

Note that in TV Wall mode, the HDMI output can also be switched between different TV wall presets.


Setting


Setting interface contains multiple functions:

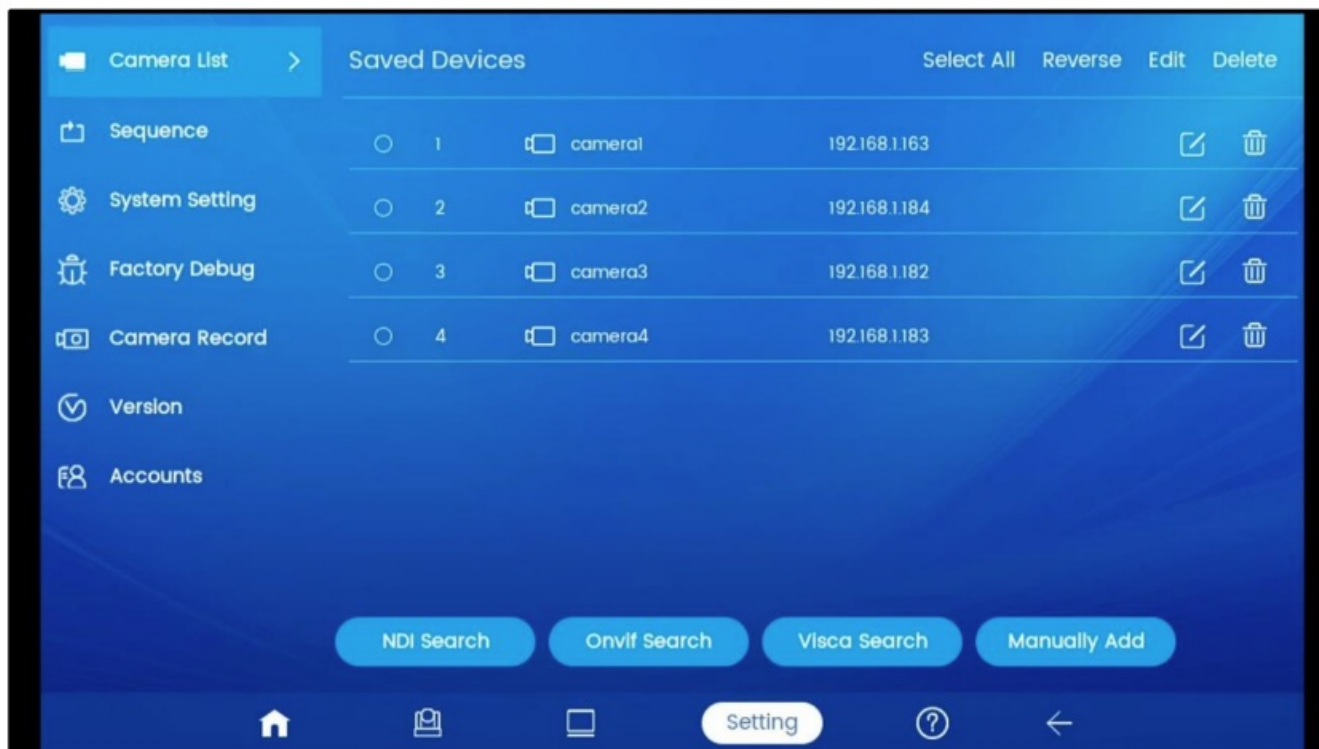

Camera List


This function is used to add and edit cameras. The camera can be added via NDI search, Onvif Search and Visca Search. If any parameter is missed or incorrect, it can be changed via edit function or user can also manually add the camera by entering its parameters if necessary.


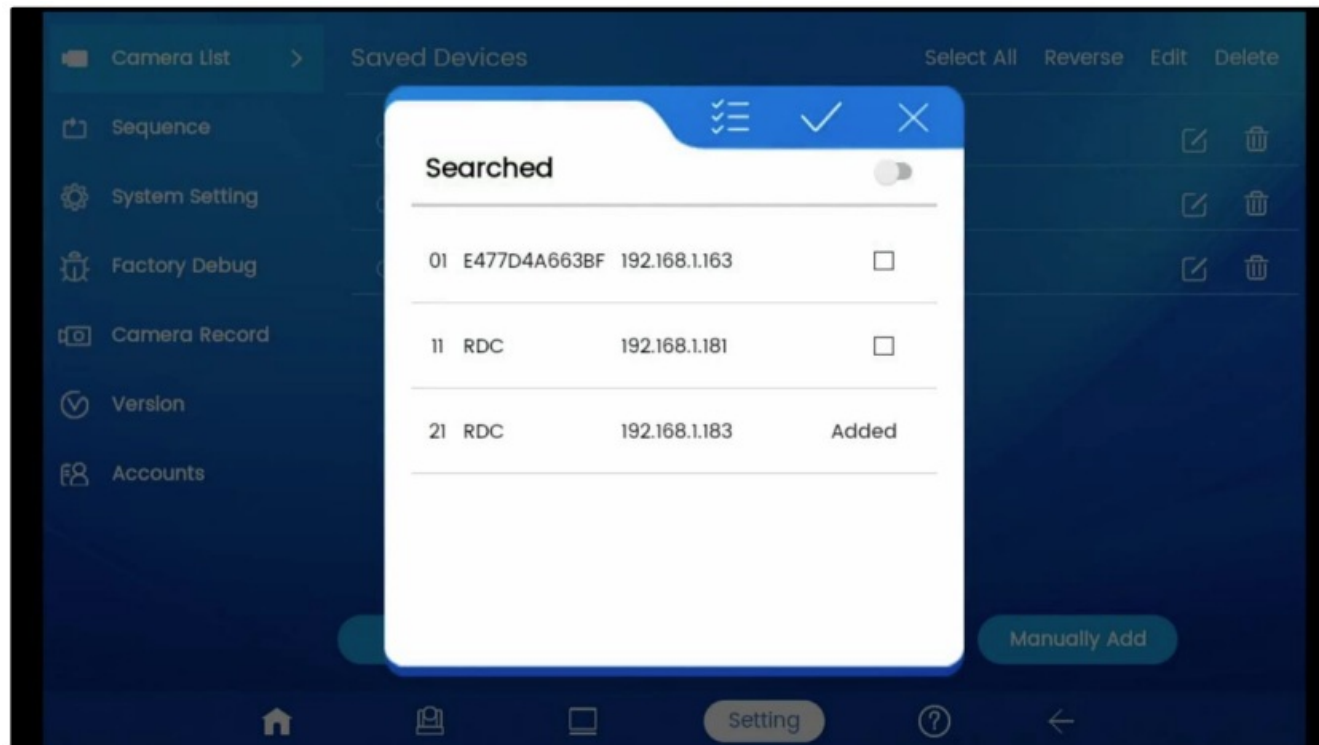


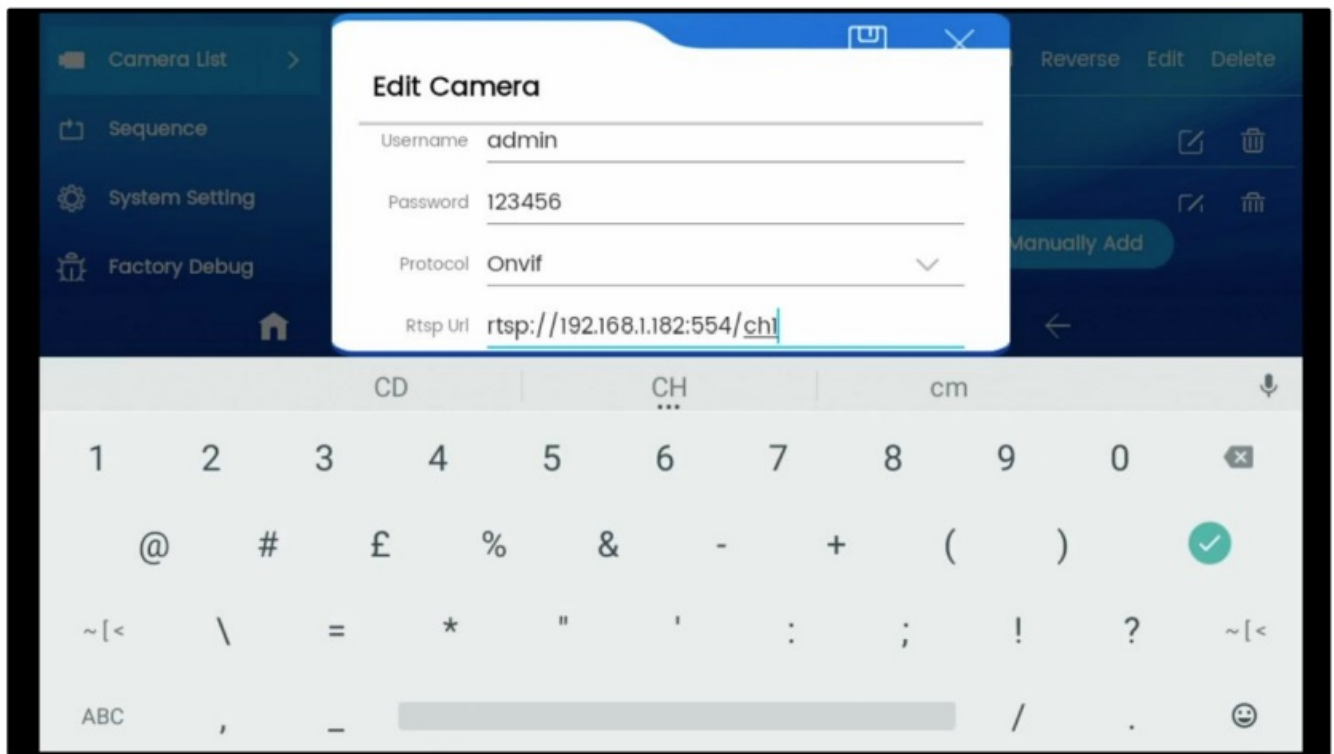


Sequence

View and edit sequences for the cameras, which will be looping at a certain time. User can then add cameras to this sequence, call it in the PTZ interface and loop between multiple cameras on screen. (Note that the display time must be over 30s for each camera.)

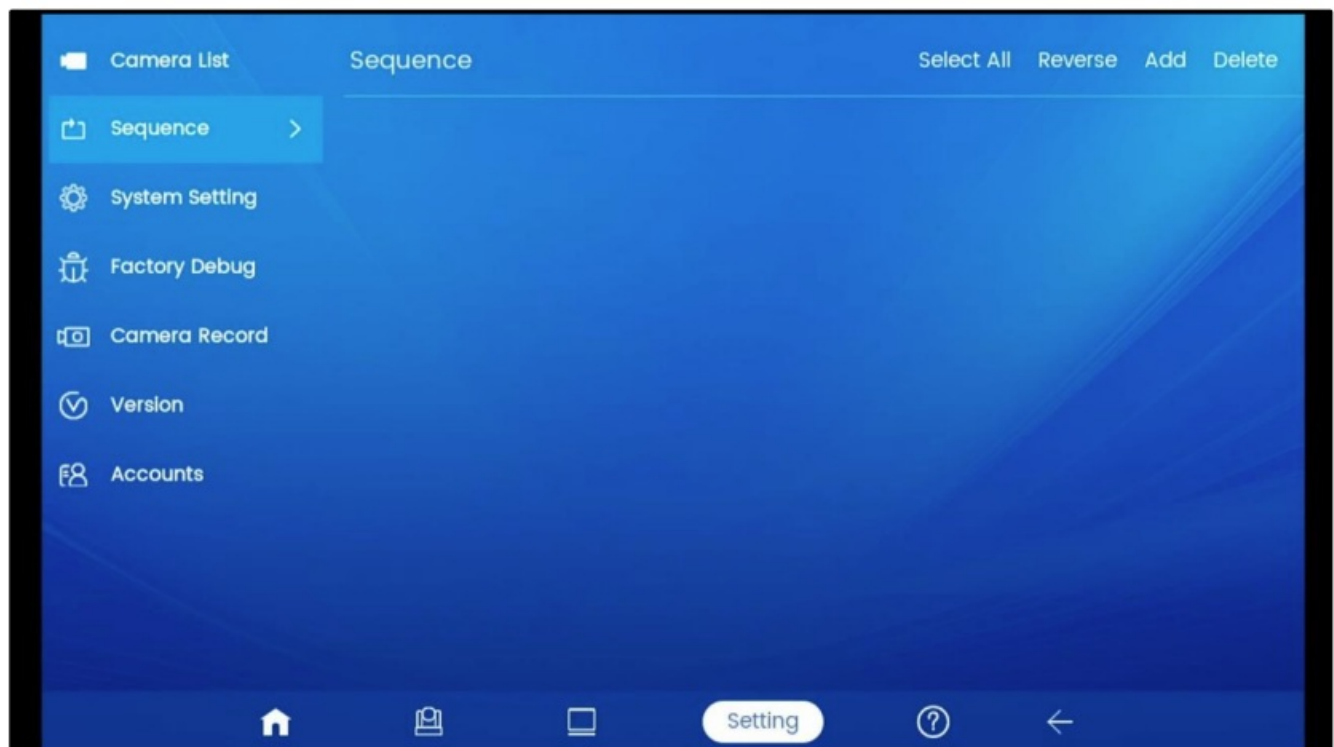


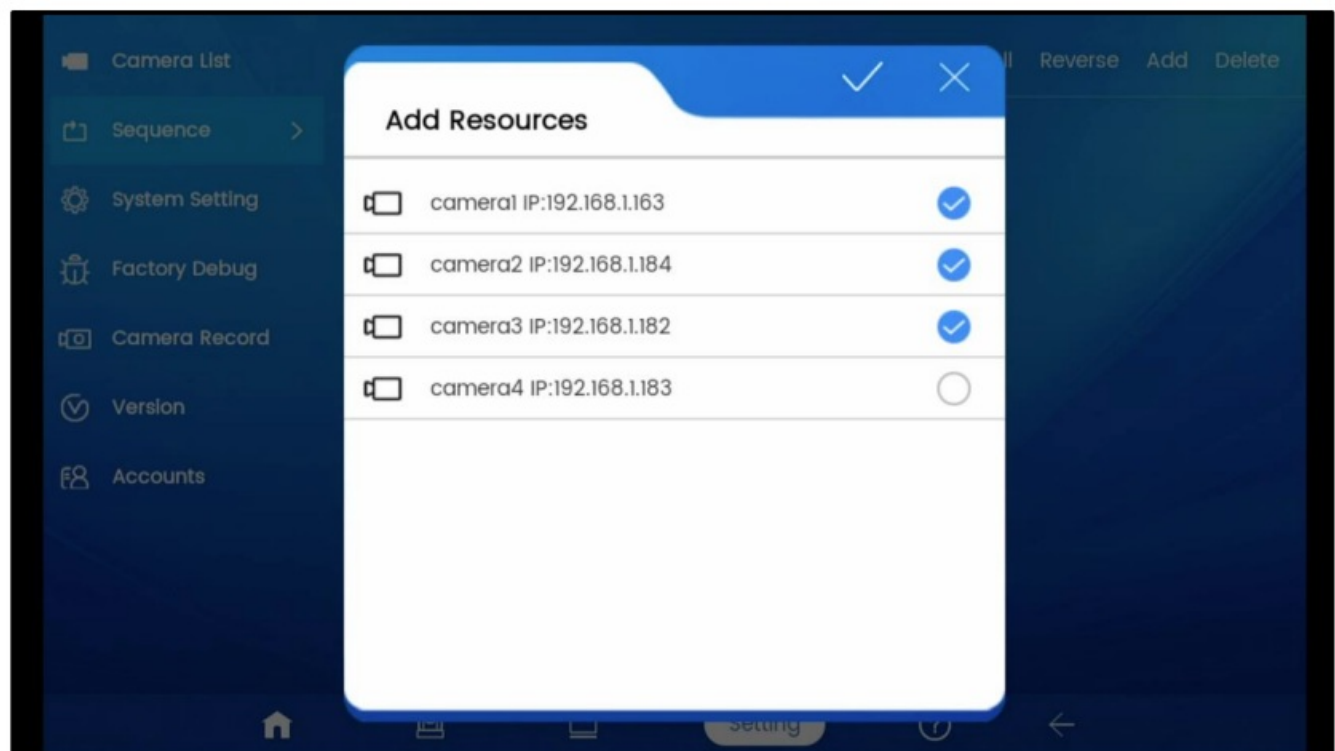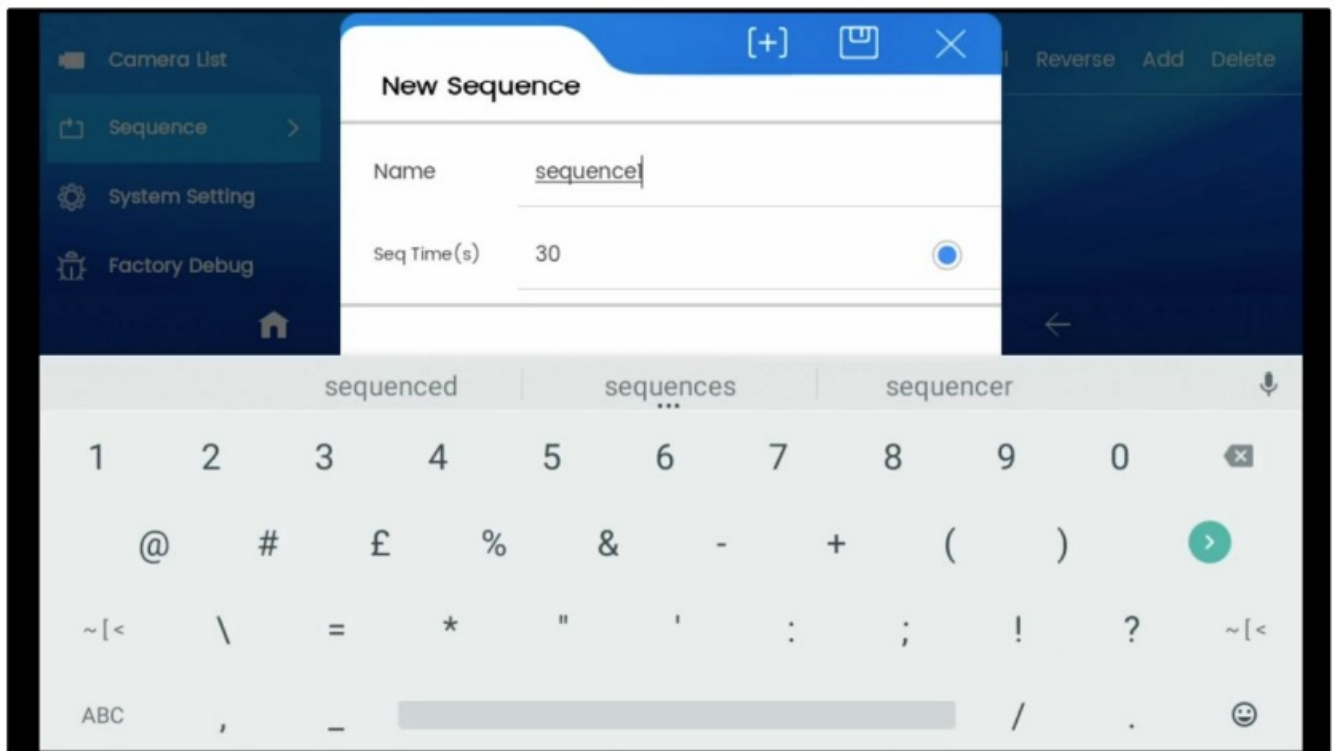

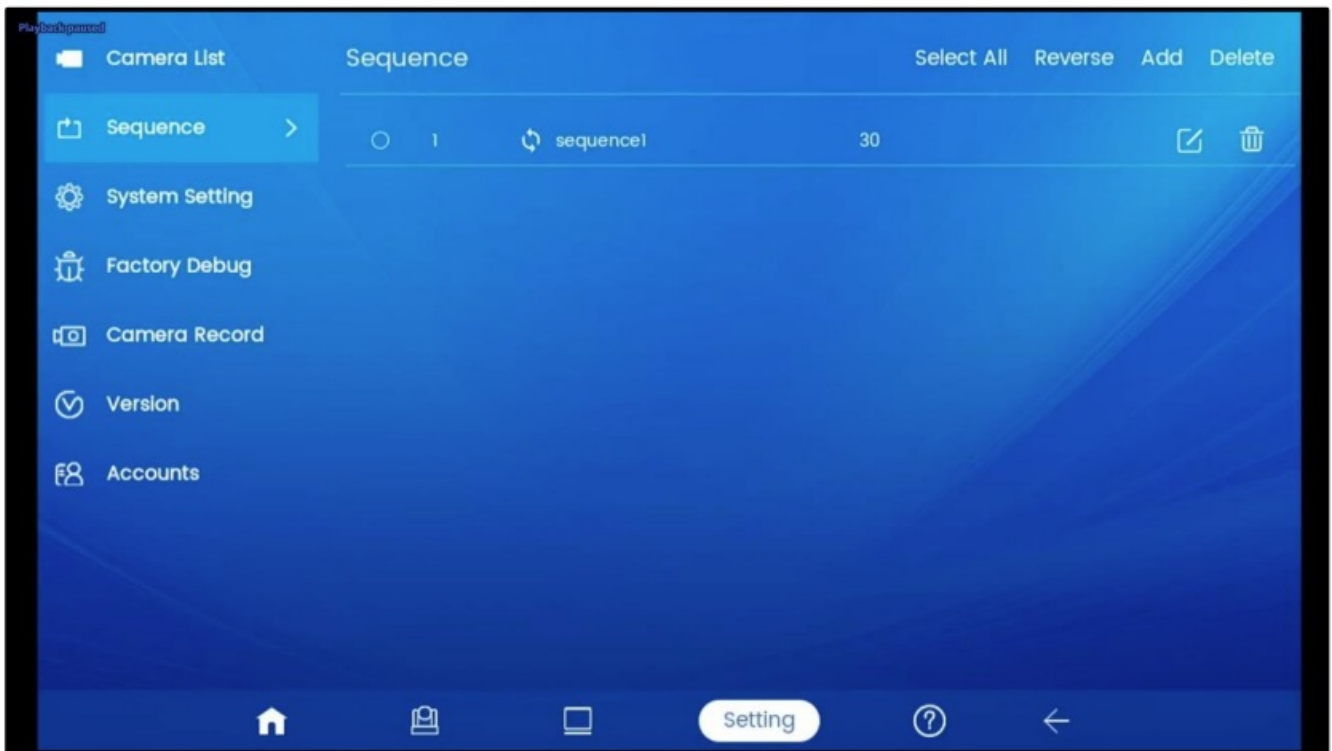

System Setting

This function contains basic setting for the SDC-TR03 control keyboard.

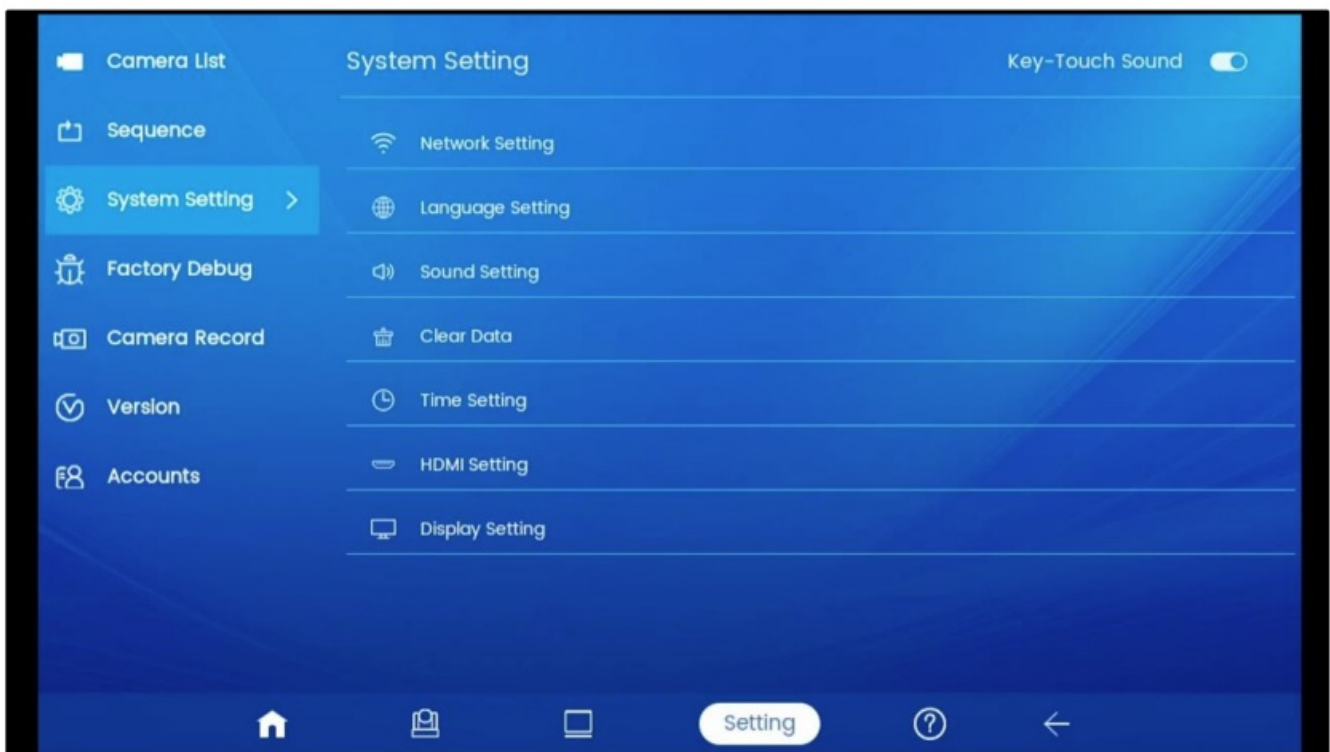


1. Network Setting: Change network parameter for the keyboard.
2. Language Setting: Change the language of the keyboard.
3. Sound Setting: Change the volume of the keyboard.
4. Clear Data: Factory reset.
5. Time Setting: Set up the time displayed on the home screen.
6. HDMI Setting: Switch HDMI output between main and sub stream for cameras.
7. Display Setting: Adjust the HDMI output from the keyboard, such as brightness and resolution.

8. Keyboard Sound (top-right): Enable the beep sound when pressing buttons on the keyboard.


Factory Debug

For development only. User can use sound function to check the working status of each function key on the keyboard

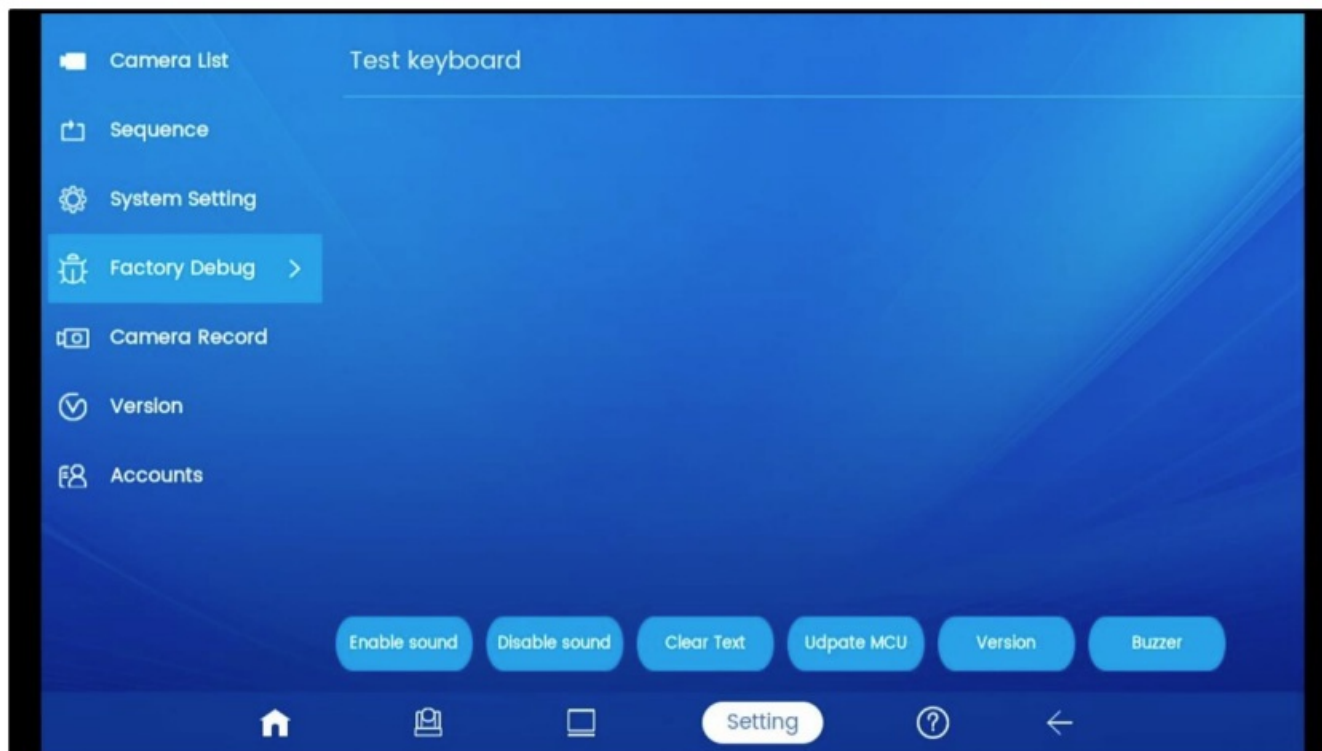


Camera Record

Screenshot and video recordings can be displayed in this function. User can also export the files onto external MicroSD or USB sticks.

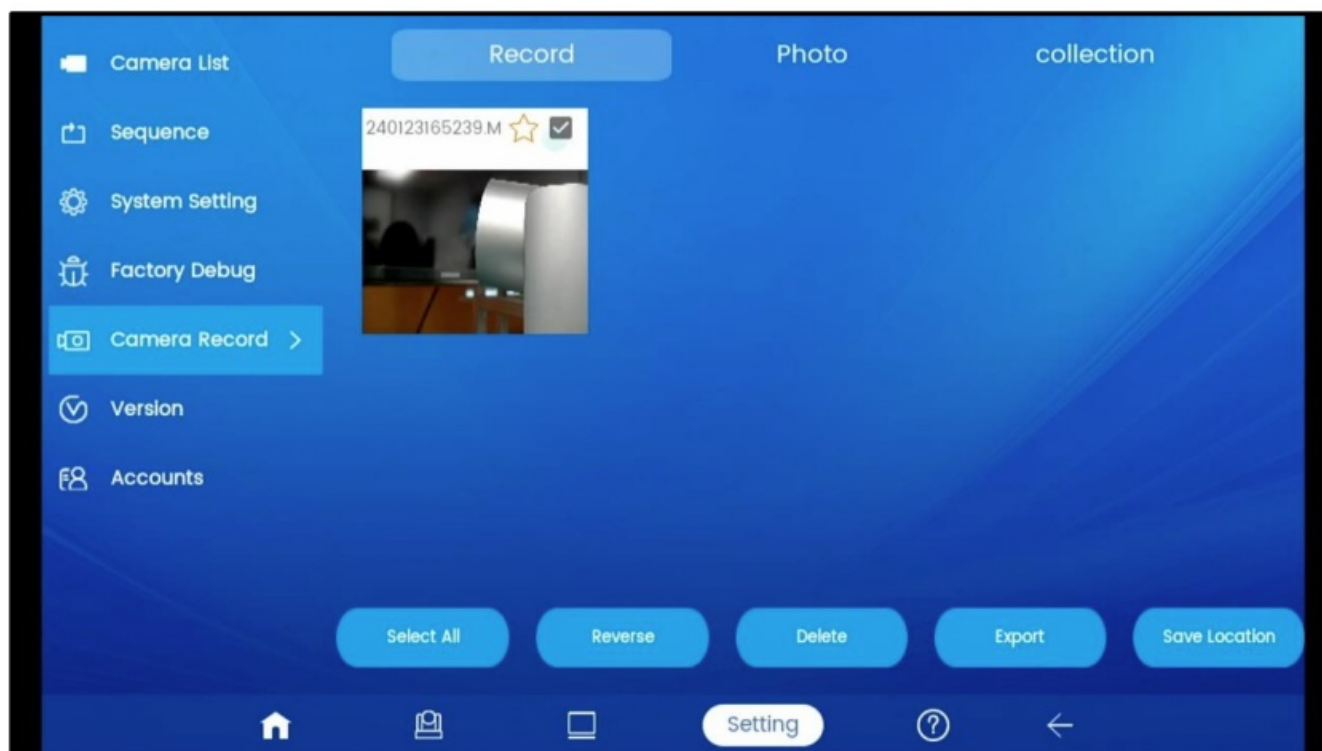


Version

User can view the current firmware of the unit and upgrade its firmware via 'App Update' by using an external USB stick or a MicroSD.

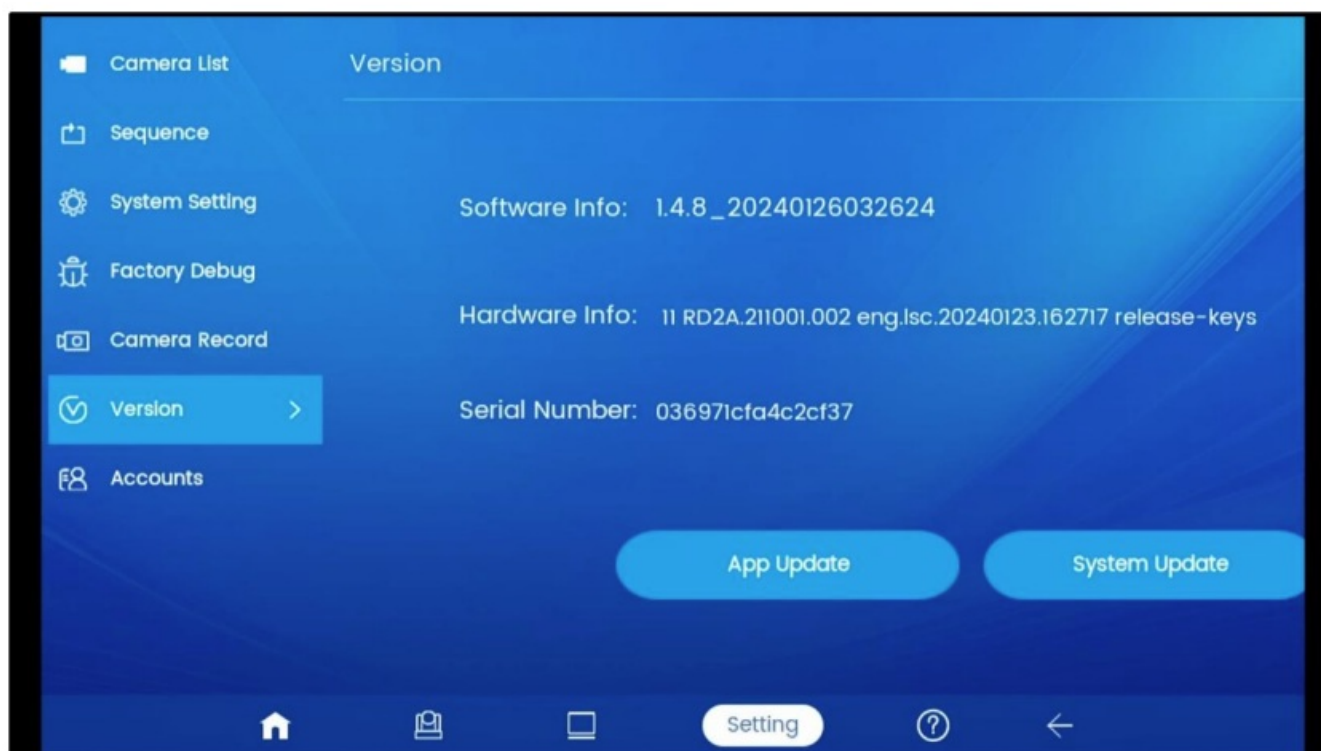


Account

User can modify the password of the current login account or logout.

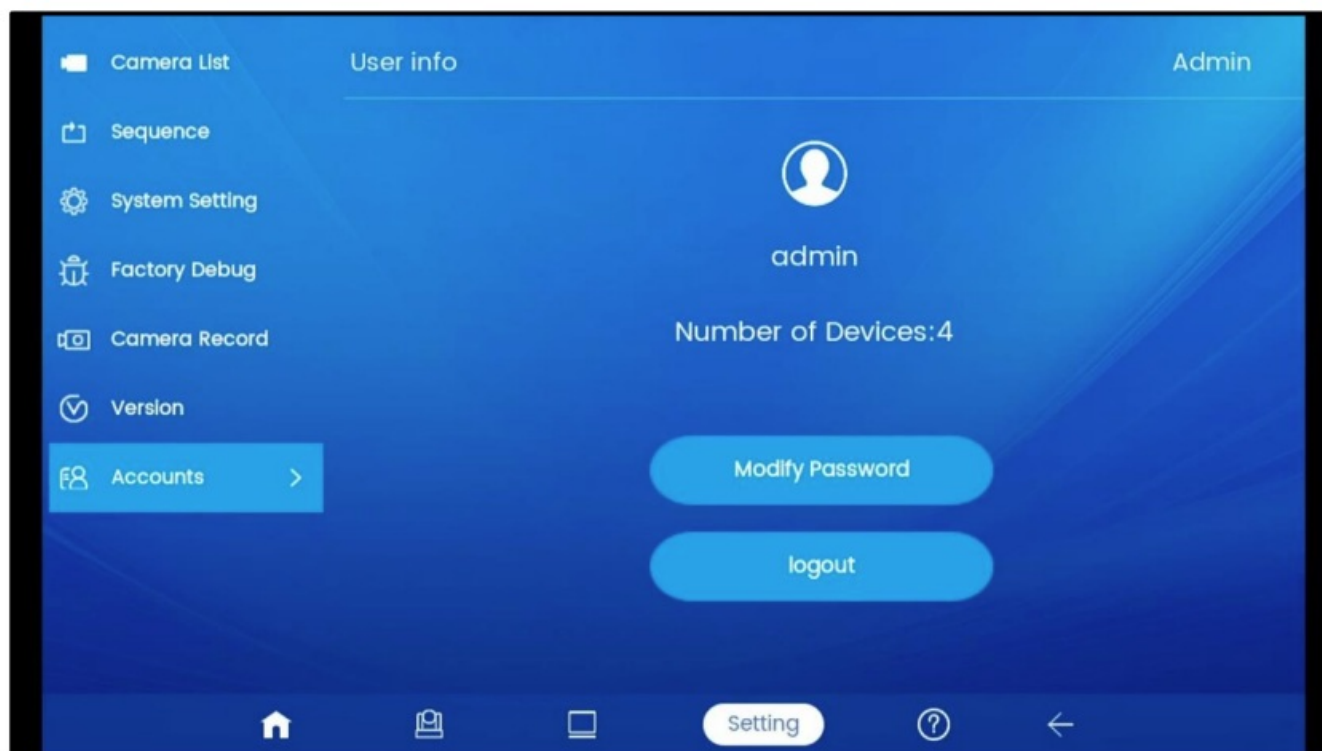

- www.seada.co.uk

Documents / Resources

 The image shows the cover of a user manual for the SEADA SDC-TR03 Control Keyboard. The cover is white with a blue header and footer. The SEADA logo is in the top left. The title 'SDC-TR03 Control Keyboard User Manual' is centered. Below the title is a photograph of the black control keyboard. At the bottom, it says 'Document No. SD-WH-003' and 'Revised: March 2016'.	<p>SEADA SDC-TR03 Control Keyboard [pdf] User Manual</p> <p>SDC-TR03, SDC-TR03 Control Keyboard, Control Keyboard, Keyboard</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.