

Shelti LBA-0-HM PX Home Pool Table Instruction Manual

Home » Shelti » Shelti LBA-0-HM PX Home Pool Table Instruction Manual



Contents

- 1 Shelti LBA-0-HM PX Home Pool **Table**
- 2 Specifications
- 3 FAQ
- **4 Assembly Instructions**
- **5 CONTACT**
- 6 Documents / Resources
 - **6.1 References**



Shelti LBA-0-HM PX Home Pool Table



Specifications

• Model: Shelti Home Pool Table

- Tools Required: 1/2 Wrench, Level
- · Part Numbers:
 - LBA-0-HM Quantity: 1
 - PX-LAA-0 Quantity: 4
 - 301-0020-0 Quantity: 12
 - 210-0063-0 Quantity: 1
 - 210-0095-1 Quantity: 1

Assembly Instructions

- 1. Attach the legs to the bottom of the pool table using three leg bolts (1/2 wrench) per leg.
- 2. Make sure that the leg levelers are screwed all the way in. Rotate the table over onto its four legs.
- 3. Finally, level the pool table by dropping a ball onto the nose of the cushion rail and watch the drift of the ball as it comes to a stop. Raise or lower the appropriate leg leveler until the ball rolls true.
- 4. Complete the warranty card and return the self-mailing Registration Form to Shelti in the event of upgrades and/or product recalls.

Disassembly Instructions

- 1. Remove The Top Rail Molding:
 - 1. Remove the Phillips head screws.
 - 2. Slide the molding all the way in one direction.
 - 3. Lift the molding on one end and slide it in the opposite direction to remove the molding.
- 2. Remove The Slate:
 - 1. Remove the four lag bolts (9/16 socket) and 2 steel slate supports.
- 3. Remove The Four Die Cast Corners:
 - 1. Remove the four screws that hold the bottom of the corner to the top.
 - 2. Remove the two $3/8 16 \times 2-1/2$ hex head bolts (9/16 socket) and washers to remove the die cast corner from the top frame assembly.

FAQ

- Q: What should I do if I encounter missing parts during assembly?
- A: Please contact Shelti for assistance in obtaining any missing parts for your Home Pool Table.

Assembly Instructions


Thank you for purchasing a Shelti product. All of us at Shelti want you to be completely satisfied with your Home Pool Table, so feel free to contact us for help with the assembly of your product, Shelti parts, or other information you may require.

Tools Required: 1/2" Wrench Level

<u>Description</u>	Part Number	Quantity
Shelti Pool Table Leg B ox	LBA-0-HM	1
Pool Table Leg Assembly	PX -LAA-0	4
Leg Bolts - 5/16-18x1 1/2"	301-0020-0	12
Pool Table Warranty Card	210-0063-0	1
8° Home Pool Table Assy. Instructions	210-0095-1	1

Step 1 – Remove The Top Of The Box.

- Step 2 Remove The Pool Table From The Box.
 - Slide the table partially out of the box, slightly tip the table, and remove the bottom of the box and the fillers.
- Step 3 Attach Legs
 - Slide the box filler under the side of the pool table.
 - attach the legs to the bottom of the pool table using three leg bolts (1/2" wrench) per leg
 - Make sure that the leg levelers are screwed all of the ways to rotate the table over onto its four leas. the leg and slowly

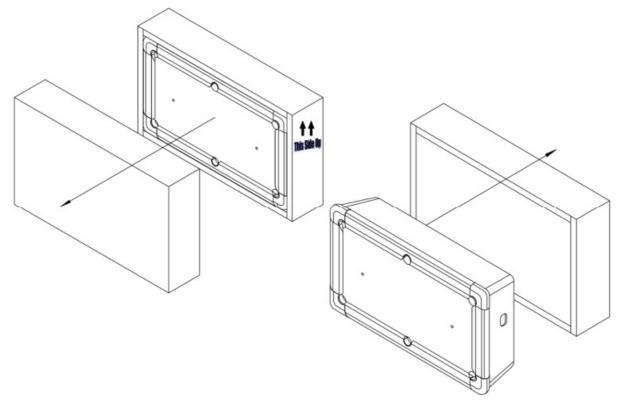

- Step 4 -Level The Pool Table
 - 1. Roughly level the pool table by placing a level across, lengthwise, and diagonally into the four corners and raise or lower the appropriate leg leveler.
 - 2. Finally, level the pool table by dropping a ball onto the nose of the cushion rail and watch the drift of the ball as it comes to a stop. Raise or lower the appropriate leg leveler until the ball rolls true.
- Step 5 Complete the warranty card and return the self-mailing Registration Form to Shelti in the event of upgrades and/or product recalls.


•

Disassembly Instructions


The Shelti home pool table is designed for disassembly in the event that it is not possible to move the assembled pool table into its final location. To disassemble follow the below instructions:

Tools Required:


Sockets – 1/4", 3/8", 7/16", and 9/16" Phillips Screwdriver Regular Screwdriver

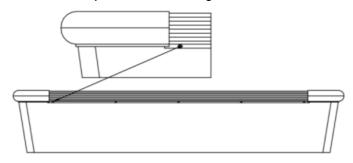

- Step 1 Remove The Top Rail Molding
 - 1. Remove the Phillips head screws.
 - 2. Slide the molding all of the way in one direction.
 - 3. Lift the molding on one end and slide it in the opposite direction to remove the molding

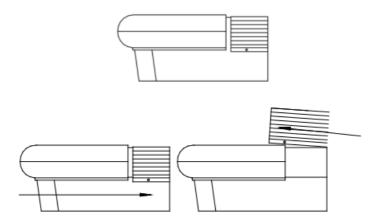


- Step 2 Remove The Cushion Rails
 - Remove the eighteen cushion rail bolts (3/8" socket) and cushion rails.
- Step 3 Remove The Slate
- Step 4 Remove The Slate Supports
 - Remove the four lag bolts (9/16 socket) and 2 steel slate supports

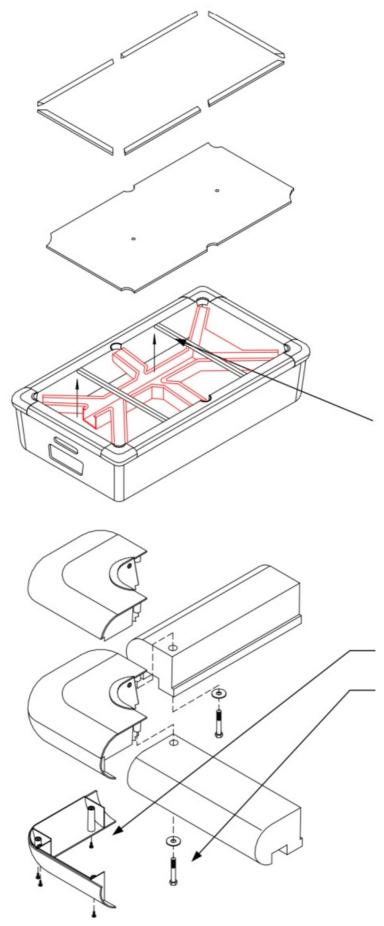


- Step 5 Remove The Four Die Cast Corners.
 - Remove the four screws that hold the bottom of the corner to the top.
 - \circ Remove the two 3/8" 16 x 2-1/2" hex head bolts (9/16" socket) and washers to remove the die-cast corner from the top frame assembly.
- Step 6 Remove Gulley Boots & Center Chute

- Remove the gulley boot screws and 6 gulley boots.
- Remove The Screws Holding The Center Chute. Do Not Remove The Center Chute At This Time.

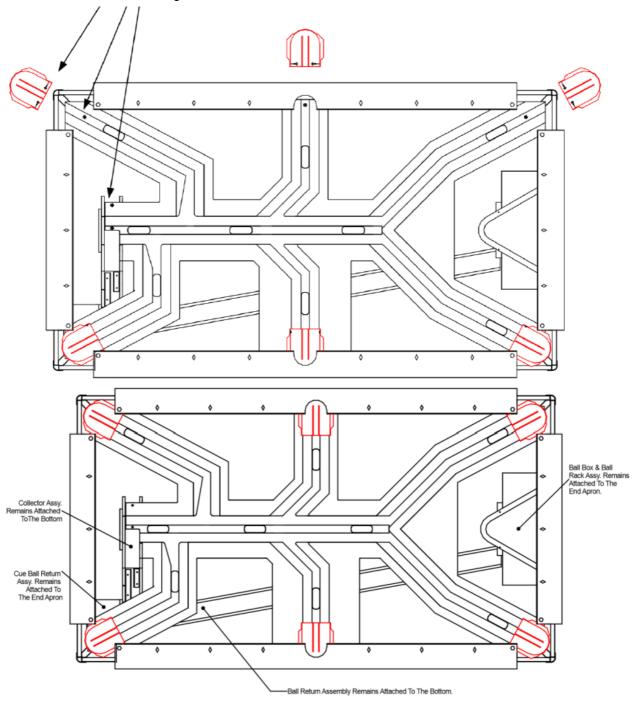


• Step 7 – Remove The Bottom

- Carefully flip the pool table cabinet upside down.
- Remove the 13 Bolts (7/16" socket) and washers from the bottom.
- Lift the bottom out of the pool table. (Note: The End Collector / Cue Ball Separator Assembly And The Long Ball Return Assembly Should Remain Attached To The Bottom

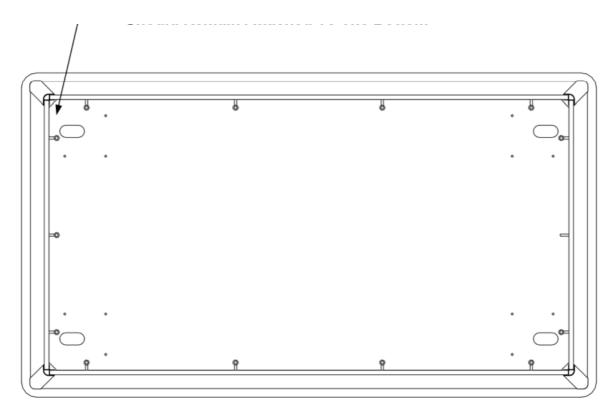

- Step 8 Final Disassembly Of The Pool Table Cabinet.
 - Carefully flip the table right side up.
 - Remove the 2 bolts in two of the corner hanger blocks.
 - Remove the 3 bolts in two of the aluminum down corners.
 - The cabinet will now come apart in two "L" sections. Each apron with its components still attached can be moved individually. Reassemble the pool table in reverse order.

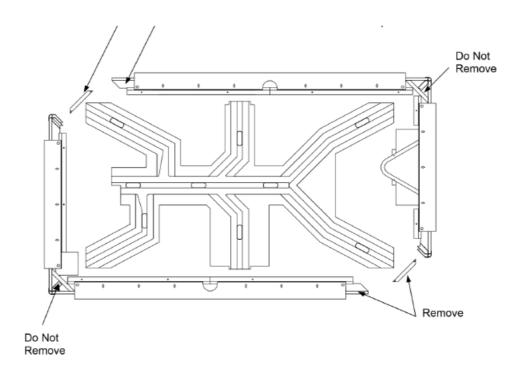

CONTACT

- 333 Morton Street
- Bay City, Michigan 48706

• Phone: <u>989-893-1739</u>

- Fax: <u>989-893-1809</u>
- www.shelti.com
- info@shelti.com

Documents / Resources



Shelti LBA-0-HM PX Home Pool Table [pdf] Instruction Manual LBA-0-HM PX, LAA-0, 301-0020-0, 210-0063-0, 210-0095-1, LBA-0-HM PX Home Pool Table, LBA-0-HM PX, Home Pool Table, Pool Table

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.