



SIMPSON Mini Max M235 Series Digital Panel Meter User Manual

[Home](#) » [Simpson](#) » SIMPSON Mini Max M235 Series Digital Panel Meter User Manual 



AC TRMS Current Mini-Max M235 Series Digital Panel Meter

Contents

- [1 Mini Max M235 Series Digital Panel Meter](#)
- [2 Installation and Panel Cutout](#)
- [3 Specifications](#)
- [4 Connections](#)
- [5 Display Scaling](#)
- [6 Stacking Features](#)
- [7 Application Example](#)
- [8 Ordering Information](#)
- [9 Safety Symbols](#)
- [10 Accessories](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

Mini Max M235 Series Digital Panel Meter

- Minimum Depth Indicator – Less Than 2.5" (60mm) of Space Required Behind the Panel
- Stackable Mounting Bracket Included for Easy Installation
- LCD: 3-1/2 Digit, 0.5" (12.7mm) High Display with Optional Negative Image, Bright Red Backlighting

- LED: 3-1/2 Digit, 0.56" (14.2mm) High Display
- Limited Range Display Scaling
- Standard Screw Terminals for Easy Installation
- Six Current Ranges: 200 μ A, 2mA, 20mA, 200mA, 2A, 5A
- LCD: 85-250VAC or optional 9-32VDC Power Supply
- LED: 85-250VAC Power Supply

Simpson's Mini-Max Voltage Indicators provide high quality accuracy and reliability in a compact, 60mm deep case.

LCD (Liquid Crystal Display) Units offer a 3-1/2 digit, 0.5" (12.7mm) LCD display with an optional bright red, negative image, backlight.


LED (Light Emitting Diode) Units offer a 3 1/2 digit, 0.56" (14.2mm) display.

All units feature user-selectable decimal point, auto zero and limited scaling capabilities.



A unique mounting bracket is provided to allow for vertical or horizontal stacking of multiple indicators. All Mini-Max units feature a 3/64 DIN, high-impact plastic case. The LCD units have a clear viewing window, and the LED units have a red window.

Installation and Panel Cutout

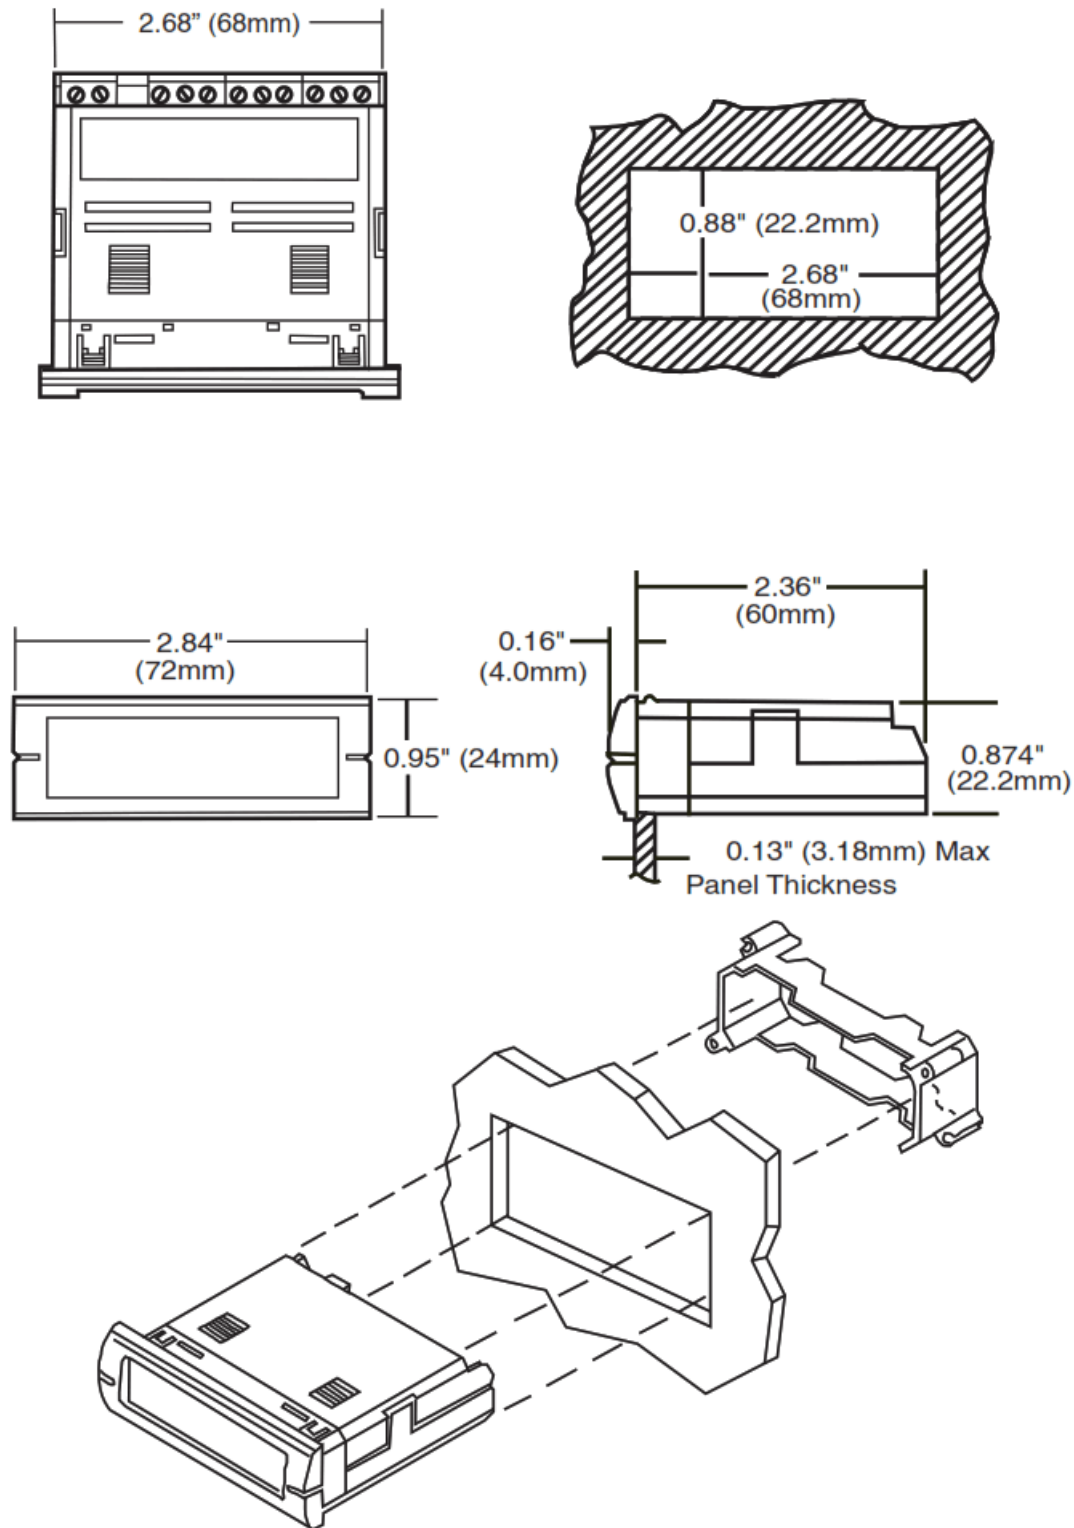

Mounting Requirements

Insert the Mini-Max through the panel, and then slide the mounting bracket onto the Mini-Max. The mounting bracket allows Mini-Max units to be stacked side-to-side or top-to-bottom and to maintain the DIN standard panel arrangements in 24mm by 72mm multiples. Panel cutout instructions for stacking multiple units are provided under "stacking features."

Specifications

DISPLAY

Type: 7-segment LCD or LED

Height: LCD 0.5" (12.7mm) LED 0.56" (14.2mm)

Decimal point: 3-position selectable

Overrange indication: LCD Most significant digit =“1” LED Blinking display LCD Backlighting: Optional negative image, red backlight

Polarity: Auto with “-” indication, “+” implied

POWER REQUIREMENTS

AC Volt: 85-250VAC @40-440Hz

DC Volt: 9-32VDC (LCD version only)

Power Consumption: (Non Fused)

85-250VAC: LCD 4.0VA (2.4W) Max

9-32VDC: LCD 3W Max

Isolation: 250 Vrms Max LED 3.6VA (2.16W) Max

ACA TRMS		LCD	LCD	LED	LED
Range	Resolution	Voltage	Max Input	Voltage	Max Input
	M235	Drop	Unfused	Drop	Unfused
200uA	100nA	200mVdc	10mA	200mVdc	6mA
2mA	1uA	200mVdc	40mA	200mVdc	20mA
20mA	10uA	200mVdc	100mA	200mVdc	60mA
200mA	100uA	200mVdc	400mA	200mVdc	300mA
2A	1mA	200mVdc	3A	200mVdc	2.6A
5A	10mA	50mVdc	6A	100mVdc_	6A

NOISE REJECTION

CMRR: 86dB typical

ACCURACY @ 25°C

LCD $\pm(0.5\%$ of reading + 5 count) (50 Hz – 2KHz)

LED $\pm(0.5\%$ of reading + 2 count) (50 Hz – 5KHz)

ENVIRONMENTAL

Operating Temperature: 0 to 55°C

Storage Temperature: -10 to 60°C

Relative Humidity: 0 to 85% non condensing @ 40°C Temperature

Coefficient: (0.2% of reading \pm 0.5 digits)/°C

Warmup time: Less than 20 minutes

ANALOG TO DIGITAL CONVERSION

Technique: Integrating Dual Slope

Rate: 3 samples/second-typical

MECHANICAL


Bezel: 0.95” x 2.84” (24mm x 72mm)

Depth: 2.36” (60mm)


Panel cutout: 0.88” x 2.68” (22.2mm x 68mm)

Weight: LCD 3.5oz (99.2g) LED 2.6oz (74g)

Case Material: 94-0,UL-rated, glass-filled thermoplastic

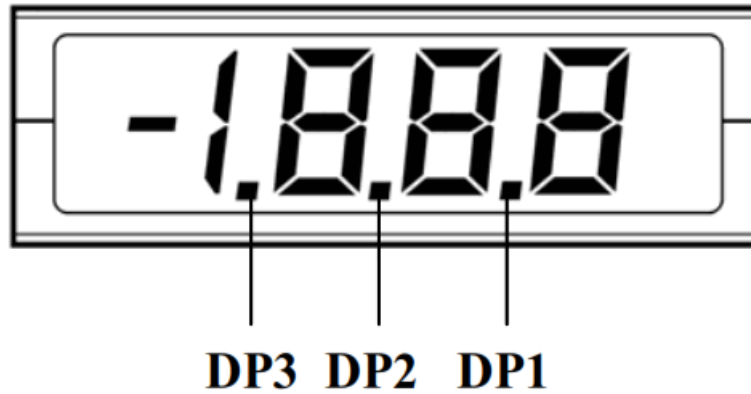


Connections

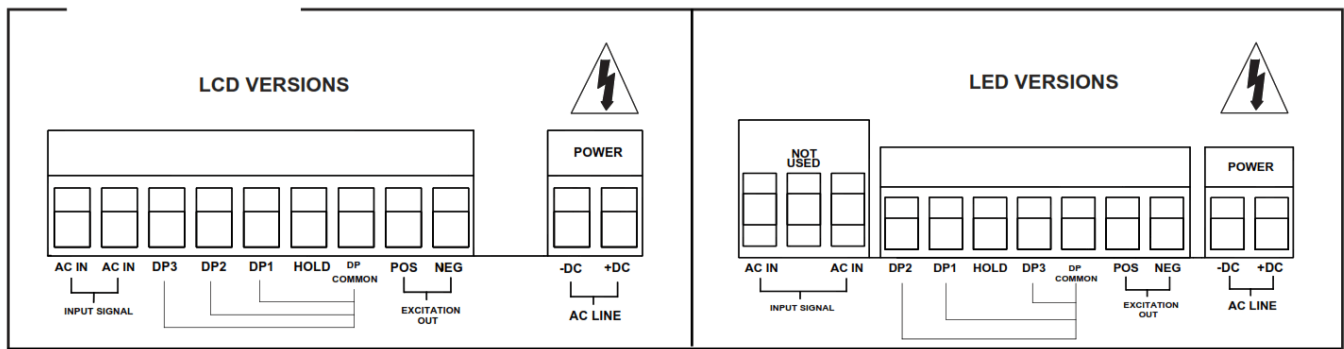

WARNING: These instruments are designed for maximum safety to the operator when mounted in a panel according to instructions. They are not to be used unmounted or for exploratory measurements in unknown circuits.

Input Signal:	Connect the AC signal to be monitored to the AC IN input terminals.
Input Power:	For AC power, connect the AC POWER LINE to the AC LINE inputs. For optional DC power, connect the DC Supply to the DC inputs. Observe polarity.
Decimal Point:	To select a decimal point, connect the appropriate DP input pin (DP1 – DP3) to the DP COMMON output. Unused DP inputs may remain unconnected (open).
Hold Option:	Connect the DP COMMON output to the HOLD input. If this feature is not required, the HOLD pin may remain unconnected.
LCD Backlight Option:	Negative image, bright red backlighting is available for the LCD versions only. This illumination allows the unit to be read in low light areas. Backlighting power is supplied by the Mini-Max, so no additional external power is required.
Excitation Option:	Excitation is available at the EXCITATION OUT Positive (POS) and Negative (NEG) terminals for powering external transmitters or transducers. This source is isolated from the measurement input as well as the input power circuits. The voltages available are 12Vdc or 24Vdc with a maximum load current of 25mA. This feature eliminates the need to mount an external DC power source for transducers or sensors used in your application.

Display Scaling

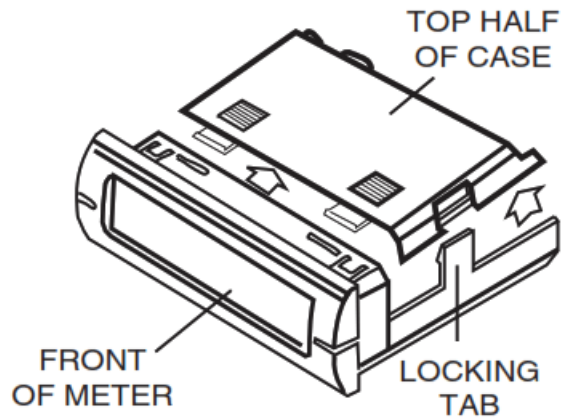

Using a screwdriver or thumbnail, spread the tabs on each side of the case to unlock the top half. Lift the rear of the top half and slide it away from the front of the meter.

Scale Adjustment: Mini-Max indicators have limited range coarse and fine adjustments for display scaling. There are no optional connections required for these to function. The meter can be scaled down to 1/2 the value of the input, or scaled up to 2 times the value of the input, or a maximum reading of 1.999, whichever is lower.


Example: A 2 Amp input has a maximum reading of 1.999 counts, so you cannot double the 2 Amps, but you can make a 1 Amp input read 1.999,

LCD VERSIONS


Scale Adjustment: The “Coarse” adjustment R12 will allow a limited range of adjustment values. The “Fine” adjustment R9 allows for an adjustment range of approximately 1% of the “Coarse” adjustment. Apply the full scale input to the meter. Adjust R12 to be within 1% of the desired result. Then use R9 to obtain the final desired result.

LED VERSIONS

Scale Adjustment: The “Coarse” adjustment RV1 will allow a limited range of adjustment values. The “Fine” adjustment RV2 allows for an adjustment range of approximately 1% of the “Coarse” adjustment. Apply the full scale input to the meter. Adjust RV1 to be within 1% of the desired result. Then use RV2 to obtain the final desired result.

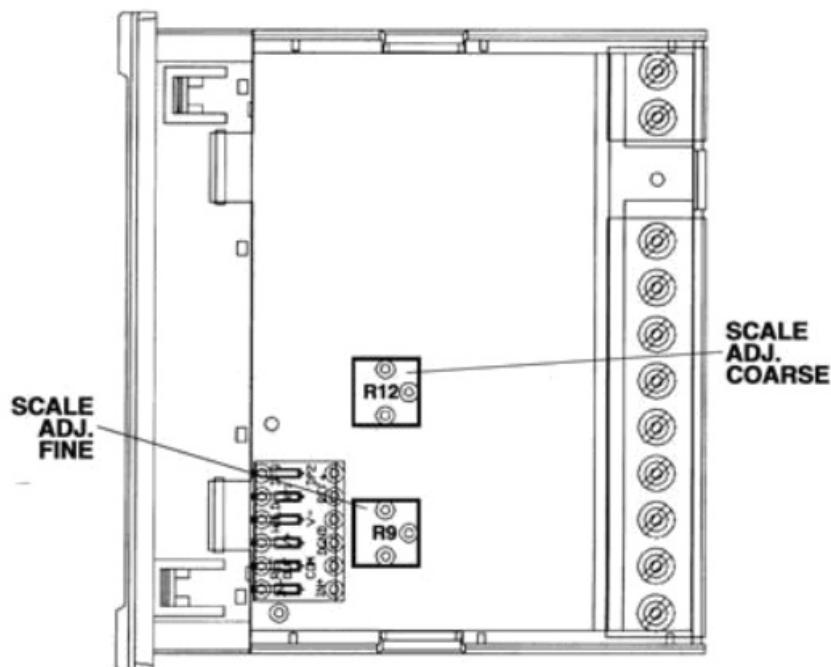

Note: Any physical damage to the meter during adjustment will void the warranty.

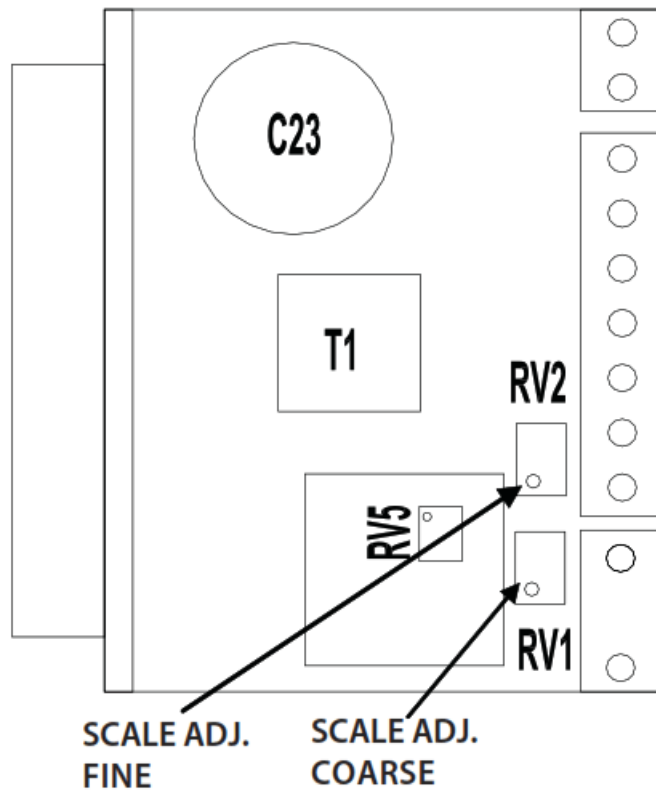

Note: Any physical damage to the meter during adjustment will void the warranty.


Stacking Features


The mounting clips, included with every Mini-Max, can be connected together. Multiple units can be mounted in a single opening, allowing perfect alignment.

To punch one hole for multiple units, be sure to adjust the standard panel cutout dimensions as shown here; otherwise the meters will not fit properly in the hole.

Mounting multiple units is quick and easy. Install the first meter (bottom unit first if stacking vertically). Position the next mounting bracket snugly against the first one, and slide the second meter into place. Repeat for remaining units.

Vertical

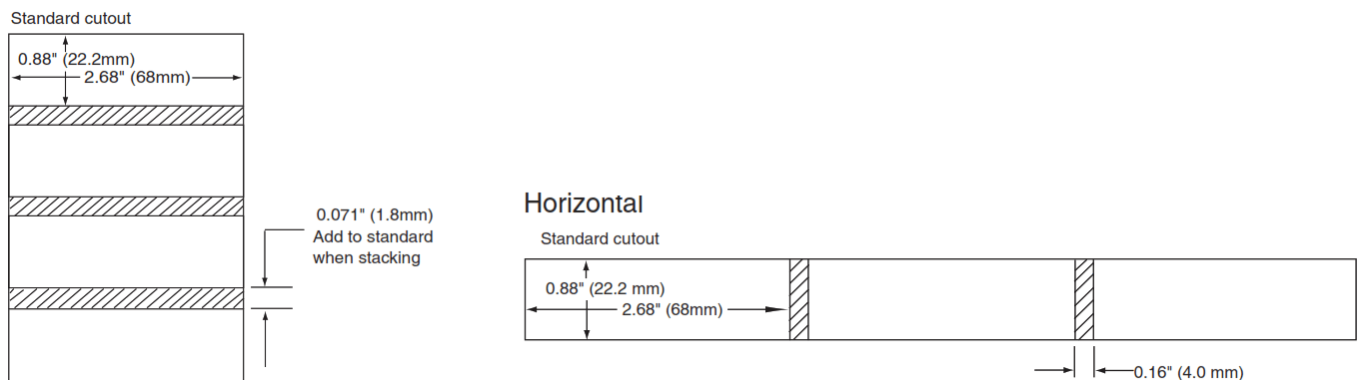

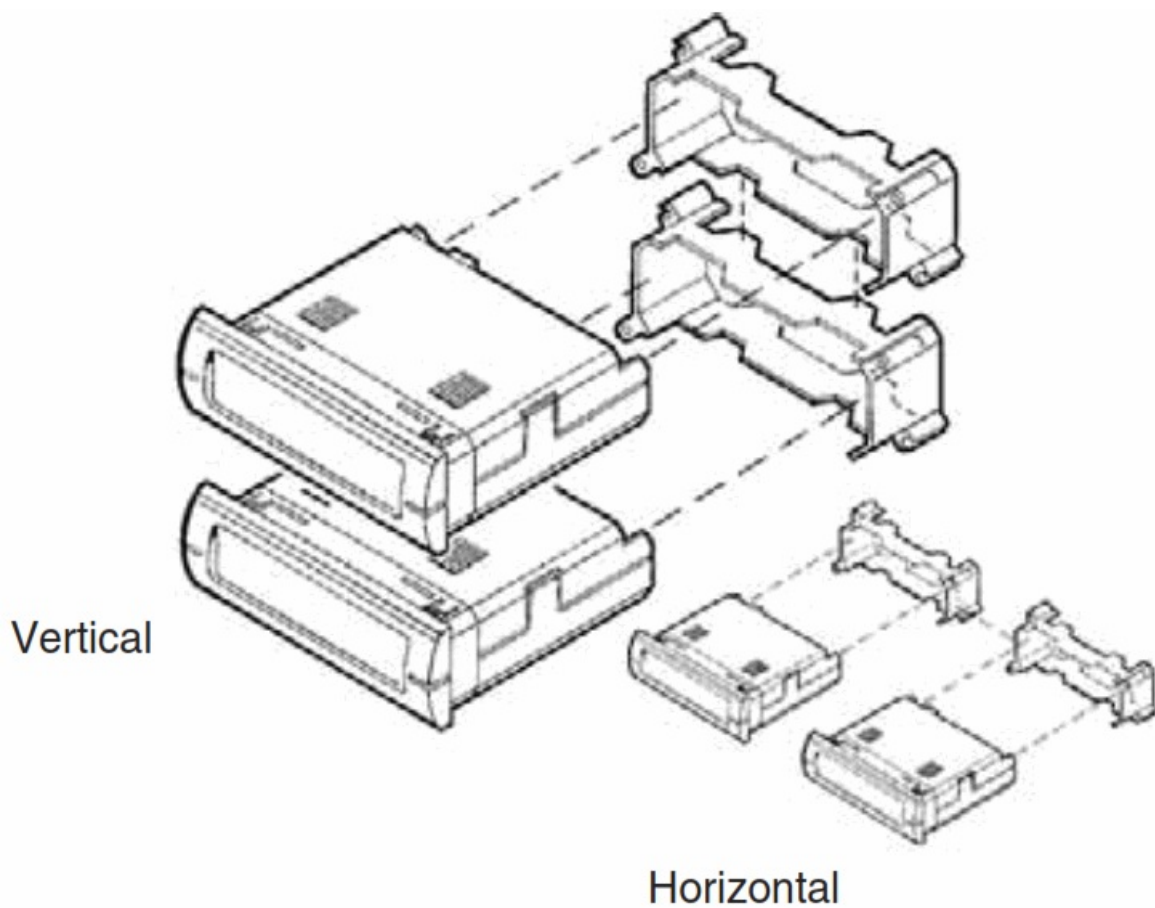


Application Example

A company needs to monitor the power supply voltage (120VAC), load current (50 amps) and frequency (60Hz) of an AC motor.

Voltage: A Mini-Max 200 Volt AC meter is installed in parallel with the power supply. Current: A Mini-Max 5 Amp AC meter is attached to a 50:5 amp Donut Current Transformer. The meter must be scaled to display 50.0 when 5 amps are applied. R9 and R12 (RV1 and RV2, LED version) are adjusted until the correct value is displayed.

The meter is connected to the Donut, and the AC line is fed through the donut. Frequency: A Mini-Max 200Hz Frequency Meter is installed in parallel with the power supply. The wiring for the volt meter can be split to the frequency meter as long as the voltage will not exceed 250 volts AC.

[Note: Frequency Meter is available in model M235 LCD only.]

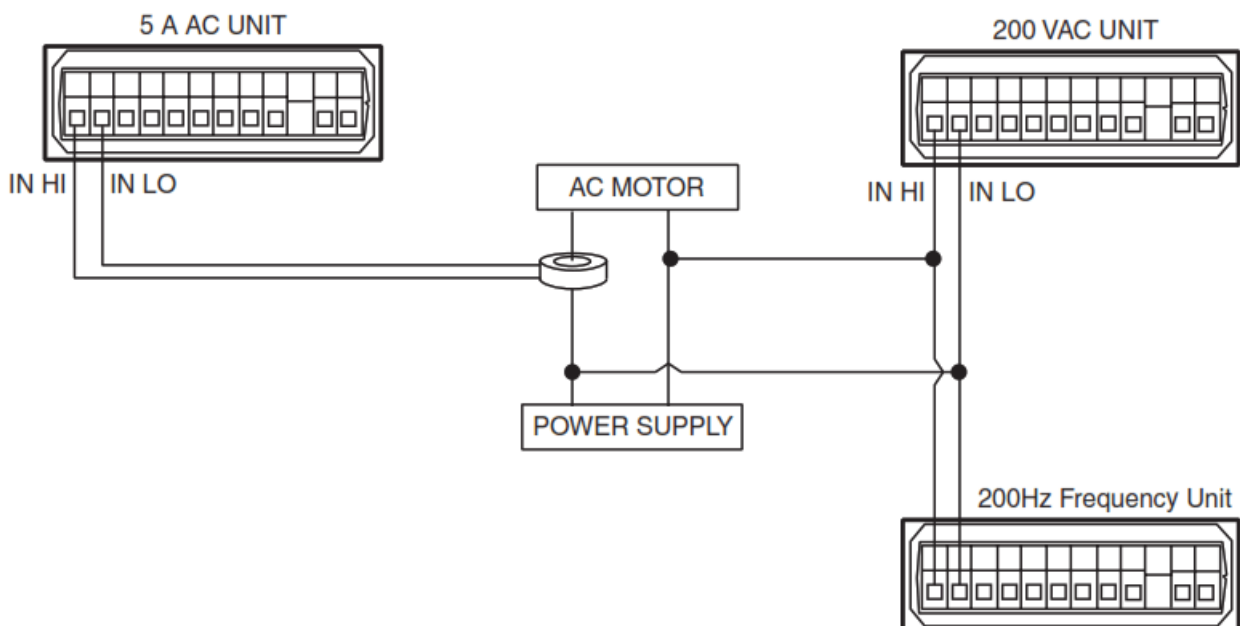

Ordering Information

Your Mini-Max Current Indicator can be configured by making an entry for each box.


Basic Unit	Display	DPM Power Supply	Range	Excitation Output**
<div>M235</div> 3-1/2 Digit Indicator	<div>0</div> <div>1</div> <div>2</div> Non Backlight (LCD) Negative Image Red (LCD) Red LED	<div>0</div> <div>2</div> 85-250VAC 9-32VDC*	<div>41</div> <div>42</div> <div>43</div> <div>44</div> <div>45</div> <div>46</div> 200μA 2mA 20mA 200mA 2A 5A	<div>0</div> <div>1</div> <div>2</div> None 12VDC 24VDC


*Not available for LED
**25mAdc Max

Note: The Display Hold feature is standard and user selectable.


Note: Special scaling is available from the factory at the time of ordering

Safety Symbols

 The WARNING sign denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury.

 The CAUTION sign denotes a hazard. It calls attention to an operating procedure, practice, or the like, which, if not correctly adhered to, could result in damage to or destruction of part or all of the instrument.

Accessories

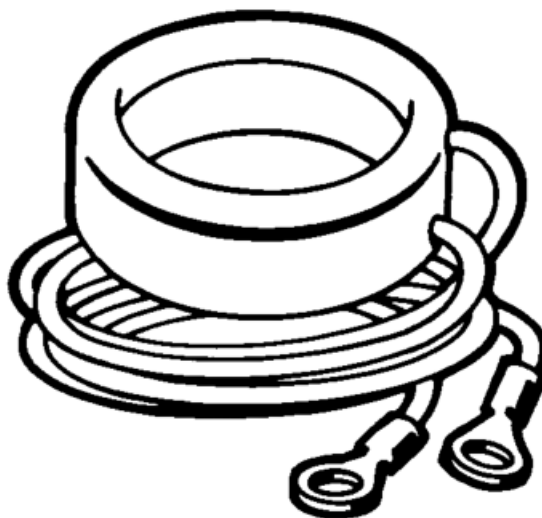

Donut Current Transformers enable the Mini-Max to monitor AC current up to 1000 amps. The Donut (also known as a "Toroid") is placed around one of the legs of the device being monitored and emits up to a 5 amp signal. The MiniMax can be scaled to accurately display the current being monitored. Each Donut comes with 2' long secondary leads.

Ordering Information

Range/Amps		CatalogNumber
Primary	Secondary	
50	5	1293
75	5	1306
100	5	1297
150	5	1298
200	5	1299
250	5	1313
300	5	1300
400	5	1305
500	5	1301
600	5	2303
750	5	2459
1000	5	2304

SIMPSON ELECTRIC COMPANY
 520Simpson Avenue, Lac du Flambeau,
 WI 54538 • (715) 588-3311 • FAX (715) 588-3326 is. www.A.S.Unidetnir.com
 22/01 ,81 noitidE ,860611-60 .oN traP

Documents / Resources

 <p>AC TRMS Current</p> <p>Mini Max M235 Series Digital Panel Meter</p> <p>AC TRMS Current, Mini Max M235 Series Digital Panel Meter, Mini Max M235 Series, M235 Series, Digital Panel Meter, Panel Meter, Digital Meter, Meter</p>	<p>SIMPSON Mini Max M235 Series Digital Panel Meter [pdf] User Manual</p> <p>AC TRMS Current, Mini Max M235 Series Digital Panel Meter, Mini Max M235 Series, M235 Series, Digital Panel Meter, Panel Meter, Digital Meter, Meter</p>
--	---